

# **SHARP ELECTRONICS**

**THERGAON, PUNE**

## **BILLING MACHINE**

**OPERATIONAL MANUAL**

**ADDRESS:-**

Sharp electronics  
Survey no.18/1,Dange chowk  
Near Ganesh nagar, Thergao  
Pune-411033.  
Phone- 8888114433/9422008507  
<http://www.sharpweighingscale.com/>

## Features

- Stores up to 999 items.
- 2" Thermal printer.
- Up to 20 Items in a single Bill.
- Item code Data Upload to machine from Computer using SHARP DATA LOADER software provided by company.  
Uploading data can be export in excel format through software.  
USB interface for Upload data.
- Maximum Amount which can be billed is 999.999 in Indian Rupees.
- Daily reports with auto reset on next day.
- Provision to works in Three different units kg, dozen and piece.
- Customized bill format (Header & footer only).
  - 3 Header line each of 32 char (with 0 width size).
  - 1 Footer line each of 32 char (with 0 width size).
  - 7 option for Header Footer height.
  - 4 option for Header Footer width.
- Easy to bill items through item code.
- Provision to delete wrong entry from bill.
- Two 7 segment Red/Green colour 3 window display for customer and owner view.
  - 1- Weight
  - 2- Item code / Rate (per kg/per dozen/per piece)
  - 3-Amount
- Battery backup of 5 to 6 Hrs.
- Item name and Rate change option.
- 20 key alphanumeric keyboard.

## --SETTINGS FOR USER--

### 1) ZERO

- For Normal Zero press **ZERO** Once.
- For Permanent Zero Press **ZERO** KEY until machine shows **DONE**.  
(Work only when PZ=1)

### 2) SET ITEM ID

- Set Item code using 0-9 key at 2<sup>st</sup> window.  
(Remove item from machine then set item code)

### 3) ADD ITEM

- Press **NEXT** key for Add New item.  
(Maximum 20 item can be added in one print).

### 4) SET PIECE NUMBER

- Press **NEW** key.
- Set Piece Number using **SHIFT & 0-9** key.
- Press **ENTER** key.

### 5) DELETE ITEM

- Press **EXIT** key.
- Machine shows **del 001**.
- Set item code using **0-9** key which want to remove from list.
- Press **NEXT** key.
- Machine shows **del 002**.  
Similarly Set item code which want to remove and press next.  
Then press **EXIT** key.

### 6) PRINT

- Press **PRINT** key for Print.  
(Weight should be greater than No Sense value)

### 7) ONLINE RATE EDIT

- Select item which Rate want to change.
- press **EDIT RATE** Key.
- Enter new rate using **SHIFT & 0-9 KEY** then press **ENTER** Key.

### 8) REPORT

- Press **REPORT** Key.
- Machine shows **PASS**.
- Enter password **01104** using **SHIFT** and **0-9** Key then press **ENTER** Key.
- Machine shows wait.

## Report sample print -

| REPORT            |      |             |        |
|-------------------|------|-------------|--------|
| Date= 23/07/20    |      | Time= 18:42 |        |
| NAME              | RATE | Wt/Pc       | Amount |
| ONION             | 65.0 | 3.320       | 215.8  |
| POTATO            | 25.0 | 4.105       | 102.6  |
| TOMATO            | 53.0 | 1.150       | 60.9   |
| BELLPEP           | 70.0 | 0.200       | 14.0   |
| G. CHIL           | 58.0 | 1.100       | 63.8   |
| LADYFIN           | 66.0 | 0.295       | 19.4   |
| CARROT            | 91.0 | 0.250       | 22.7   |
| O                 | 0.0  | 1.150       | 0.0    |
| WATERME           | 14.0 | 120         | 1680.0 |
| CORIAND           | 58.0 | 10          | 580.0  |
| SPINACH           | 30.0 | 10          | 300.0  |
| BANANA            | 66.0 | 3.0 DZ      | 198.0  |
| TOTAL AMOUNT- Rs: |      |             | 3257.3 |

## Item sample print -


| SHARP ELECTRONIC |             |             |        |
|------------------|-------------|-------------|--------|
| THERGAO PUNE     |             |             |        |
| M.NO- 9922147673 |             |             |        |
| Slip No.=        | 06          |             |        |
| Date= 23/07/20   | Time= 18:41 |             |        |
| ITEM             | RATE        | Wt./Pc      | AMOUNT |
| ONION            | 65.0        | 1.000       | 65.0   |
| POTATO           | 25.0        | 1.100       | 27.5   |
| TOMATO           | 53.0        | 0.100       | 5.3    |
| WATERMEL         | 14.0        | 20          | 280.0  |
| BANANA           | 66.0        | 1.5 DZ      | 99.0   |
| G. CHILL         | 58.0        | 1.100       | 63.8   |
| LADYFING         | 66.0        | 0.200       | 13.2   |
| CARROT           | 91.0        | 0.250       | 22.7   |
| SPINACH          | 30.0        | 10          | 300.0  |
| TOTAL=           |             |             | 876.5  |
| THANK YOU        |             | VISIT AGAIN |        |

## 9) SET DOZEN NUMBER


- Press **NEW** key.
- Set dozen Number using **SHIFT & 0-9** key.
- Press **ENTER** key.

## DATA LOADER SOFTWARE

Press and hold num-2 key until machine does not show **data**. Use software provided by sharp for upload item data to machine. Open sample excel sheet provide by sharp and edit item name and rate as per your requirement and save file.

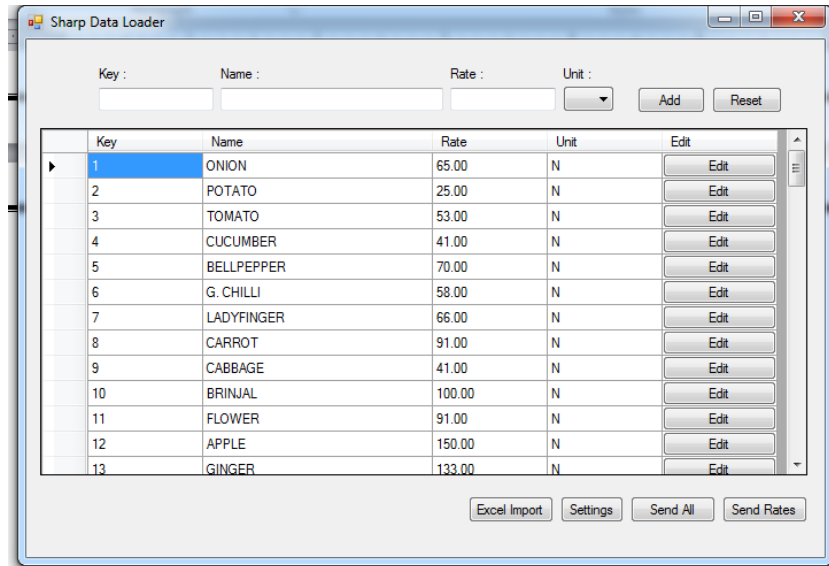


- 1) Open sharp data loader (Application file).
- 2) Connect weighing machine to computer.
- 3) Open setting menu for set **com port** and **baud rate**.

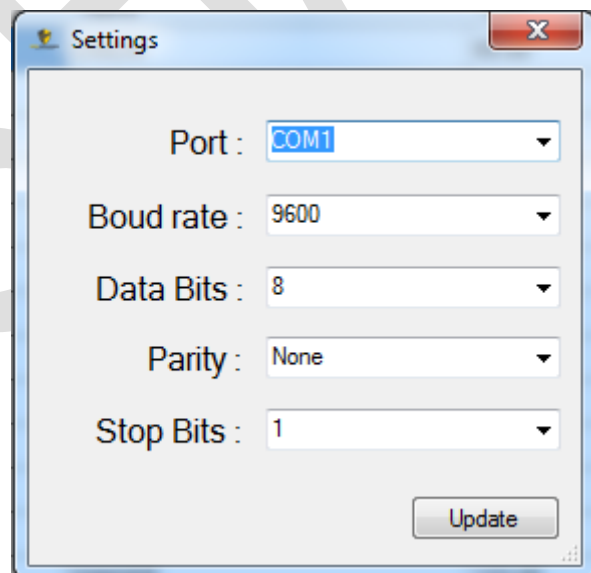

- select com port (Open device manager for com port ) and baud rate to 9600. Then press update button.

#### 4) Import Excel sheet.

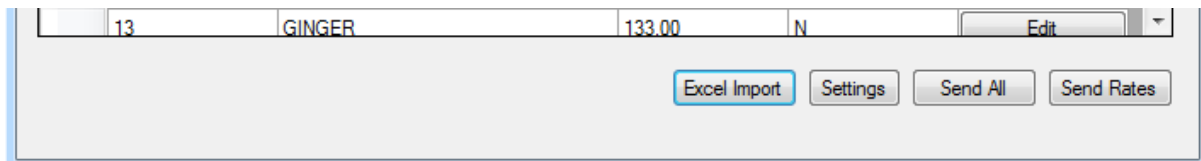

- Press **Excel Import** button.
  - Select updated excel file and press **open** button.
- 5) Upload data to machine-
- select all items from bottom to top (after selection arrow should be at 1<sup>st</sup> item)
  - Then press Send All button.
  - Wait for some time. After completion of data transfer **Transfer complete** message display at bottom-left of software.

## TIME AND DATE SETTING

- Press **ZERO** Key and power on machine.  
Machine shows PASS..
- Enter Password **01106** using **SHIFT** and **0-9 KEY** & Then press **ENTER** key.
- Machine shows **running TIME**.
- Press **ENTER** key.
- Machine shows **TIME**.
- Press **ENTER** key.
- Set **Time** using **SHIFT** and **0-9 KEY**. Then press **ENTER** key.  
Then Machine shows **DATE**.
- Press **ENTER** key.
- Set **Date** using **SHIFT** & **0-9 KEY** & Then press **ENTER** key

## SETTINGS FOR HEADER AND FOOTER

- Press & hold **ZERO** Key and power on machine.
- Machine shows Password.
- Enter **01109** as password using **SHIFT** & **0-9** Key & Then press **ENTER** key. Machine shows line1.

### \*line1--

- Use **ZERO** key for change **line1** (0-1).  
0- off.  
1-On.
- Press **ENTER** key.  
Machine shows **H**.

### a) **H 1- Height of line1---**

- Use **ZERO** key for change **line1** (0-7).
- Press **ENTER** key.  
Machine shows **W**.

### b) **W 1- width of line1---**

- Use **ZERO** key for change **line1** (0-4).
- Press **ENTER** key.  
Machine shows **Bold**.

### c) **Bold -**

- Use **ZERO** key for change **line1** (0-1).
- Press **ENTER** key.  
Machine shows **Name**.
- Press **ENTER** key.  
Machine shows **Previous saved Name**.
- Change **Name** using **SHIFT** & **0-9 KEY** & Then press **ENTER** key.
- \*\*Similarly do settings for other 3 lines.**

## KEY DISCRIPTION-

| KEY       | CHARACTOR              |
|-----------|------------------------|
| 0         | 0                      |
| 1         | 1,A,B,C                |
| 2         | 2,D,E,F                |
| 3         | 3,G,H,I                |
| 4         | 4,J,K,L                |
| 5         | 5,M,N,O                |
| 6         | 6,P,Q,R                |
| 7         | 7,S,T,U                |
| 8         | 8,V,W,X                |
| 9         | 9,Y,Z                  |
| EDIT RATE | Space( ),Dot(.),Neg(-) |

## SET ITEM NAME AND RATE

- Press **ZERO** Key and power on machine.
- Machine shows Pass..
- Enter Password **01108** using **SHIFT & 0-9 KEY** & Then press **ENTER** key.
- Machine shows **S\_Item**.
- Press **ENTER** key.
- Machine shows **From**.
- Press **ENTER** key.
- Enter **From** Position using **SHIFT & 0-9 KEY** & Then press **ENTER** key.
- Machine shows **To..**
- Press **ENTER** key.
- Enter **To** Position using **SHIFT & 0-9 KEY** & Then press **ENTER** key.
- Machine shows **SI 001..**
- Press **ENTER** key.
- Machine shows **NAME..**
- Press **ENTER** key.
- Change **Name** using **SHIFT & 0-9 KEY** & Then press **ENTER** key.
- Machine shows **RATE..**
- Press **ENTER** key.
- Change **RATE** using **SHIFT & 0-9 KEY** & Then press **ENTER** key.

**Similarly set all item code.**

## RESET SLIP NUMBER

- Press **ZERO** Key and power on machine.
- Machine shows **PASS..**
- Enter Password **01111** using **SHIFT & 0-9 KEY**. Then press **ENTER** key.
- Machine shows **SLIP**.
- set slip number to zero using **SHIFT & 0-9 KEY**.
- Press **ENTER** key.



## SETTINGS FOR COMPANY ENGINEER

### PARAMETER SETTINGS

- Press & hold **ZERO** Key and power on machine.
- Machine shows PASS.  
Enter **01104** as password using **SHIFT & 0-9 KEY** & Then press **ENTER** key. Machine shows **DP**.

#### 1) DP---(Decimal Point )

- Use **0-5 KEY** for change dp (0-5).
- Press **ENTER** key.  
Machine shows LD.

#### 2) LD---(Locking Division)

- Use **0-9 KEY** for change LD (0-9).
- Press **ENTER** key.  
Machine shows PZ.

#### 3) PZ---(Permanent Zero )

- Use **0-1 KEY** for change PZ (0-1).
- Press **ENTER** key.  
Machine shows CAPACITY.
- Press **ENTER** key.

#### 4) Cap---(Capacity)

- Using **SHIFT** and **0-9 KEY** set Capacity.
- Press **ENTER** key.  
Machine shows ACC.

#### 5) LC---(Accuracy)

- Use **ZERO** Key for change LC (1,2,5,10,20,50).
- Press **ENTER** key.  
Machine shows **ITEM**.
- Press **ENTER** key.

#### 6) ITEM----(1-999 No. Of Item)

- Using **SHIFT** and **0-9 KEY** set **ITEM**.
- Press **ENTER** key.  
Machine shows **No sense**.
- Press **ENTER** key.

### 7) No sense ---

- Using **SHIFT** and **0-9 KEY** set Frame.
- Press **ENTER** key.
- Machine shows Average.

### 8) Avrage---(Average/Speed)

- Using **SHIFT** and **0-9 KEY** set Average.
- Press **ENTER** key.
- Machine shows **Frame**.
- Press **ENTER** key.

### 9) Frame----

- Using **SHIFT** and **0-9 KEY** set Frame.
- Press **ENTER** key.
- Machine shows PC.

### 10) P Mode---(Piece mode From This Item No.)

- Using **SHIFT** and **0-9 KEY** set **PC**.
- Press **ENTER** key.
- Machine shows **WAIT**.

## COUNTS

- Press & hold **ZERO** Key and power on machine.
- Machine shows **PASS**.
- Enter **01107** as password using **SHIFT** & **0-9 KEY** & Then press **ENTER** key.
- Machine shows load cell counts.

## CALIBRATION

- Press **ZERO** Key and power on machine.  
Machine shows Calibration and then shows PASS..  
Enter **01105** as password using **SHIFT & 0-9 KEY** & Then press **ENTER** key.  
Then Machine shows **LOAD**.
- Put weight on Platform and set Load value using **SHIFT & 0-9 KEY**.  
Then press **ENTER** key.

## PRINT ITEM NAME AND RATE

- Press **ZERO** Key and power on machine.  
Machine shows PASS..
- Enter Password **01110** using **SHIFT** and **0-9 KEY**. Then press **ENTER** key.

## RESET REPORT DATE

- Press **ZERO** Key and power on machine.  
Machine shows PASS..
- Enter Password **01112** using **SHIFT & 0-9 KEY** & Then press **ENTER** key.  
Machine shows **SLIP**.
- set slip number to **zero** using **SHIFT & 0-9 KEY**.
- Press **ENTER** key.

## DEFAULT SETTING

- Press **ZERO** Key and power on machine.
- Machine shows PASS. Enter Password **02488** using **SHIFT** and **0-9 KEY**.
- Press **ENTER** key.

Dp       =3  
Capacity=35000  
Id        =2  
PZ        =1  
Slip no =0

Header- SHARP ELECTROINC  
          THERGAO PUNE  
          M.No- 9922147673

Footer- THNK YOU   VISIT AGAIN

ACC       =2  
frame     =5  
Average   =5  
P Mode    =71  
dozen Mode =91

## ITEM NAME AND RATES

### 1) Vegetable Item on Kg-

| Item code | Item Name   |             | Rate   |
|-----------|-------------|-------------|--------|
| 1         | Onion       | कांदा       | 65.00  |
| 2         | Potato      | बटाटा       | 25.00  |
| 3         | Tomato      | टोमॅटो      | 53.00  |
| 4         | Cucumber    | काकडी       | 41.00  |
| 5         | Bell pepper | भोपळी मिरची | 70.00  |
| 6         | G. Chilli   | हिरवी मिरची | 58.00  |
| 7         | Lady Finger | भेंडी       | 66.00  |
| 8         | Carrot      | गाजर        | 91.00  |
| 9         | Cabbage     | पत्ता कोबी  | 41.00  |
| 10        | Brinjal     | वांगे       | 100.00 |
| 11        | Flower      | फूल कोबी    | 91.00  |
| 12        | Apple       | सफरचंद      | 150.00 |
| 13        | Ginger      | आले         | 133.00 |
| 14        | Garlic      | लसूण        | 250.00 |
| 15        | Chikoo      | चिकू        | 83.00  |
| 16        | Beetroot    | बीट         | 50.00  |
| 17        | G.Gourd     | लौकी        | 66.00  |
| 18        | Drumstick   | शेवगा       | 150.00 |
| 19        | G. Peas     | मटार        | 200.00 |
| 20        | Dodka       | दोडका       | 83.00  |
| 21        | Tondali     | तोंडाली     | 83.00  |
| 22        | Papaya      | पपई         | 66.00  |
| 23        | Ghevada     | घेवडा       | 75.00  |
| 24        | Chilli      | लाल मिरची   | 58.00  |
| 25        | R. Pumpkin  | लाल भोपळा   | 40.00  |
| 26        | Groundnuts  | शेंगदाणे    | 100.00 |
| 27        | S. Potato   | रताळे       | 83.00  |
| 28        | Chawali     | चावळी       | 75.00  |
| 29        | Marigold    | झेंडू       | 100.00 |
| 30        | Orange      | संत्रा      | 100.00 |
| 31        | Broccoli    | कोबी        | 163.00 |

**2) Item on Piece -**

| Sr.No | Item Name  |           | Rate  |
|-------|------------|-----------|-------|
| 71    | Watermelon | टरबूज     | 13.00 |
| 72    | Coriander  | कोथिंबीर  | 58.00 |
| 73    | Fenugreek  | मेथी      | 41.00 |
| 74    | Spinach    | पालक      | 30.00 |
| 75    | Dill       | बडीशेप    | 33.00 |
| 76    | Pudina     | पुदिना    | 16.00 |
| 77    | Kandapat   | कांदापत   | 41.00 |
| 78    | S. Corn    | गोड मका   | 10.00 |
| 79    | Kadipatta  | काडीपत्ता | 1.00  |
| 80    | Pineapple  | अननस      | 50.00 |
| 81    | LemonGrass | गवती चहा  | 13.00 |
| 82    | Tandulsa   | तंदुळसा   | 15.00 |
| 83    | Lemon      | लिंबू     | 10.00 |
| 84    | Radish     | मुळा      | 25.00 |

**3) Item on Dozen -**

| Sr.No | Item Name |      | Rate  |
|-------|-----------|------|-------|
| 91    | Banana    | केळी | 66.00 |
| 92    | Eggs      | अंडी | 60.00 |

**4) Fish Item -**

| Sr.No | Item Name    |  | Rate |
|-------|--------------|--|------|
| 41    | Surmai       |  | 0.0  |
| 42    | Paplet       |  | 0.0  |
| 43    | Halwa        |  | 0.0  |
| 44    | Chand Paplet |  | 0.0  |
| 45    | Bombil       |  | 0.0  |
| 46    | Vam          |  | 0.0  |
| 47    | Zinga        |  | 0.0  |
| 48    | Chilapi      |  | 0.0  |
| 49    | Mandeli      |  | 0.0  |
| 50    | Shingada     |  | 0.0  |
| 51    | Toll         |  | 0.0  |
| 52    | Raja Rani    |  | 0.0  |
| 53    | Doma         |  | 0.0  |
| 54    | Lepa         |  | 0.0  |
| 55    | Kupa         |  | 0.0  |
| 56    | Rawas        |  | 0.0  |
| 57    | Kaniya       |  | 0.0  |
| 58    | Mitha P      |  | 0.0  |
| 59    | Tarli        |  | 0.0  |
| 60    | Khekada      |  | 0.0  |
| 61    | Eggs         |  | 0.0  |

## **COMPANY PRODUCTS**

### **1) Tabletop machine:-**

- a) CANDY SCALE
- b) MINI TABLE TOP

### **2) JWELLERY SCALE:-**

### **3) Platform Scale:-**

- a) HEAVY DUTY PLATFORM SCALE
- b) 4 LOAD CELL PLATFORM SCALE
- c) KG/LTR PLATFORM SCALE
- d) TROLLEY SCALE

### **5) PRICE/PIECE COUMPUTING SCALE:-**

### **6) HANGING / CRANE SCALE:-**

### **7) Weighing Scale:-**

- a) COIN SCALE
- c) PERSONAL SCALE
- d) BABY WEIGHING SCALE

### **8) WEIGHBRIDGE:-**

### **9) Weighing System:-**

- a) LOADCELLS
- b) WEIGHTCONTROLLER
- c) TANK WEIGHING
- d) HOPPER WEIGHING
- e) CHECK WEIGHING
- f) FLAME PROOF WEIGHING MACHINE

For more information visit <http://www.sharpweighingscale.com/>