
01

Steel and glazing

Survey and level the supports; all hot work now: convert the old door

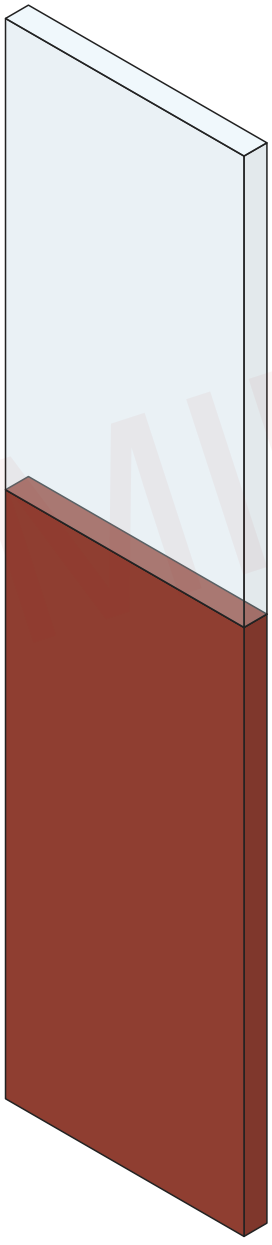

! Survey sheet first: nothing is cut before study/studio/survey.csv is complete. No welding


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Survey and level the supports; all hot work now: convert the old	AS-01
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

02

Insulation and lining

Prime the steel; lay the membrane over the treated floor; screw down t

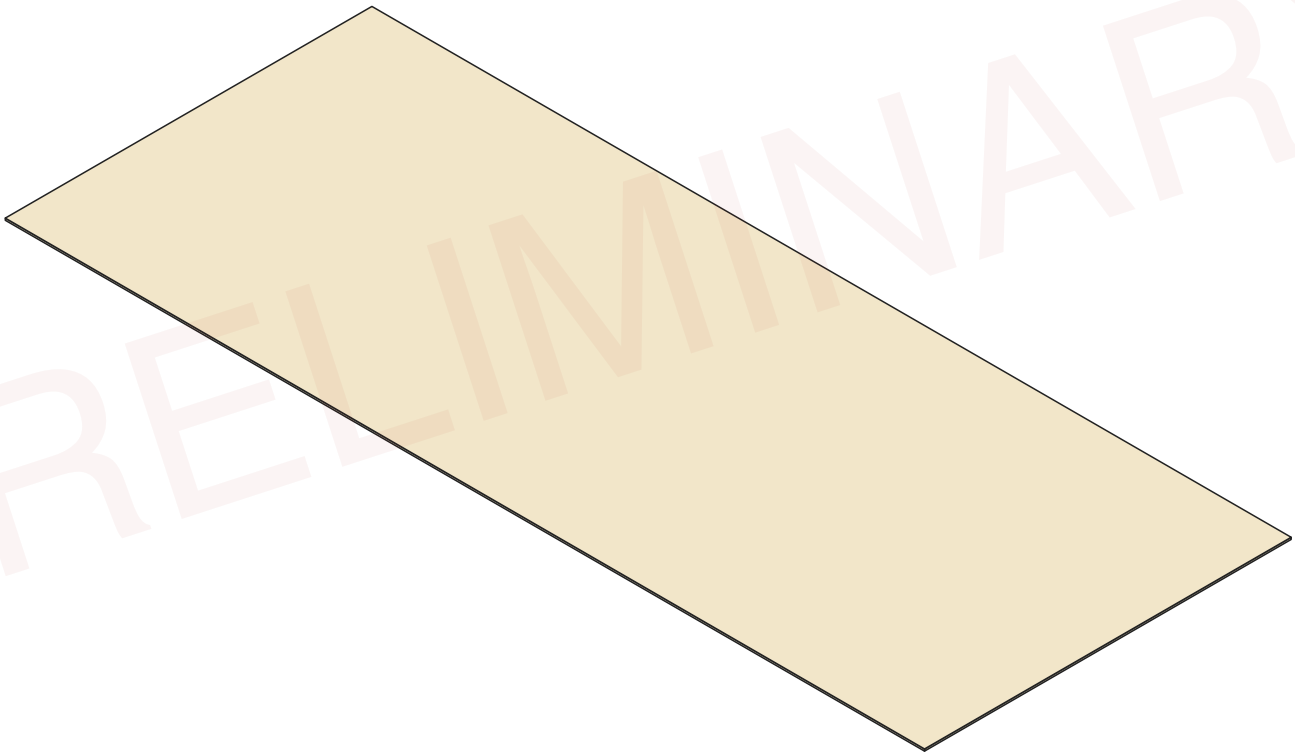

! Never sand the treated container floor. Sheets 2440 x 1220, long side along the box, joint

screw

189x F

Farm container studios

farm.databayt.org/docs/studio

Prime the steel; lay the membrane over the treated floor; screw

AS-02

Scale NTS · Rev A2 · 2026-10-28 · mm


PRELIMINARY

PRELIMINARY

03

Insulation and lining

Fix the battens: one under every lining-panel joint and edge, infill a

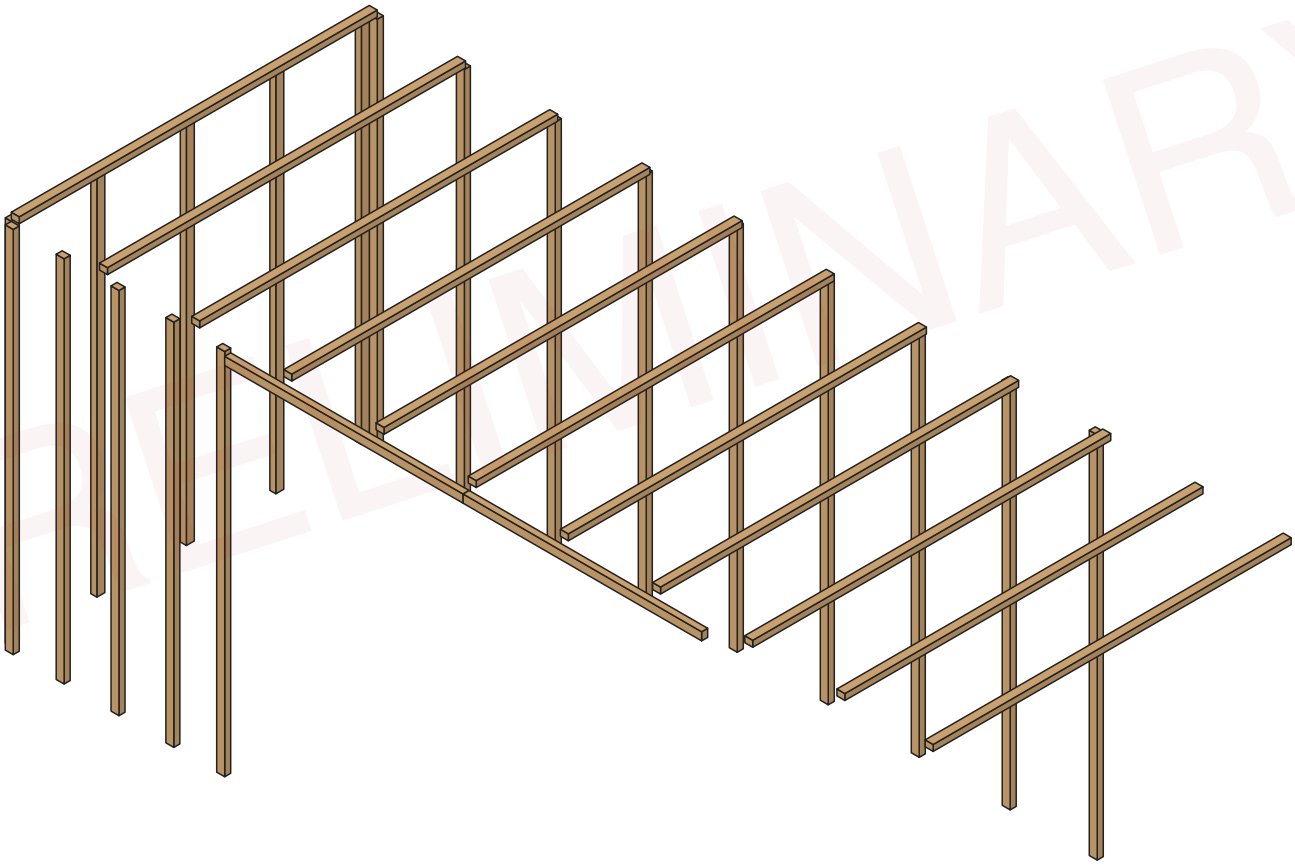

! Winged screws into the steel at both ends and every 600 mm along each batten.

sds
192x L

Farm container studios	farm.databayt.org/docs/studio
Fix the battens: one under every lining-panel joint and edge, in	**AS-03**
Scale NTS · Rev A2 · 2026-10-28 · mm	**PRELIMINARY**

PRELIMINARY

04

Electrical

Services first fix: earth rod, conduits and cables in the batten cavit




! HOLD before S05: licensed electrician and plumber on site; the test is recorded.

PRELIMINARY

05

Insulation and lining

Spray foam between the battens, let it cure and trim it flush; fix the

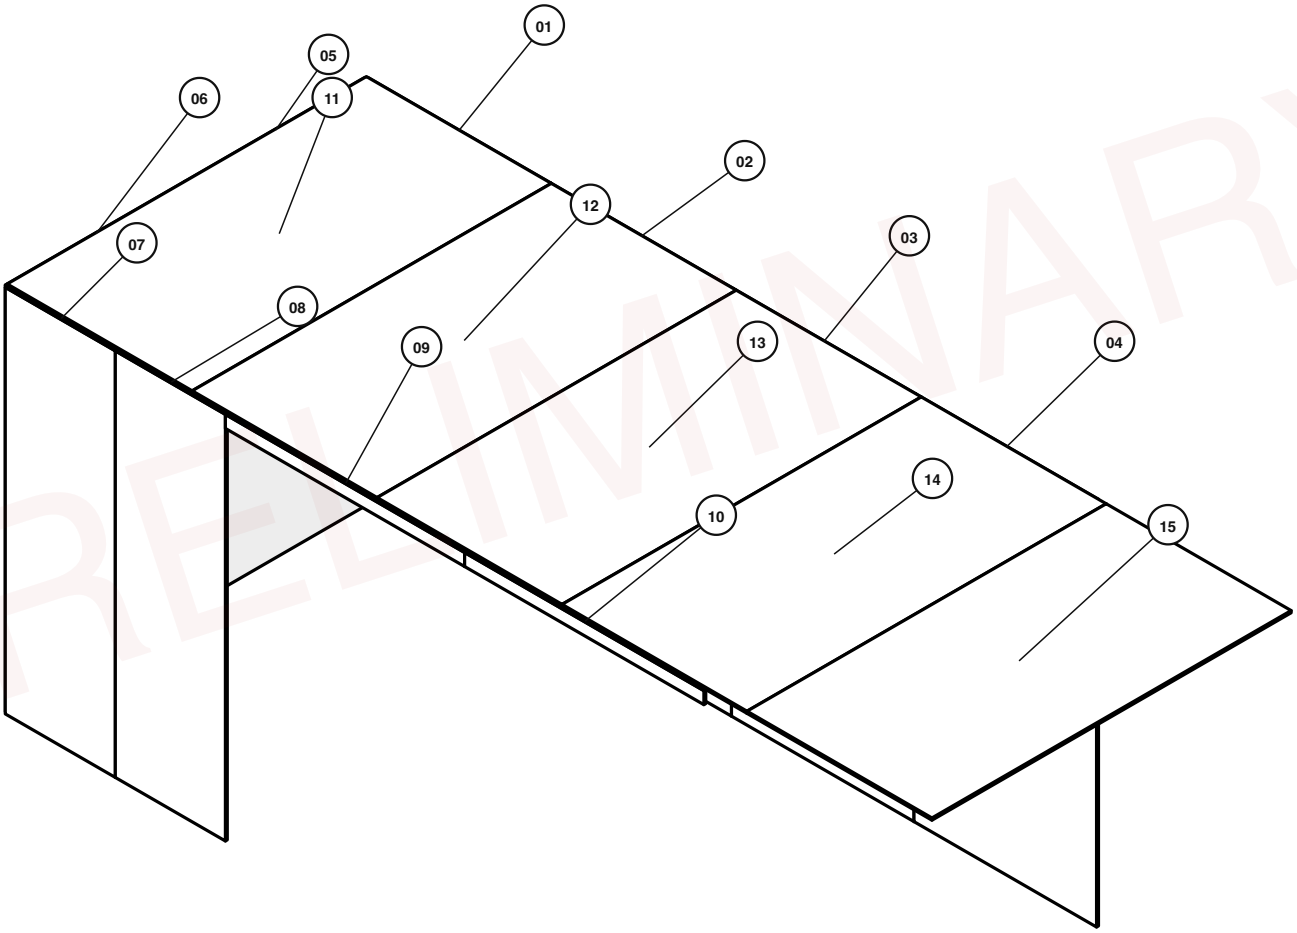

! HOLD: the S04 pressure test has passed. No welding or grinding on the shell once the foam

screw

600x F


Farm container studios	farm.databayt.org/docs/studio
Spray foam between the battens, let it cure and trim it flush;	**AS-05**
Scale NTS · Rev A2 · 2026-10-28 · mm	**PRELIMINARY**

PRELIMINARY

06

Bathroom

Stand the partition and cross-wall frames and fix the skins

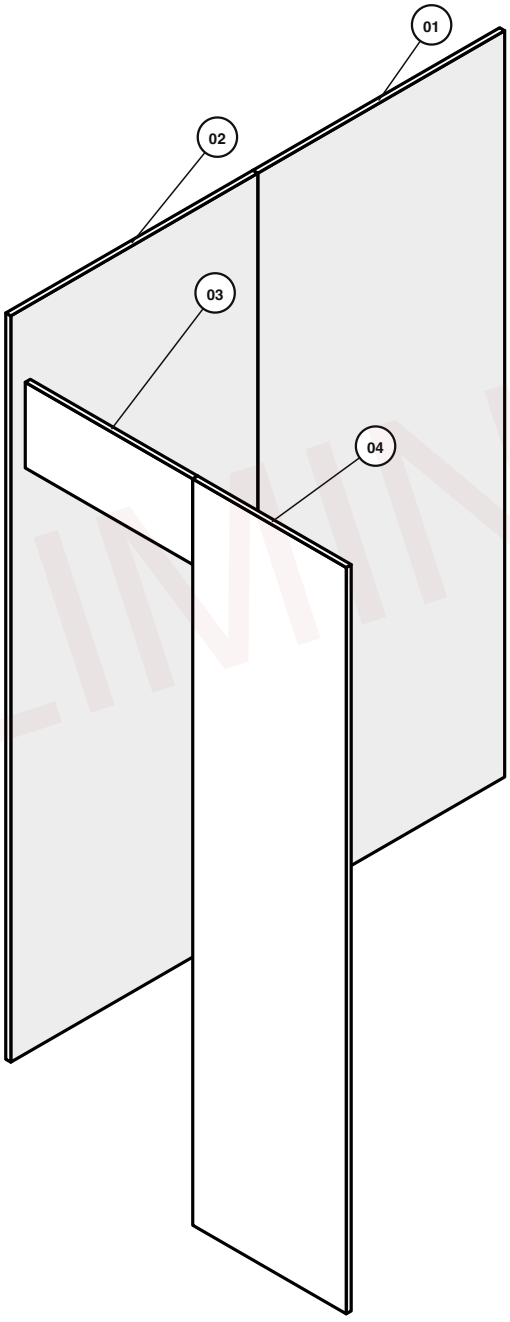

screw

40x F

Farm container studios

farm.databayt.org/docs/studio

Stand the partition and cross-wall frames and fix the skins

AS-06

Scale NTS · Rev A2 · 2026-10-28 · mm


PRELIMINARY

PRELIMINARY

07

Bathroom

Fit the door frame and hang the bathroom door

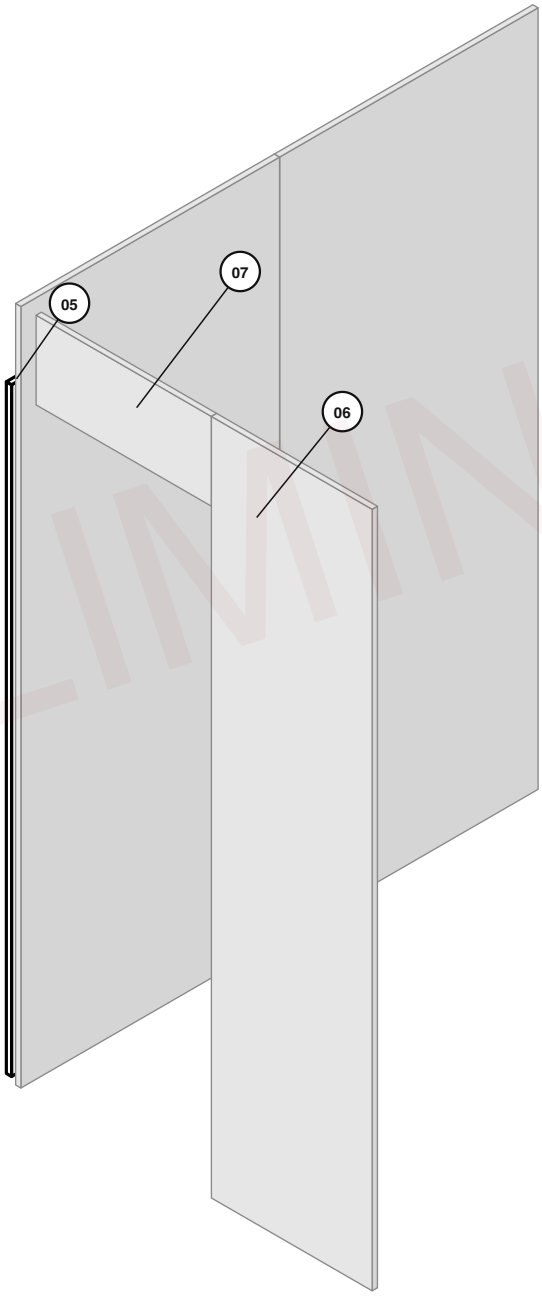

screw

16x F


Farm container studios	farm.databayt.org/docs/studio
Fit the door frame and hang the bathroom door	**AS-07**
Scale NTS · Rev A2 · 2026-10-28 · mm	**PRELIMINARY**

PRELIMINARY

08

Bathroom

Cement board, membrane and tiles on the wet walls; coved vinyl floor

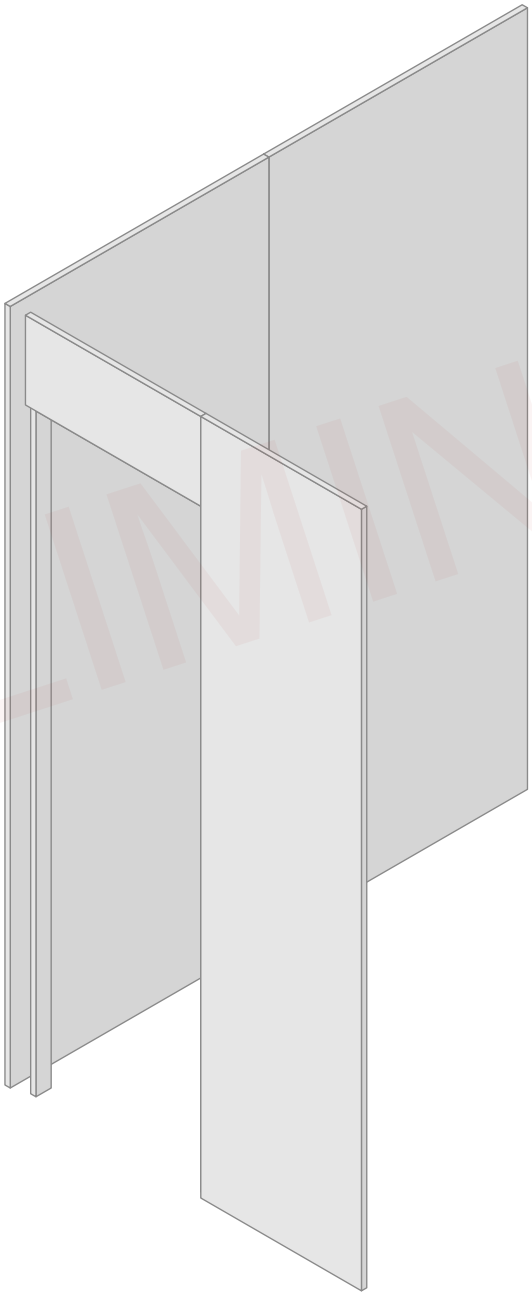


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Cement board, membrane and tiles on the wet walls; coved vinyl	**AS-08**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

09

Bathroom

Set the shower tray, ledge and fixed screen

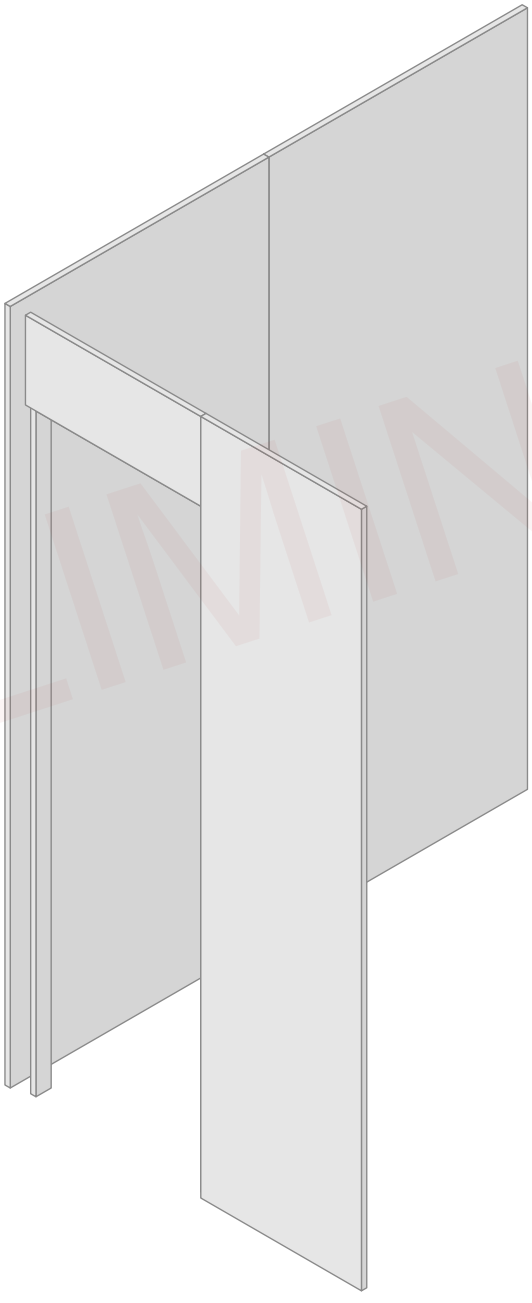


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Set the shower tray, ledge and fixed screen	**AS-09**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

10

Bathroom

Hang the WC and the water heater above it, and the basin and mirror ca

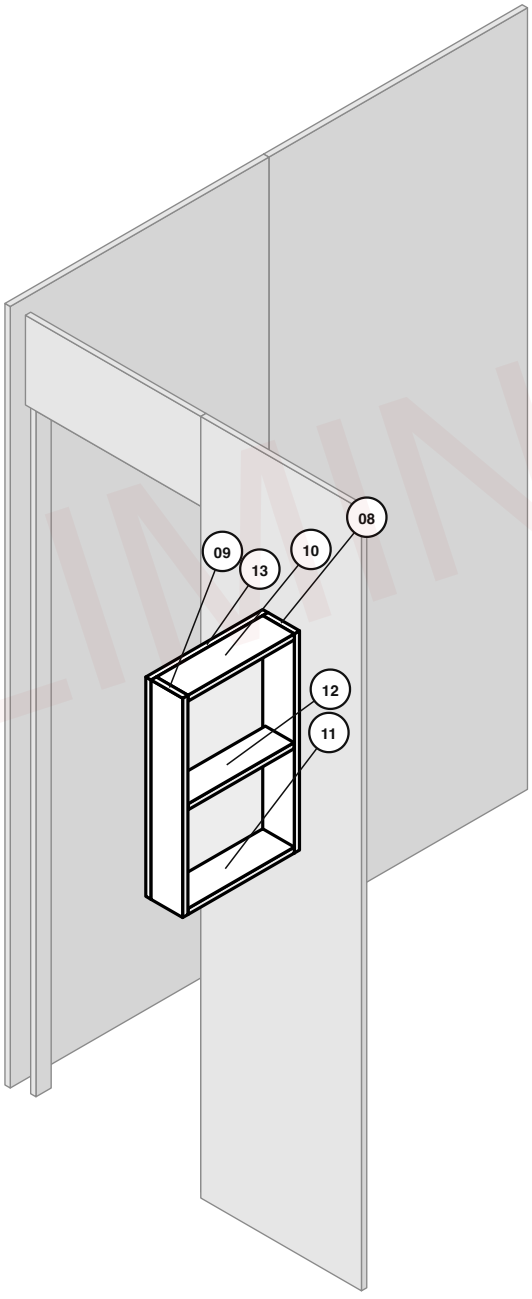

screw

12x F

Farm container studios

farm.databayt.org/docs/studio

Hang the WC and the water heater above it, and the basin and mi

AS-10

Scale NTS · Rev A2 · 2026-10-28 · mm


PRELIMINARY

PRELIMINARY

11

Kitchen

Lay the oak planks over the living area (end A to the partition); then

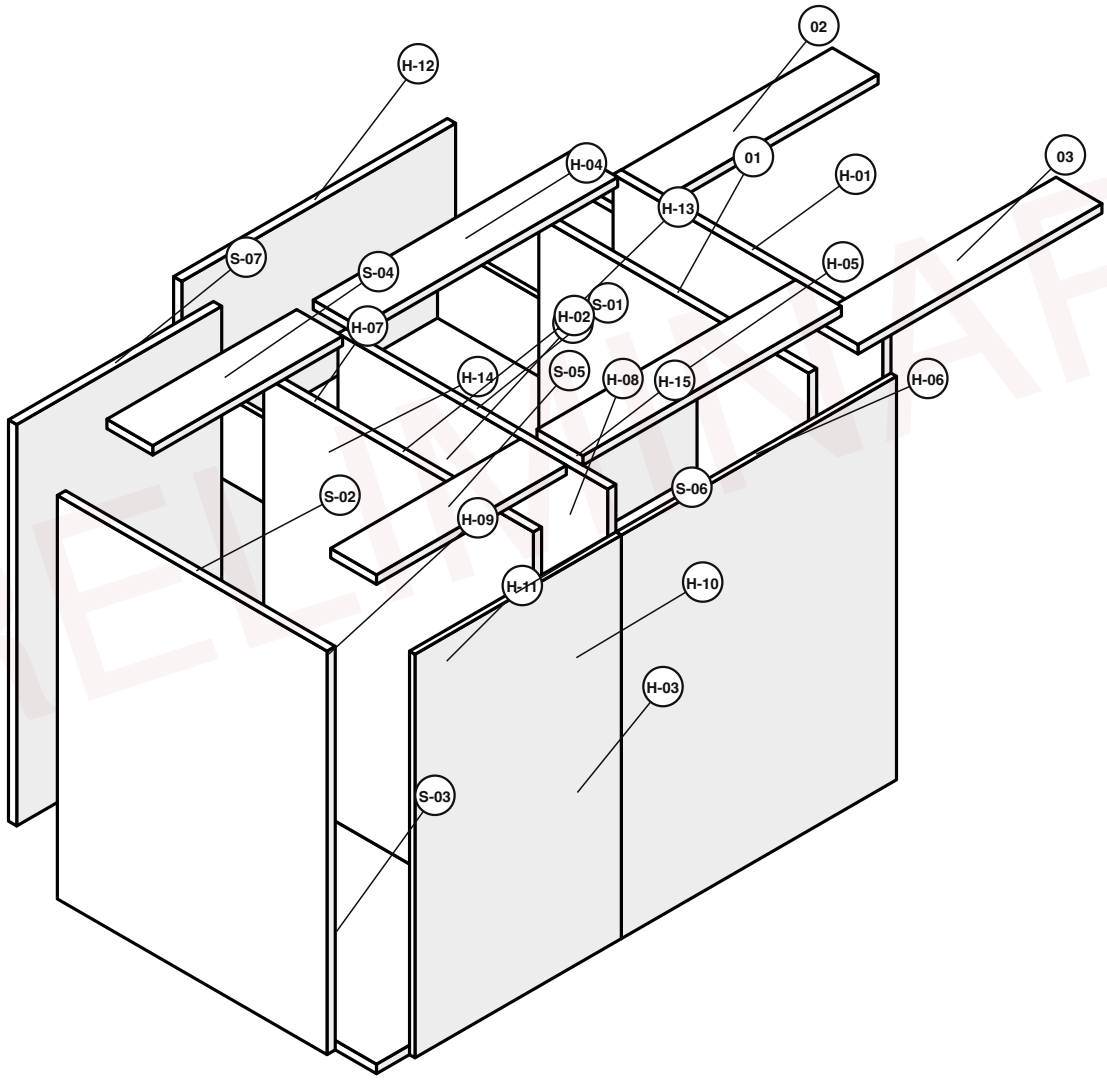


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Lay the oak planks over the living area (end A to the partition)	AS-11
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

12

Kitchen

Assemble the overhead cabinet and hang it on the steel rail

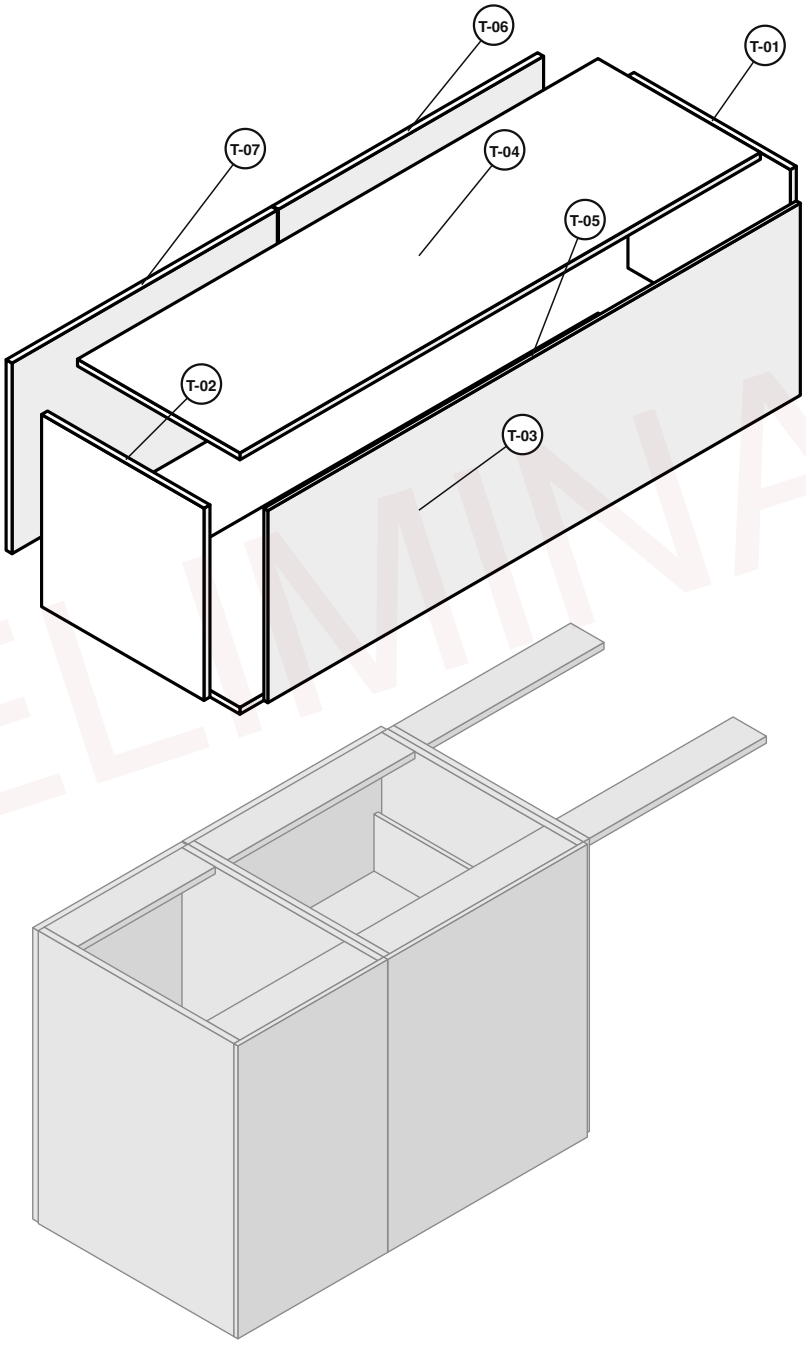

! Lift the cabinet up: two people.


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Assemble the overhead cabinet and hang it on the steel rail	AS-12
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

13

Kitchen

Scribe and fix the worktop; drop in the sink and hob; plinth

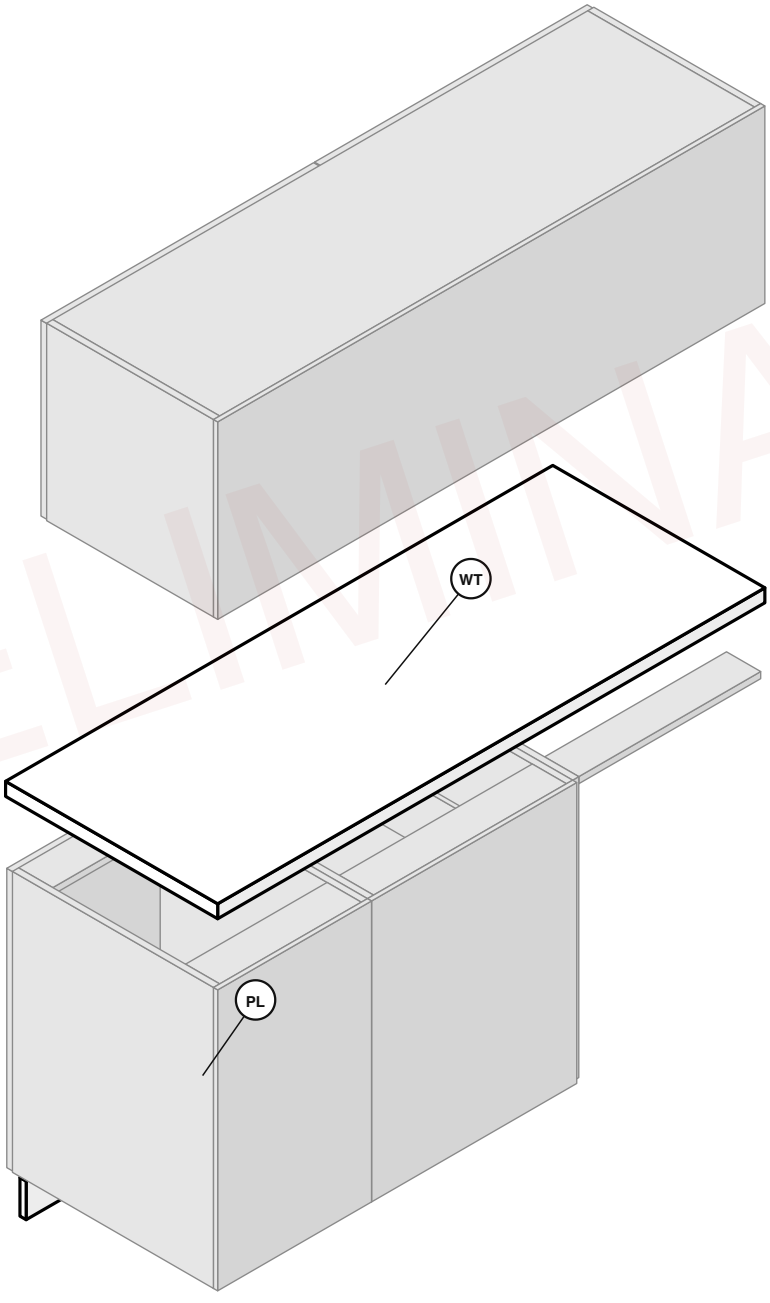

screw

12x F

Farm container studios

farm.databayt.org/docs/studio

Scribe and fix the worktop; drop in the sink and hob; plinth

AS-13

Scale NTS · Rev A2 · 2026-10-28 · mm


PRELIMINARY

PRELIMINARY

14

Kitchen

Fix the hood shelf under the overhead cabinet and hang the hood

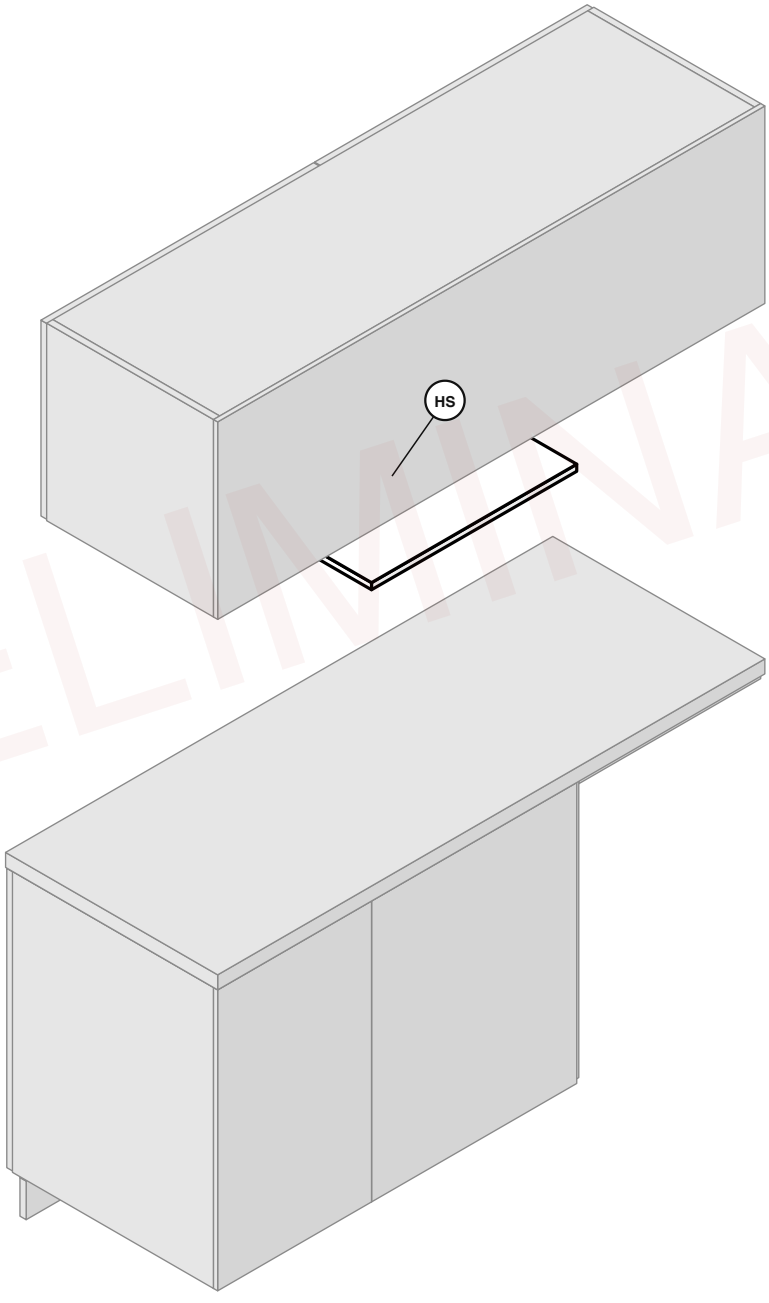

screw

8x F

Farm container studios

farm.databayt.org/docs/studio

Fix the hood shelf under the overhead cabinet and hang the hood

AS-14

Scale NTS · Rev A2 · 2026-10-28 · mm


PRELIMINARY

PRELIMINARY

15

Bed

Fix the headboard to the back wall; bolt the frame; screw down the sla

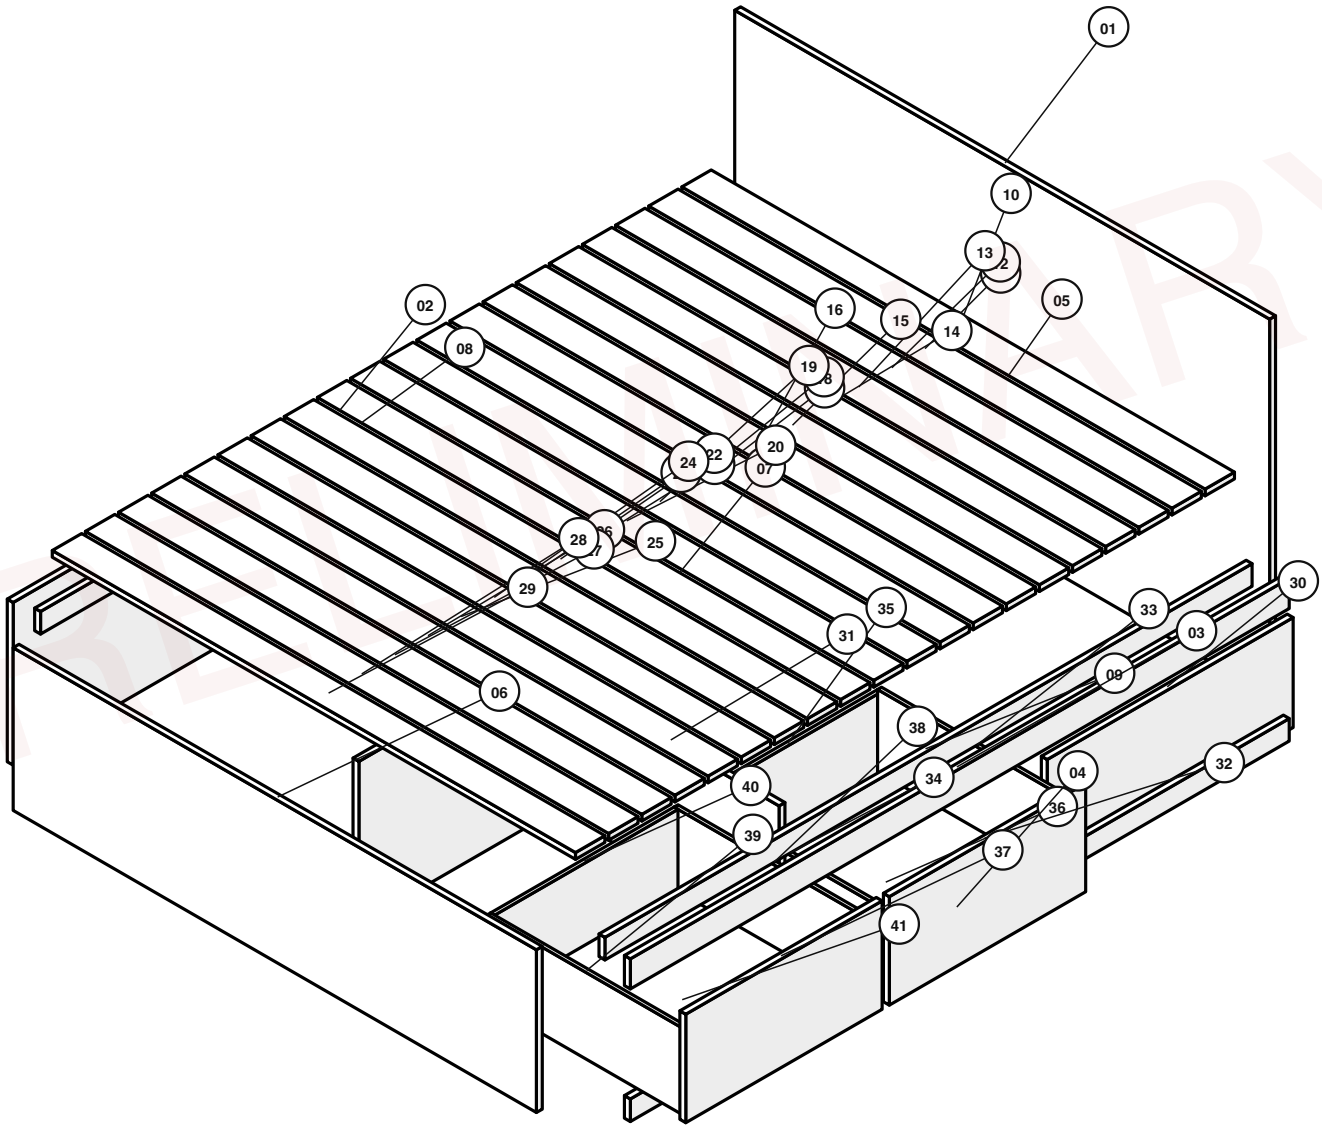

bolt	castor	screw
20x C	**8x K**	

Farm container studios farm.databayt.org/docs/studio

Fix the headboard to the back wall; bolt the frame; screw down

AS-15


Scale NTS · Rev A2 · 2026-10-28 · mm

PRELIMINARY

16

Bedside table

Glue the leg strips; screw the top and the shelf; set the table by the

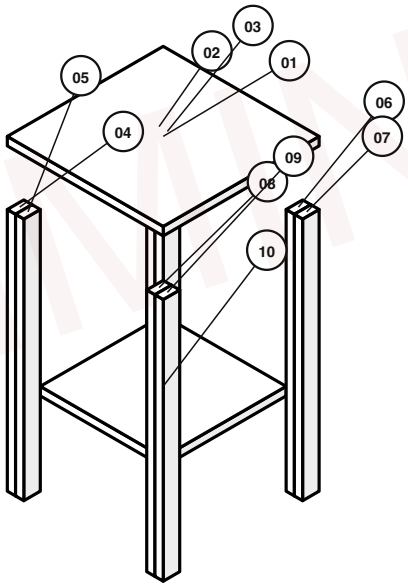

screw

16x F


Farm container studios	farm.databayt.org/docs/studio
Glue the leg strips; screw the top and the shelf; set the table	**AS-16**
Scale NTS · Rev A2 · 2026-10-28 · mm	**PRELIMINARY**

PRELIMINARY

17

Sofa, table and chairs

Place the sofa; slot together the table and the two chairs

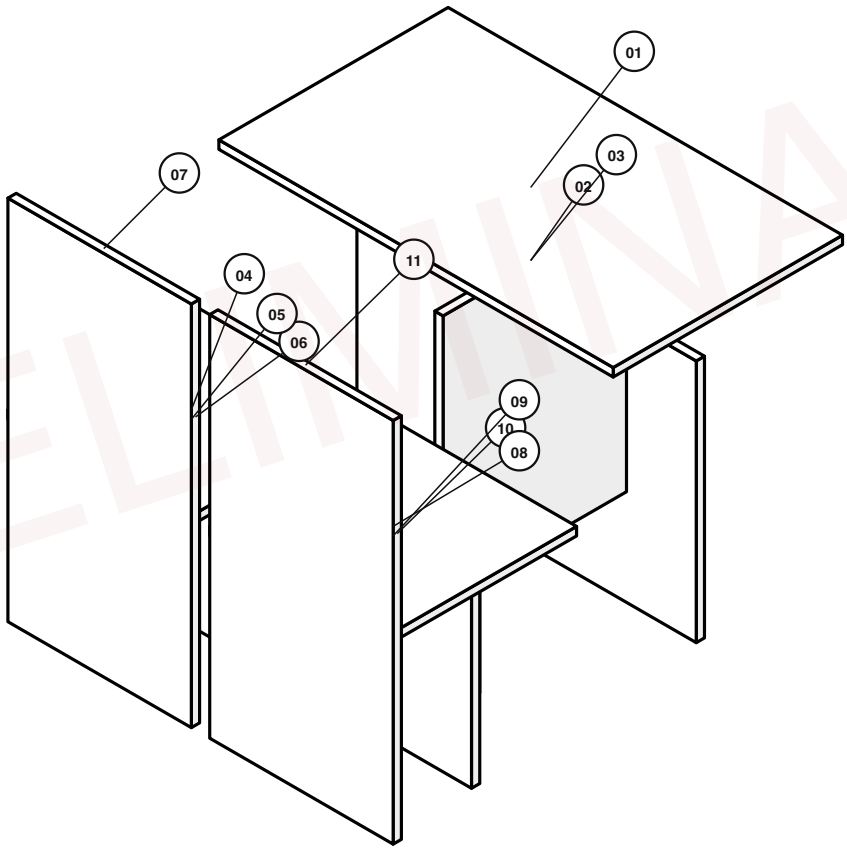


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Place the sofa; slot together the table and the two chairs	**AS-17**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

18 Trims

Scribe and pin the trims; caulk and paint

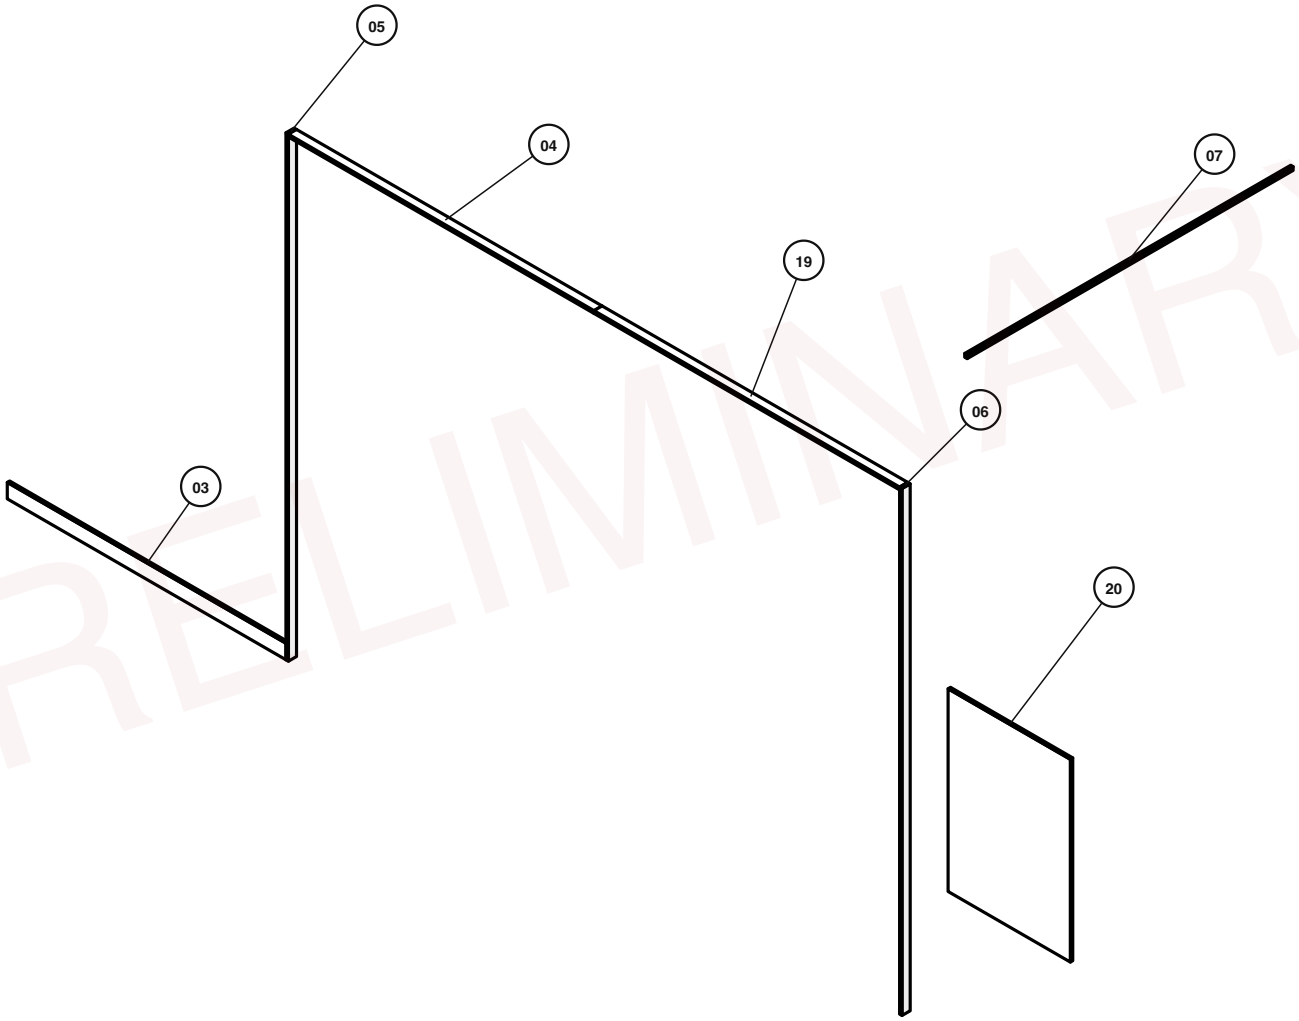

screw


60x F

Farm container studios	farm.databayt.org/docs/studio
Scribe and pin the trims; caulk and paint	**AS-18**
Scale NTS · Rev A2 · 2026-10-28 · mm	**PRELIMINARY**

PRELIMINARY

19 Electrical

Second fix: unit board, devices, lights, alarms; test and certify

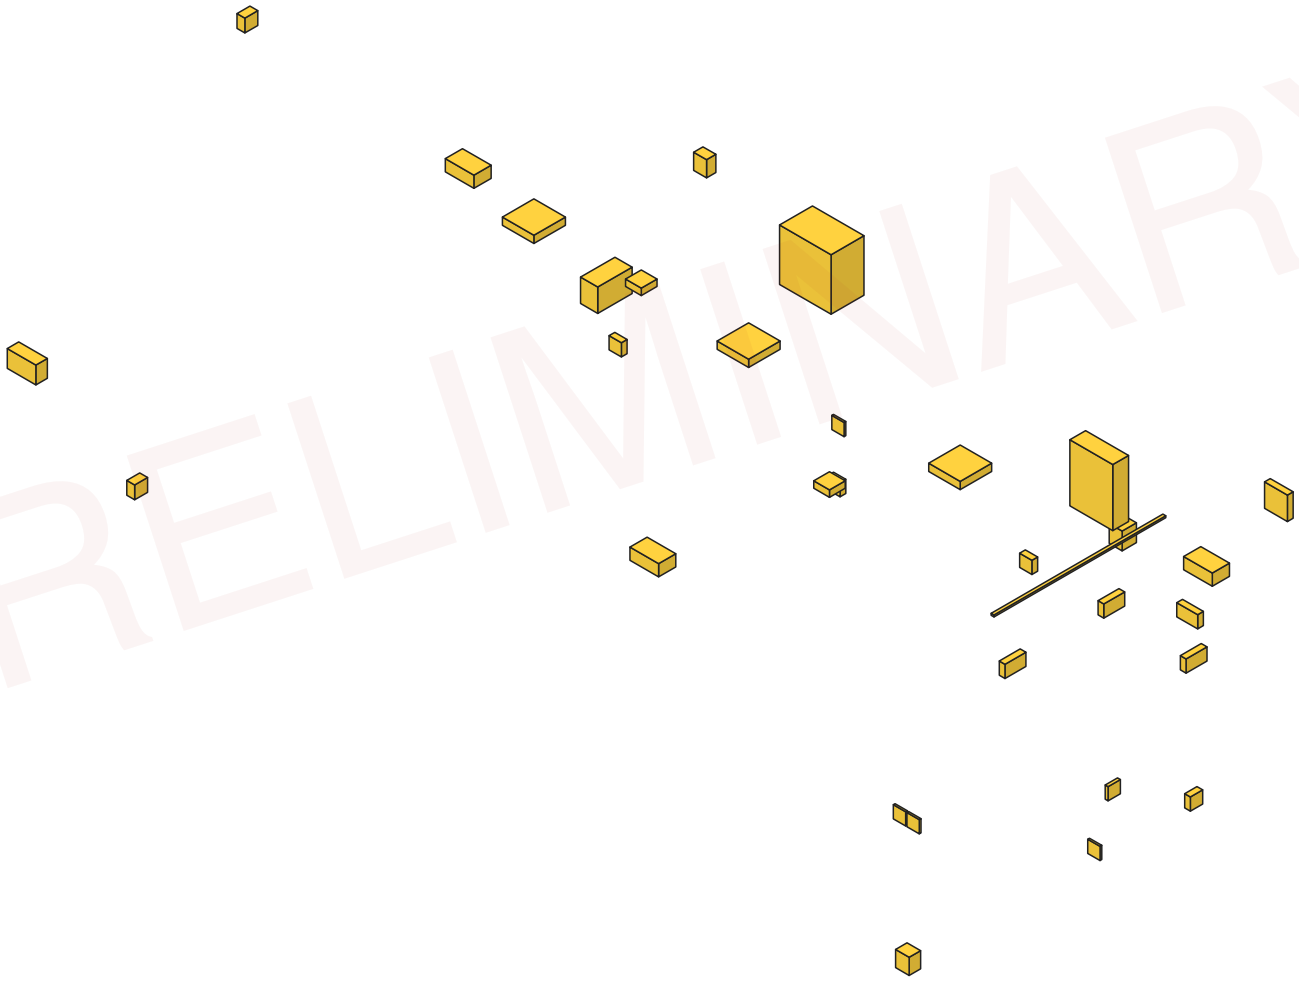

! Certificate from a RURA class A electrician before power-on.


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Second fix: unit board, devices, lights, alarms; test and certify	AS-19
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

20

Roof terrace

Lift and bolt the deck beams onto the corner castings; joists

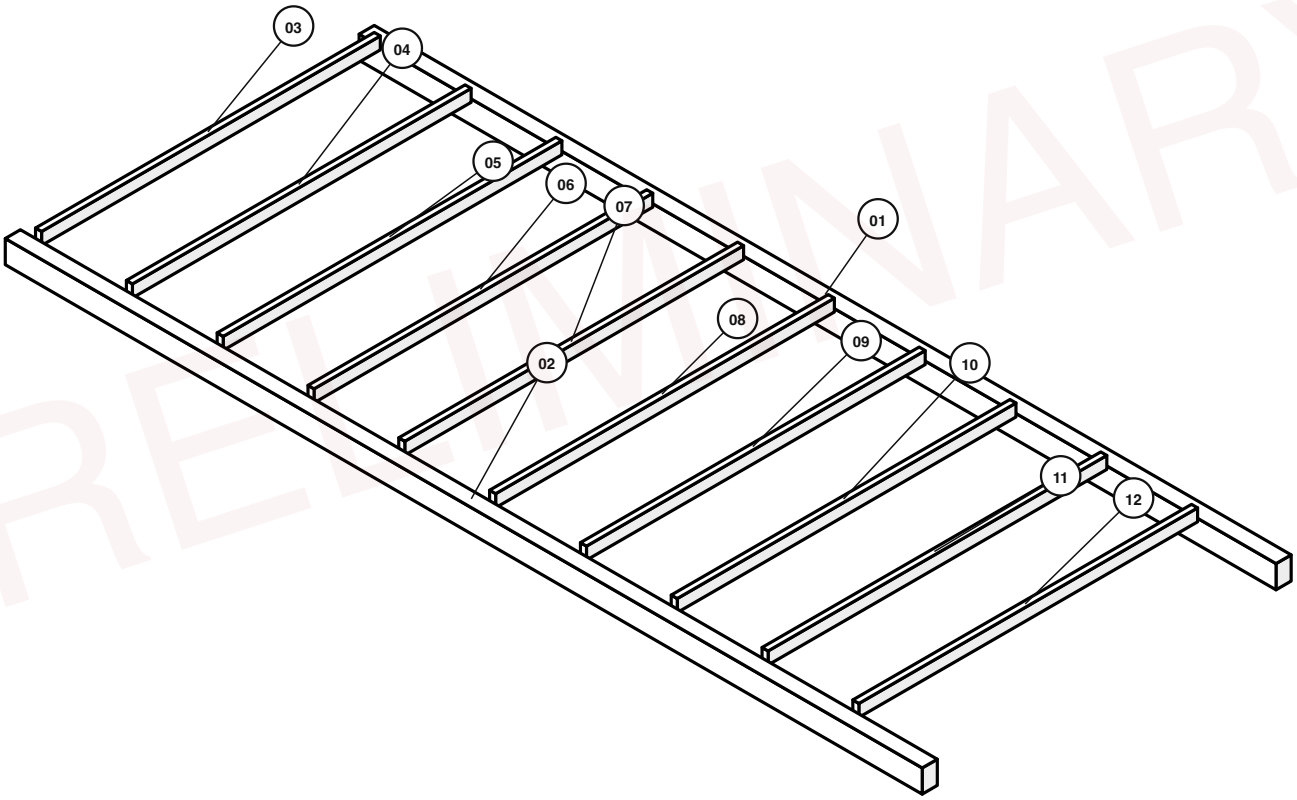


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Lift and bolt the deck beams onto the corner castings; joists	**AS-20**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

21

Roof terrace

Screw down the deck boards (5 mm gaps)

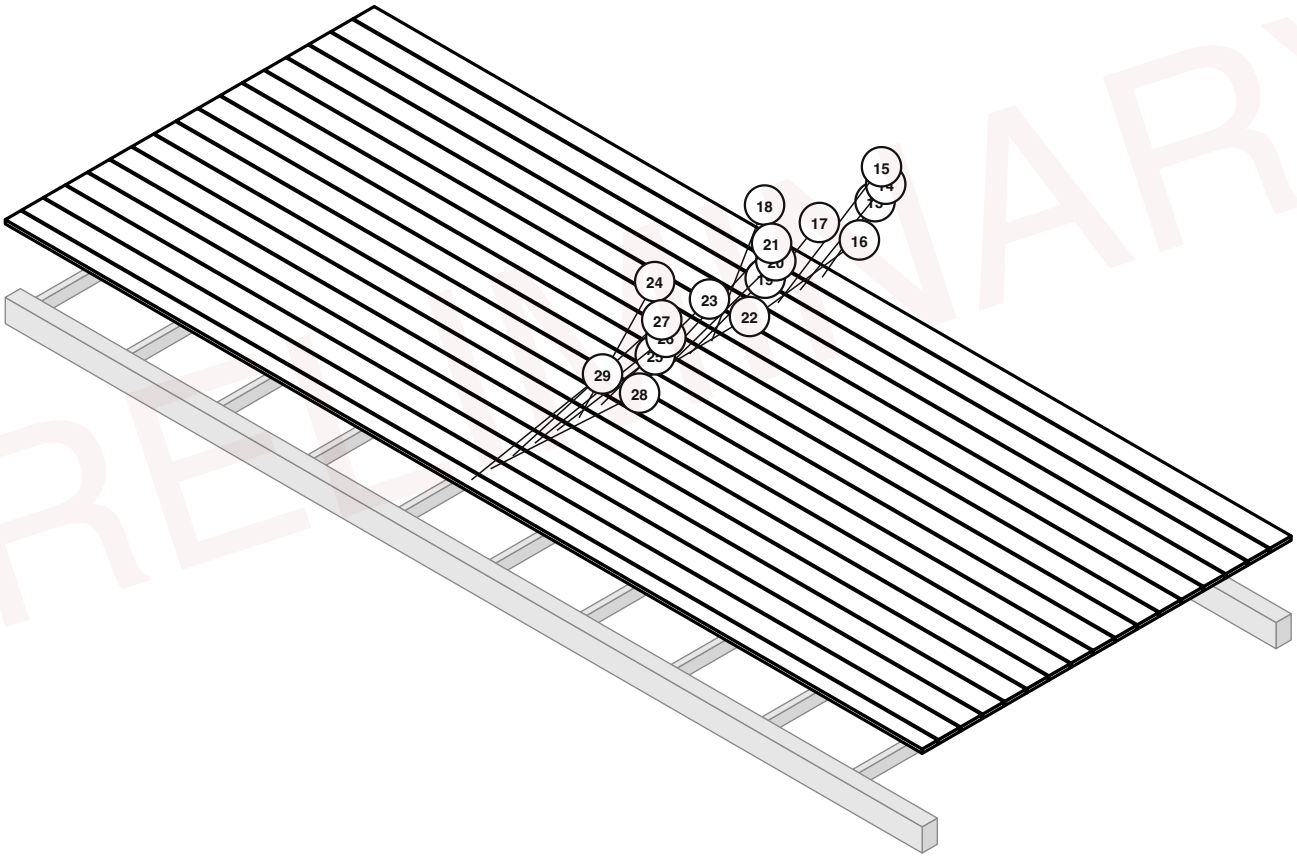


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Screw down the deck boards (5 mm gaps)	**AS-21**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

22

Roof terrace

Bolt the guardrail posts to the deck beams

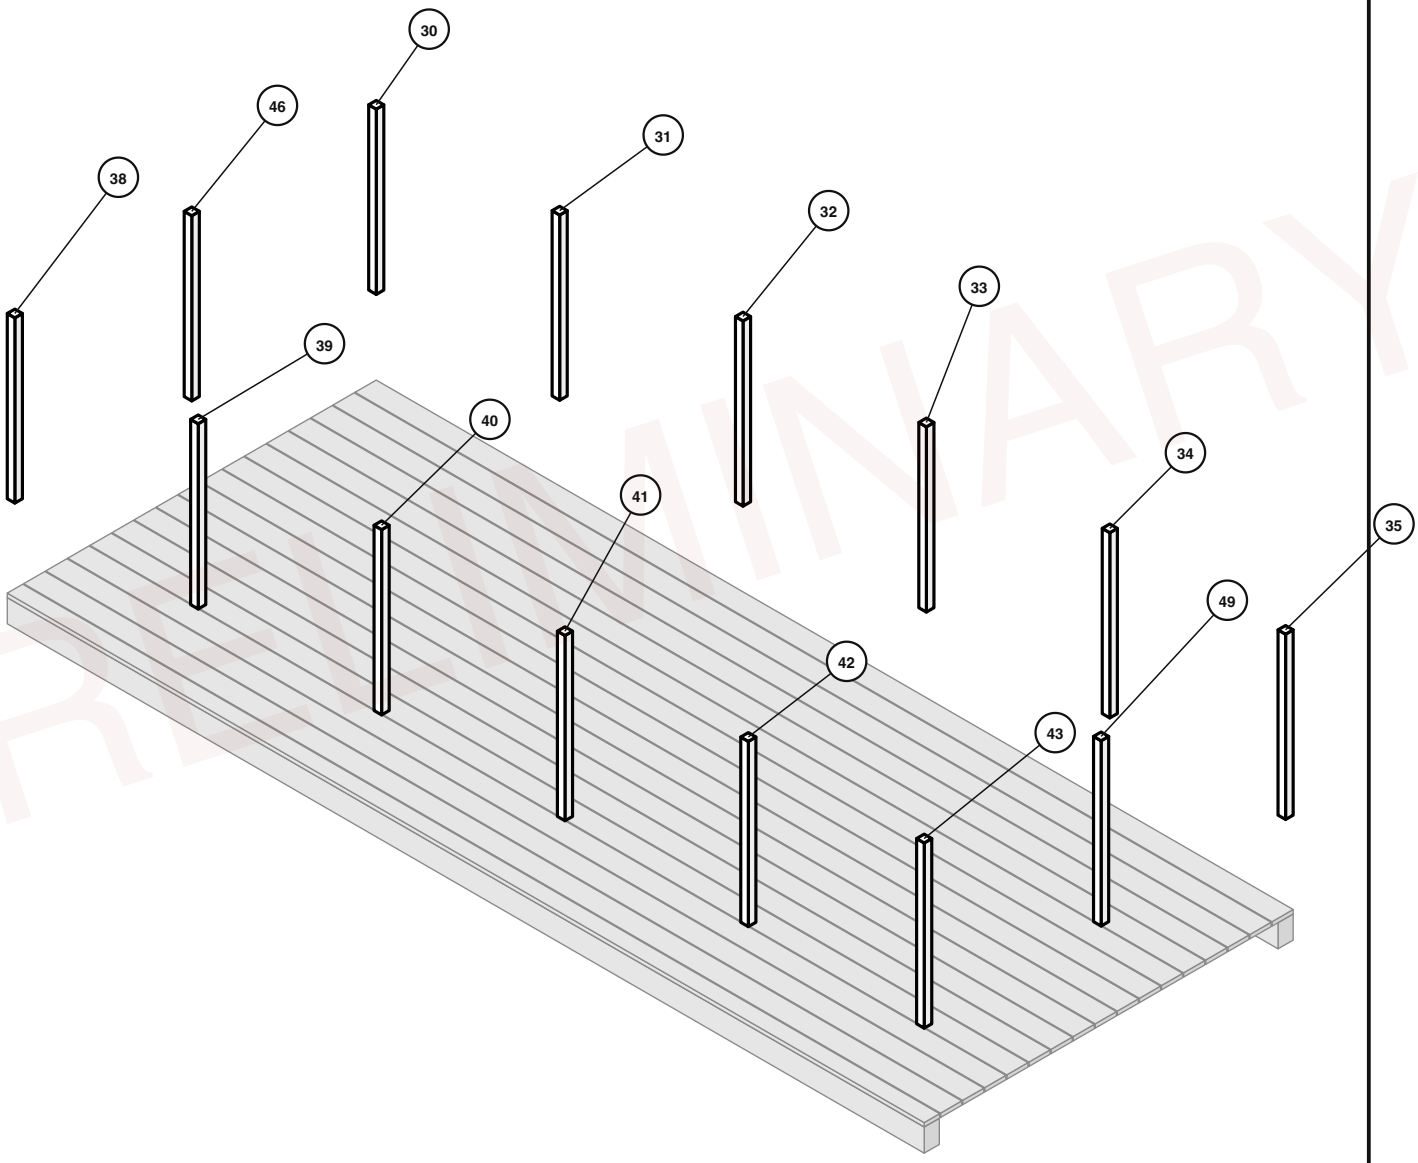


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Bolt the guardrail posts to the deck beams	**AS-22**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

23

Roof terrace

Fix the hardwood top rail; thread and tension the stainless cables

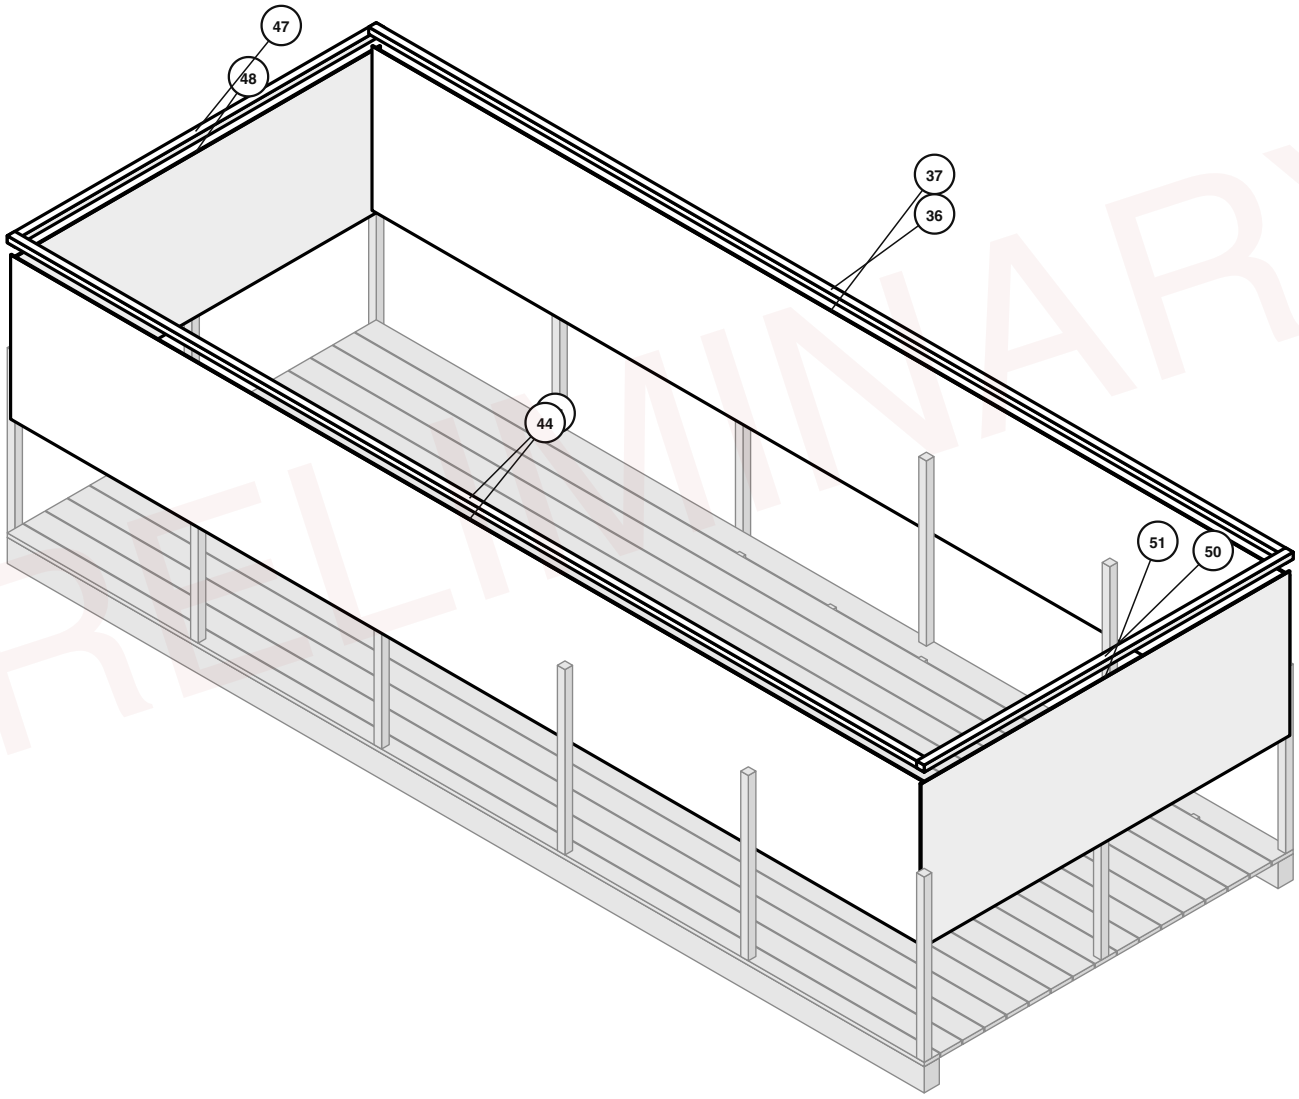


PRELIMINARY

24

Roof terrace

Veranda posts, ledger, polycarbonate and gutter over the front deck

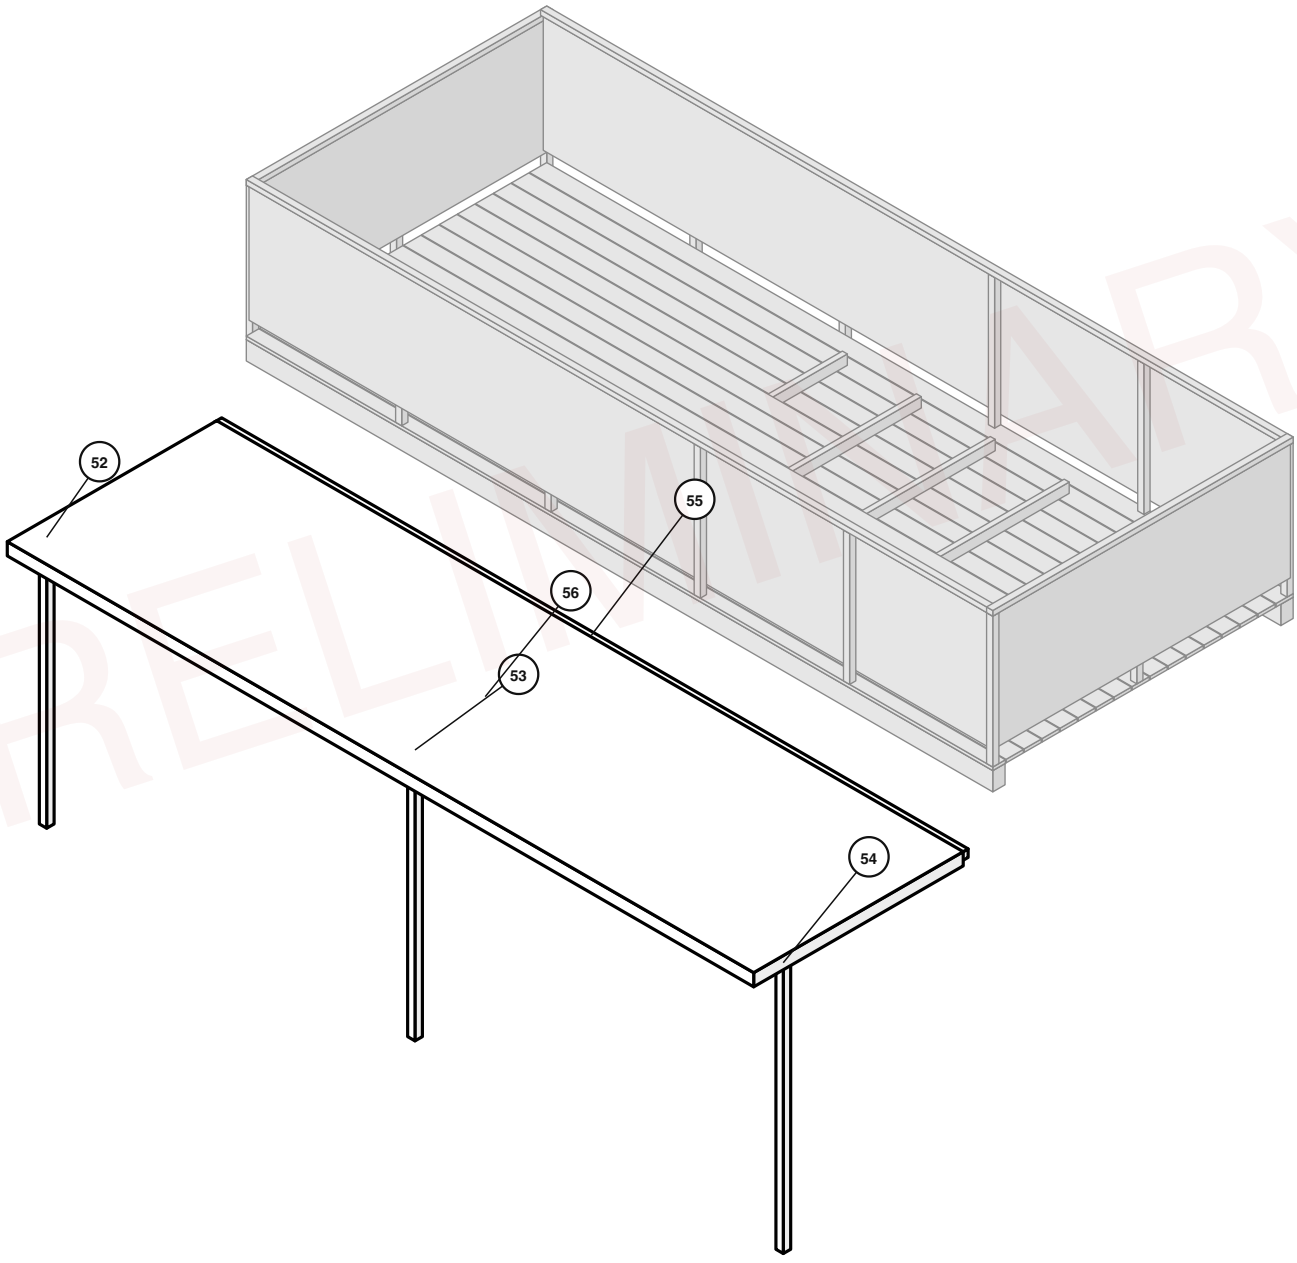


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Veranda posts, ledger, polycarbonate and gutter over the front d	AS-24
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

25

Roof terrace

Set the stair footings; bolt the two flights and the landing

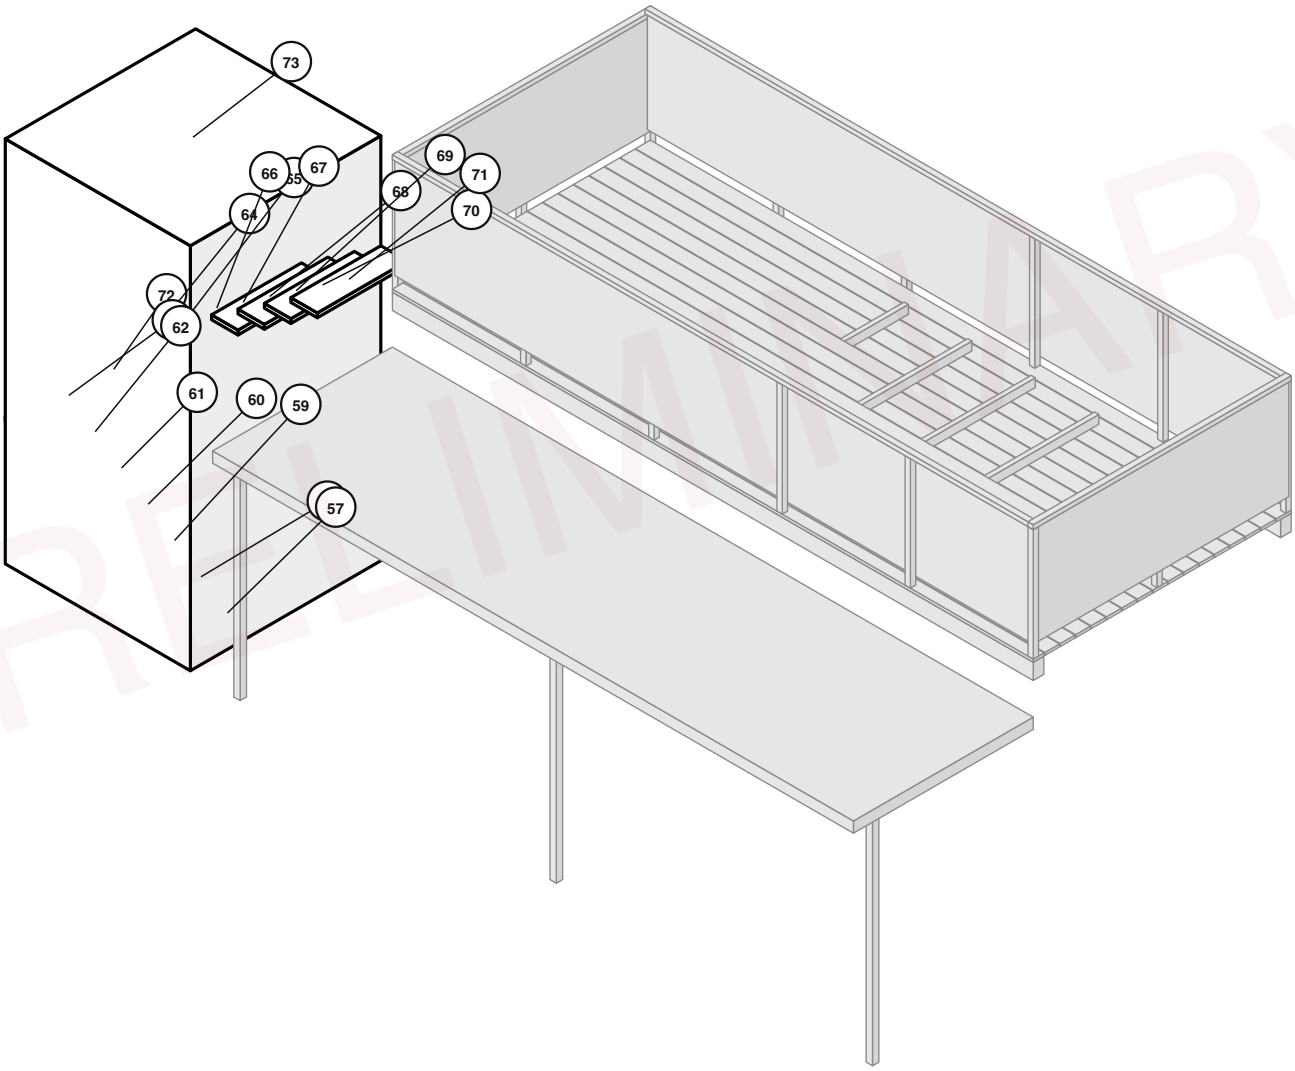


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Set the stair footings; bolt the two flights and the landing	**AS-25**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

26

Roof terrace

Place the chairs and the side table

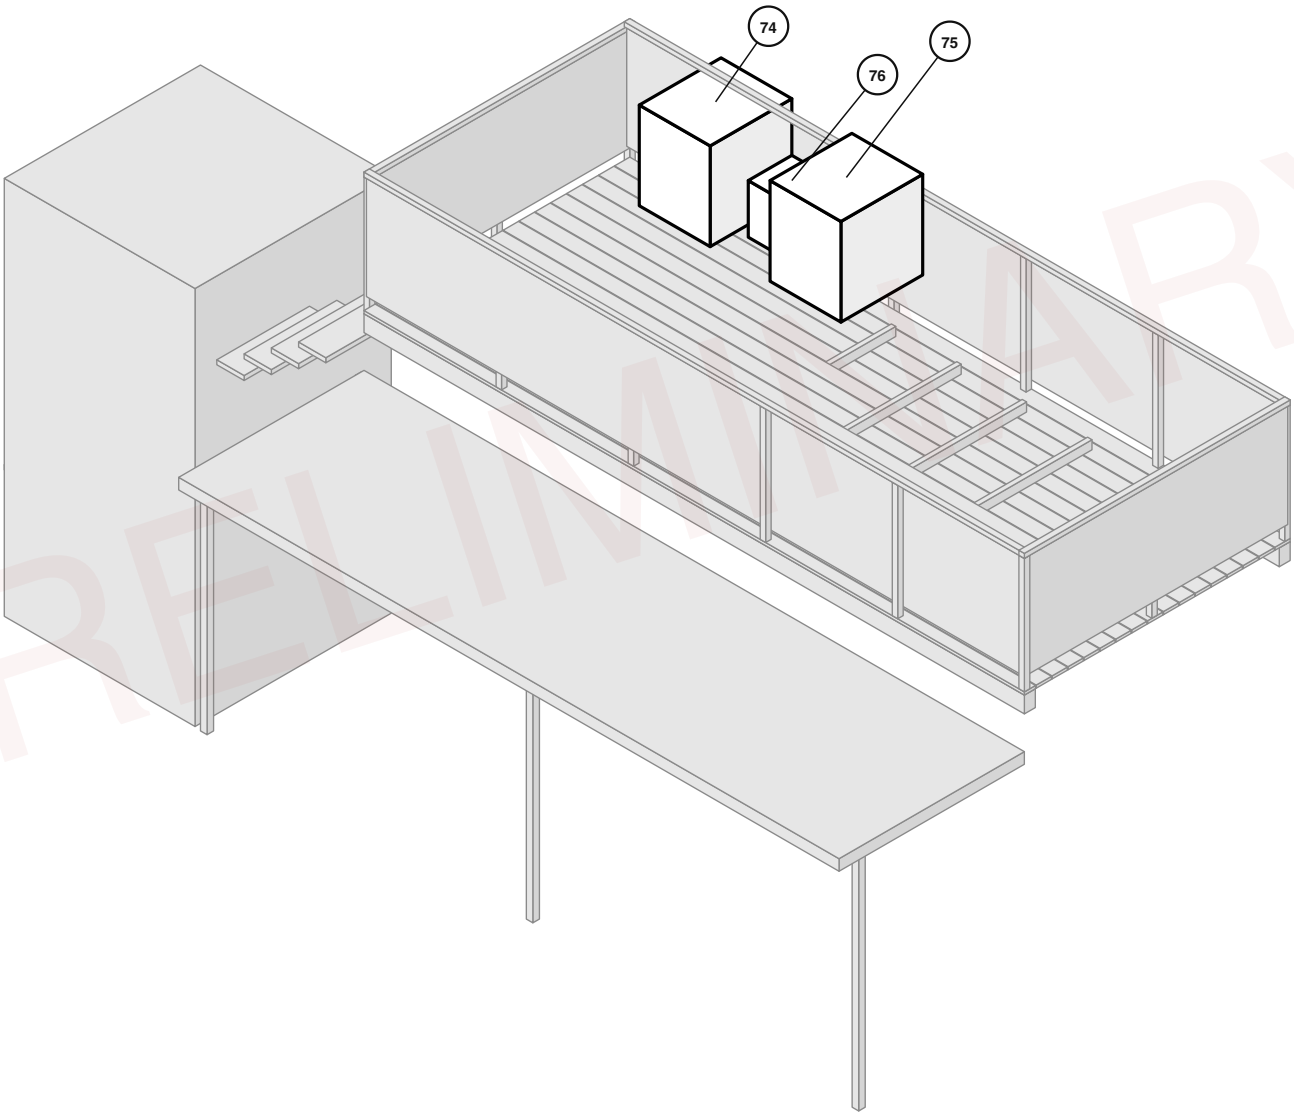


PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Place the chairs and the side table	**AS-26**
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY

27

Roof terrace

Bond the steelwork to earth; engineer's inspection before guest use

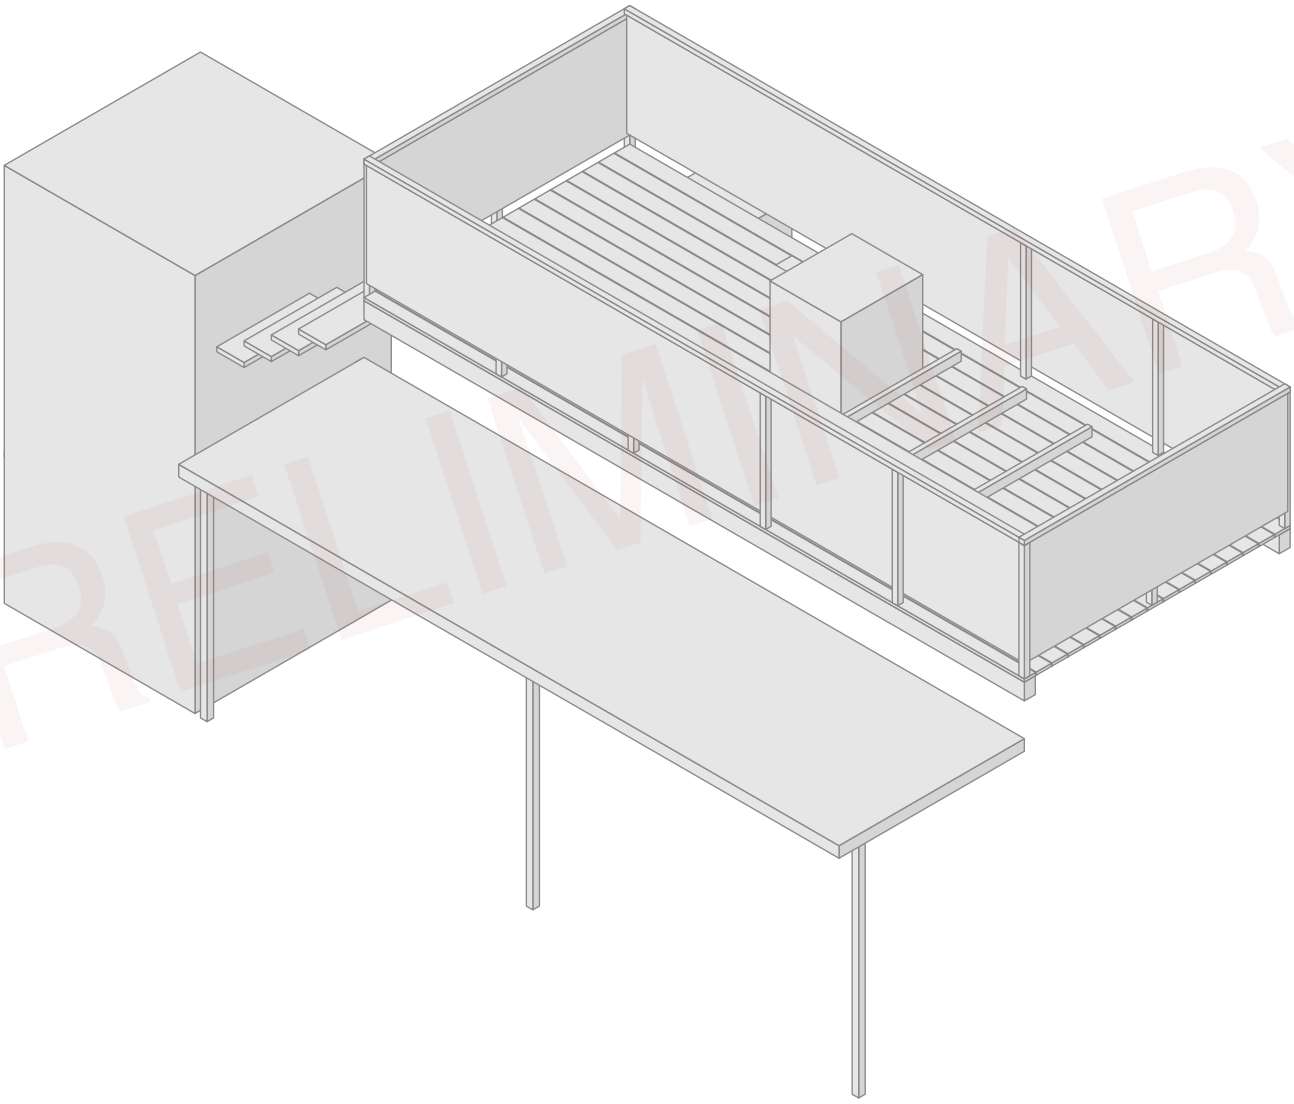

PRELIMINARY

Farm container studios	farm.databayt.org/docs/studio
Bond the steelwork to earth; engineer's inspection before guest	AS-27
Scale NTS · Rev A2 · 2026-10-28 · mm	PRELIMINARY