

|                                                                                  |                                                     |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|----------------|------------|
|  | Work Instruction                                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification | Effective Date | 2 Oct 2016 |

This procedure is applicable to below models:

|           |                                     |    |                                     |    |
|-----------|-------------------------------------|----|-------------------------------------|----|
| V810 STD  | <input type="checkbox"/>            | S1 | <input type="checkbox"/>            | S2 |
| V810 XXL  | <input checked="" type="checkbox"/> | S1 | <input checked="" type="checkbox"/> | S2 |
| V810 S2EX | <input type="checkbox"/>            |    |                                     |    |
| V810 Mini | <input type="checkbox"/>            |    |                                     |    |

#### REVISION HISTORY

| Rev | Effective Date | Description   | Doc Originator |
|-----|----------------|---------------|----------------|
| 00  | 2 Oct 2016     | First Release | ONG KEAN SHENG |
|     |                |               |                |
|     |                |               |                |

|                                                                                  |                                                            |                |                   |
|----------------------------------------------------------------------------------|------------------------------------------------------------|----------------|-------------------|
|  | Work Instruction                                           | Doc. Revision  | <b>00</b>         |
|                                                                                  | <b>AXI V810 XXL Rail Width Adjustment and Verification</b> | Effective Date | <b>2 Oct 2016</b> |

## Content

|                                             |   |
|---------------------------------------------|---|
| Rail Width Adjustment and Verification..... | 3 |
| AWA Parallelism Adjustment.....             | 8 |

|               |                                                            |                |                   |
|---------------|------------------------------------------------------------|----------------|-------------------|
| <b>ViTrox</b> | Work Instruction                                           | Doc. Revision  | <b>00</b>         |
|               | <b>AXI V810 XXL Rail Width Adjustment and Verification</b> | Effective Date | <b>2 Oct 2016</b> |

## Rail Width Adjustment and Verification

1. Initialize at Panel Handling
2. Set the Display Measurement to millimeters as below Figure 1
3. Go to the Set Manual Adjustment as key in 350 and click "Set" as below Figure 1.

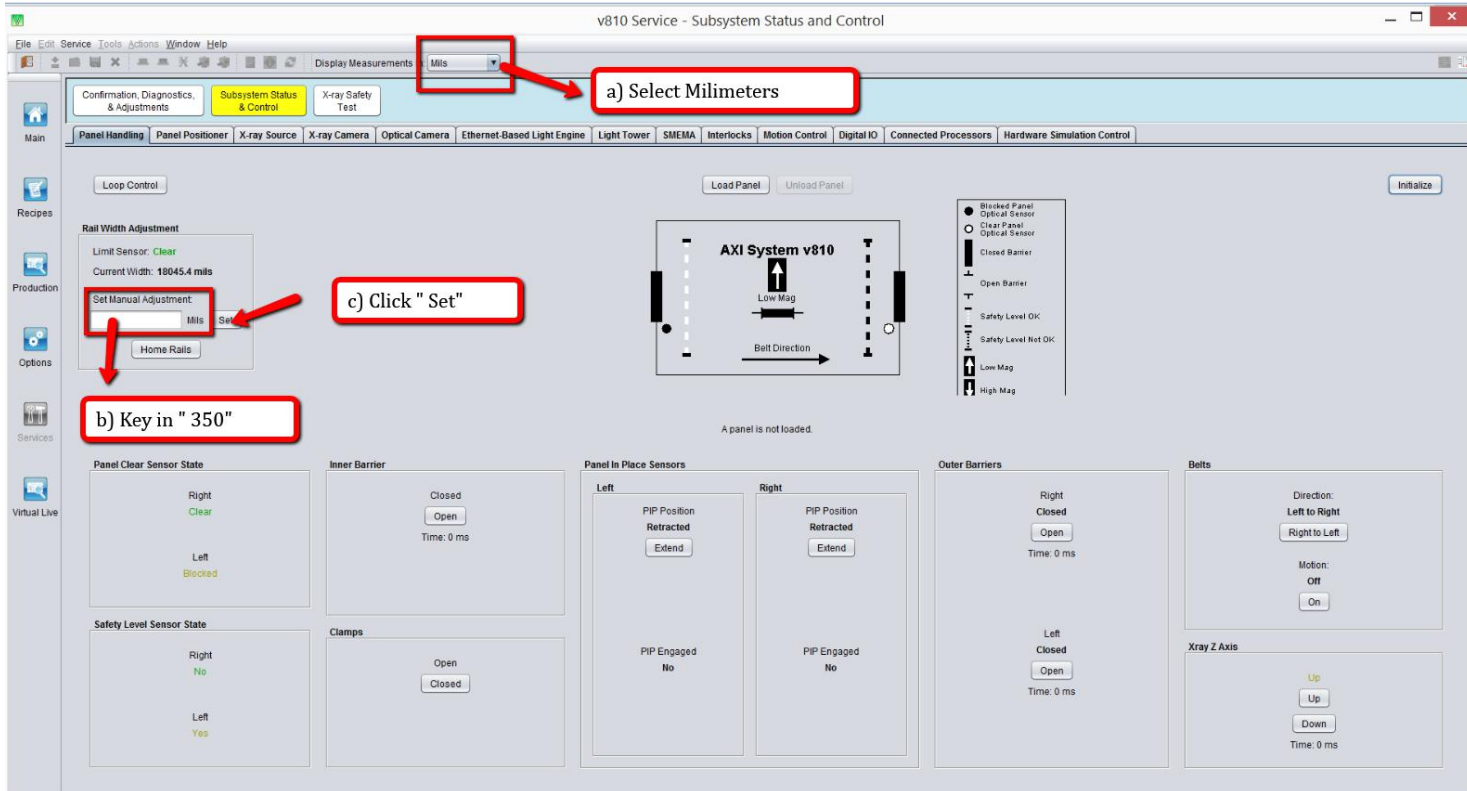


Figure 1 Panel Handling Interface

4. Wait until AWA is extend to desire width.
5. Close X-ray at Operator Console Panel and open the Front Door.
6. In advance, measure entire length of caliper.

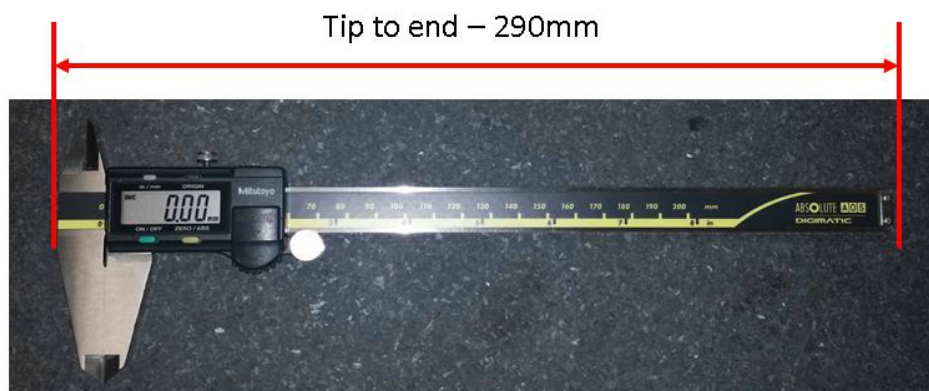


Figure 2 Caliper Length (Reference Pic Only)

|                                                                                  |                                                     |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|----------------|------------|
|  | Work Instruction                                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification | Effective Date | 2 Oct 2016 |

7. Place Caliper as below position. (May refer to below Figure 3)

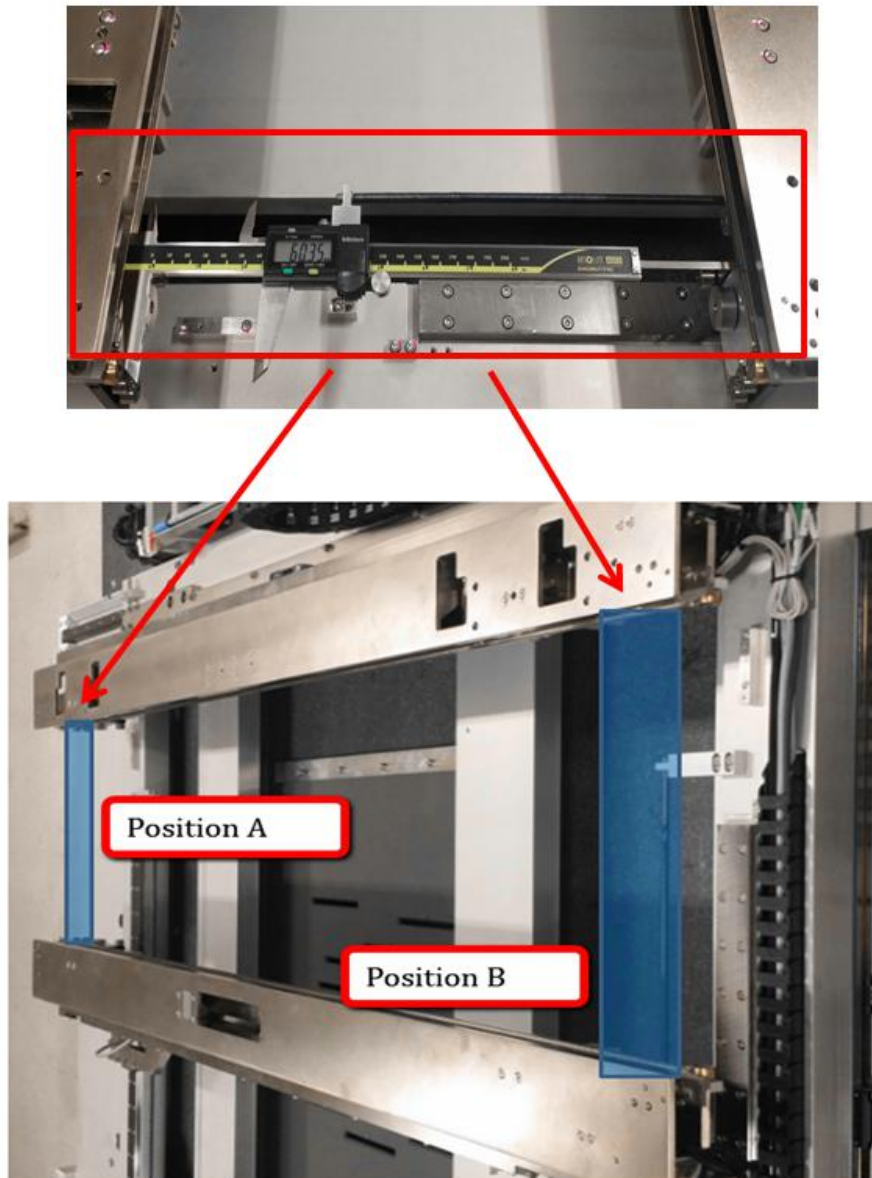




Figure 3 Caliper Placement

|                                                                                  |                                                     |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|----------------|------------|
|  | Work Instruction                                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification | Effective Date | 2 Oct 2016 |

| Position                   | Position A & Position B                                                              |
|----------------------------|--------------------------------------------------------------------------------------|
| Fix rail Caliper placement |    |
| Adj rail Caliper placement |  |

|                                                                                  |                                                     |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|----------------|------------|
|  | Work Instruction                                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification | Effective Date | 2 Oct 2016 |

8. Add up entire Caliper Length (Figure 2) with exact width of AWA
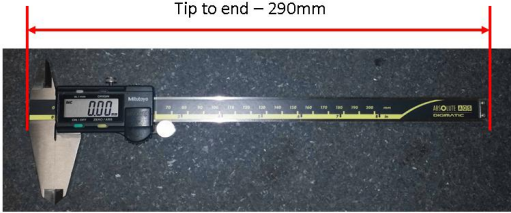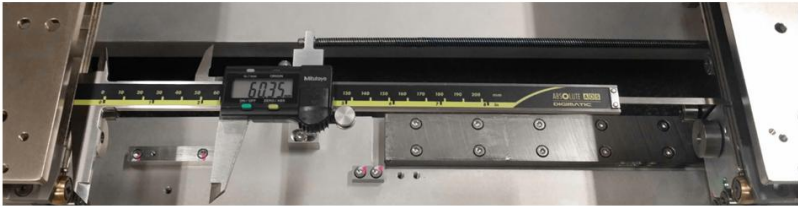
| Item                    | Picture                                                                            | Measurement |
|-------------------------|------------------------------------------------------------------------------------|-------------|
| Exact length of Caliper |   | 290         |
| Exact Width of AWA      |  | 60.35mm     |
| Total                   |                                                                                    | 350.35      |

9. Record 5 repeated measurements at the right end (Position A), and then 5 repeated measurements at the left end (Position B):

- MRave = average value of 5 repeated measurements at right end of conveyor
- MLave = average value of 5 repeated measurements at left end of conveyor

10. Calculate the parallelism, Mave and width error using the formulas below. Compare these values to the parallelism and width error limits.

- Parallelism = MRave - MLave
- Mave = (MRave + MLave)/2
- Width Error = Set Width - Mave
- Limits on Parallelism = +/- 0.125mm
- Limits on Width Error = +/- 0.125mm

|                                                                                  |                  |      |     |                                        |                              |
|----------------------------------------------------------------------------------|------------------|------|-----|----------------------------------------|------------------------------|
|  | Work Instruction |      |     | Doc. Revision                          | 00                           |
|                                                                                  | AXI              | V810 | XXL | Rail Width Adjustment and Verification | Effective Date<br>2 Oct 2016 |

11. By refer to below table and step, check Parallelism Limit & Width Accuracy Limit

- If Parallelism Limit & Width Accuracy Limit is not within spec, please refer to [AWA Parallelism adjustment](#)

| Sample Measurement (mm)               |        |                                      |        |
|---------------------------------------|--------|--------------------------------------|--------|
| Measurement Right End<br>(Position A) |        | Measurement Left End<br>(Position B) |        |
| MR1                                   | 350.00 | ML1                                  | 350.10 |
| MR2                                   | 350.01 | ML2                                  | 350.08 |
| MR3                                   | 350.05 | ML3                                  | 350.08 |
| MR4                                   | 350.00 | ML4                                  | 350.06 |
| MR5                                   | 350.01 | ML5                                  | 350.09 |

Calculations:

Measurement Right End average (MRave) = (MR1+MR2+MR3+MR4+MR5)/5 = 350.01

Measurement Left End average (MLave)= (ML1+ML2+ML3+ML4+ML5)/5 = 350.08

Measurement average = (MRave + MLave)/2 = 350.04

Compare to Limits for Parallelism:

MRave – MLave = **0.07** is less than Spec **" $\pm 0.125\text{mm}$ "**, so no adjustment for parallelism is required

Compare to Limits for Width Accuracy:

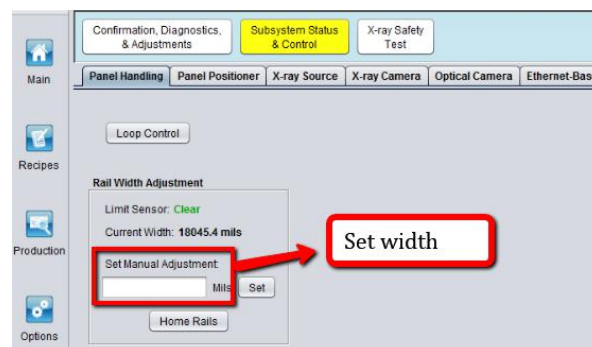


Figure 4 Set Width

Set Width – Mave = 0.04 is less Spec **" $\pm 0.125\text{mm}$ "**, so no adjustment required for width accuracy

|                                                                                  |                                                     |  |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|--|----------------|------------|
|  | Work Instruction                                    |  | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification |  | Effective Date | 2 Oct 2016 |

## AWA Parallelism Adjustment

1. Click “Home Rails” at panel handling. AWA will extend to maximum opening.

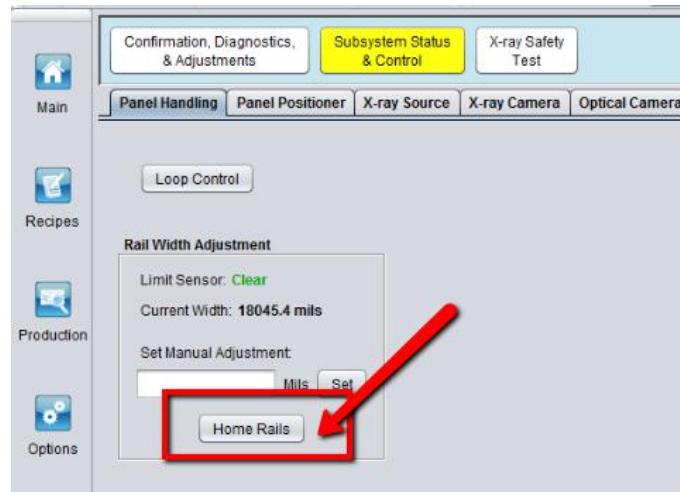


Figure 5 Home Rails

2. Open up front door, side door & rear door.
3. Use Size 8 hex wrench to loosen both side of jam nut while holding the set screw with Metrics Allen Key.

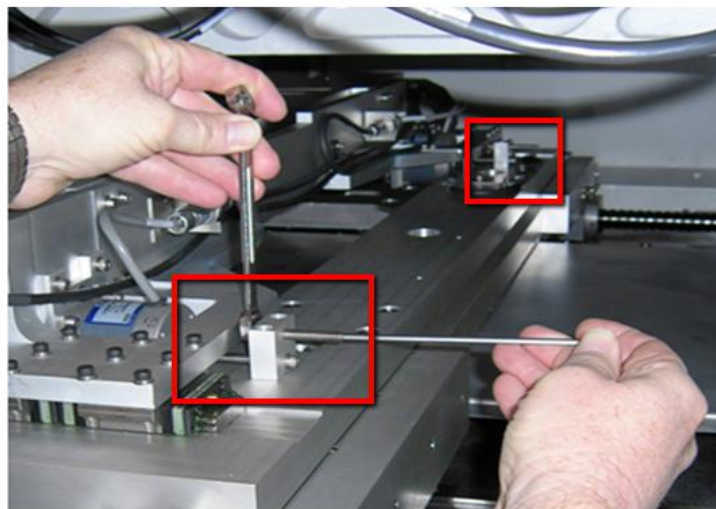


Figure 6 Jam Nut Loosen

|                                                                                  |                                                     |  |  |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|--|--|----------------|------------|
|  | Work Instruction                                    |  |  | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification |  |  | Effective Date | 2 Oct 2016 |

4. Insert 50 mil shim (4XACM-090) plate/feeler gauge in between of inner edge of the Slide Plate X-Axis and Set Screw. Once set screw tip in contact with Shim Plate, tighten up the jam nut.

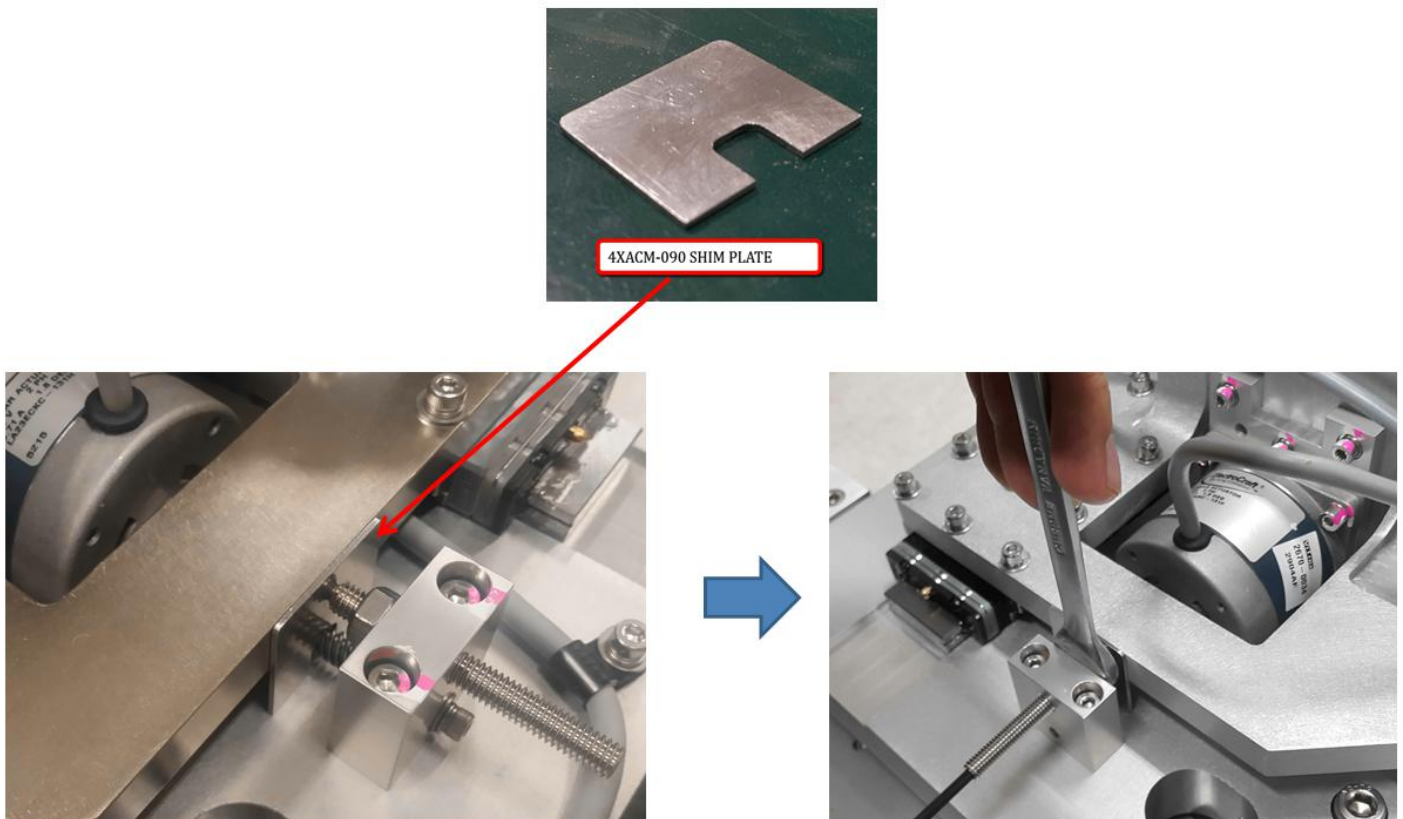


Figure 7 50 Mil Shim Plate Insert

5. Repeat steps 4 at other side of Adjustable rail.
6. Close SSCA.

|                                                                                  |                                                     |  |  |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|--|--|----------------|------------|
|  | Work Instruction                                    |  |  | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification |  |  | Effective Date | 2 Oct 2016 |

7. Place 2 pcs of XXL Auto Width Set Panel (4LACM-107) as below Figure 8. Manually push the Adjustable rail to allow both set panel fit in the desire width.



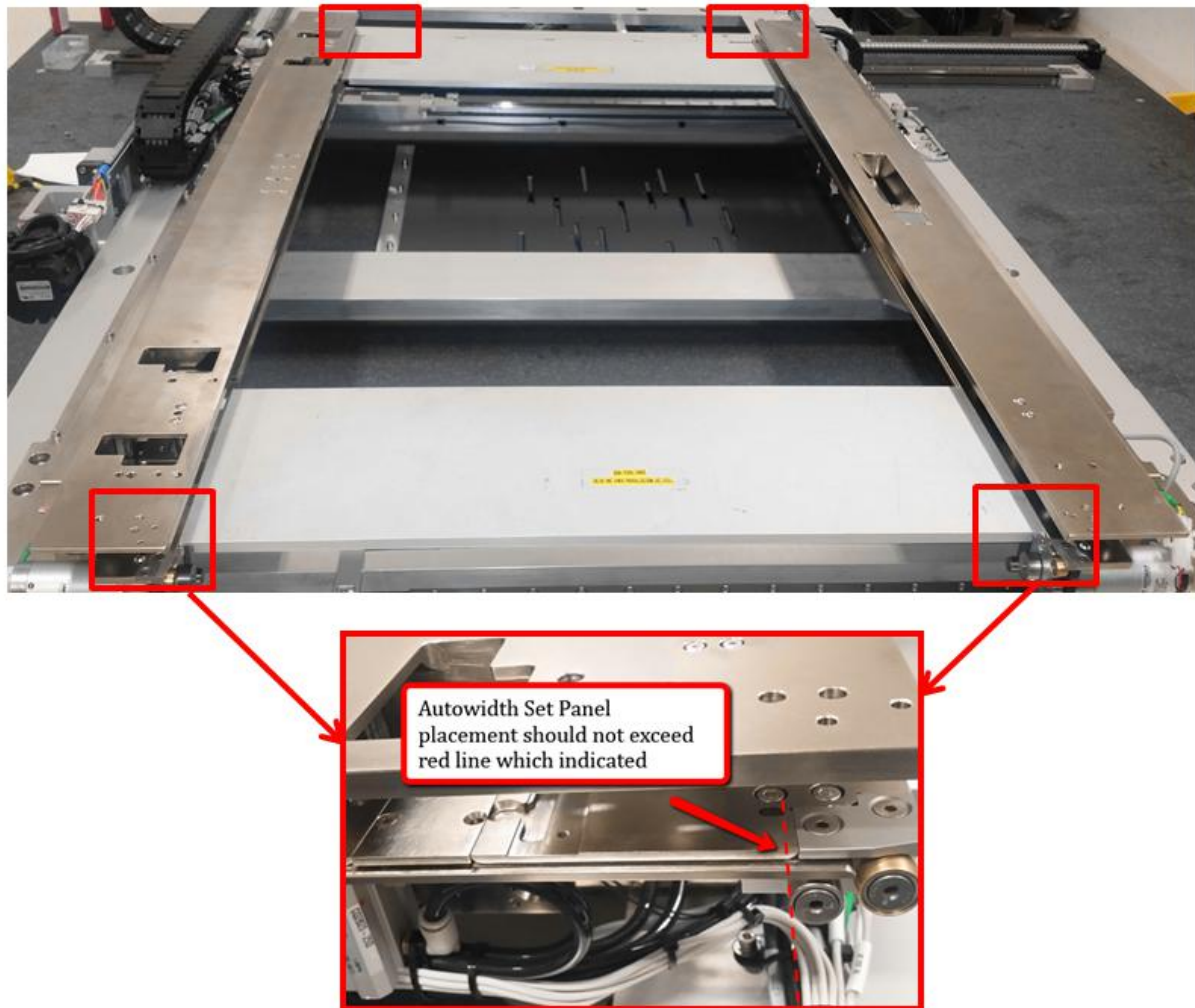


Figure 8 XXL Autowidth Set Panel

8. Loosen screws at Adjustable Rail Linear Guide as below Figure 9.

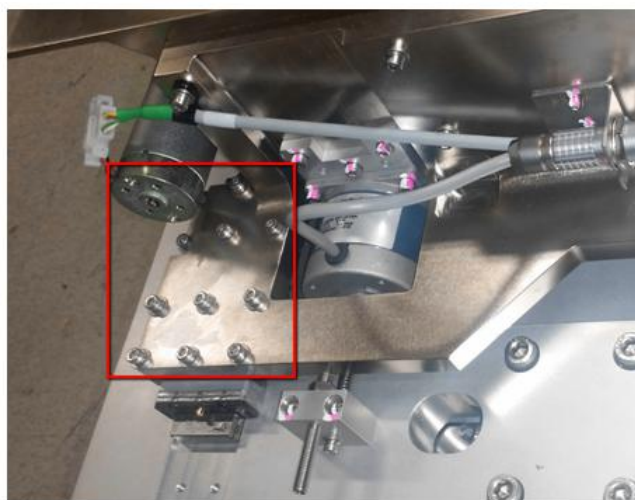

Right side of Adjustable Rail

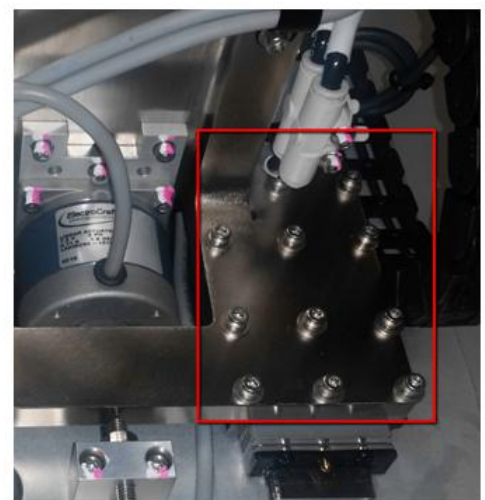

Left side of Adjustable Rail


Figure 9 Linear Guide Screws

|                                                                                  |                                                     |  |  |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|--|--|----------------|------------|
|  | Work Instruction                                    |  |  | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification |  |  | Effective Date | 2 Oct 2016 |


9. Push Left & Right Adj rail to allow Both Set Panel are fit into AWA. Tighten up both linear guide screws (Figure 10) at the same time.



Push Left & Right Side of Adjustable rail to allow Both Set Panel are fit into AWA

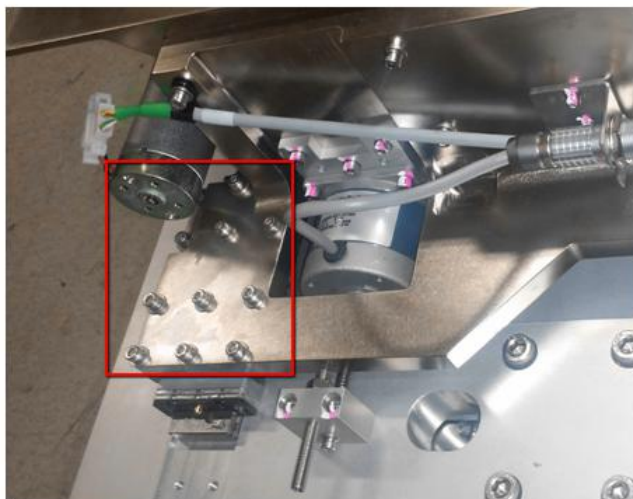

Right side of Adjustable Rail

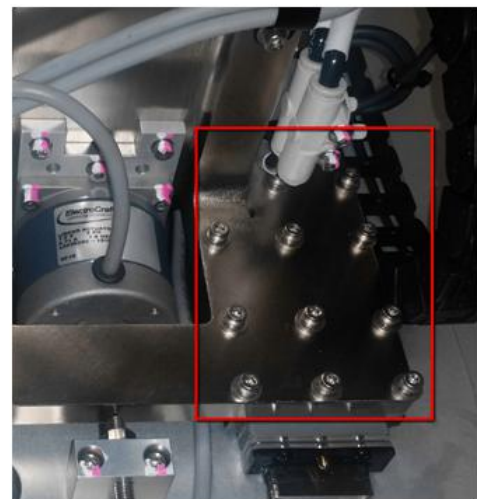


Left side of Adjustable Rail

Figure 10 AWA Linear Guide Alignment


|                                                                                  |                  |      |     |                                        |                |            |
|----------------------------------------------------------------------------------|------------------|------|-----|----------------------------------------|----------------|------------|
|  | Work Instruction |      |     |                                        | Doc. Revision  | 00         |
|                                                                                  | AXI              | V810 | XXL | Rail Width Adjustment and Verification | Effective Date | 2 Oct 2016 |

10. Loosen 2 x Screws at AWA Home Sensor Bracket and Set the Rail Width Home sensor to be triggered (Red Colour)

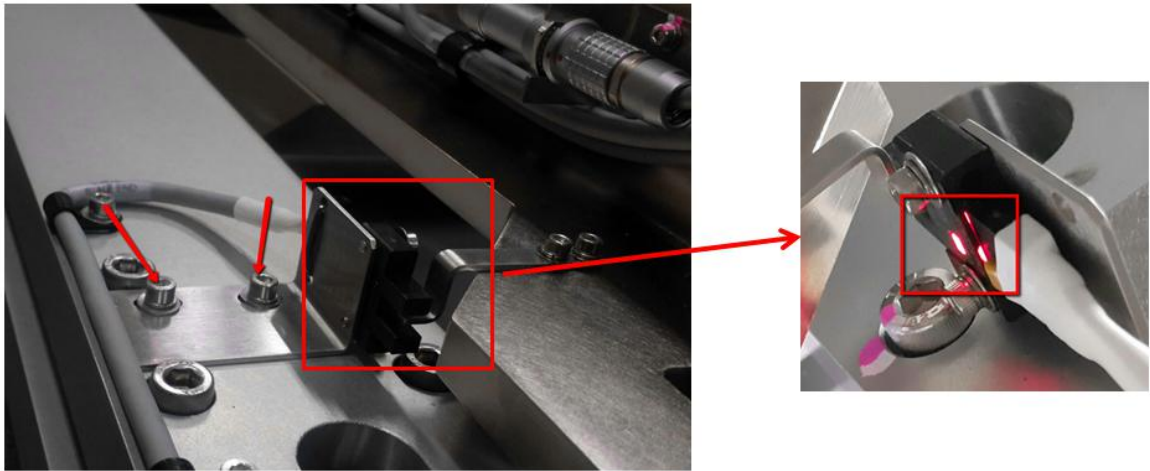

*Figure 11 AWA Home Sensor Adjustment*

11. Once Rail Width Home Sensor triggered, gently pull away the bracket towards rear side approximately 1mm.

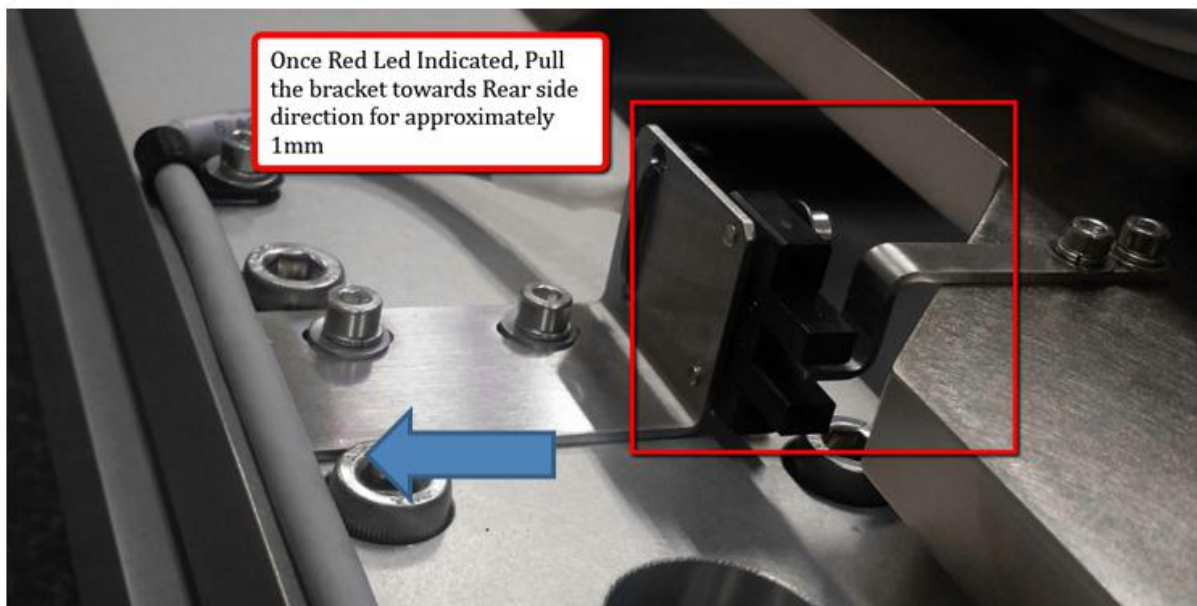

*Figure 12 AWA Home Sensor Bracket adjustment*

12. Tighten 2 x Screws at AWA Home Sensor Bracket.
13. Remove 2 x Autowidth Set Panel (4LACM-107) from rail.
14. Open back SSCA.
15. Go to Connector Processor Tab, Stop RMS & Restart RMS.
16. Initialize Digital IO.
17. Initialize at Panel Handling
18. Key in " 350" mm at Panel handling and Click " Set"

|                                                                                  |                                                     |                |            |
|----------------------------------------------------------------------------------|-----------------------------------------------------|----------------|------------|
|  | Work Instruction                                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 XXL Rail Width Adjustment and Verification | Effective Date | 2 Oct 2016 |

19. OpenHardware Config by refer to below path "C:\Program Files\AXI System\AXI System\v810\5.0\xxlConfig
20. Search the key: railWidthAxisMaximumPositionLimitInNanometers=661049757 (Default value) & record down. (Remarks : Every machine will consist varies of parameter, user will require to extract the parameter from particular machine)
21. Use the caliper to measure AWA Rail Width & record down the actual measurement.
22. By refer to below table to calculate a new value of this parameter. (Below Value are for reference only)

| Condition                                                                                 | Set value<br>(Panel<br>Handling) | Actual<br>Measurement<br>(Rail width) | Rail width<br>parameter<br>(HW config) –<br>Step 20 | Calculation Method                                                                                                                                                   |
|-------------------------------------------------------------------------------------------|----------------------------------|---------------------------------------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>If the measured value is greater than the expected value (rail width is too wide),</i> | 350                              | 355                                   | 662049757                                           | $\text{New} = 662049757 + [(355 - 350) * 1\,000\,000]$ $\text{New} = 662049757 + (5 * 1\,000\,000)$ $\text{New} = 662049757 + 5\,000\,000$ $\text{New} = 667049757$  |
| <i>If the measured value is less than the expected value (rail width is too narrow)</i>   | 350                              | 345                                   | 662049757                                           | $\text{New} = 662049757 + [(345 - 350) * 1\,000\,000]$ $\text{New} = 662049757 + (-5 * 1\,000\,000)$ $\text{New} = 662049757 - 5\,000\,000$ $\text{New} = 657049757$ |

|                                                                                  |                                                            |                |                   |
|----------------------------------------------------------------------------------|------------------------------------------------------------|----------------|-------------------|
|  | Work Instruction                                           | Doc. Revision  | <b>00</b>         |
|                                                                                  | <b>AXI V810 XXL Rail Width Adjustment and Verification</b> | Effective Date | <b>2 Oct 2016</b> |

23. Open HW Config , enter new value at railWidthAxisMaximumPositionLimitInNanometers
24. Click Save at Note Pad.
25. Close V810 Software.
26. Open back V810 Software.
27. Initialize at Panel Handling.
28. Key in“ 350” mm at Panel handling and Click “ Set”
29. Open front access door, use caliper to measure AWA Rail Width & record down the actual measurement and compare with “Parallelism Limit & Width Accuracy Limit “
30. If still not within “Parallelism Limit & Width Accuracy Limit “, repeats Step 19~29.