

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

S2EX Outer Barrier Cylinder Removal.....	3
S2EX Outer Barrier Cylinder Replacement.....	8

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

S2EX Outer Barrier Cylinder Removal

1. Close X ray Source at Operator Console
2. Close SSCA
3. Remove 2 x Tamper Proof screws as below Figure 1



Figure 1

4. Gently open outer barrier
5. Perform marking at both tubing & remove 2 x Tubing from Outer Barrier Speed Controller as Figure 2.

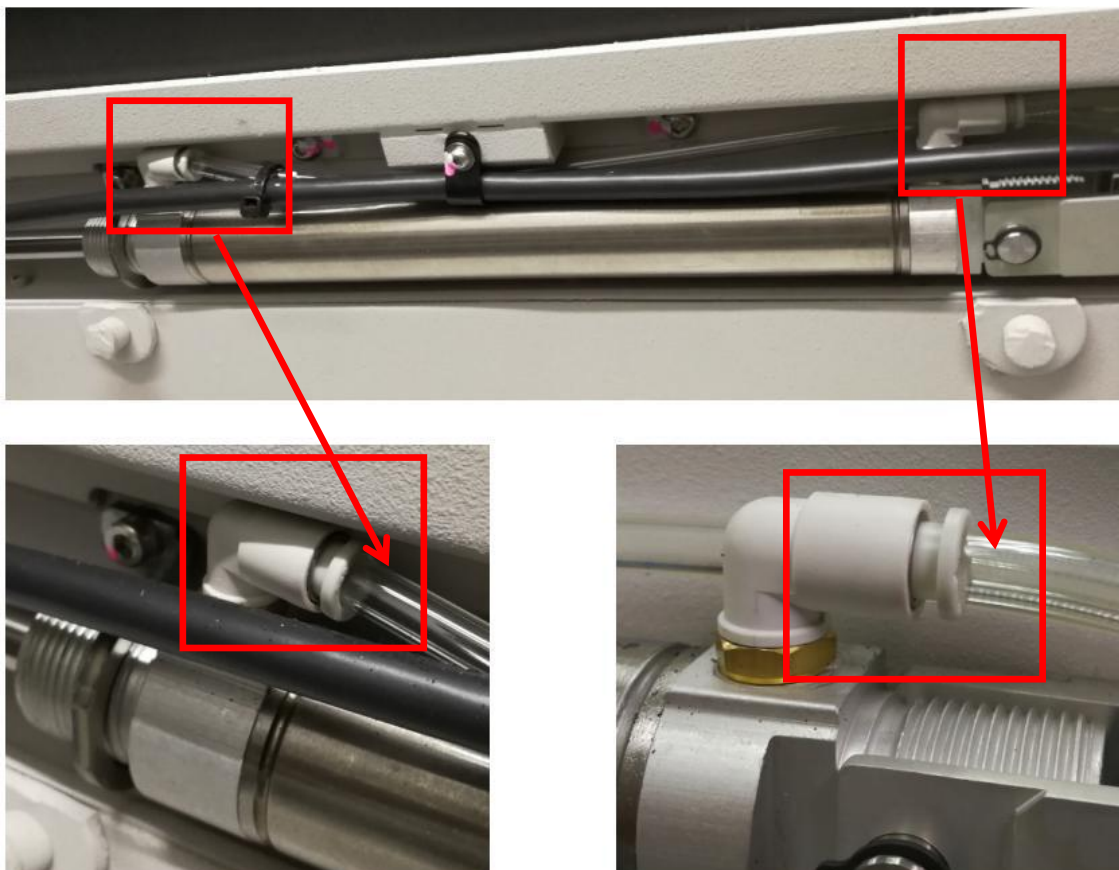


Figure 2

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

6. Loosen 2 x Screws & Remove Front Cylinder Holder as Figure 3

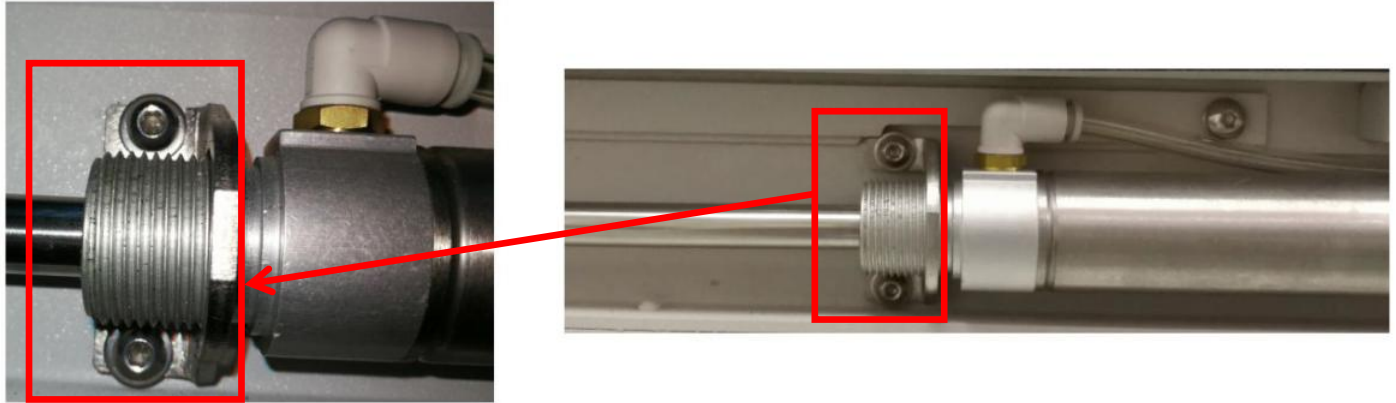


Figure 3

7. Loosen 2 x Screws & remove Rear Cylinder Holder as Figure 4



Figure 4

8. Fully retract outer barrier cylinder
9. By using C-Clip Plier ,open 1 x C-Clip from dowel pin as Figure 5

Remarks : Do not dispose C-Clip as this would require for re-use purpose

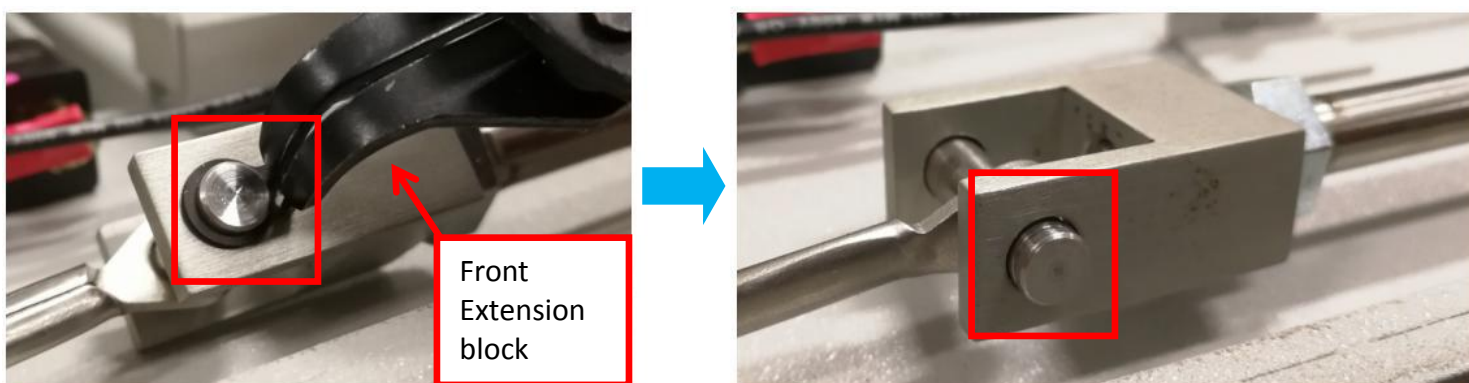


Figure 5

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

10. Twist the Front Extension Block and gently push out the dowel pin as Figure 6.

(Remarks : Remain half way of dowel pin in extension block)



Figure 6

11. Gently remove Sava cable from dowel pin as Figure 7.



Figure 7

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

12. Remove entire outer barrier cylinder and position at visible location as Figure 8.



Figure 8

13. Gently remove another C-Clip at Front Extension Block as Figure 9

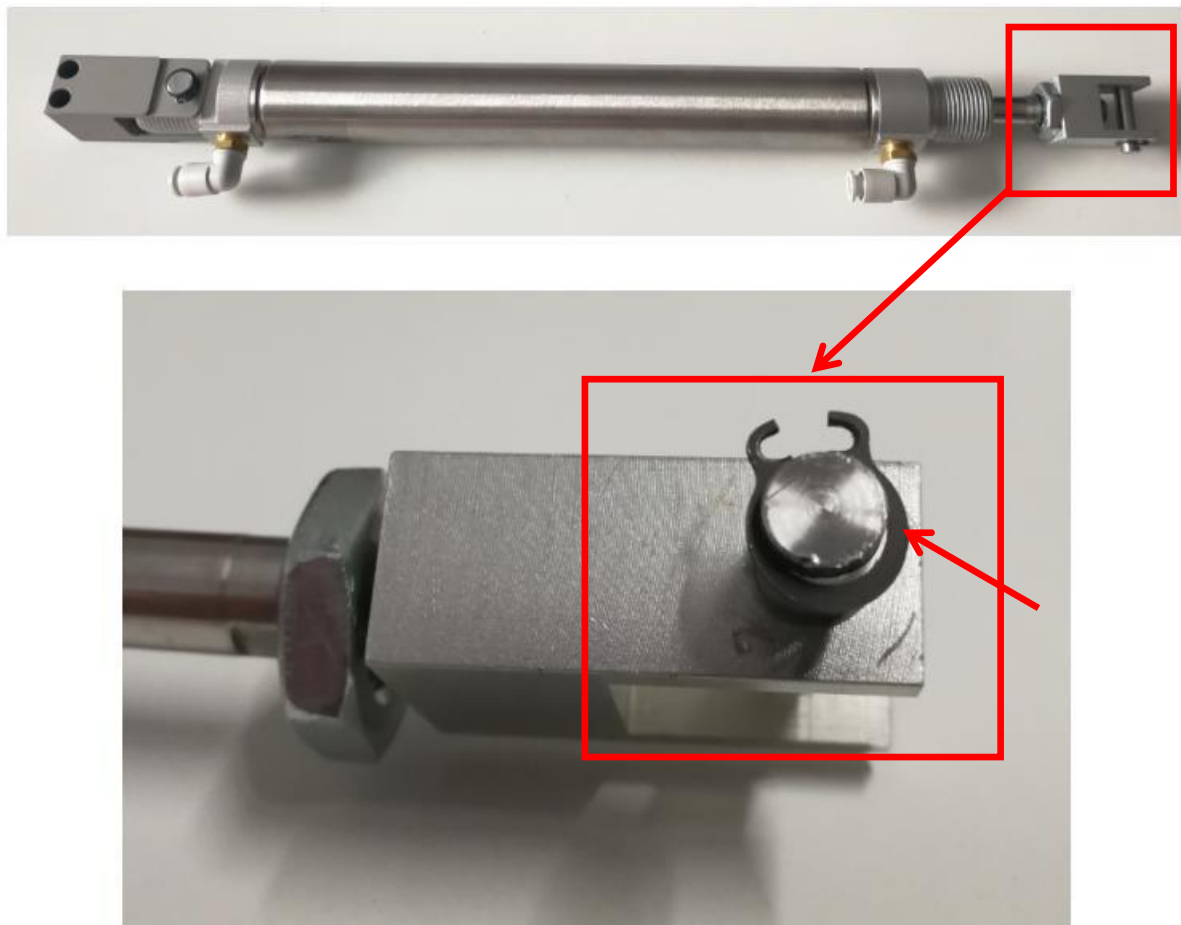


Figure 9

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

14. Remove Nut & Front Extension Block (With Dowel Pin) as Figure 10

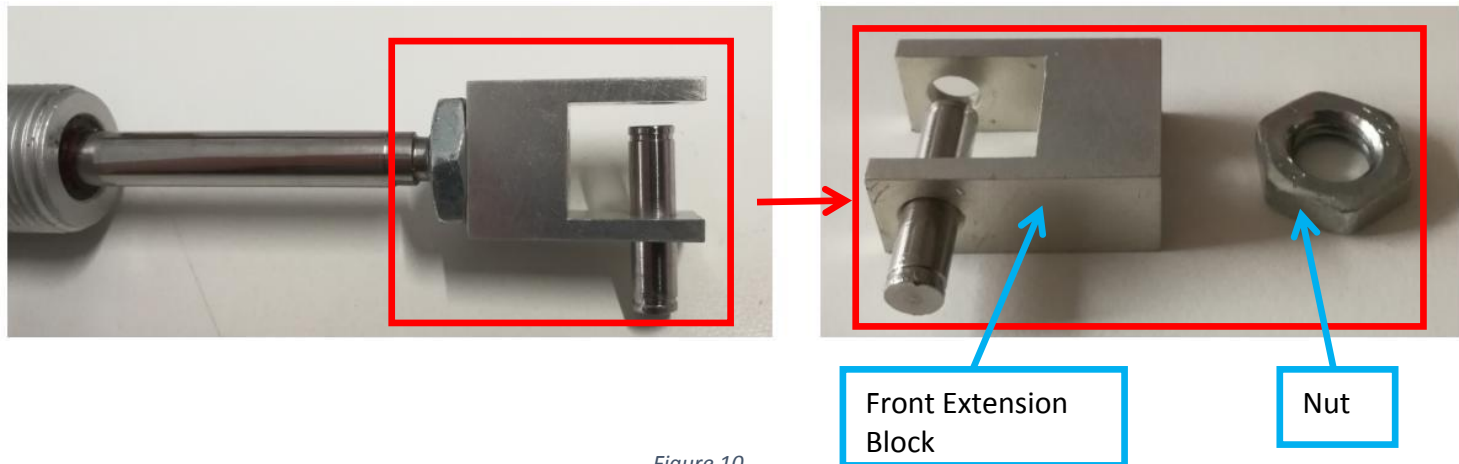


Figure 10

15. Remove 1 x C-Clip at Rear Cylinder Holder as Figure 11. Position C-Clip at visible location.

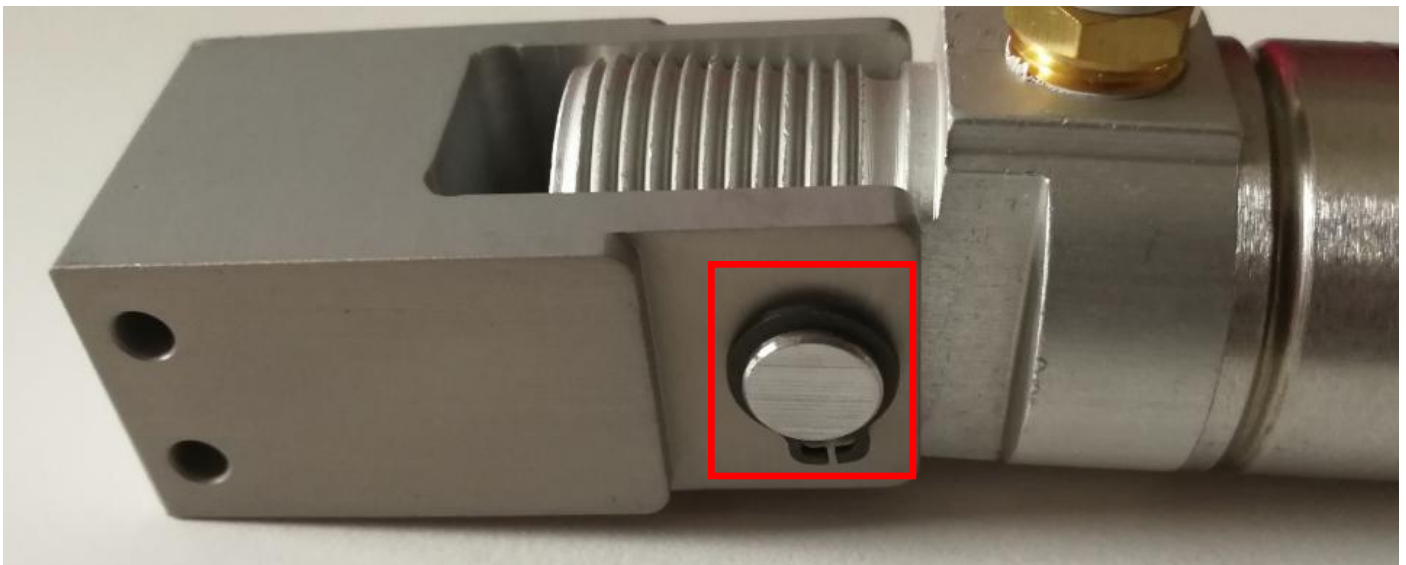


Figure 11

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

16. Gently push out the Dowel Pin from Rear Cylinder Holder as Figure 12. Remove dowel pin & Rear Cylinder Holder as Figure 12

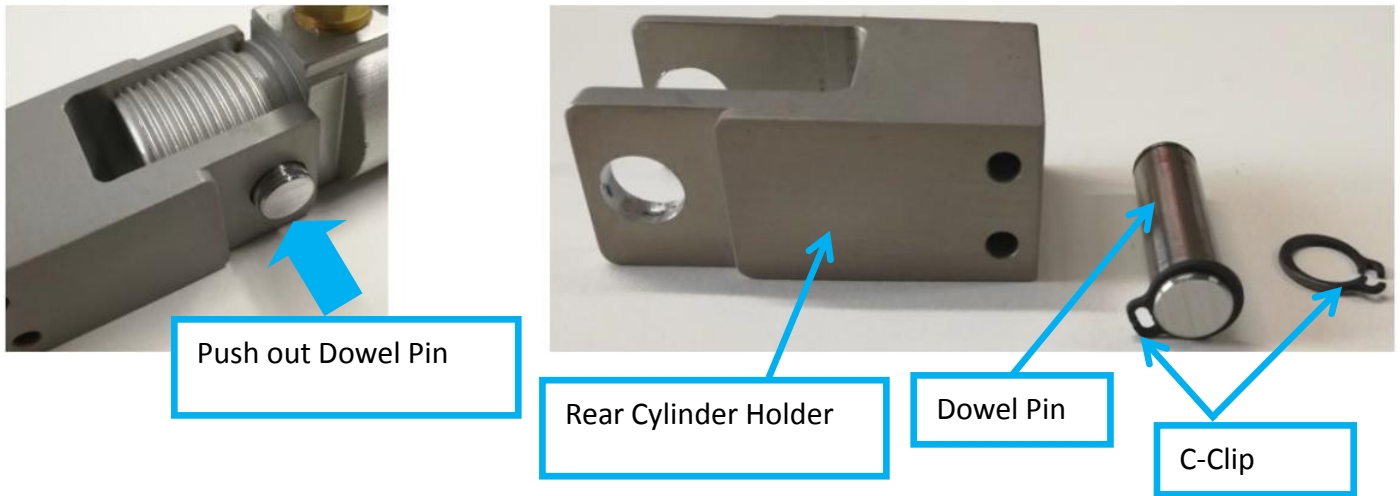


Figure 12

S2EX Outer Barrier Cylinder Replacement

17. Prepare New S2EX Outer Barrier Cylinder kit (PN, 4XASP-A160)
18. Assemble Rear Cylinder Holder & Dowel pin into New Outer barrier cylinder. May refer to below Figure 13

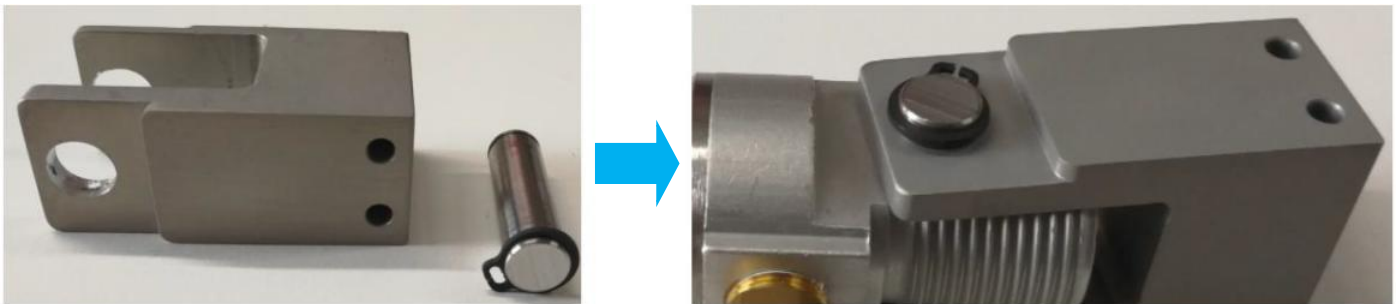


Figure 13

Special remarks : C-Clip require to slot firmly within the dowel pin step.



Figure 14

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

19. Twist the Rear Cylinder Holder & assemble C-Clip at other side of Dowel Pin as Figure 15.

Special remarks : If C-Clip had worn out, may inquire new parts (PN, 2770-0092) for further replacement.

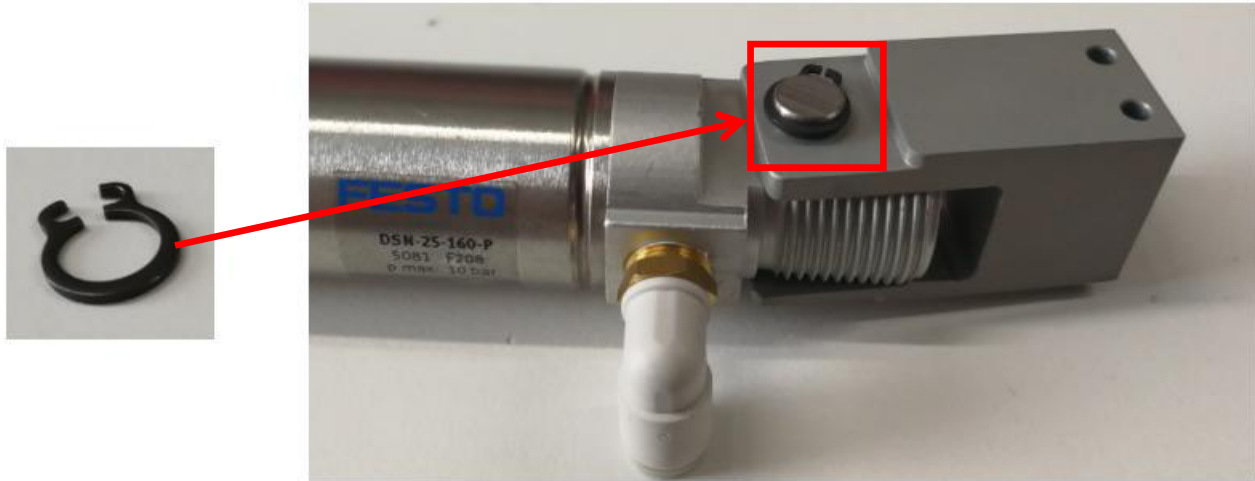


Figure 15

20. Assemble Nut & Front Extension Block (With Dowel Pin) at Outer Barrier Cylinder as Figure 16

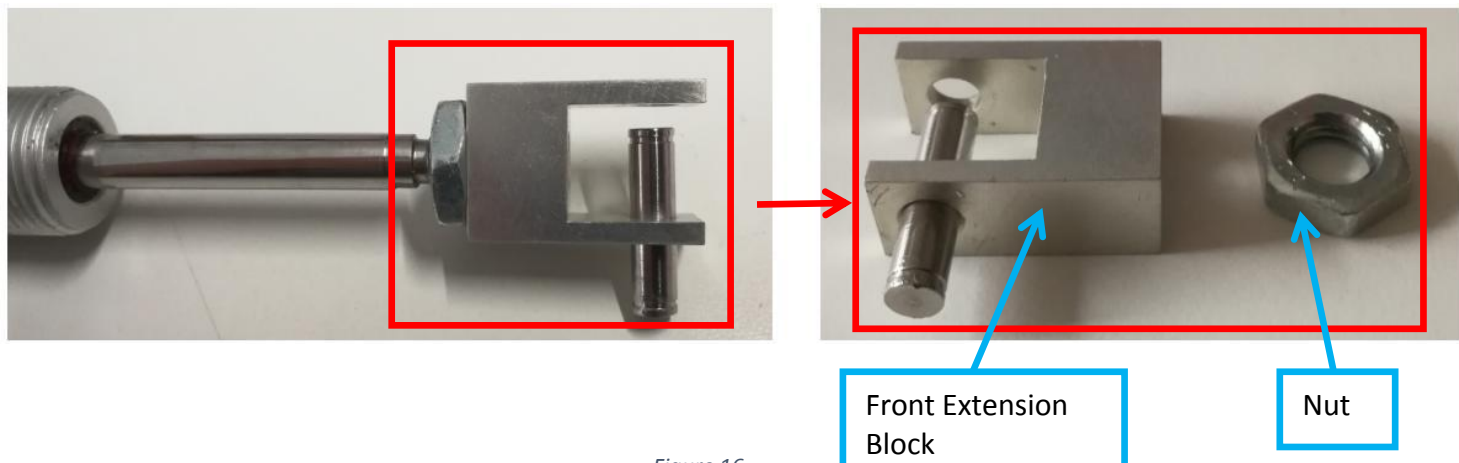


Figure 16

21. Gently slot Sava cable into dowel pin where attach with Front Extension Block as Figure 17

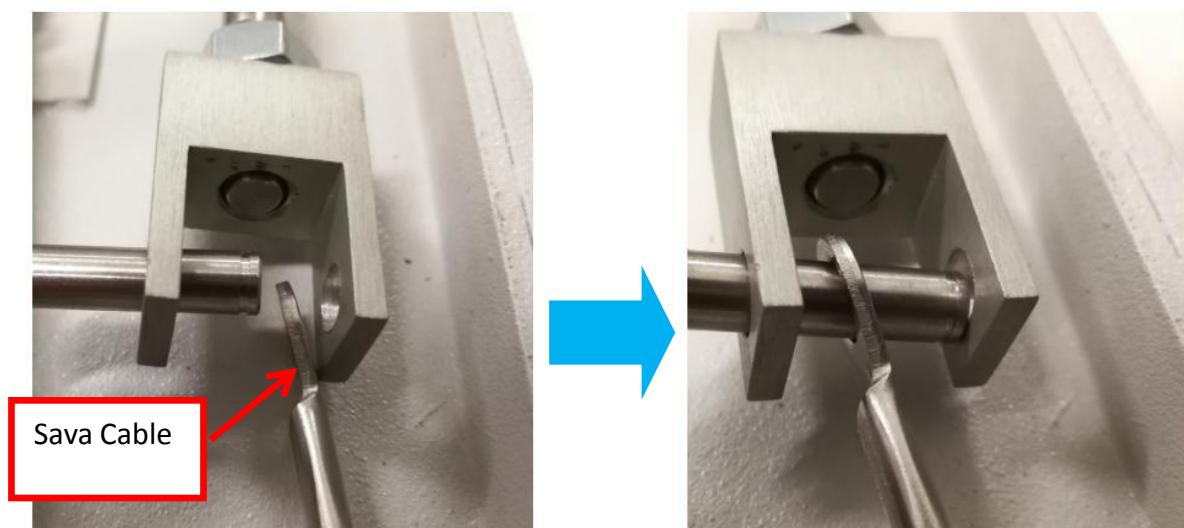


Figure 17

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

22. Push the dowel pin through Front Extension Block as below Figure 18

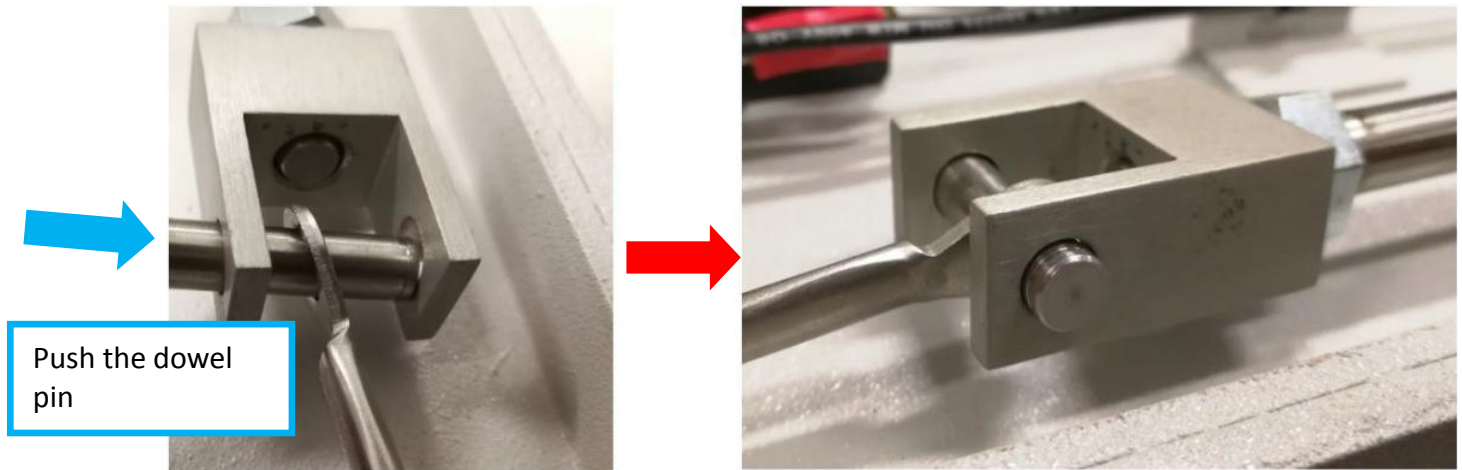


Figure 18

23. By using C-Clip Plier ,slot 2 x C-Clip at both side of dowel pin as Figure 19

Special remarks : If C-Clip had worn out, may inquire new parts (PN, 2770-0093) for further replacement.

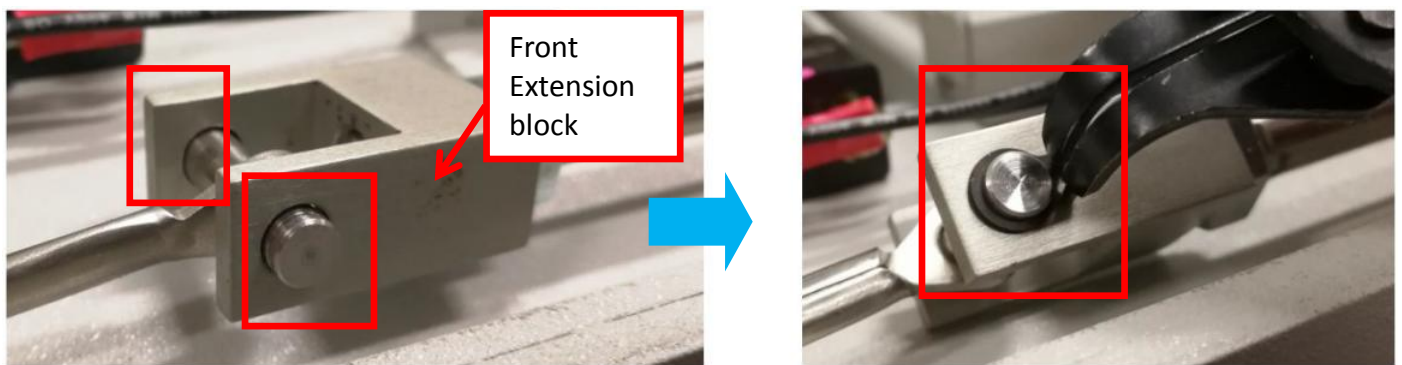


Figure 19

Special remarks : C-Clip require to slot firmly within the Dowel pin step.



Figure 20

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

24. Assemble Front Cylinder Holder at outer barrier cylinder & tighten 2 x screws as Figure 21

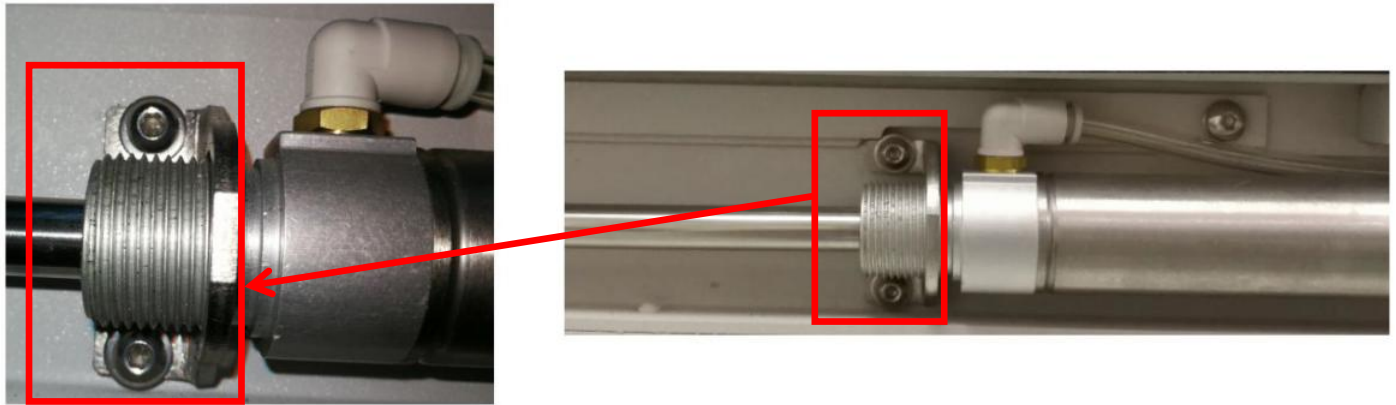


Figure 21

25. Assemble Rear Cylinder Holder at outer barrier cylinder & tighten 2 x screws as Figure 22



Figure 22

26. Plug 2 x Tubing accordingly by refer to previous marking that mention at Step 5.

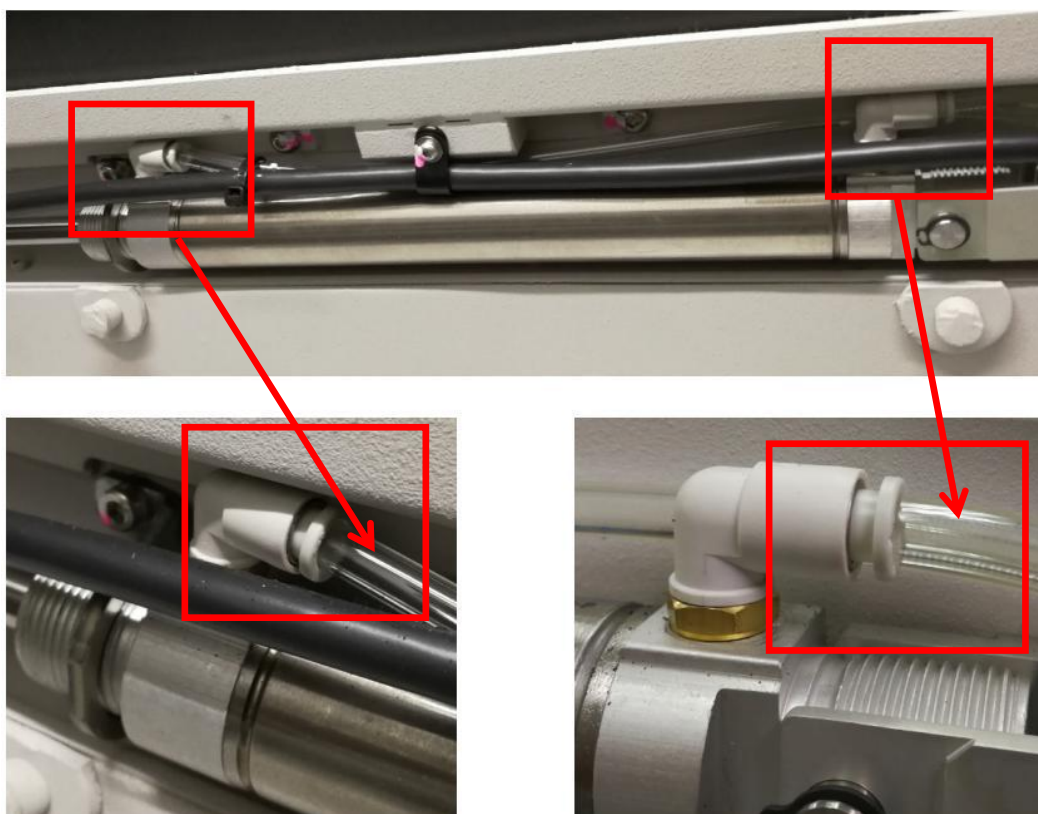


Figure 23

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

27. Turn On SSCA
28. Initialize at Digital IO Tab
29. Open/Close Outer Barrier at Digital IO Page.
30. Visual Check Save cable & Inner Gate assembly by refer to below criteria :
 - a) Sava cable -No friction during movement.
 - b) Sava cable-No sagging
 - c) Inner gate assembly- No gap upon barrier close/open

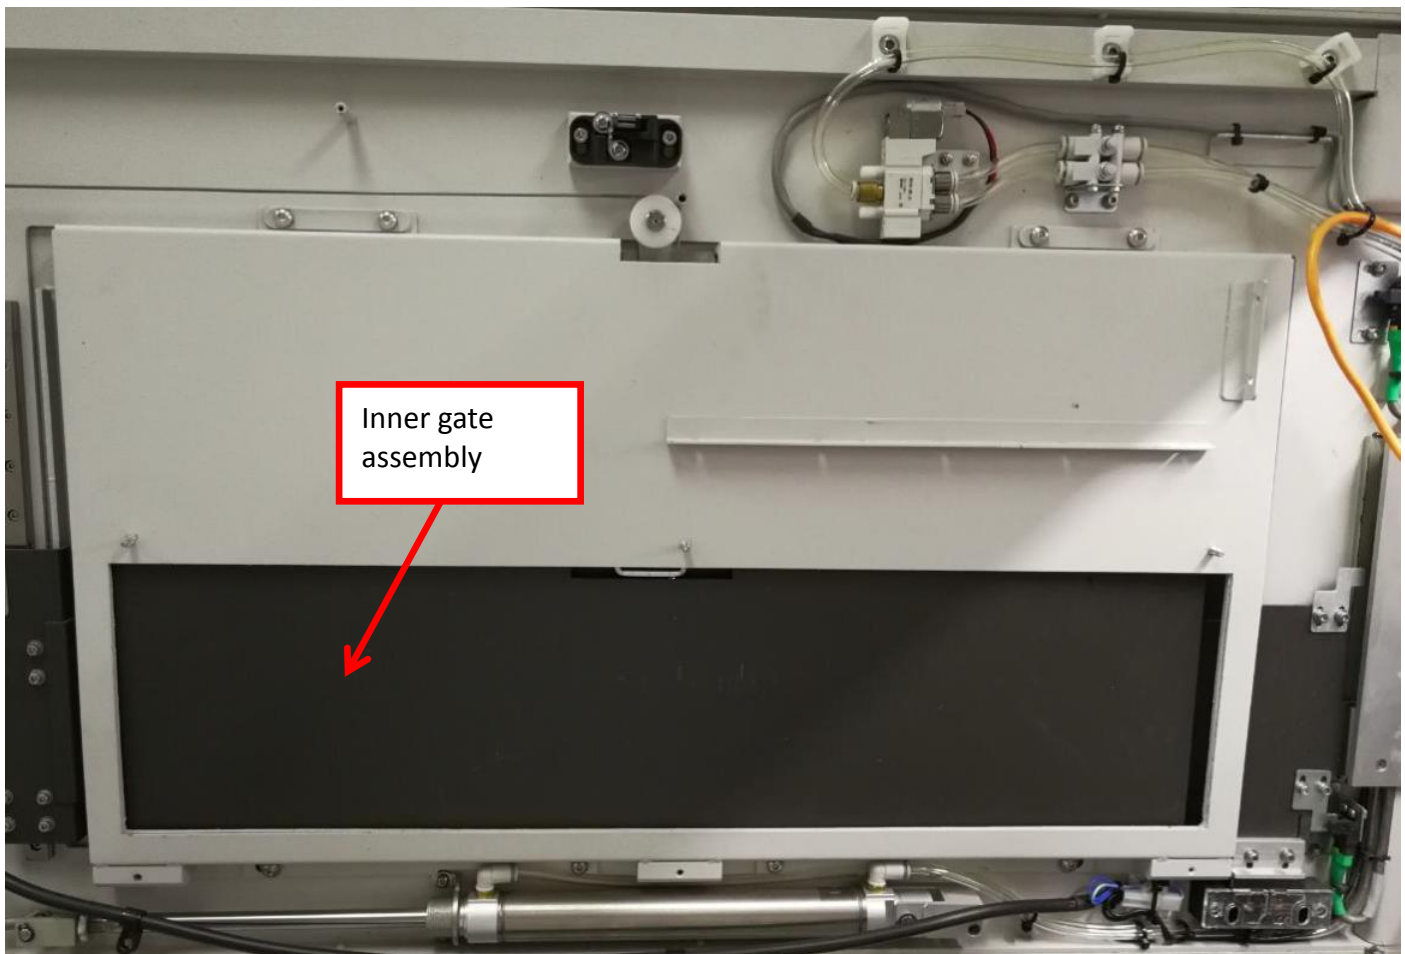


Figure 24

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

- i. If gap persist, may perform minor adjustment on the Front Extension Block & Nut. May refer to below Figure 25

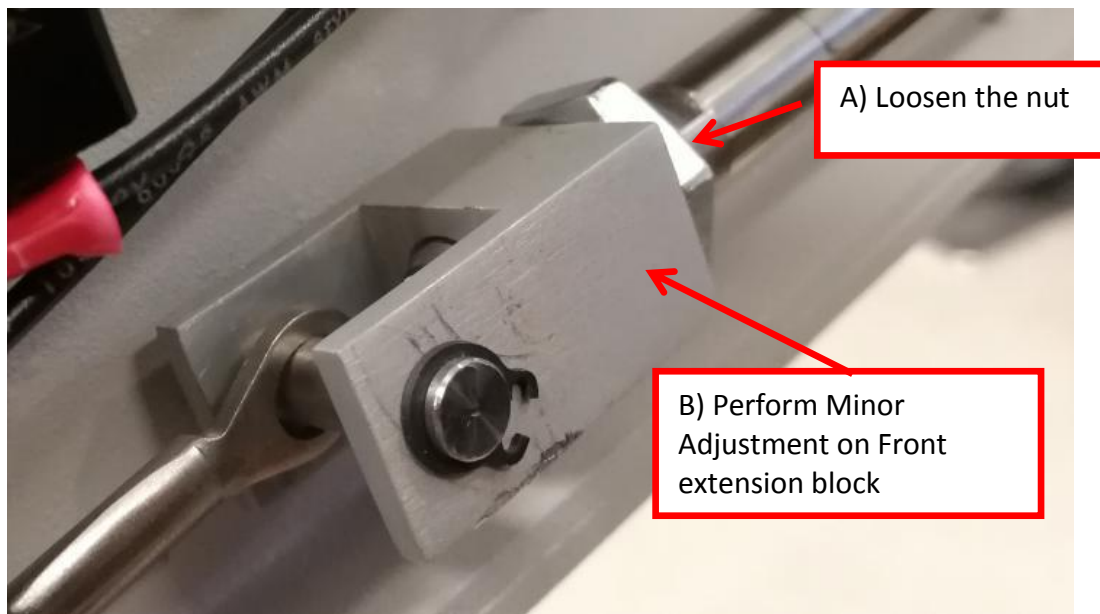


Figure 25

31. Close Outer Barrier and tighten 2 x tamper proof screws.
32. Perform X ray Survey
33. Open V810 GUI
34. Initialize at Panel handling
35. Open & Close particular Outer barrier .Record down Opening & Closing duration as below Figure 26

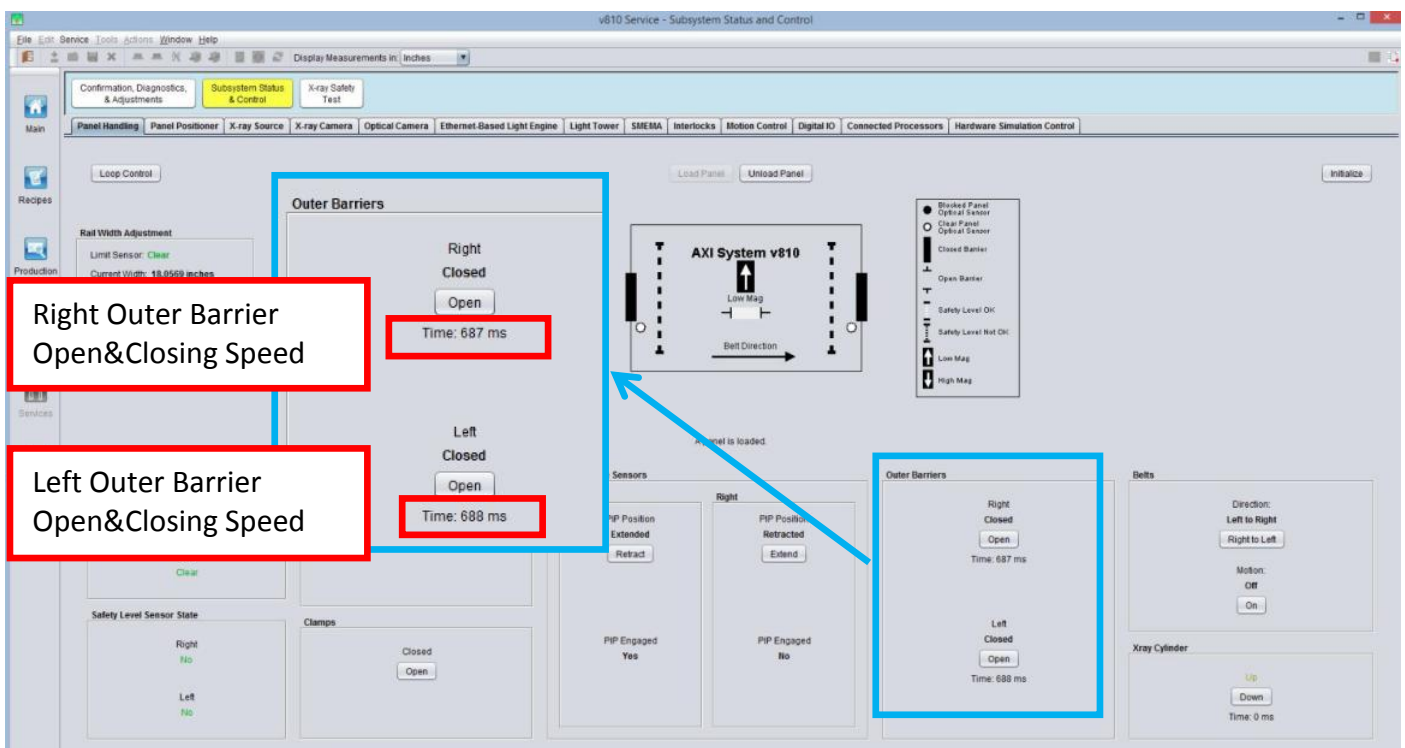


Figure 26

36. Adjust 2 X Speed Controller at Outer Barrier cylinder by refer to below table.

Outer Barrier Status	Outer Barrier Speed
Open	1000ms~1200ms
Close	1200ms~1200ms

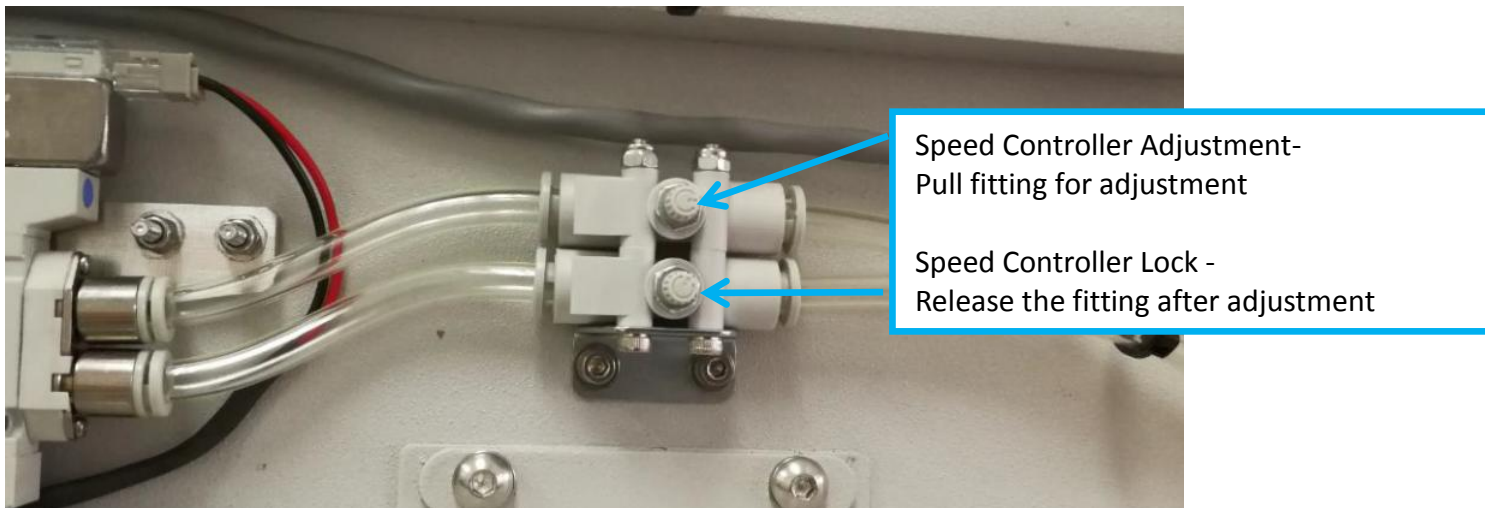


Figure 27

37. Run 1 x Loop of CD &A