

	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

Content

Field Stop Assembly Removal.....	3
Field Stop Assembly Replacement.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

Field Stop Assembly Removal

1. Open V810 > Services > Subsystem Status & Control > Panel Handling > Initialize

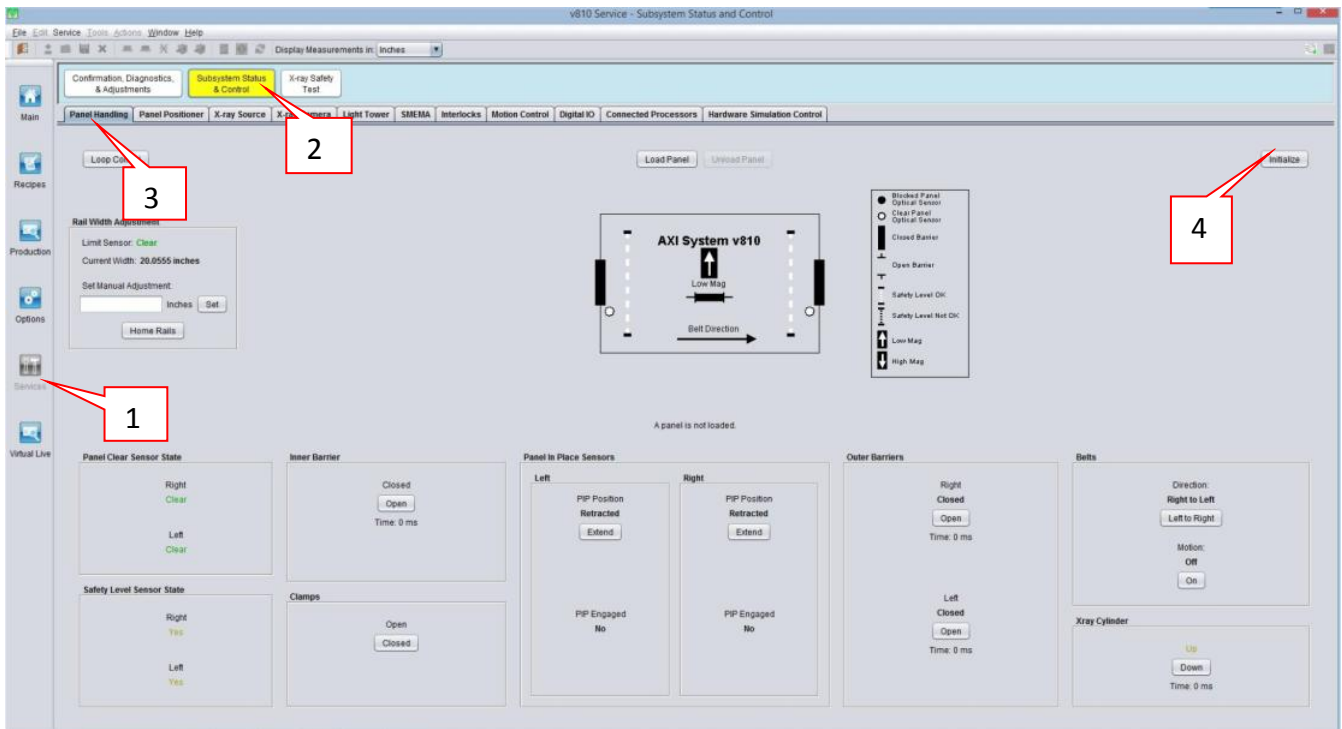


Figure 1 Panel Handling initialize

2. Turn off X-ray source > Power off SSCA > Open Front Access Door.
3. Loosen 2 x Thumb Nut. Open Camera Enclosure as shown in Figure 2.



Figure 2 Camera Enclosure

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

4. Prepare Camera Tool (P/N: 2350-0010) as shown in Figure 3.



Figure 3 Camera Tool

5. By using camera tool, remove 2 x Screws near to Camera 0 as shown in Figure 4.



Figure 4 Screw Removal

6. Move XY Stage to middle where ease of removal as shown in Figure 5.

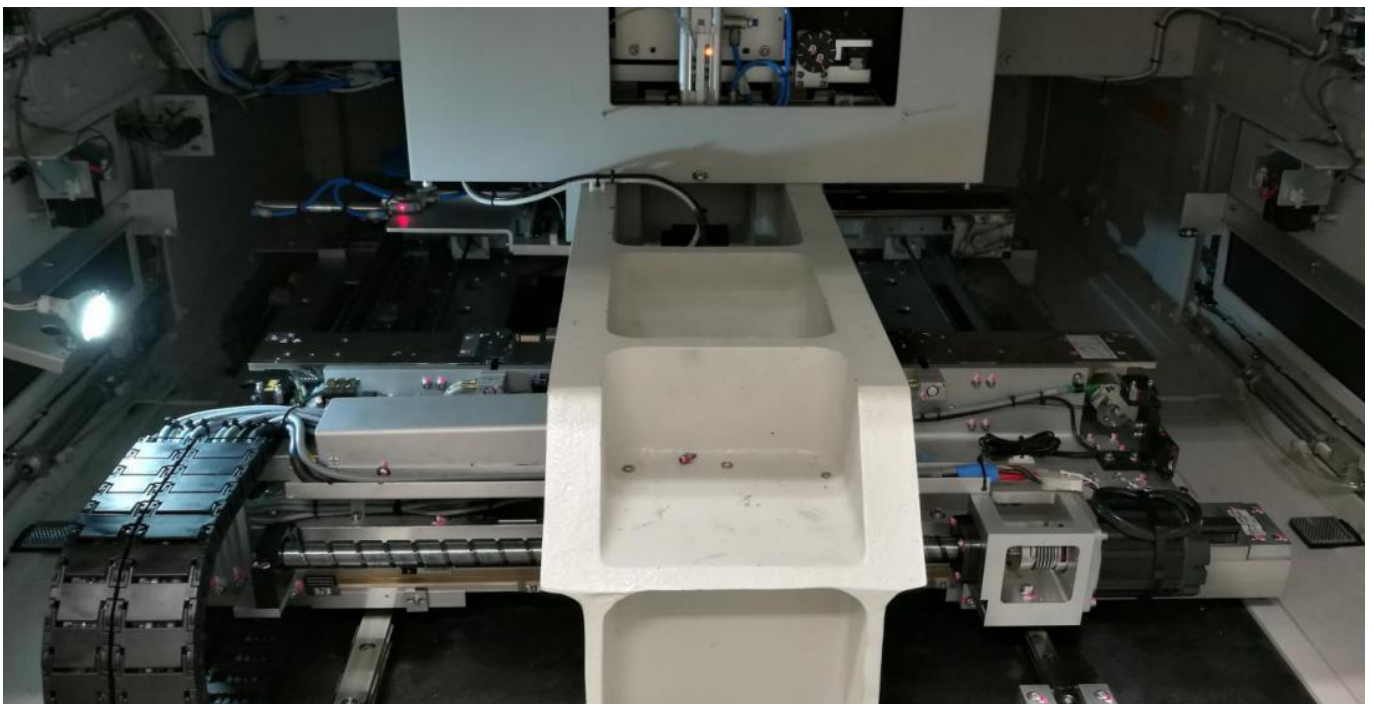


Figure 5 Re-position XY stage

	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

- Gentle remove Field Stop Assembly as shown in Figure 6.



Figure 6 Field Stop Assembly Removal

Field Stop Assembly Replacement

- Prepare Field Stop Assembly (P/N: 4XAGRE-N175-A) as shown in Figure 7.



Figure 7 Field Stop Assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

2. Assemble New Field Stop Assembly. Visual check Dowel Pin Orientation as shown in Figure 8 where require to mate firmly with Dowel Pin Guide as shown in Figure 9.

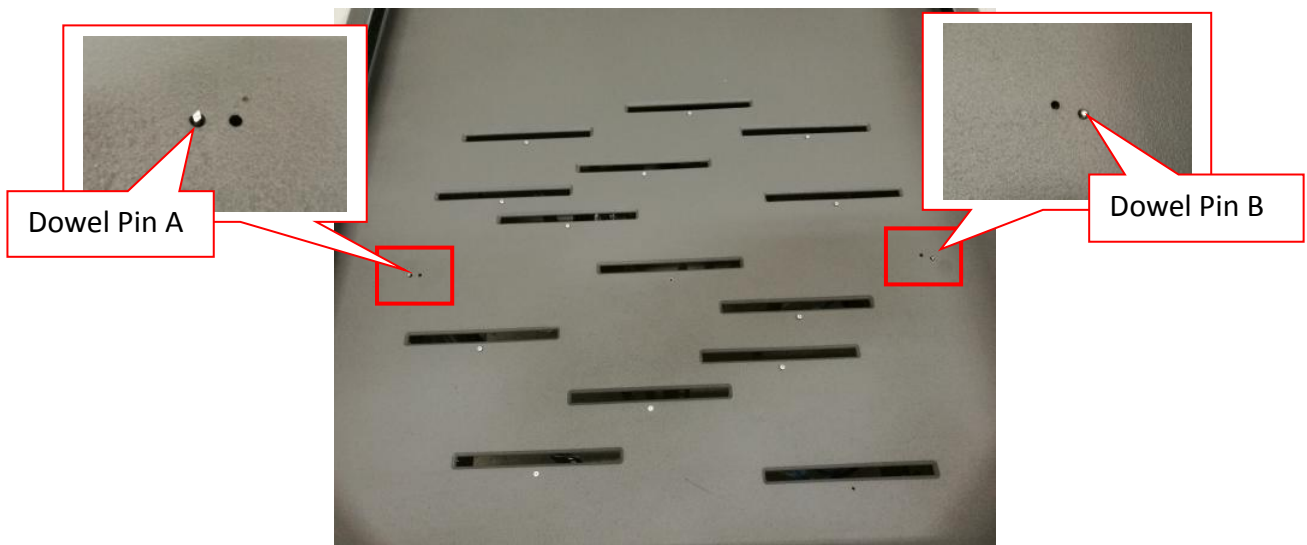


Figure 8 Field Stop Assembly Cover



Figure 9 Field Stop Assembly Dowel Pin

3. Tighten 2 x Screws as shown in Figure 10.

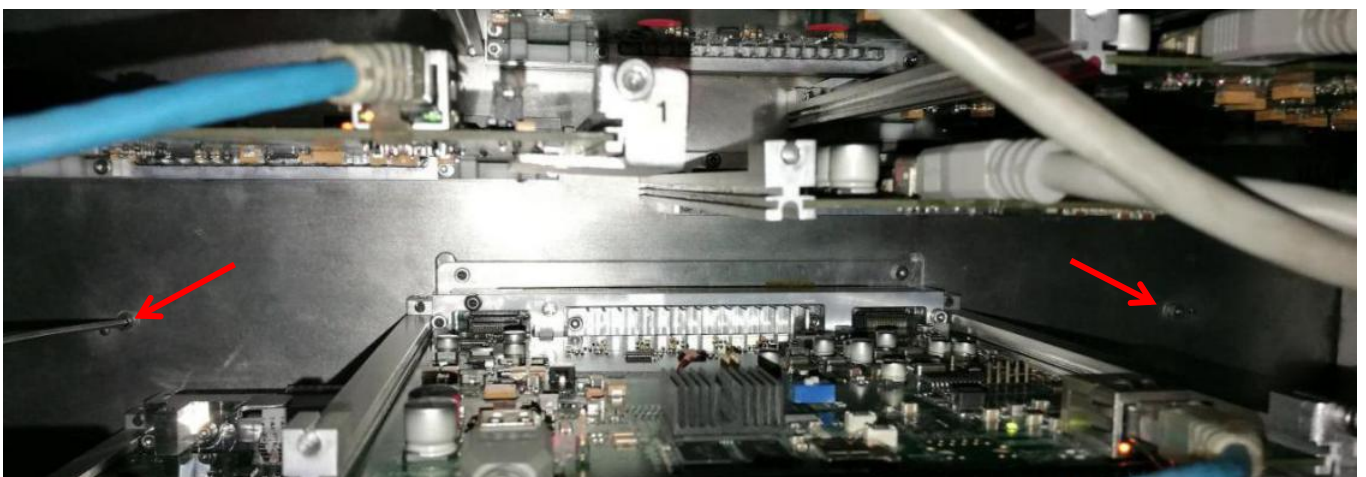


Figure 10 Screw Fastening

	Work Instruction	Doc. Revision	00
	AXI V810 STD Field Stop Assembly Removal & Replacement Procedure	Effective Date	30 May 2016

4. Close Camera Enclosure.
5. Manually move XY stage.
6. Visual check New Field Stop Assembly where require flat to the Rear & Front Shield Surface, Board Drop as shown in Figure 11.

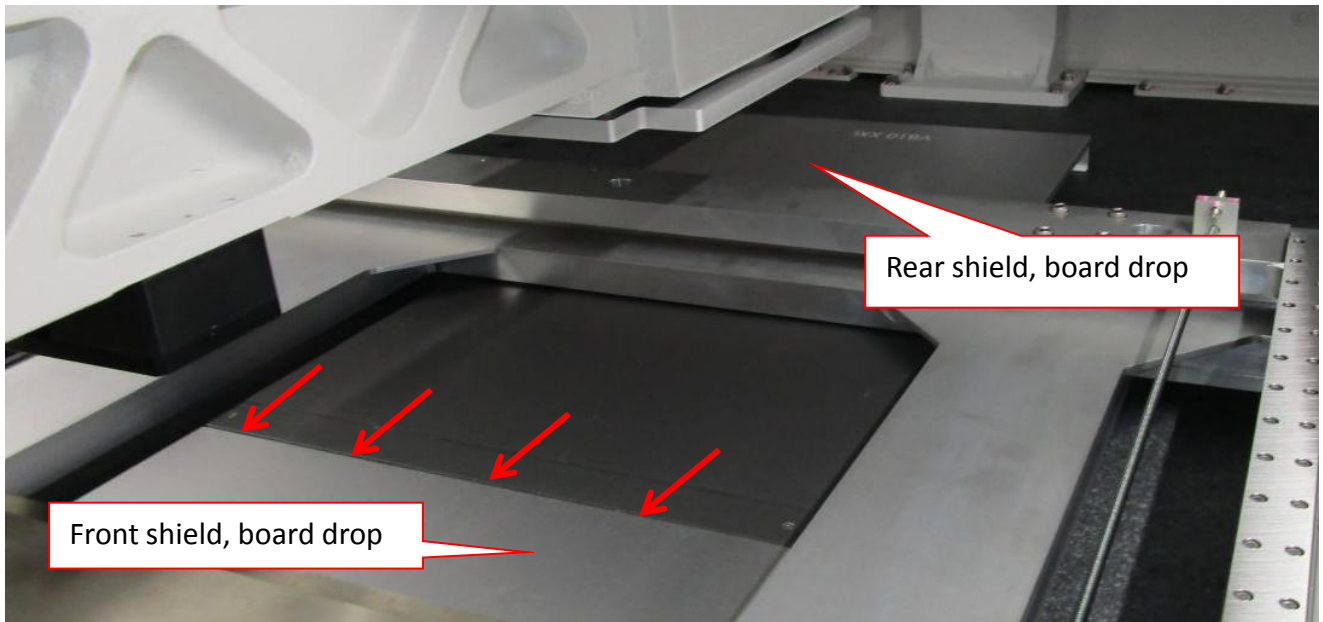


Figure 11 Field stop assembly (Visual Check)

7. If height adjustment is require for both board drop shield, remove 2 x screws & apply extra washer to shim up as shown in Figure 12.

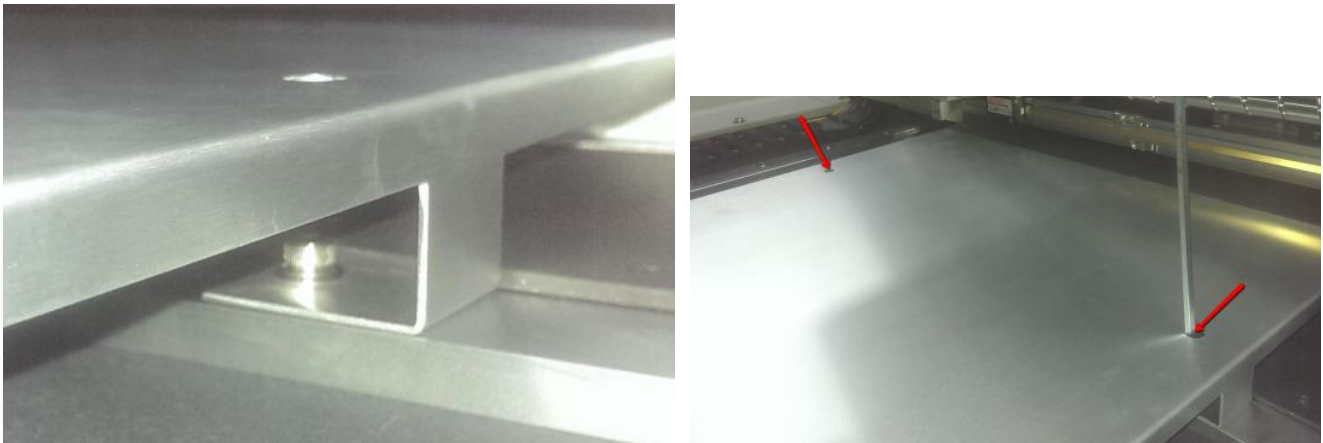


Figure 12 Screw removal for height adjustment

8. Close Front Access Door and turn on X ray source.
9. Run 3 loops of CD&A.