

	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	09 Apr 2015	First Release	CHIN CHEE YAN
01	2 Oct 2016	Template changes & Content update	ONG KEAN SHENG
02	12 Oct 2016	Figure Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

Content

Trigger board removal procedure.....	3
Trigger board replacement procedure.....	5

	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

Trigger board removal procedure

1. Shutdown and completely power off machine as usual.
2. Ensure the X-Ray source is completely turn off before proceed any action.
3. Ensure the trigger board power switch is Off (behind the Main PDU).



Figure 1

4. Unscrew and remove TOP, TRIGGER BOX (P/N, 4XACM-007).

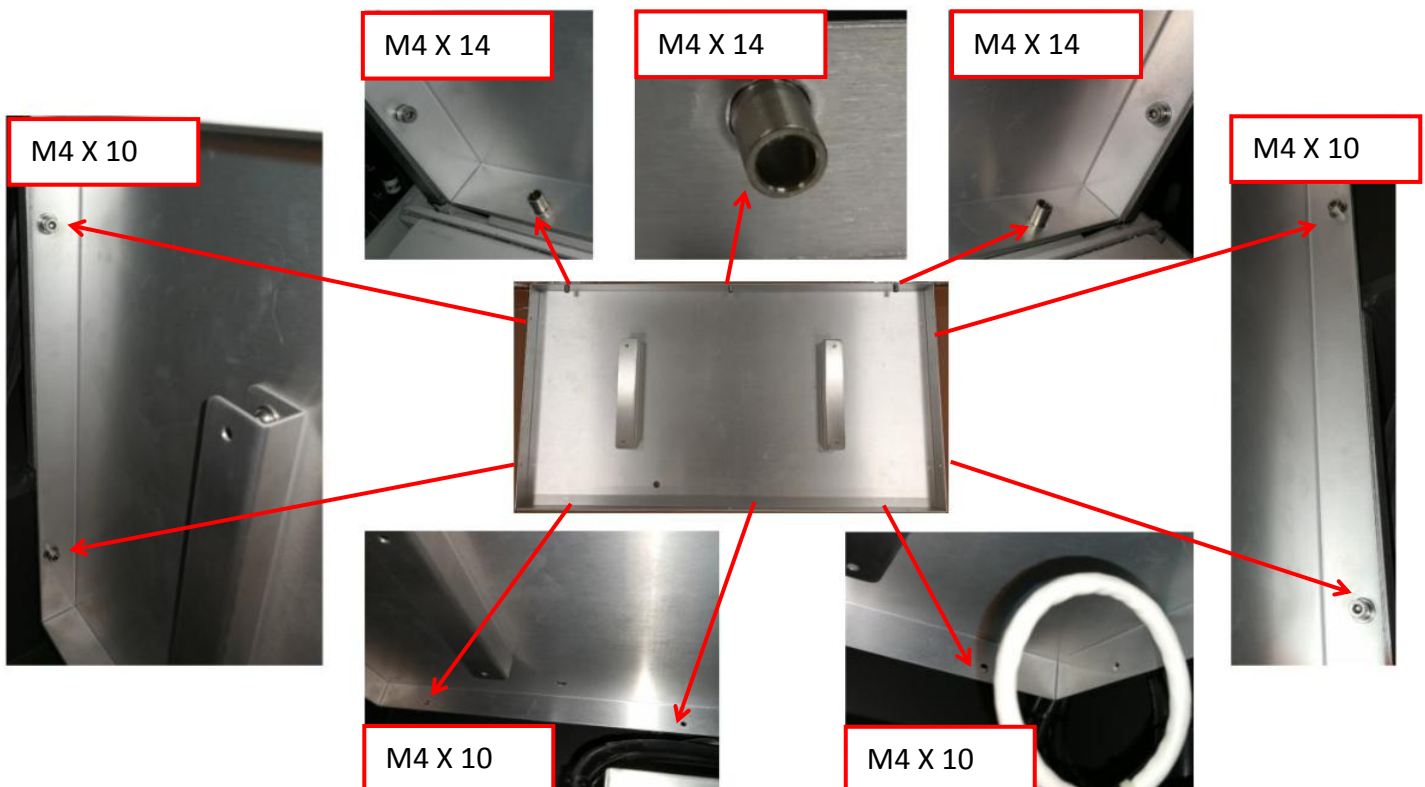


Figure 2 Trigger board cover removal

	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

- Disconnect 14 fire wires from Embedded System Support MISC Board-Trigger Board 1 Input Channel 12 Output Channels ports (P/N, 2210-0016) as Figure 3.



Figure 3 Trigger board

- Disconnect the power cable from J424v connector as Figure 4.

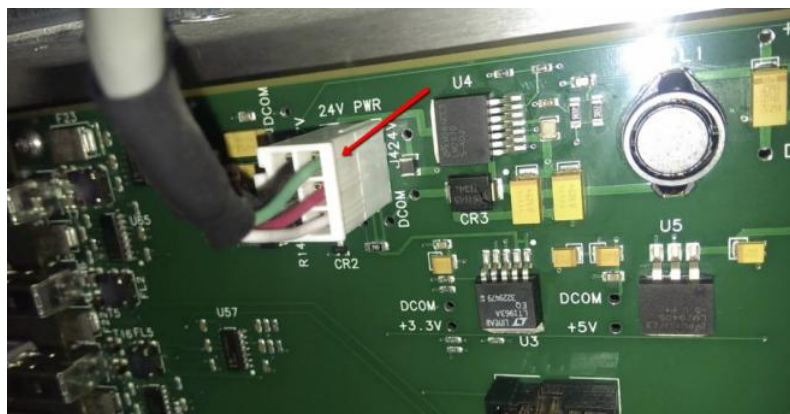


Figure 4 Trigger board power removal

- Use a short slotted screwdriver unscrew and disconnect the CABLE, TRIGGER IO, DBN 15 (P/N, 4XASC-A039) cable from Stage Cont Conn as Figure 5.

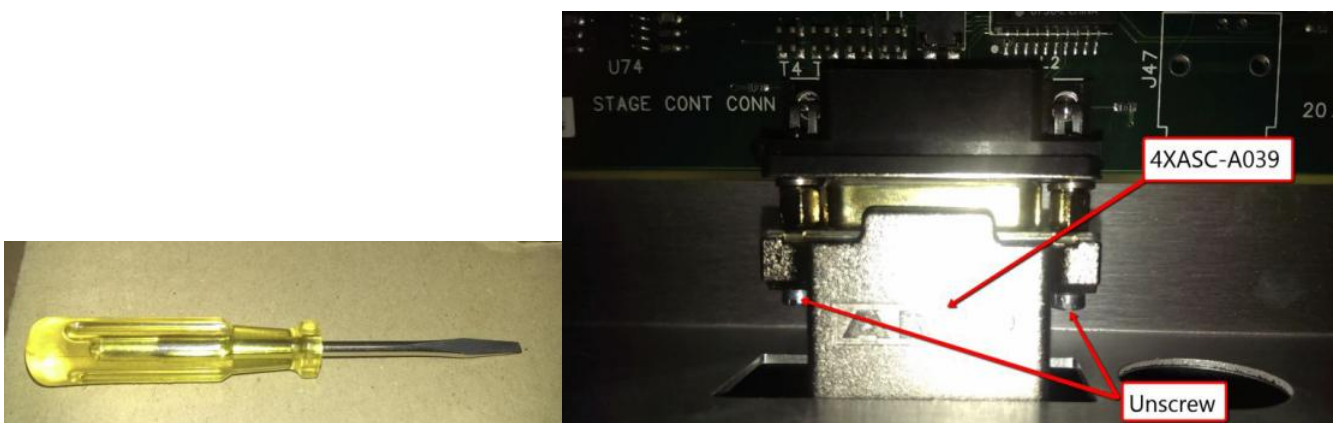


Figure 5 Connector removal

	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

- Unscrew 4 screws as shown and remove the 2210-0016 (Trigger board) from BOTTOM, TRAY (P/N, 4XAMI-002).



Figure 6 Trigger board removal

Trigger board replacement procedure

- Prepare a new Embedded System Support MISC Board-Trigger Board 1 Input Channel 12 Output Channels ports (P/N, 2210-0016)



Figure 7

	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

2. Assembly the 2210-0016 (Trigger board) to BOTTOM, TRAY (P/N, 4XAMI-002) and perform fastening at 4 points as below Figure 8



Figure 8

3. Connect the CABLE, TRIGGER IO, DBN 15 (P/N, 4XASC-A039) cable to 1070-033, Stage Cont Conn as shown figure 9.



Figure 9

4. Connect all the fire wires back to port. (No orientation needed).



Figure 10

ViTrox	Work Instruction	Doc. Revision	02
	AXI V810 Trigger Board Removal and Replacement Procedure	Effective Date	12 Oct 2016

5. Connect the power cable from J424v connector as shown figure 11.

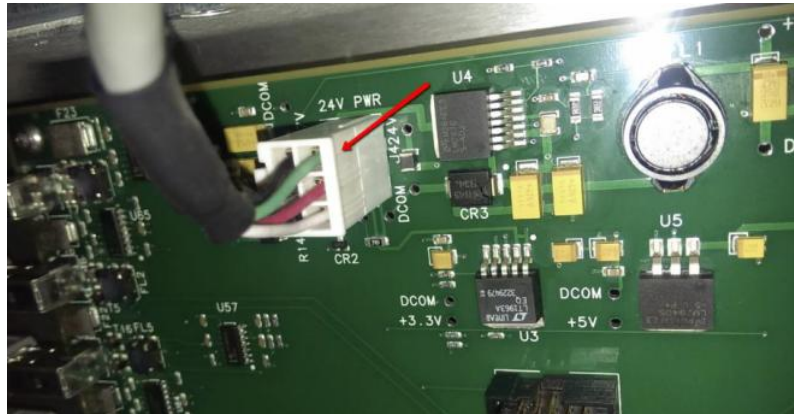


Figure 11

6. Assembly the TOP, TRIGGER BOX (P/N, 4XACM-007) back to origin position and tighten all 9 screws.

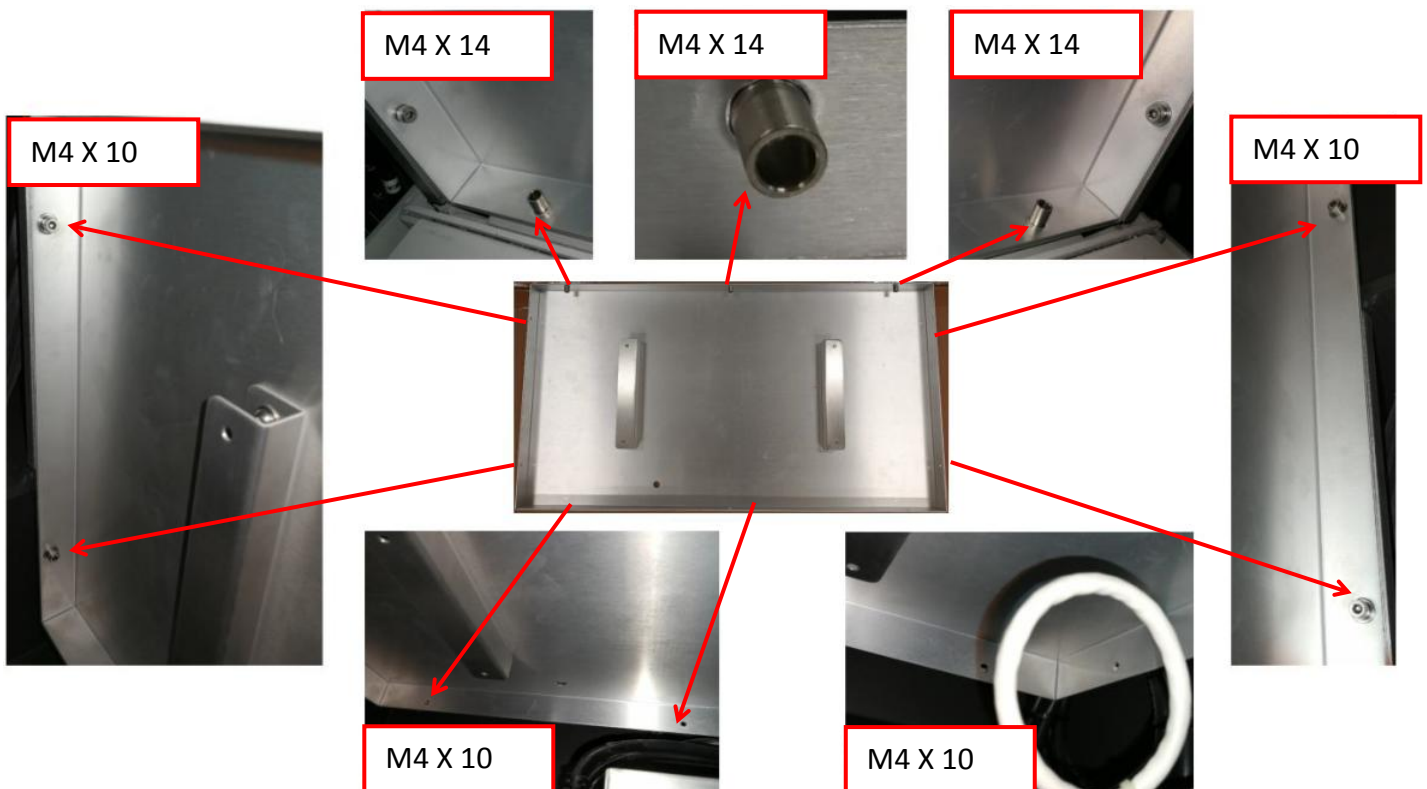


Figure 12

7. Power-up machine as usual.