

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

Content

Relay removal.....	3
Relay replacement.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

Relay removal

1. Close X-ray Source.Open Front Door.
2. Power off SSCA

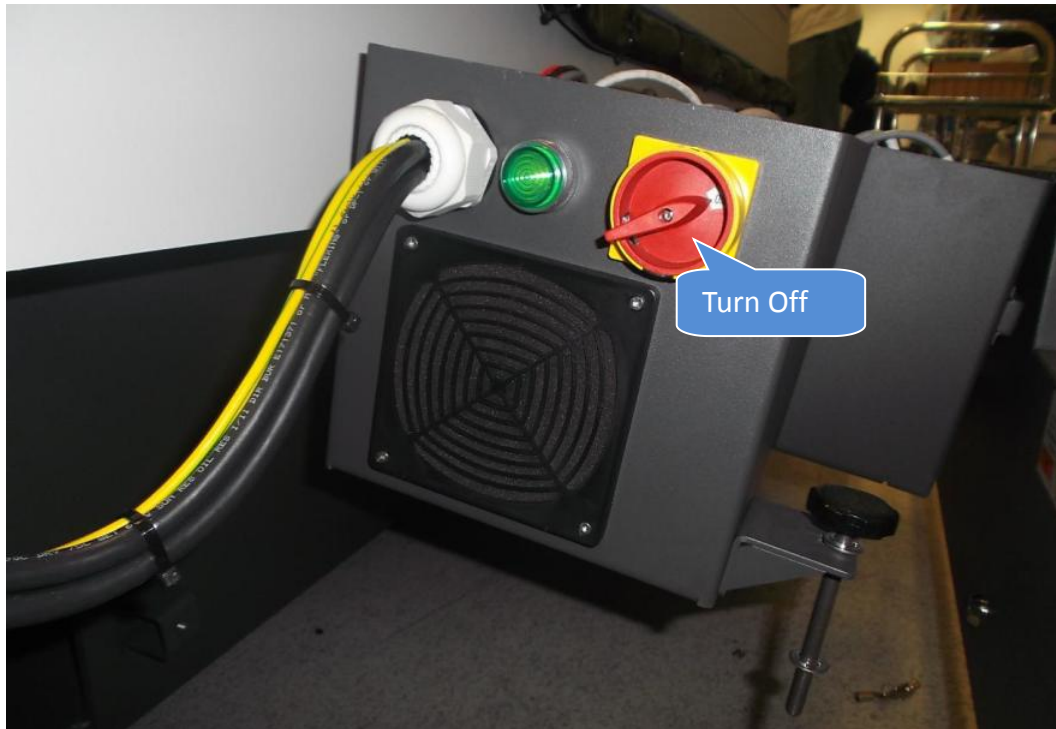


Figure 1 SSCA Power Off

3. Gently loosen Both Anchors as below Figure 2

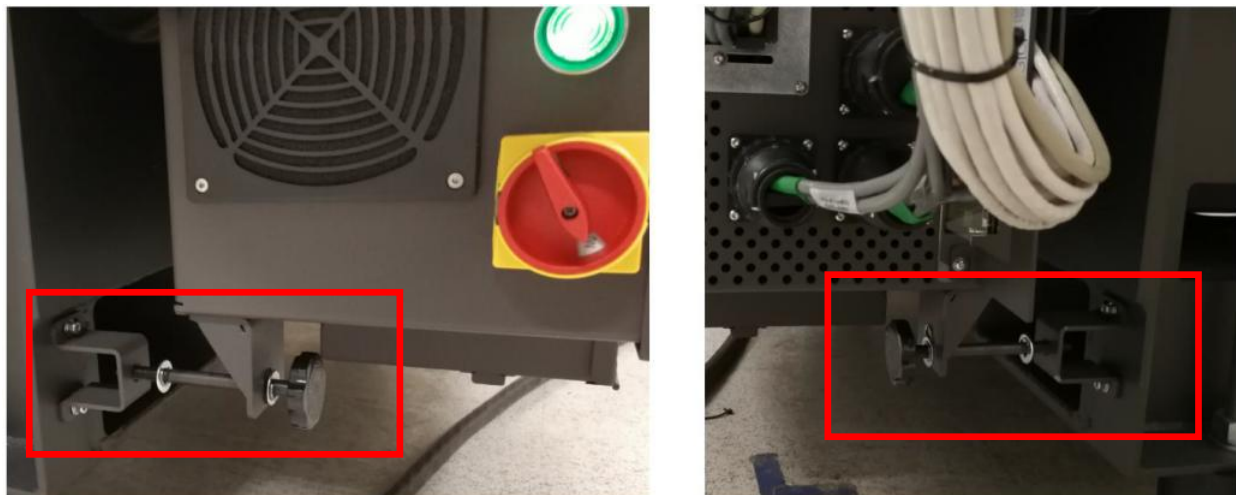


Figure 2 Anchors Release

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

4. Extend SSCA Support Rod which locate underneath of SSCA as below Figure 4

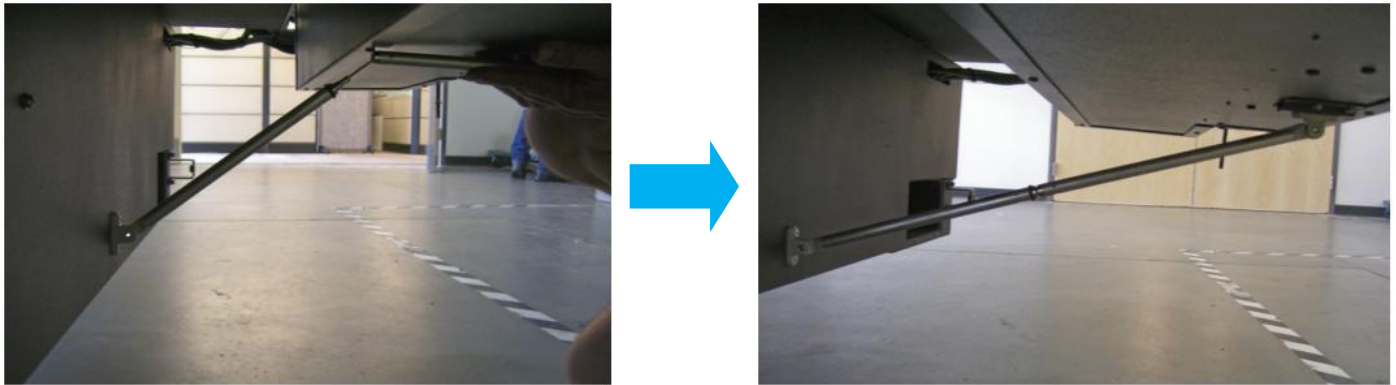


Figure 3 SSCA Support Rod Extend

5. Unlock SSCA and open up SSCA Cover
6. Identify Relay 1 & Relay 2 Location

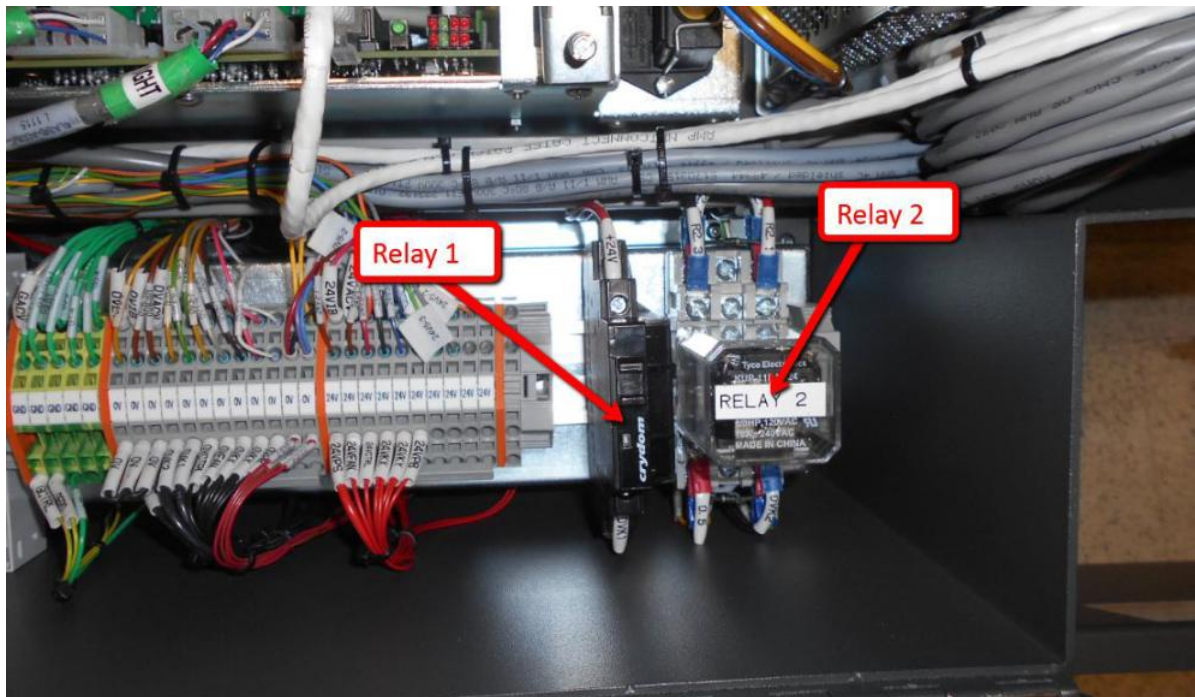


Figure 4 Relay 1 & Relay 2

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

- a) For Relay 1 (P/N: 2292-0017): Conveyor Belt On/Off
- i. Loosen 4 x Screws.Remove 4 x Cables as shown in Figure 5

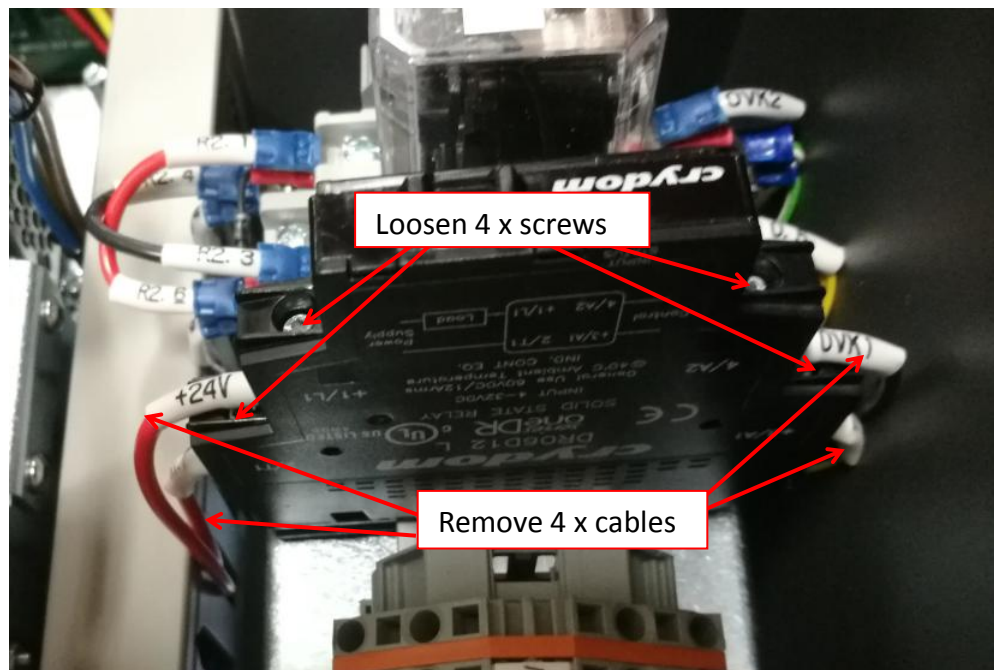


Figure 5 Relay cable removal

- ii. Unlock and remove Relay 1 as shown in Figure 6

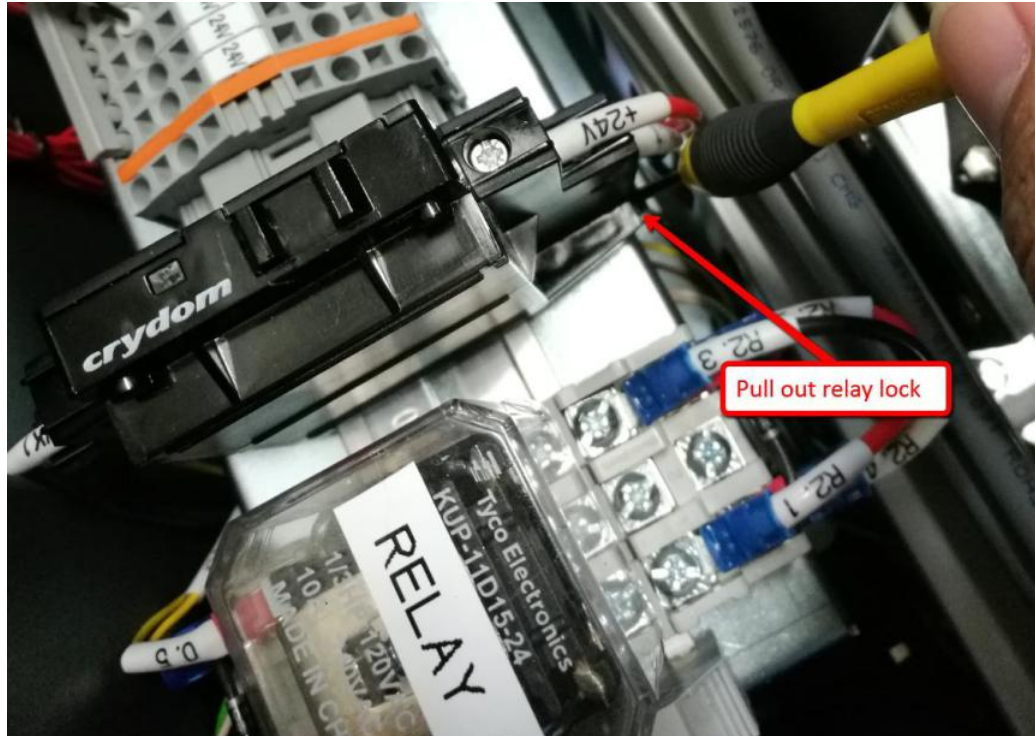


Figure 6 Relay Removal

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

b) Relay 2 (P/N: 2292-0006): Conveyor Belt Turning Direction

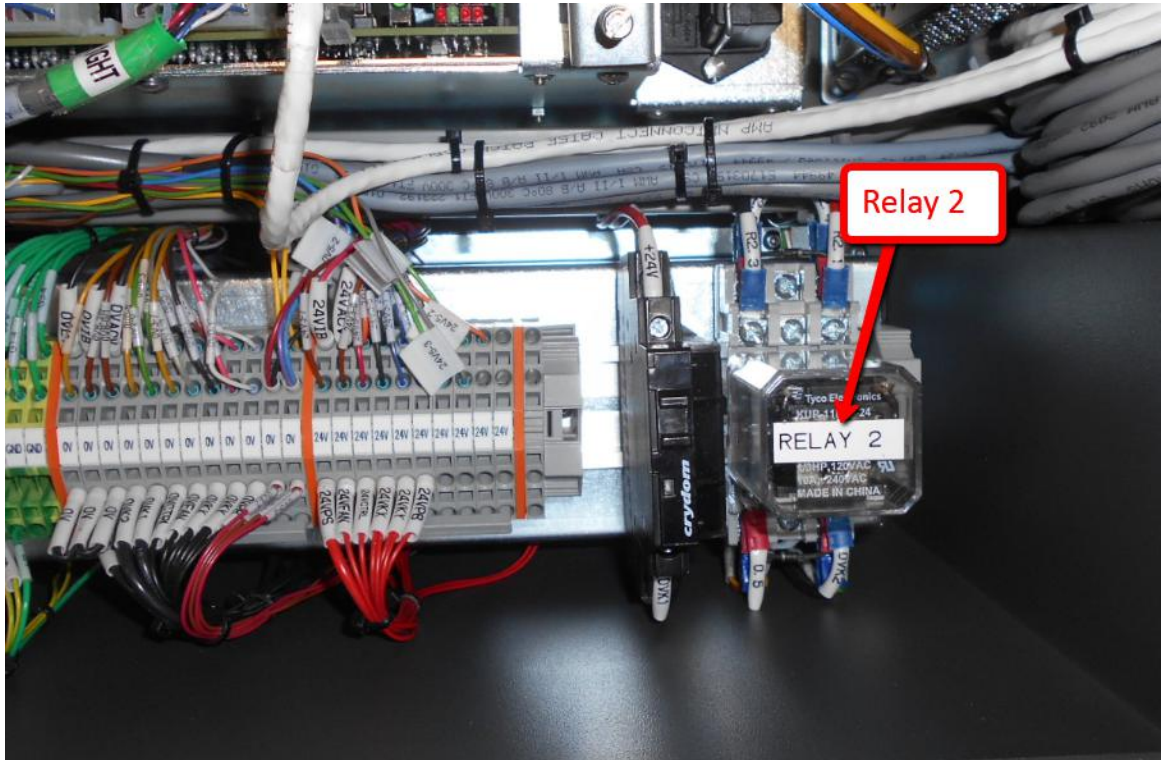


Figure 7 Relay 2 Removal

i. Unplug & remove Defective Relay

Relay replacement

Relay 1 (P/N: 2292-0017): Conveyor Belt On/Off

Relay 2 (P/N: 2292-0006): Conveyor Belt Turning Direction

1. Assemble New Relay 1.
2. May refer to Table 1 & Figure 5 for Relay 1 Cable Orientation

SSR relay slot description	Cable label
+3/A1	0.4
4/A2	0VK1
2/T1	R1.7
+1/L1	+24V

Table 1

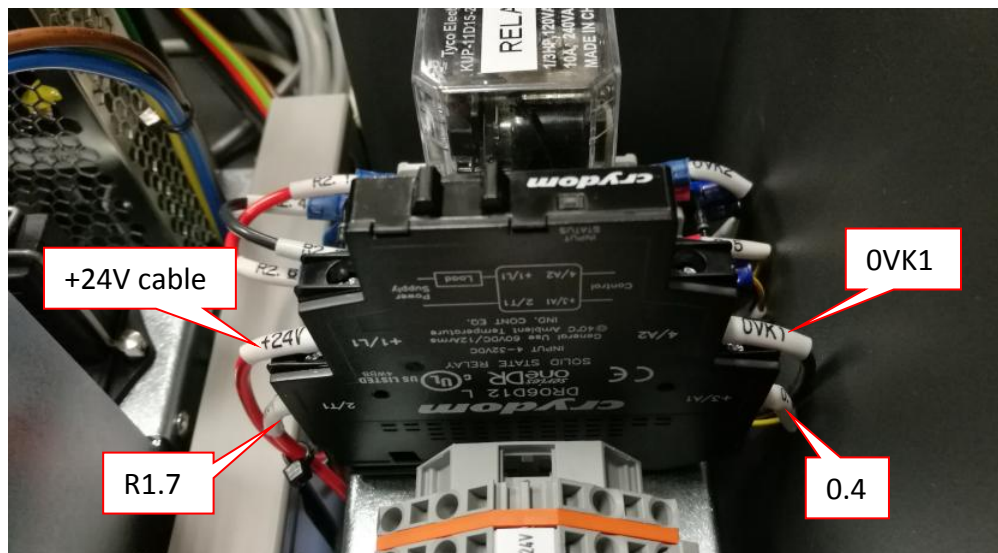


Figure 8 Cable Orientation (Relay 1)

3. Assemble New Relay 2 by refer to below orientation. May refer to Figure 9.

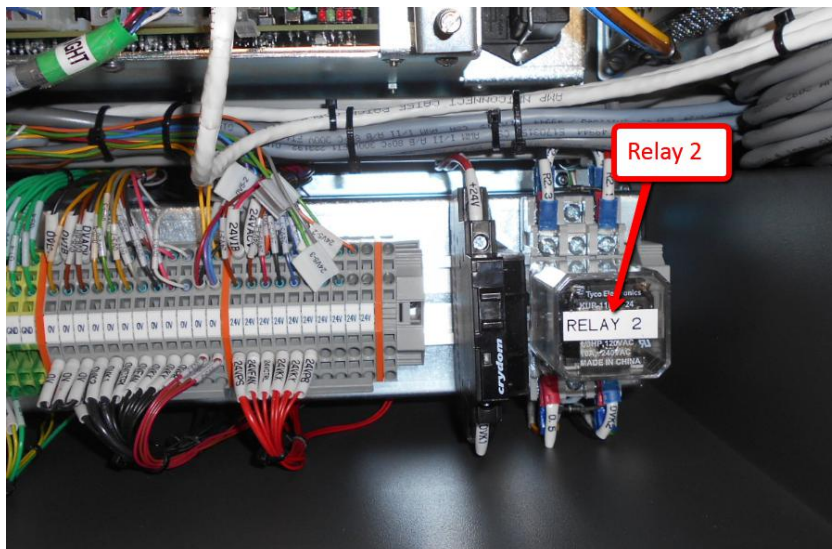


Figure 9 Relay 2 Orientation

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

4. Power on SSCA > Open V810 > Services > Subsystem Status & Control > Digital IO > Initialize

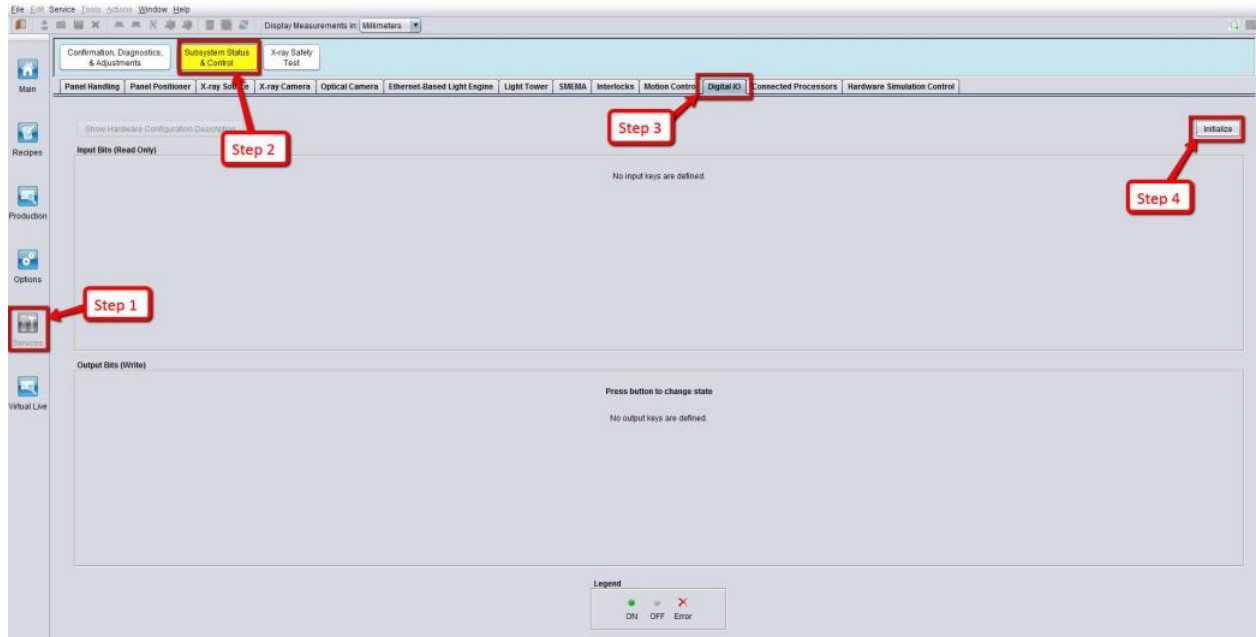


Figure 10 Digital IO initialize

5. Open Front Access Door

6. Uncheck “Panel Clamps Closed” and “Panel Clamps Opened” will indicate “Green” at Digital IO Input Bit.


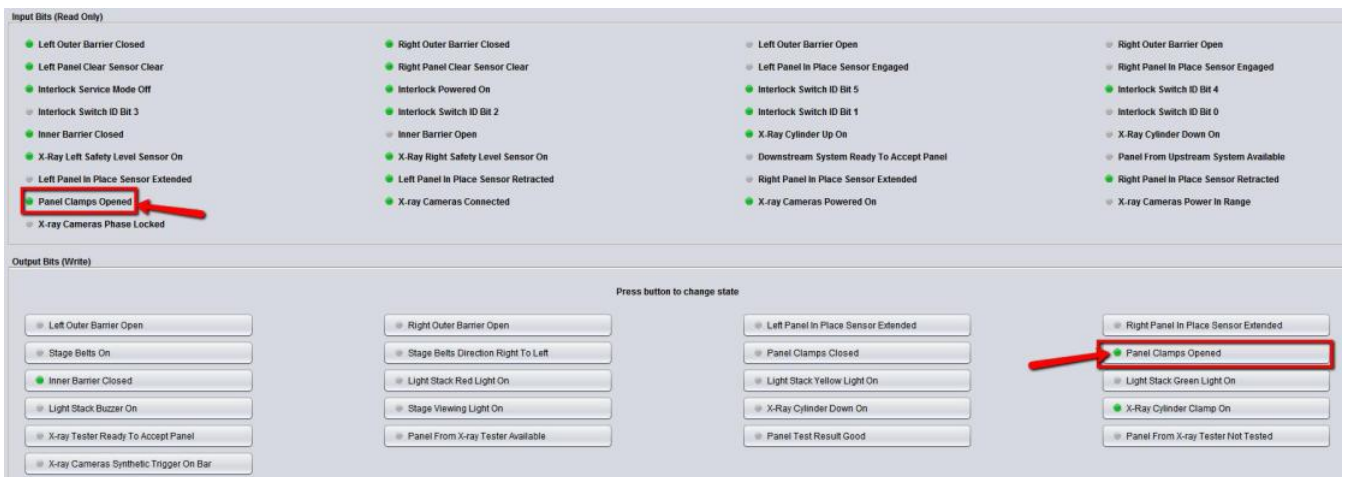


Figure 11 Panel clamp in “Open” Status (Digital IO Input Bit)

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Relay Removal & Replacement Procedure	Effective Date	30 May 2016

7. Enable “Stage Belts on” as Figure 11. Visual check Belt Running Status at both rail

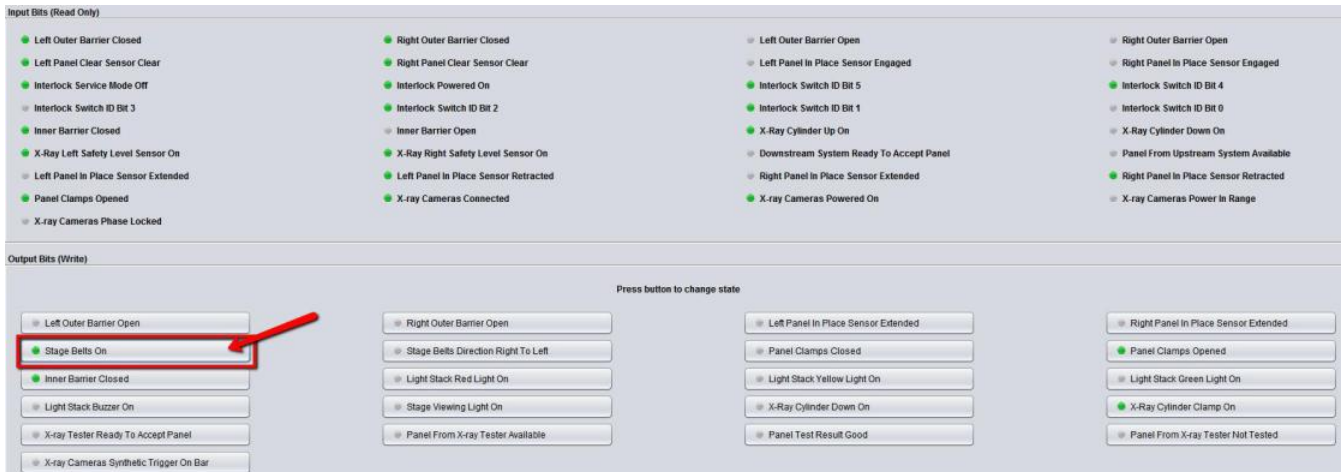

The screenshot displays the control interface for the AXI V810 XXL system. It is divided into two main sections: 'Input Bits (Read Only)' and 'Output Bits (Write)'. The 'Input Bits' section contains various status indicators, including 'Left Outer Barrier Closed', 'Right Outer Barrier Closed', 'Interlock Powered On', and 'X-Ray Left Safety Level Sensor On'. The 'Output Bits' section contains buttons for controlling the system, such as 'Left Outer Barrier Open', 'Stage Belts On', 'Inner Barrier Closed', and 'Light Stack Buzzer On'. A red box highlights the 'Stage Belts On' button, and a red arrow points to it from the right.

Figure 12 Stage Belt in “On” Status

8. Enable “Stage Belts Direction Right To left” as Figure 12. Visual check Belt Turning Direction.



The screenshot displays the control interface for the AXI V810 XXL system, similar to Figure 12. The 'Output Bits' section contains buttons for controlling the system. A red box highlights the 'Stage Belts Direction Right To Left' button, and a red arrow points to it from the left.

Figure 13 Belt Turning Direction (Anti-Clockwise)

9. Close Front door > Open X-ray source > Run CD&A for 3 loops.