

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	14 Jan 2014	First Release	CHEAH LEE HERNG
01	29 Feb 2016	Template update	CHIN CHEE YAN
02	2 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

Content

Introduction.....	3
Step.....	3

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

Introduction

This document is to describe the procedure on setup IP address for PSP new projector, the Ethernet-based Light Engine (EBLE). **Purpose to avoid IP conflict issue.**

Step

1. On Master Controller, open up an internet browser. Eg: Google Chrome, Internet Explorer or Mozilla Firefox. In this document, we will use Google Chrome as example.
2. By default, the IP address for front EBLE is 192.168.0.100 and rear EBLE is 192.168.0.101. To connect to front EBLE, type <http://192.168.0.100> in the browser address bar. An authentication dialog box will appear for credentials as below, then press **"Log in"**.
 - UserName: admin
 - Password: <Leave blank>

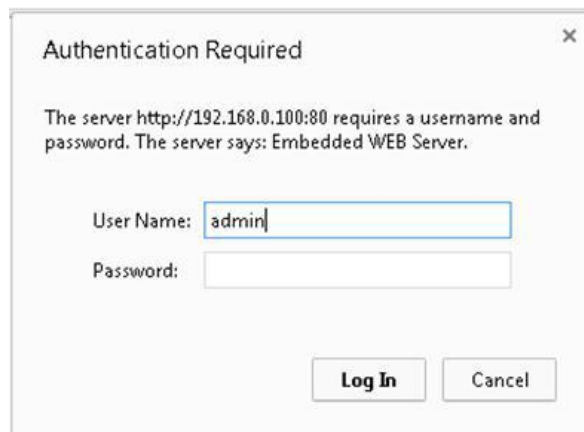


Figure 1 EBLE GUI

3. A screen with all the network settings will be displayed. May confirm the setting is for front EBLE by looking at the index as shown at below:

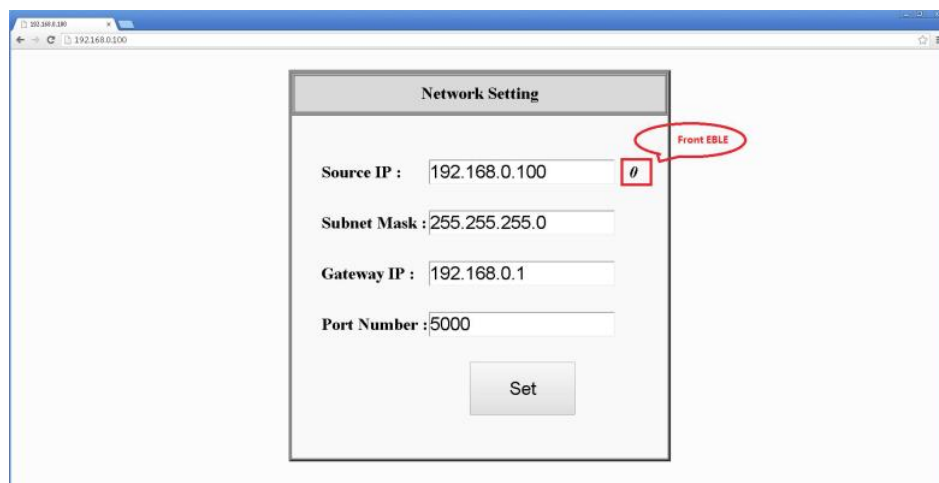


Figure 2 EBLE GUI

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

- Change the subnet masking for EBLE, you can modify in Source IP and Gateway IP section and we want to change to 123.123.123.100. We will need to modify both masking info in Source IP and Gateway IP as shown below:

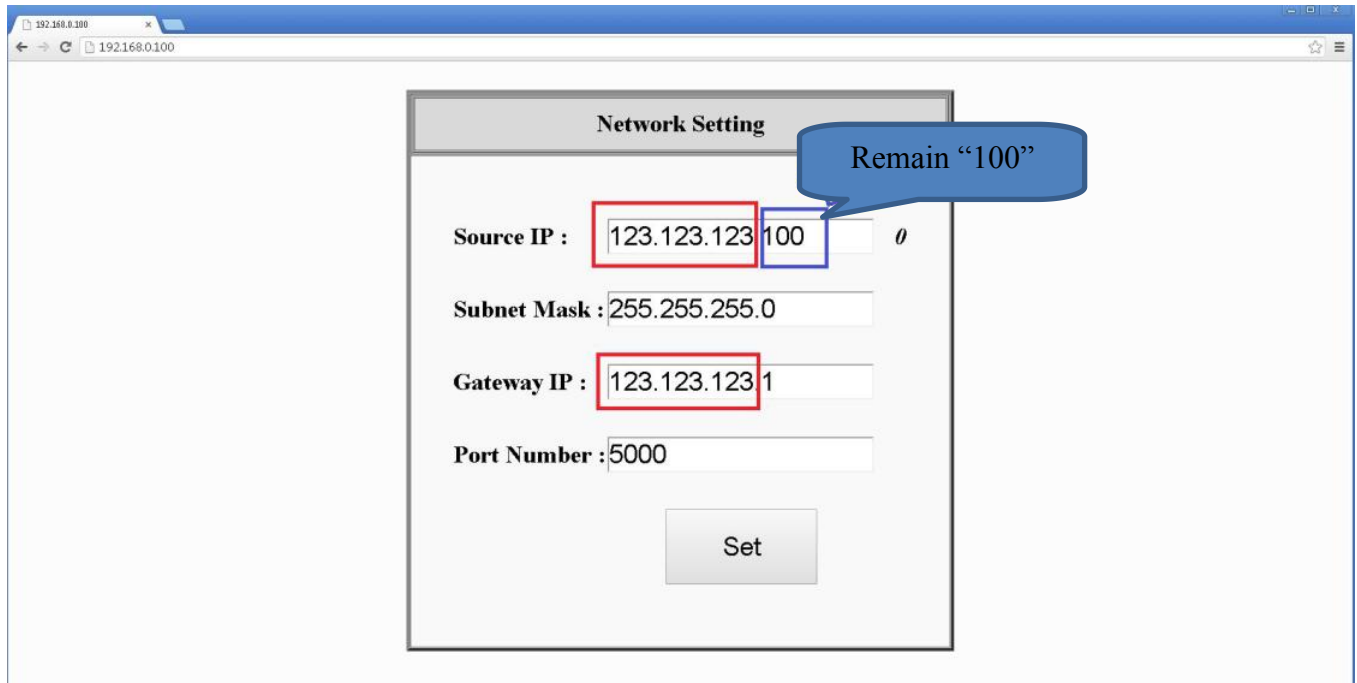


Figure 3 EBLE GUI

- click Set button to apply the changes.
- Next, for rear EBLE. Type in <http://192.168.0.101> in the address bar as shown below:


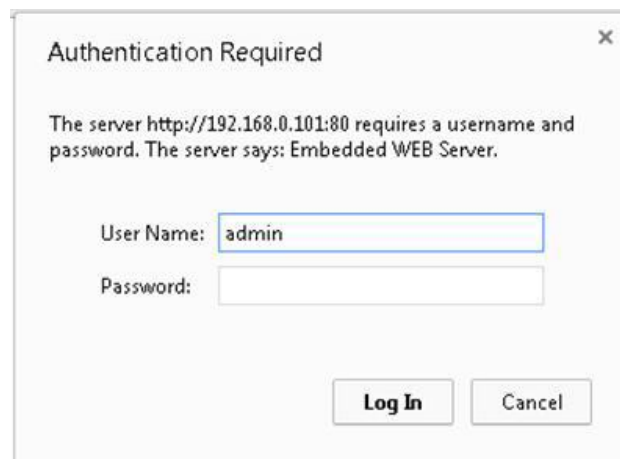


Figure 4 EBLE GUI

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016


7. Hit “Login” button. A screen with all the network settings will be displayed. May confirm the setting is for rear EBLE by looking at the index as shown at below

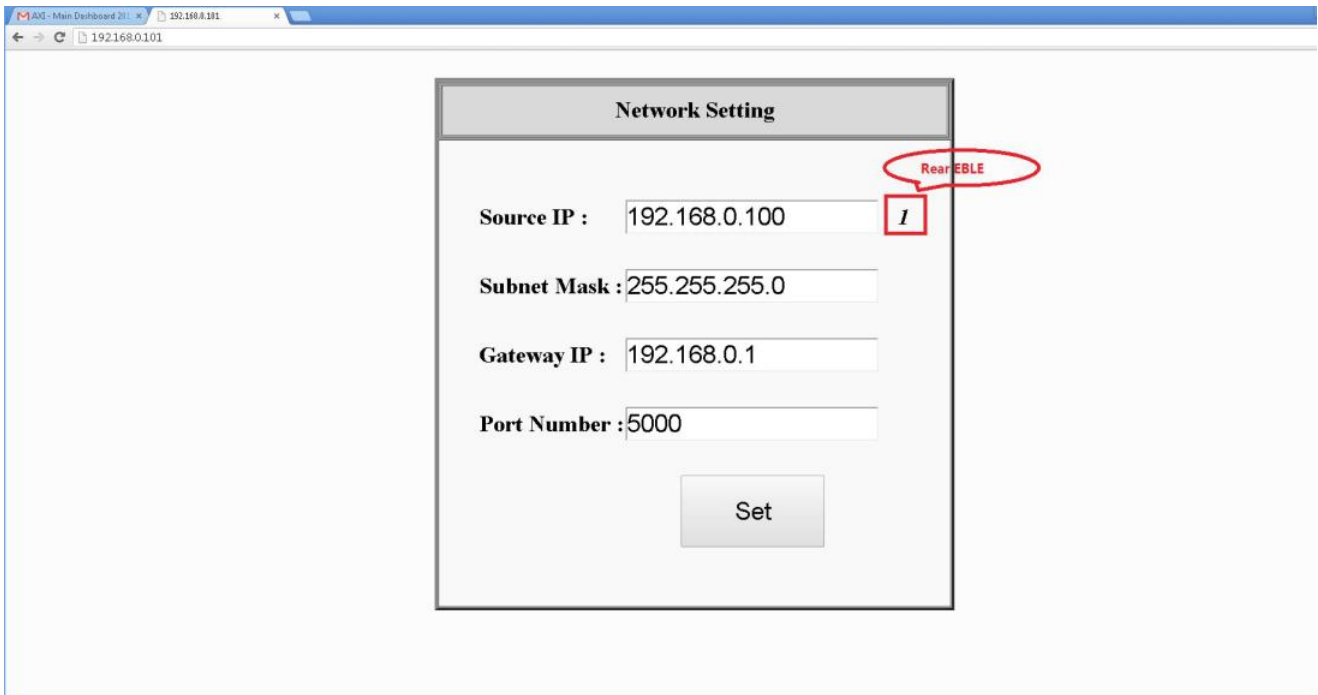

The screenshot shows a web browser window with the URL 192.168.0.101. The main content is a 'Network Setting' form. It contains four input fields: 'Source IP' (192.168.0.100), 'Subnet Mask' (255.255.255.0), 'Gateway IP' (192.168.0.1), and 'Port Number' (5000). A 'Set' button is at the bottom. A red circle highlights the text 'Rear EBLE' next to the Source IP field, and a small red box highlights the '1' at the end of the IP address.

Figure 5 EBLE GUI

8. Modify both masking info in Source IP and Gateway IP as shown below:

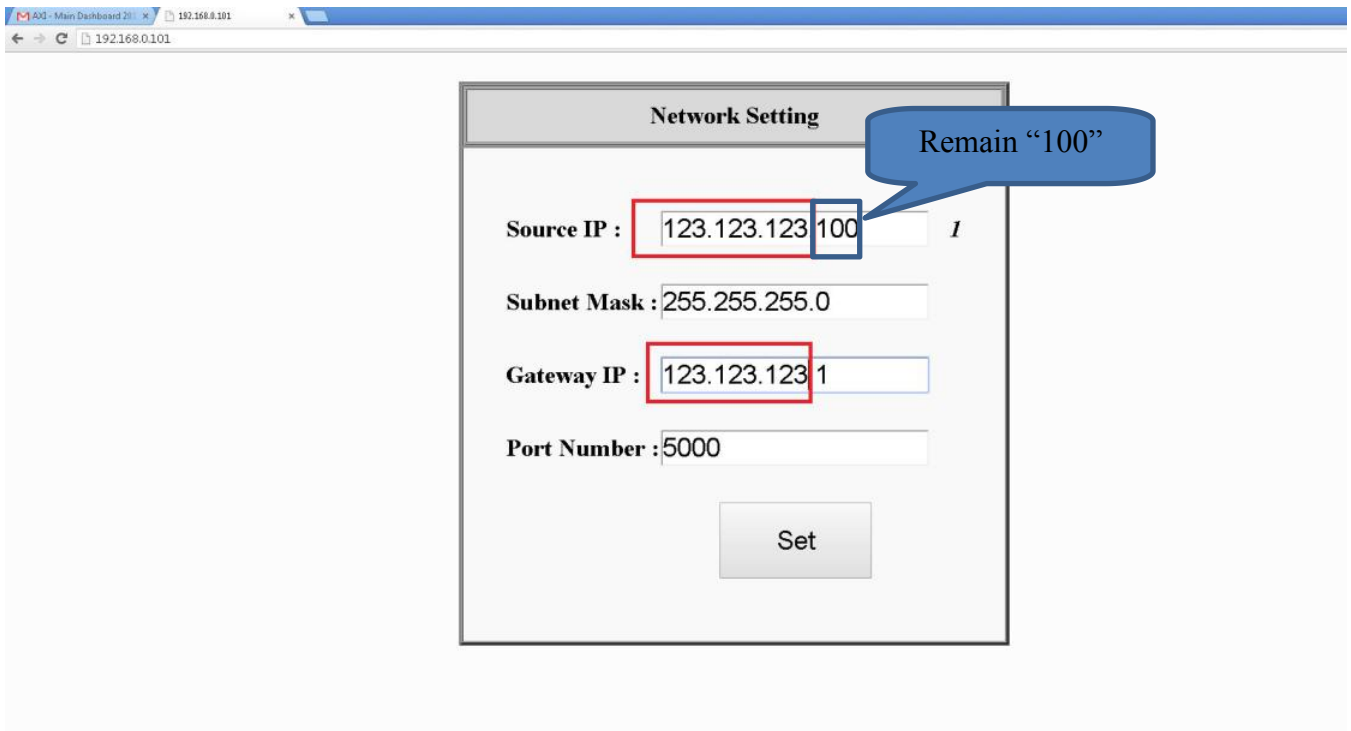

The screenshot shows the same 'Network Setting' form, but the 'Source IP' is now 123.123.123.100 and the 'Gateway IP' is 123.123.123.1. A red box highlights the '123.123.123' part of both IP addresses. A blue speech bubble points to the '100' in the Source IP field with the text 'Remain "100"'. A small red box highlights the '1' at the end of the Gateway IP.

Figure 6 EBLE GUI

9. Click Set button to apply the changes.

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

10. Next, at Master Controller computer, go to Control Panel->Network and Internet->View Network Status and tasks. On the left pane, click on Change Adapter Settings. Look for PSPEBLE network. Right-click on the icon and select Properties.

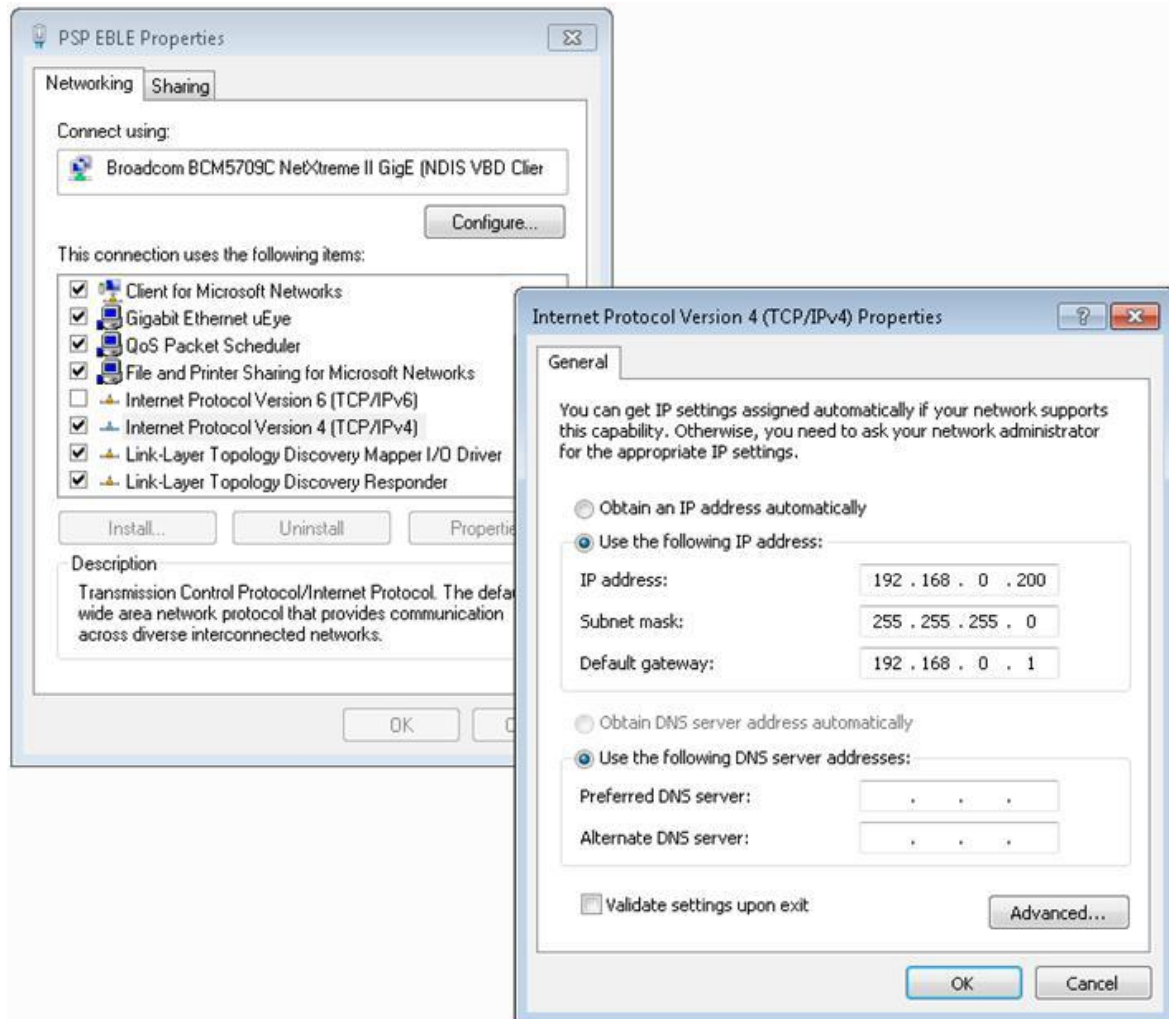


Figure 7 Network IP

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

11. If subnet mask had amend to 123.123.123.X, then may require to perform following modification:

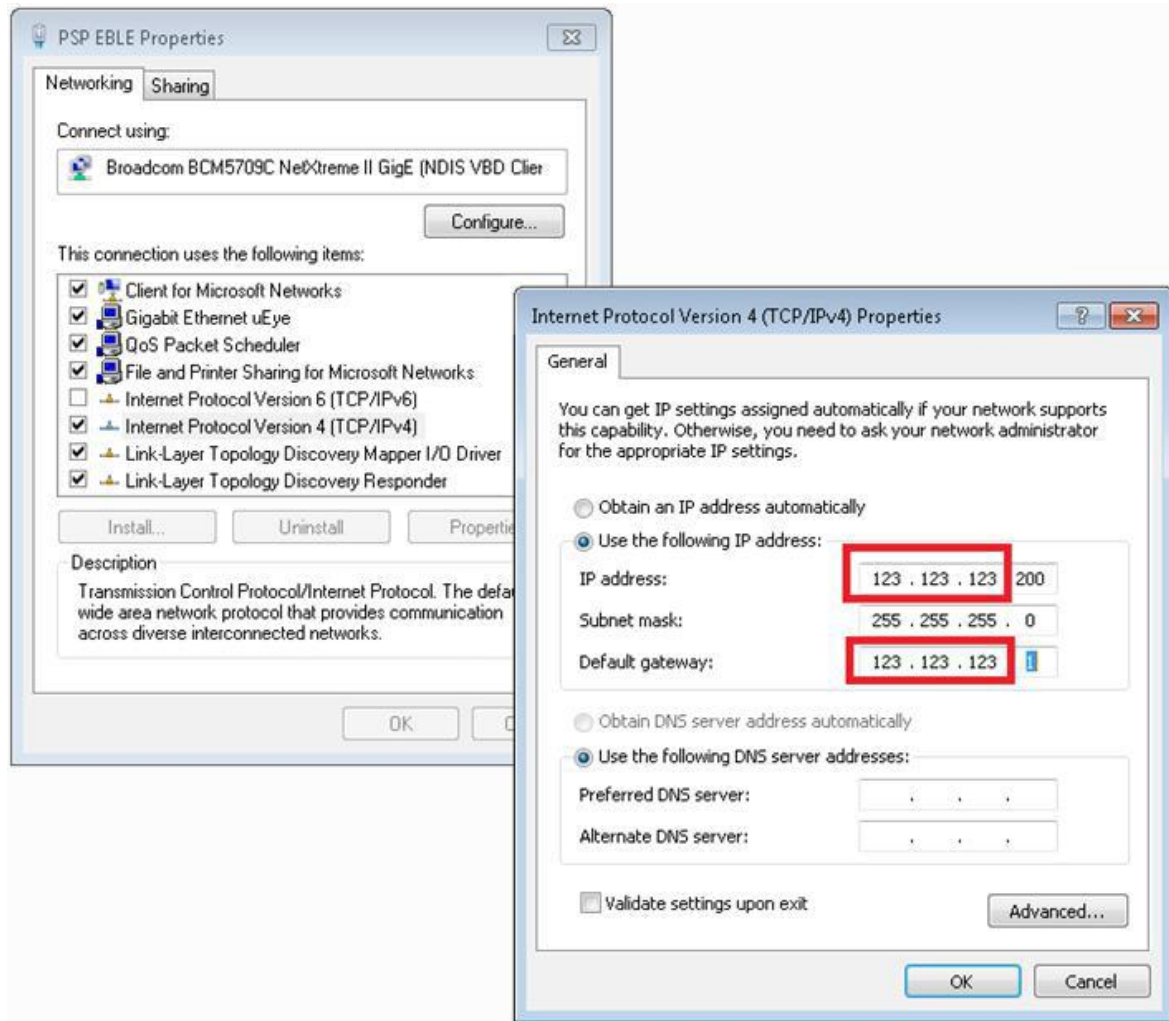


Figure 8 Network IP

12. Click OK to apply the changes.

13. Next you will need to update the IP address specified in hardware.config.

Standard system, open C:\Program Files\AXI System\v810\5.0\config\hardware.config


XXL system, open C:\Program Files\AXI System\v810\5.0\xxlconfig\hardware.config

S2EX system, open C:\Program Files\AXI System\v810\5.0\s2exconfig\hardware.config

	Work Instruction	Doc. Revision	02
	AXI V810 PSP 2 IP Address Update Procedure	Effective Date	2 Oct 2016

14. Edit the following to reflect your changes:

- ethernetBasedLightEngineHostIpAddress=**123.123.123.200**
- ethernetBasedLightEngineCurrentSettingMicroAmps=350
- ethernetBasedLightEnginePeriod=20
- ethernetBasedLightEngine0IpAddress=**123.123.123.100**
- ethernetBasedLightEngine0Port=5000
- ethernetBasedLightEngine1IpAddress=**123.123.123.101**
- ethernetBasedLightEngine1Port=5000

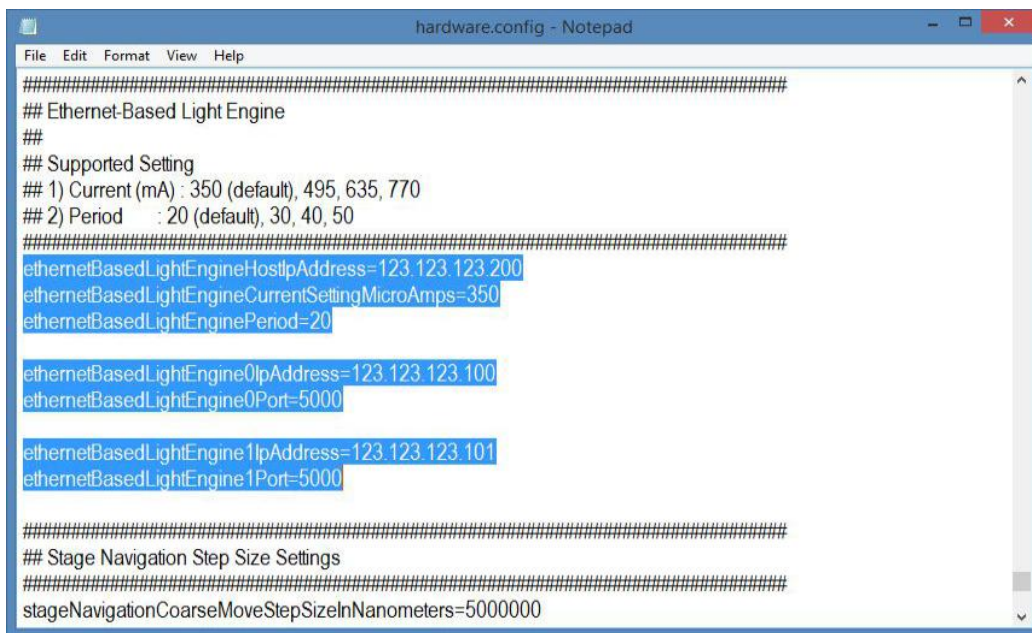

```

#####
## Ethernet-Based Light Engine
##
## Supported Setting
## 1) Current (mA) : 350 (default), 495, 635, 770
## 2) Period : 20 (default), 30, 40, 50
#####
ethernetBasedLightEngineHostIpAddress=123.123.123.200
ethernetBasedLightEngineCurrentSettingMicroAmps=350
ethernetBasedLightEnginePeriod=20

ethernetBasedLightEngine0IpAddress=123.123.123.100
ethernetBasedLightEngine0Port=5000

ethernetBasedLightEngine1IpAddress=123.123.123.101
ethernetBasedLightEngine1Port=5000

#####
## Stage Navigation Step Size Settings
#####
stageNavigationCoarseMoveStepSizeInNanometers=5000000

```

Figure 9 Hardware Config

15. Open V810 SW and start-up as usual. Go to ELBL tab and ensure both projectors can be initialize. Power cycle POE Switch is failed initialize.

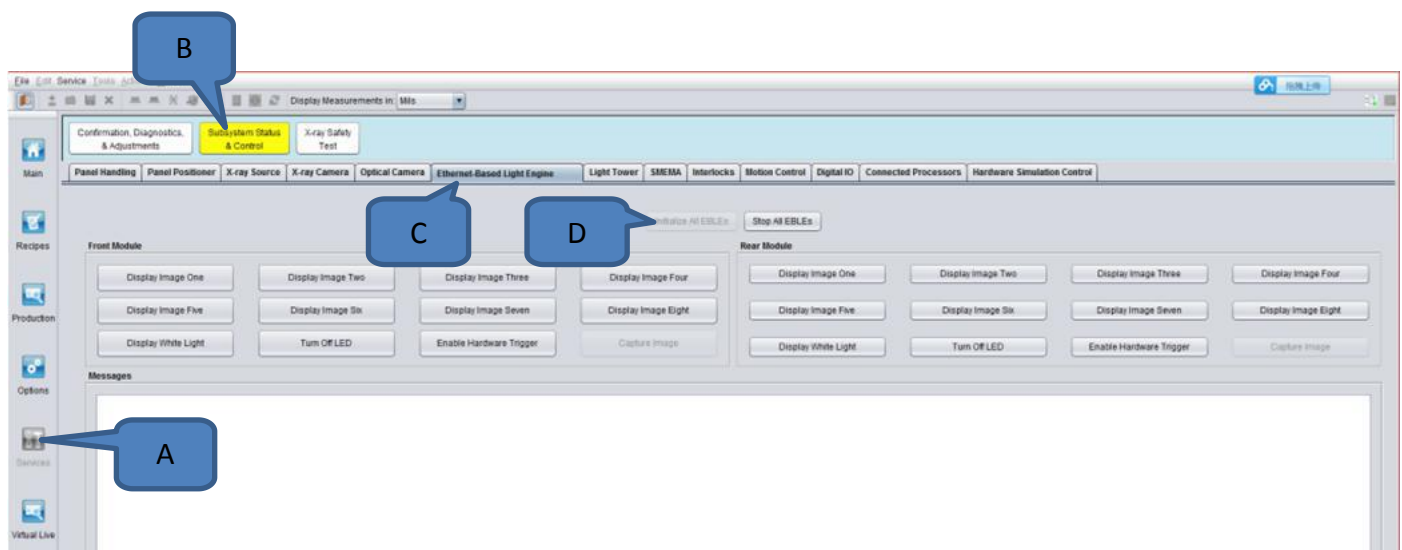


Figure 10 EBLE Interface (V810)