

	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☐	S2
V810 XXL	☒	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 Mar 2015	First Release	CHIN CHEE YAN
01	01 Dec 2015	Revise with add step	CHIN CHEE YAN
02	2 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

Master Controller (R710) Graphic Card R&R Procedure.....	4
Master Controller (R720) Graphic Card R&R Procedure.....	6

ViTrox	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

1. Turn off X-ray and completely shut down and power off machine.
2. Unscrew (2 x Button Head Cap Screw M4 x 12) and move AXI-IRP Main Controller Rack Top Cover (P/N, 4XARC-A053) slightly toward to machine top cabinet for easy access.



Figure 1 Top Cover

3. Gently slide out Master Controller from the system by removing the 2 Button Head Cap Screw M5x12 as shown.



Figure 2 Master controller

4. Label marking & disconnect all cables at back panel and completely remove the Master Controller from system as Figure 3.



Figure 3 Cable disconnect

ViTrox	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

Master Controller (R710) Graphic Card R&R Procedure

- Unlock the top access panel lock, then open and remove the R710 Top Access Panel.

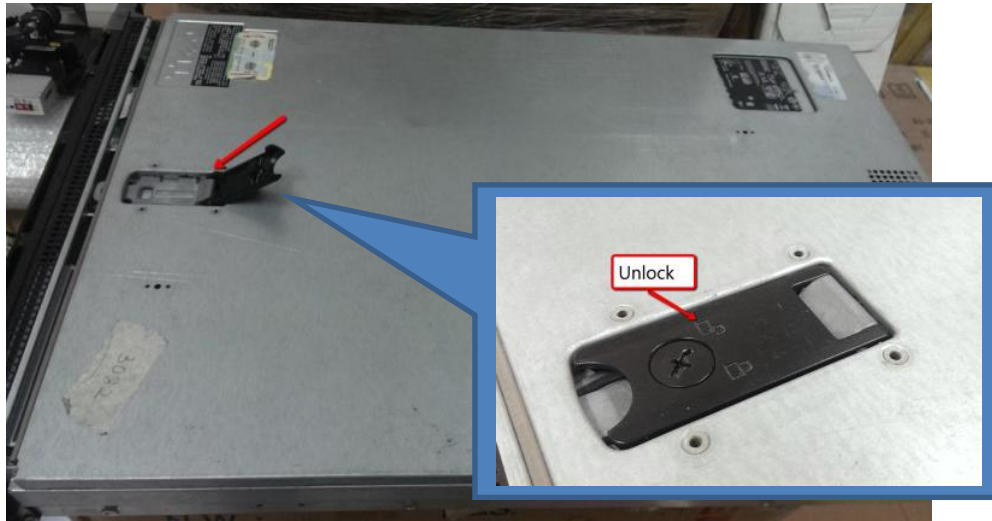


Figure 4 Top access panel lock

- Remove the old graphic card from Riser Card 2 as shown.

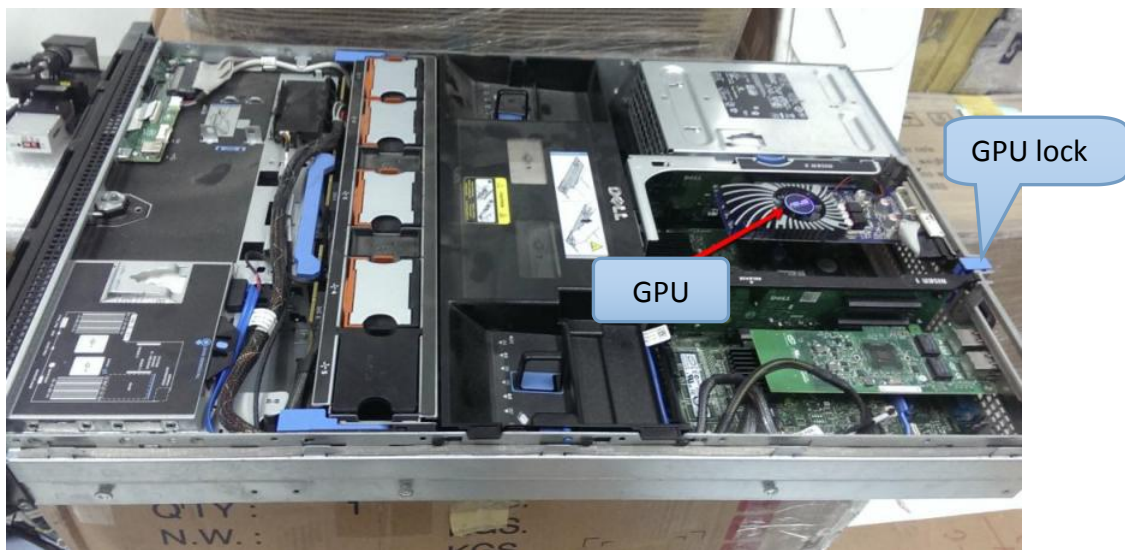


Figure 5 GPU lock

- Pull the GPU card lock and remove the locker, remove the graphic card from Riser Card as shown.

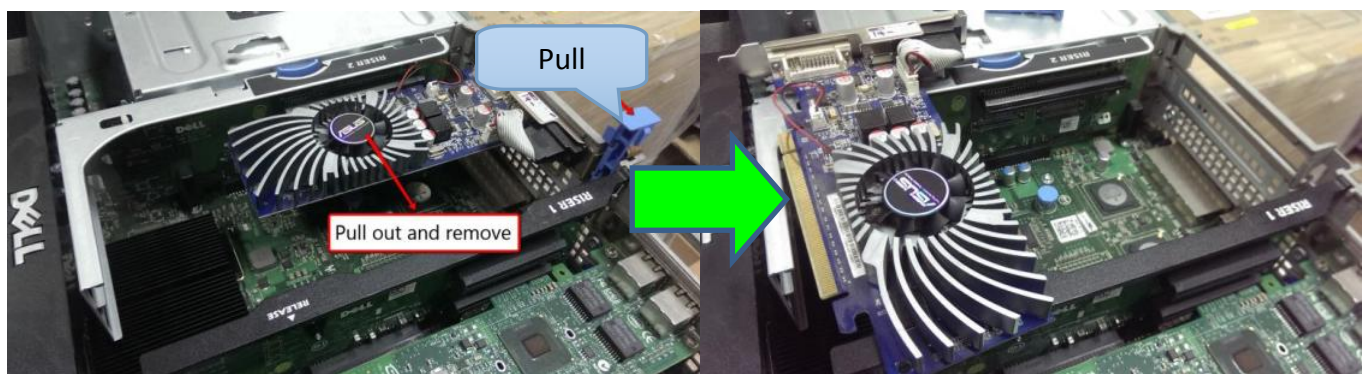


Figure 6 Graphic card removal

	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

8. Prepare a new part Graphic card Gigabyte GT610 64BIT 2GB DDR3 (P/N, 2120-0003) as shown.



Figure 7 Graphic card removal

9. Assembly the new graphic card to the riser card. Caution on GPU slot orientation and ensure the plate is slot in properly as shown.

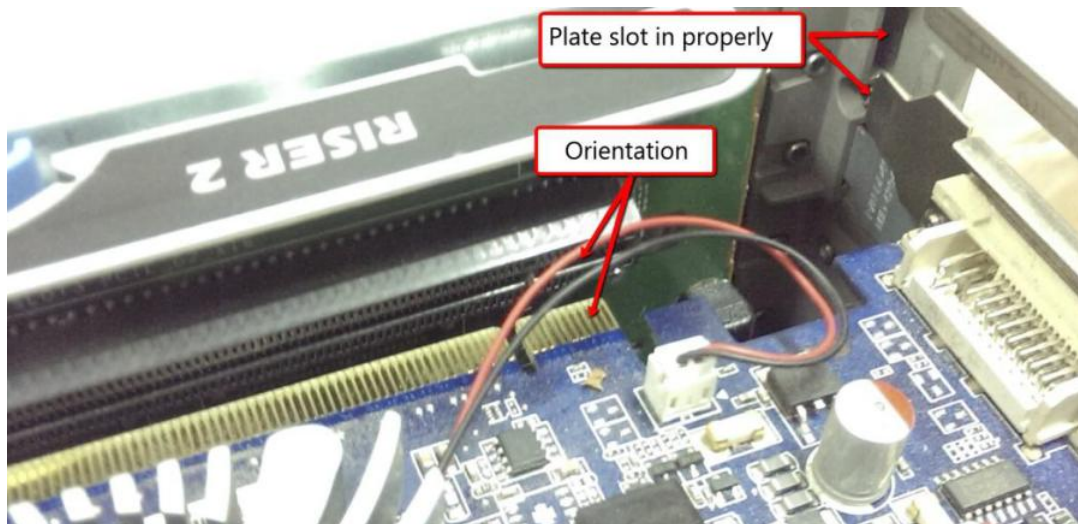


Figure 8 Graphic card assembly

10. Once complete, close the GPU lock and close the R710 top access cover. Assembly master controller back to server rack and connect all the cables back to origin position. Below is the manufacture standard cable layout just for reference. Always connect cable with refer to snap picture during step 4. Once done, assembly 4XARC-A053 back to origin position and tighten all the screws.

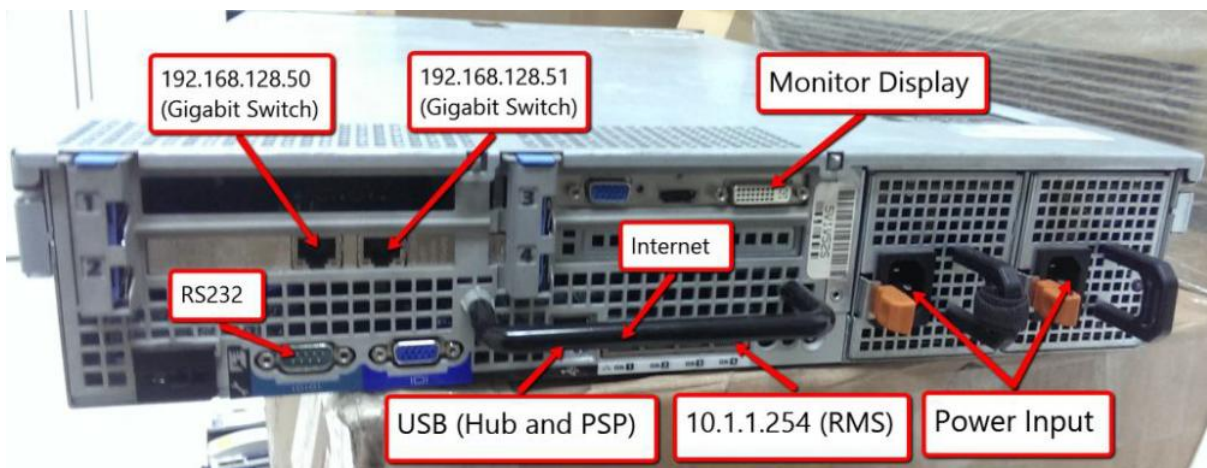


Figure 9 Cable connection

ViTrox	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

14. Assembly the new graphic card to the Riser card. Caution on the GPU slot orientation and ensure the plate is slot in properly as shown.



Figure 13 Graphic card assembly

15. Once complete, close the riser card locker and close the R720 top access cover. Assembly master controller back to server rack and connect all the cables back to origin position. Below is the manufacture standard cable layout for reference only. Always connect cables with refer to snapped picture during step 4. Once done, assembly the server rack left top access cover back to origin and tighten all the screws.

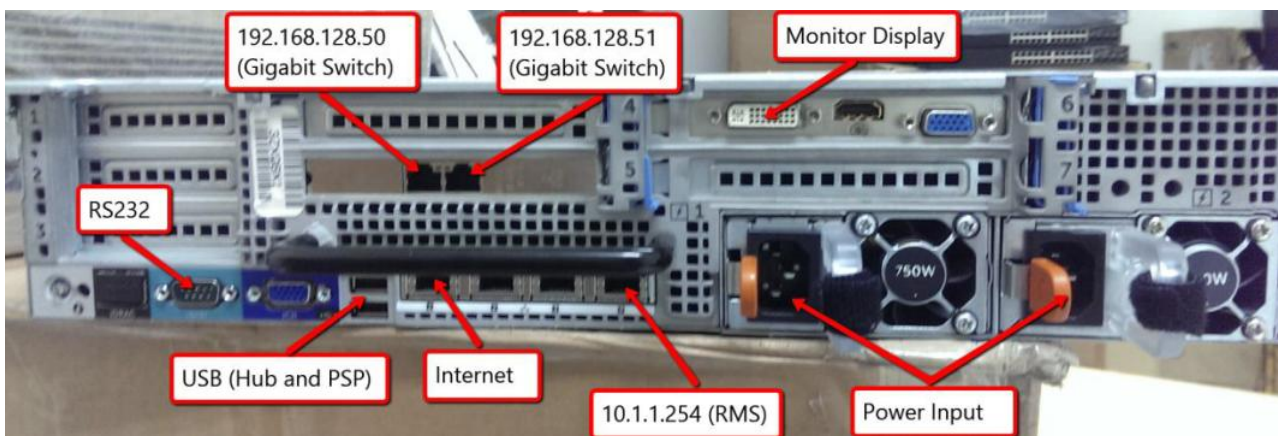


Figure 14 cable connection

16. Power up the machine and log in into Window OS with User Name, Administrator, Password, Please!
17. Download and paste the Nvidia driver to desktop. Double click to install the driver.
18. Click Ok to continues and wait until progress bar complete.

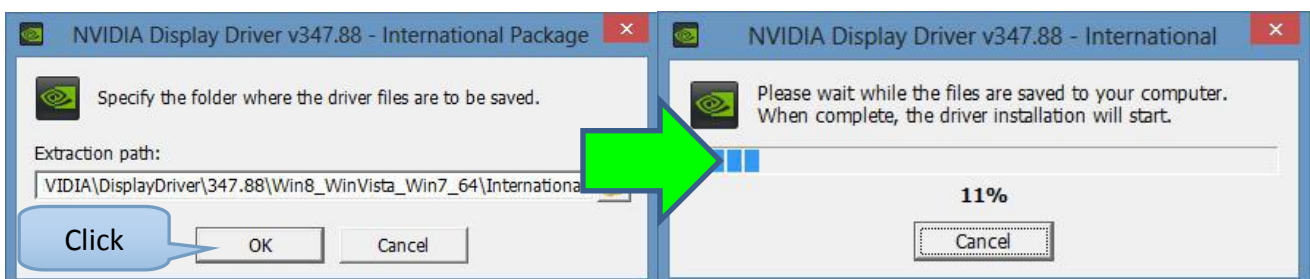


Figure 15 Nvidia Driver

	Work Instruction	Doc. Revision	02
	AXI V810 R710 & R720 Graphic Card Removal & Replacement Procedure	Effective Date	2 Oct 2016

Driver will auto check for system compatibility. Click “Agree and Continues” to continues install driver



Figure 16 Nvidia Driver

19. Select “Express” mode and click “Next” to continue install driver



Figure 17 Nvidia Driver

20. Wait until the installation is complete and it's will take several times



Figure 18 Nvidia Driver

21. Once installation complete, reboot window and continues operate machine as usual