

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

S2EX Filter Sensor Amplifier Removal.....	3
S2EX Filter Sensor Amplifier Replacement.....	7

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

S2EX Filter Sensor Amplifier Removal

1. Close SSCA
2. Loosen 2 x Screws & dismantle particular Filter Height Sensor Module Metal Cover as below Figure 1

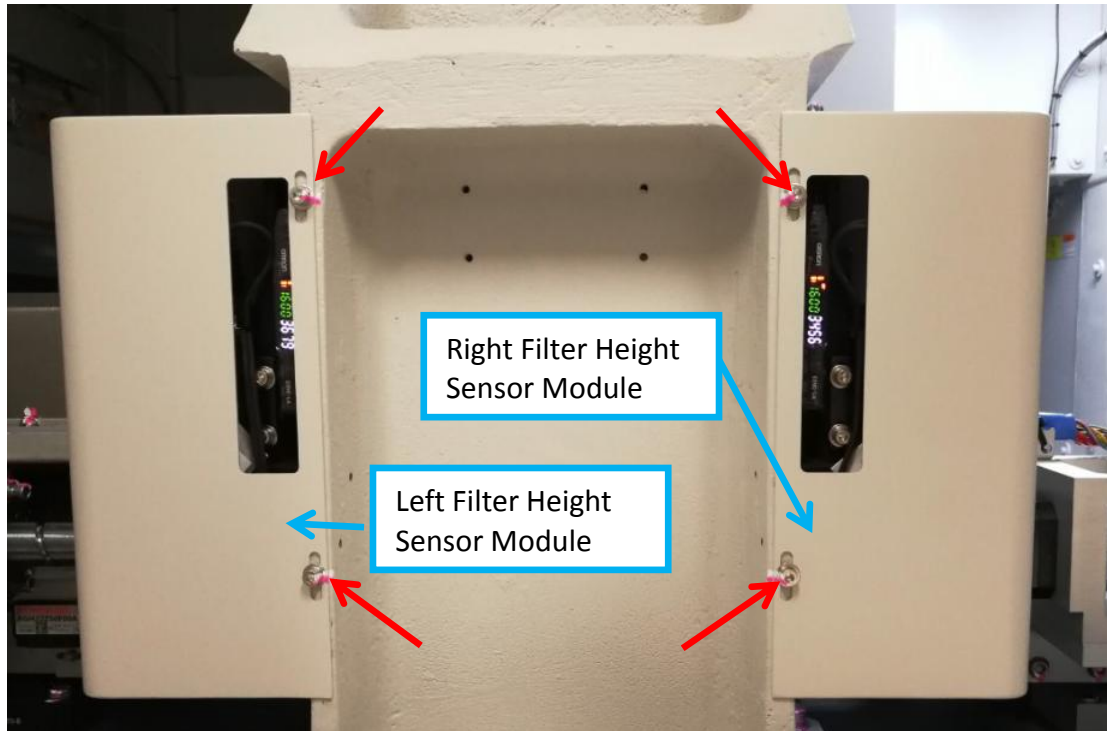


Figure 1

3. Access from rear side & gently use Allen Key to press on particular Filter Height Sensor Amplifier holder as Figure 2

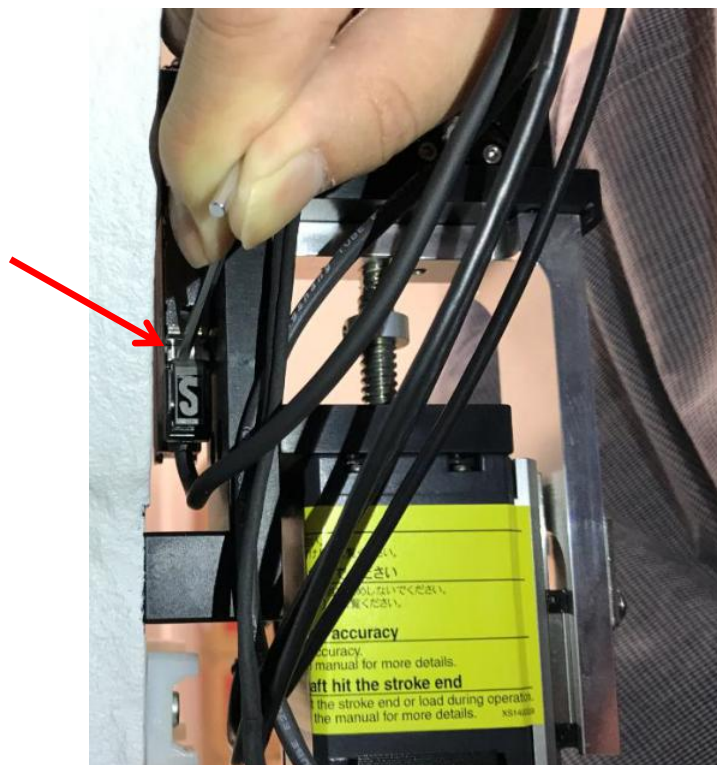


Figure 2

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

4. Gently remove Filter Height Sensor Amplifier as Figure 3



Figure 3

5. Open up Filter Height Sensor Cover as below Figure 4

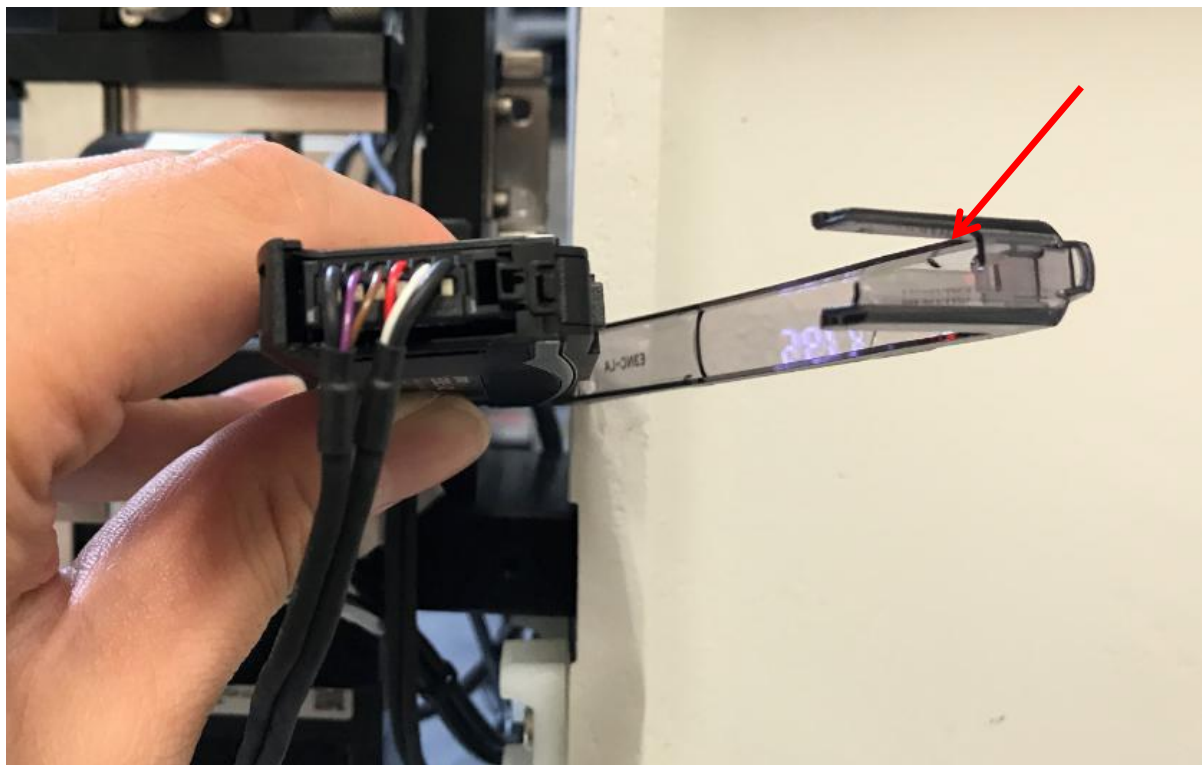


Figure 4

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

6. Gently press the knob and remove Filter Height Sensor End Connector from Filter Height Sensor Amplifier as Figure 5

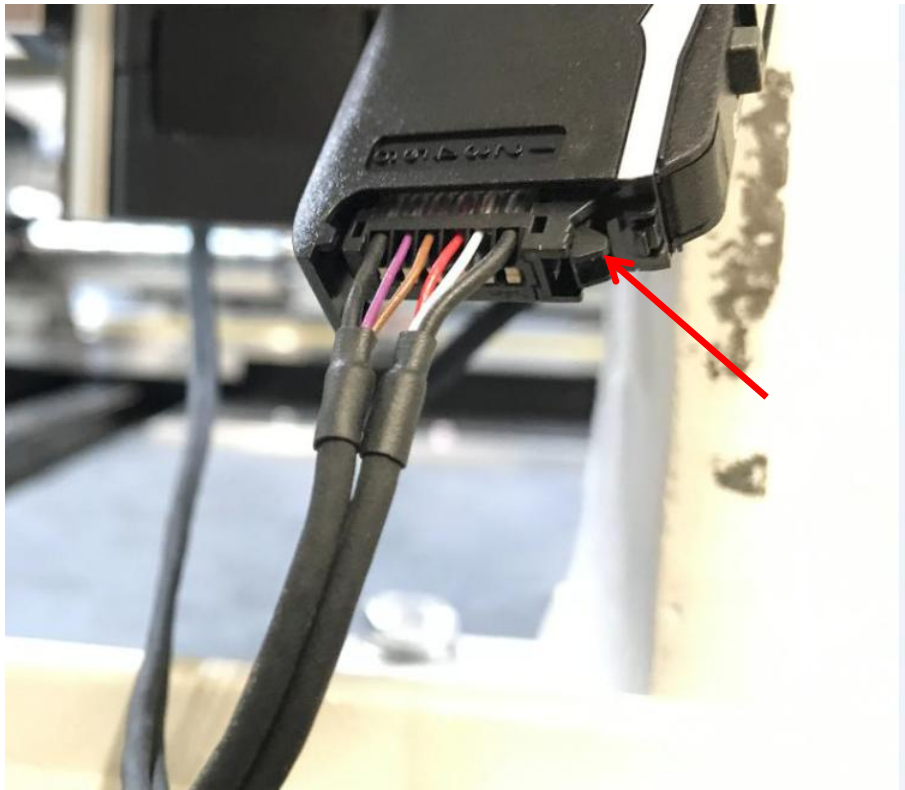


Figure 5

7. Remove cable tie along particular Filter Sensor Amplifier Sensor Cable as below Figure 6.

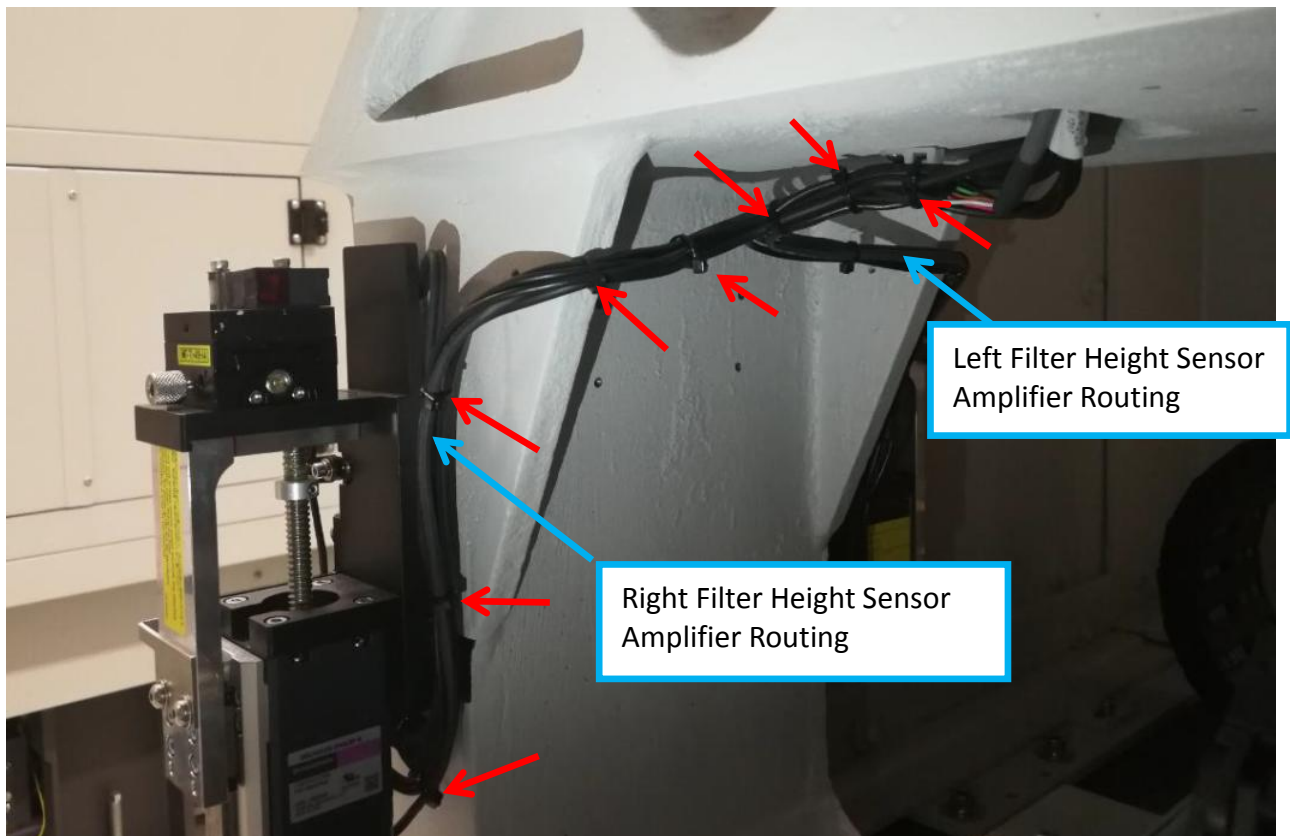


Figure 6

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

8. Remove particular Filter Height Sensor Amplifier Connector by refer to cable labeling. May refer to below Figure 7.
 - a) Right Filter Sensor Amplifier Connector - Right Outer Barrier Filter Sensor
 - b) Left Filter Sensor Amplifier Connector - Left Outer Barrier Filter Sensor

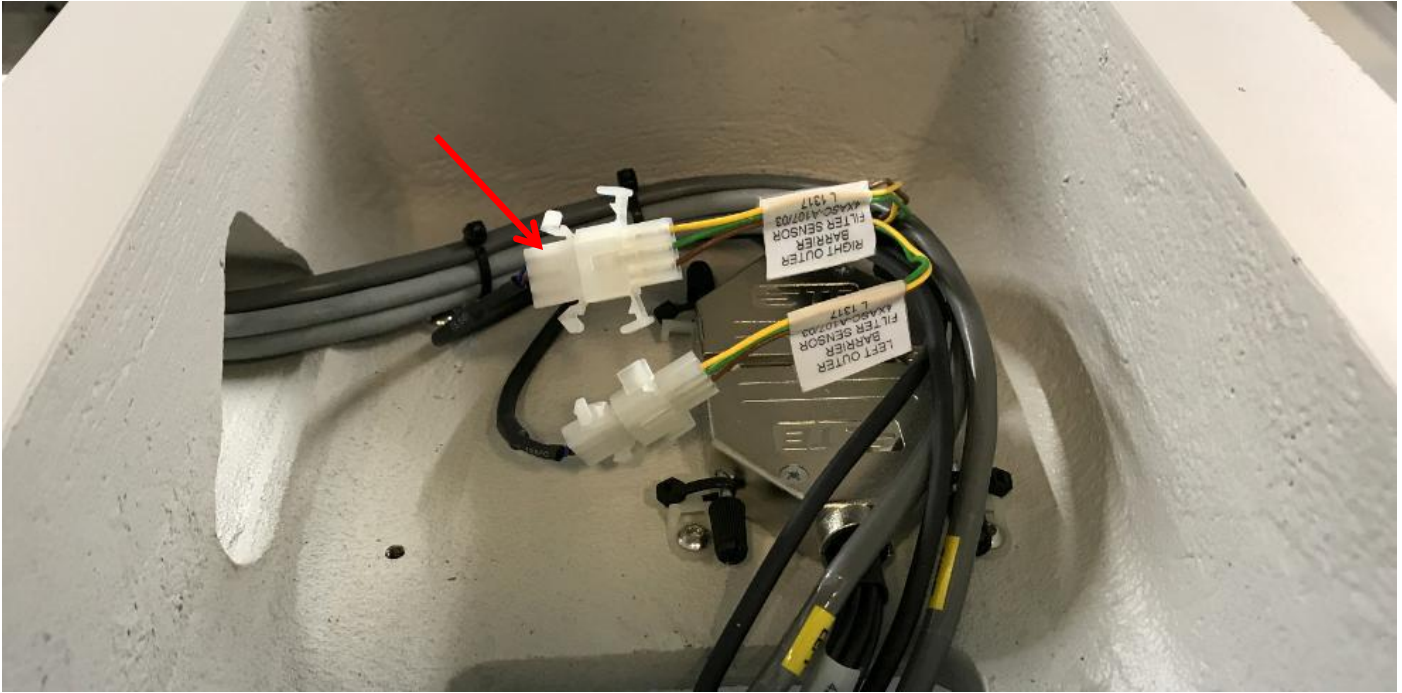


Figure 7 (Reference Picture Only)

9. Remove entire Filter Height Sensor Amplifier

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

S2EX Filter Sensor Amplifier Replacement

10. Prepare 1 x S2 Filter Height Sensor Amplifier by refer to below PN :

- a) Left Filter Height Sensor Amplifier - 4JASC-A219
- b) Right Filter Height Sensor Amplifier - 4JASC-A220

11. Route the Filter Sensor Amplifier from rear side of Filter Height Sensor Module as below Figure 8

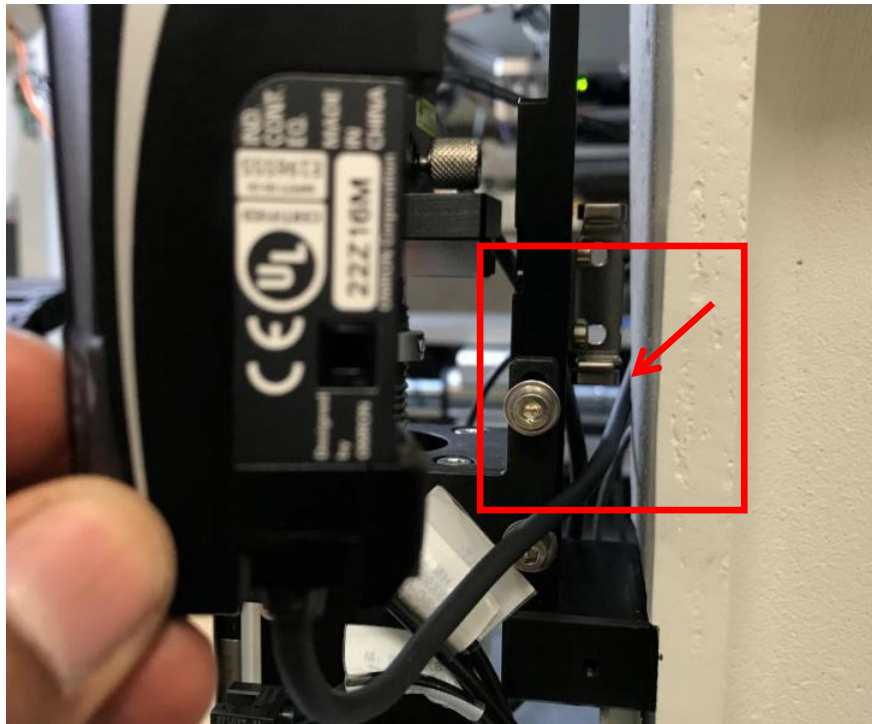


Figure 8

12. Open up Filter Height Sensor Cover as below Figure 9

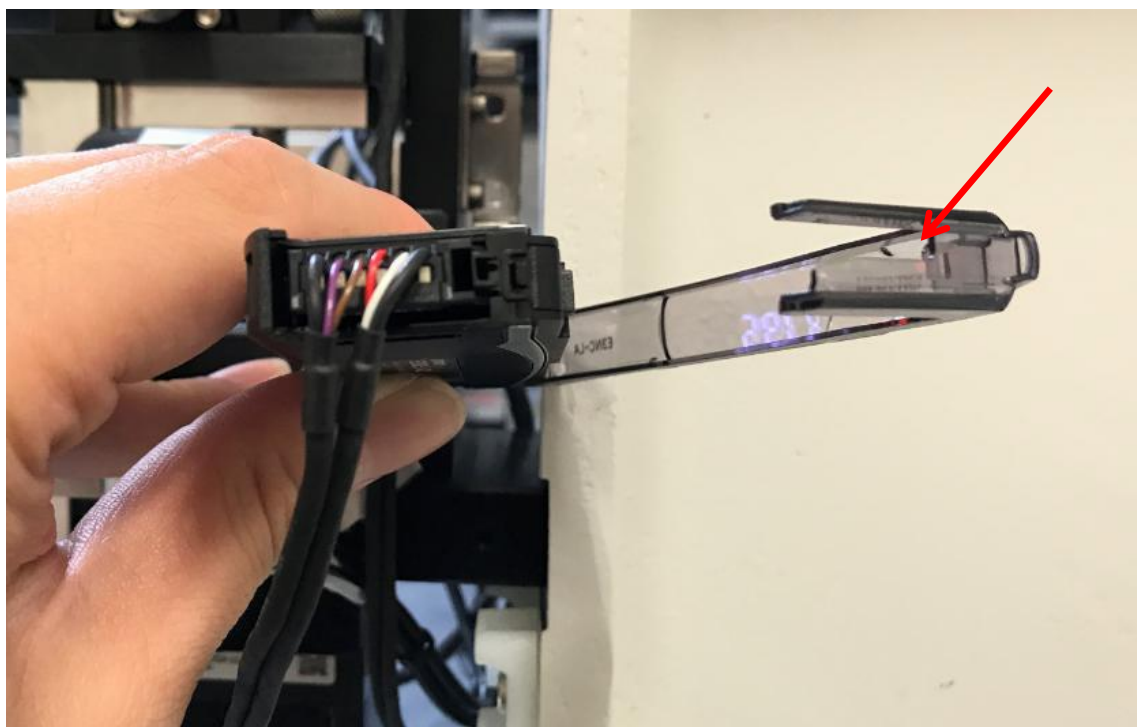


Figure 9

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

13. Gently press the knob and plug Filter Height Sensor End Connector to Filter Height Sensor Amplifier as Figure 10

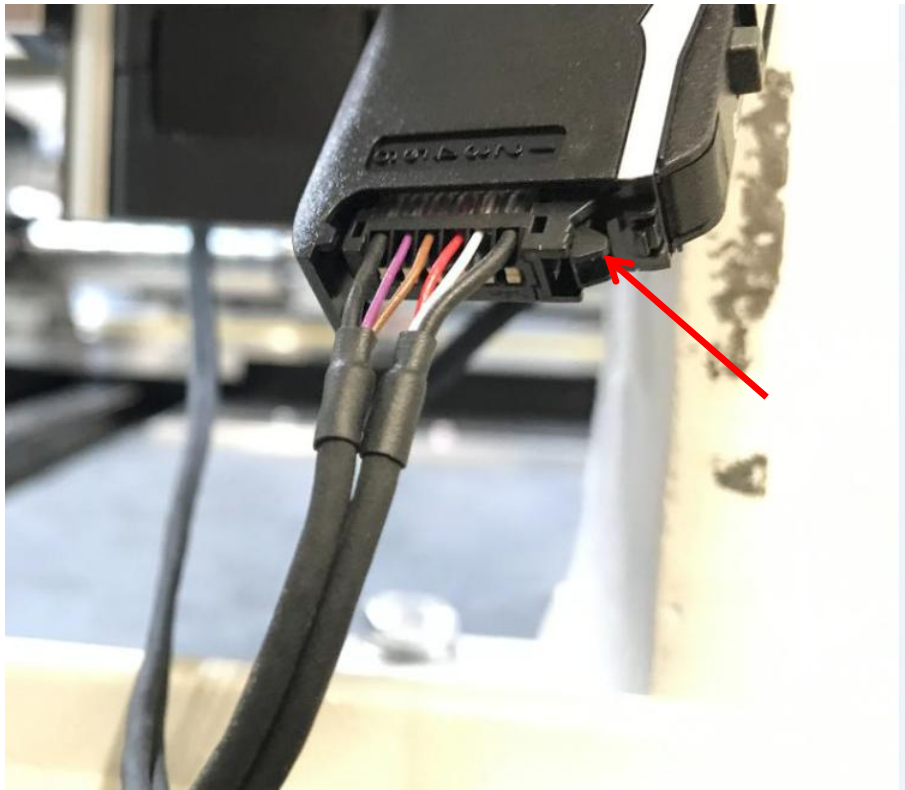


Figure 10

14. Gently slot Filter Height Sensor Amplifier into Holder as below Figure 11

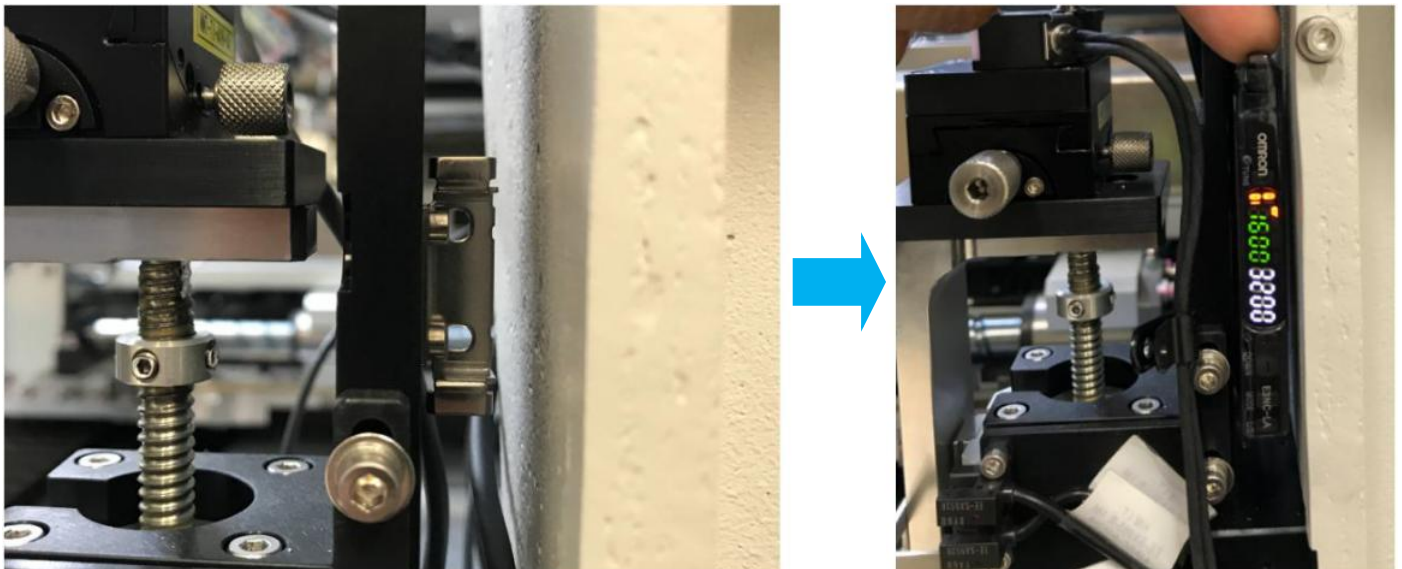


Figure 11

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

15. Route the particular Filter Sensor Amplifier Cable through cast iron beam centre opening. Apply Cable Tie along the routing .May refer to below Figure 12

Remarks : Left & Right Filter Sensor Amplifier Routing Method are identical and would differentiate by individual position only

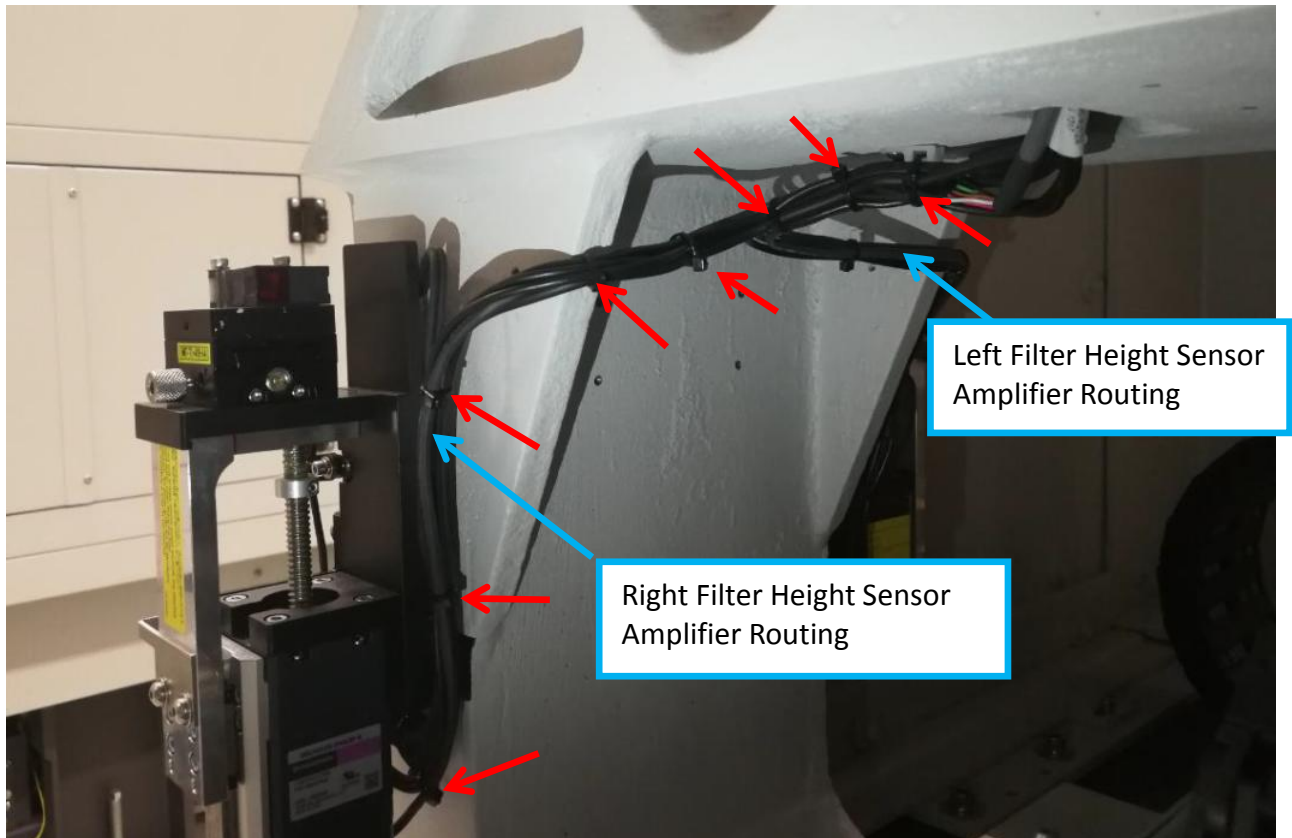


Figure 12

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	2 Oct 2016

16. Connect particular Filter Height Sensor Amplifier End Connector by refer to cable labeling. May refer to below Figure 13.

- a) Right Filter Sensor Amplifier Connector - Right Outer Barrier Filter Sensor
- b) Left Filter Sensor Amplifier Connector - Left Outer Barrier Filter Sensor



Figure 13 (Reference Picture Only)

- 17. Perform tuning by refer to “ AXI V810 S2EX Filter Height Amplifier Tuning Procedure”
- 18. Perform height verification by refer to “ AXI V810 S2EX Filter Height Adjustment Procedure”
- 19. Assemble back Metal Cover