

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Filter Sensor Power Tune Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	22 July 2015	First Release	CHIN CHEE YAN
01	2 Oct 2016	Template update & Content update	ONG KEAN SHENG

	Work Instruction		Doc. Revision	01
	AXI V810 STD VM Filter Sensor Power Tune Procedure		Effective Date	2 Oct 2016

1. Go to Services → Subsystem Status and Control → Panel Handling → Change Display unit to Inches → Initialize → Home rail → Load panel.

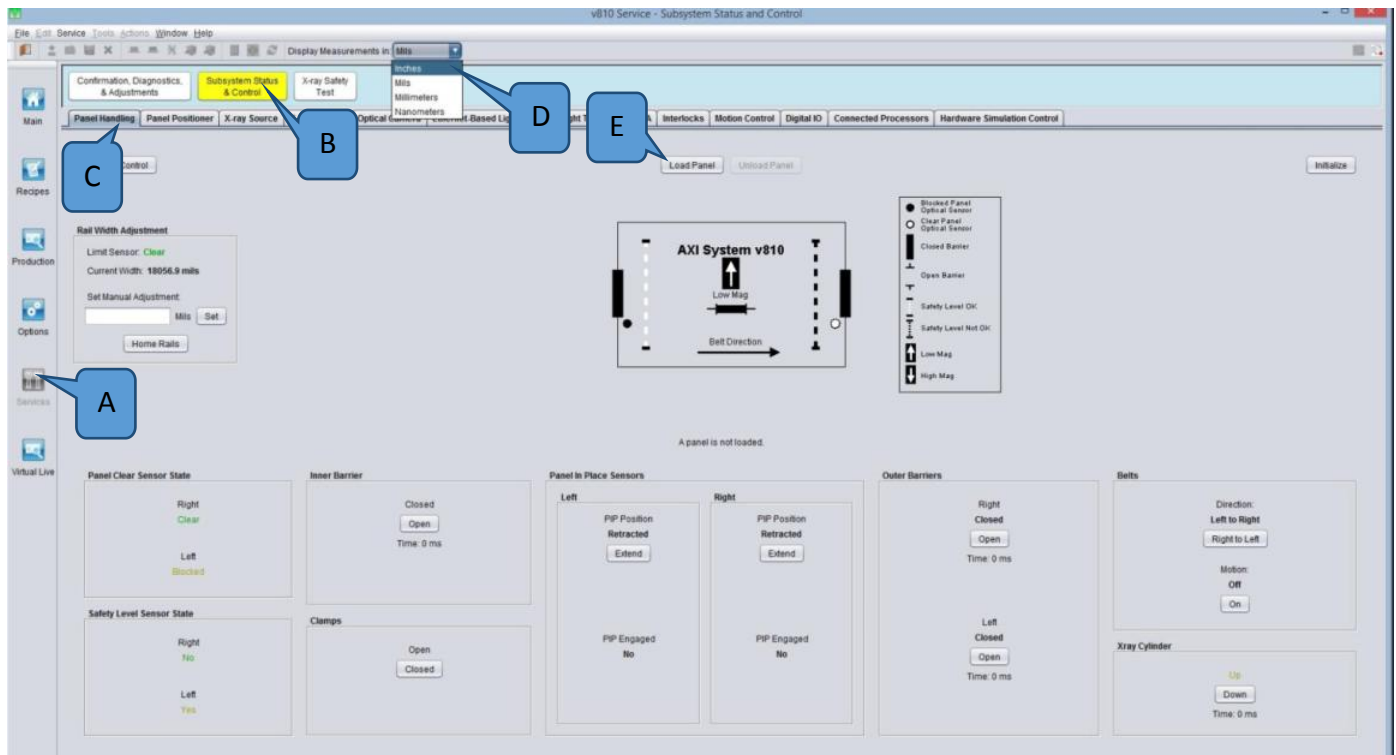


Figure 1 Panel handling

2. Key in "18" inch for both panel width and length and click "Enter" to continue (Figure 2).

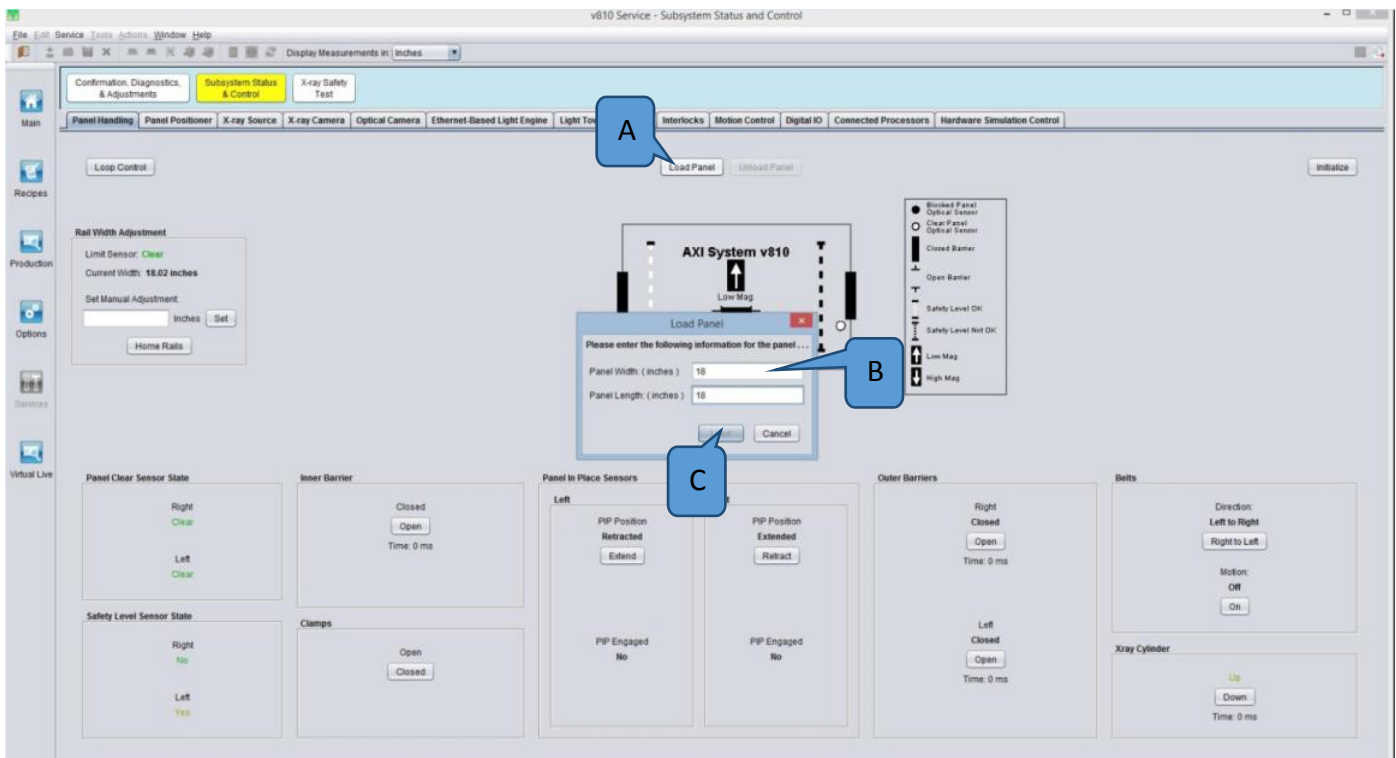


Figure 2 Panel Handling

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Filter Sensor Power Tune Procedure	Effective Date	2 Oct 2016

3. Click “Yes” to continue.



Figure 3 Panel handling

4. Once outer barrier open, click “Cancel”.



Figure 4 Panel handling

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Filter Sensor Power Tune Procedure	Effective Date	2 Oct 2016

- Turn off X-ray and open front access door. Stage will eventually stop at “Loading Position”. Without move the stage position & check filter sensor beam which should point at middle of reflector as Figure 5.

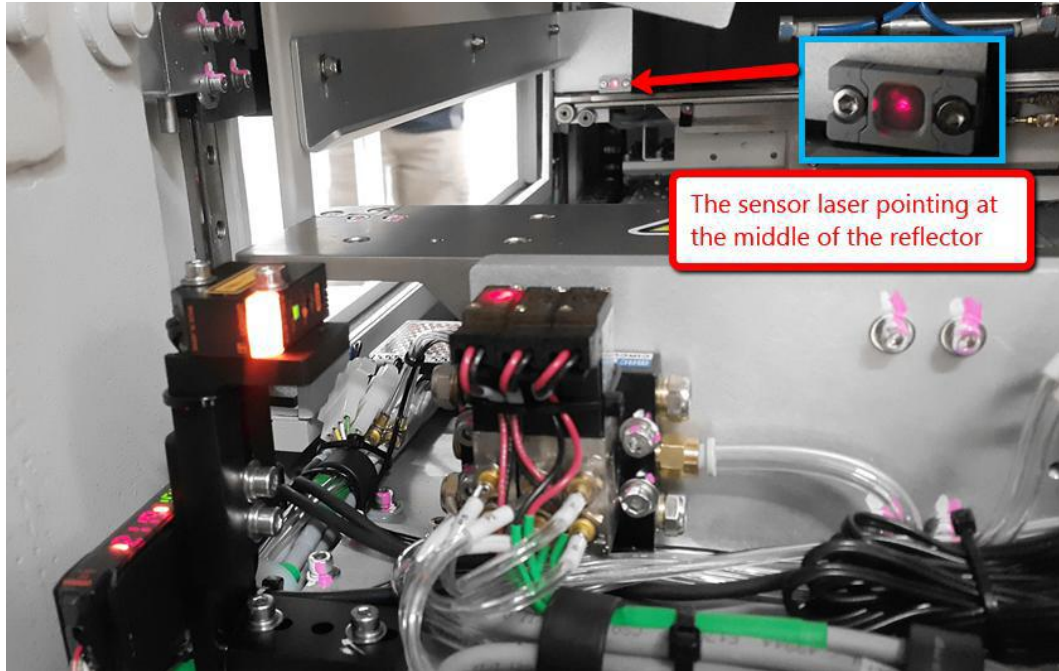


Figure 5 Sensor beam

- Open filter sensor amplifier top cover, press Press “Mode” button for 5 sec to power tune filter sensor intensity as figure 4. A progress bar will auto run while sensor been adjusted.

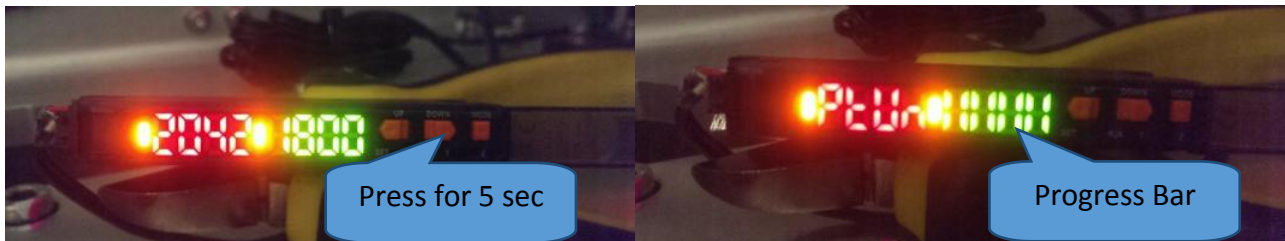


Figure 6 Filter sensor amplifier

- Once complete, the Amplifier reading should be approximately “2000”.



Figure 7 Filter sensor amplifier

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Filter Sensor Power Tune Procedure	Effective Date	2 Oct 2016

8. Once done, close the front door, Go to Option → Production Option → General → Flow Direction, change to Right to Left.

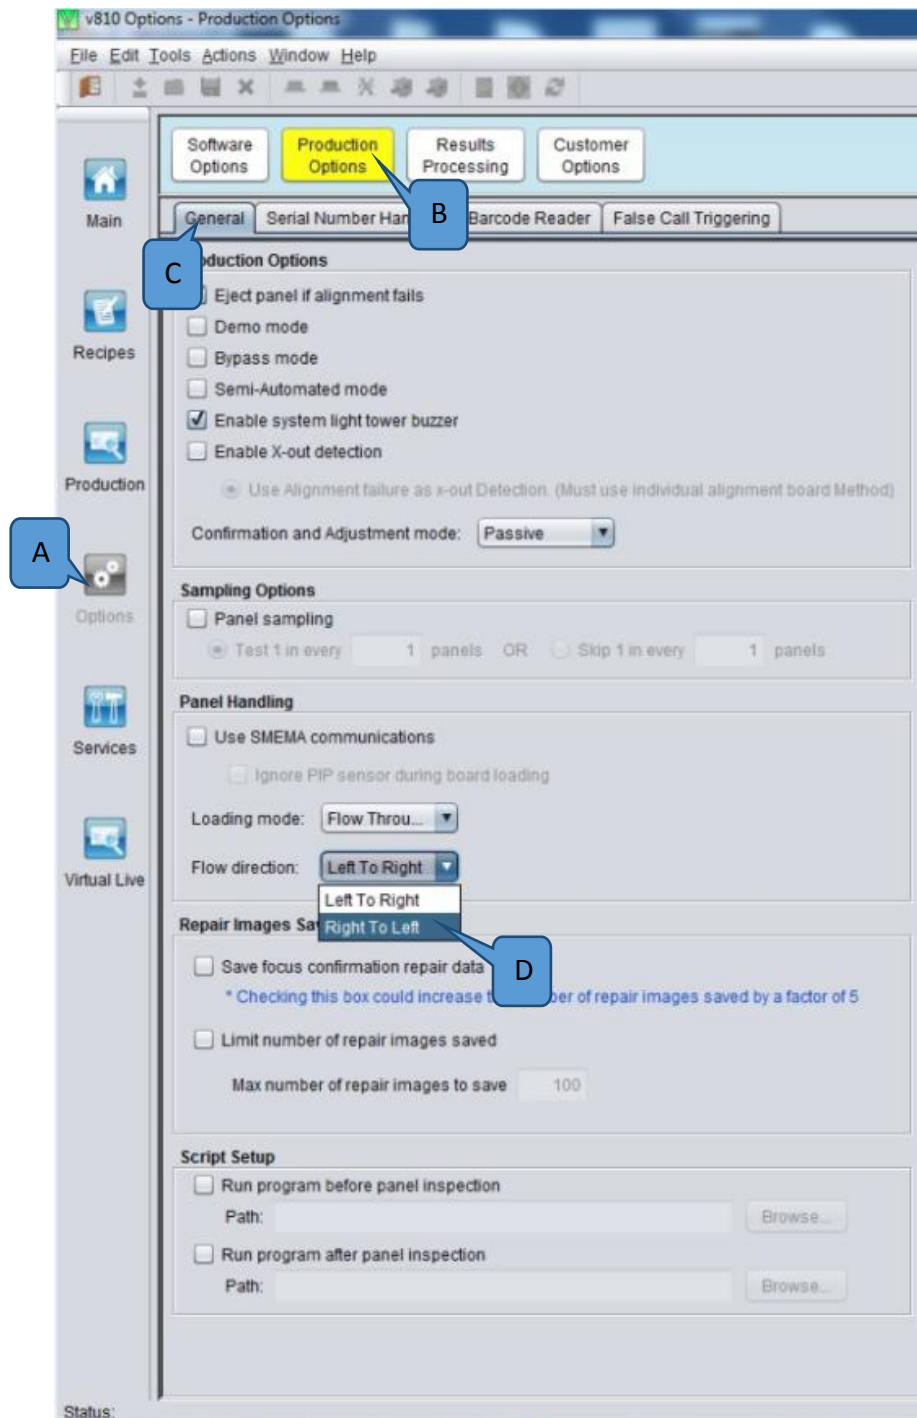


Figure 8 Production option

9. Repeat step 1 to 7 to power tune Right Filter Sensor intensity.