

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 June 2017	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

Content

Removal Procedure.....	3
Replacement Procedure.....	6
Filter Height Sensor Amplifier Configuration.....	8

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

Removal Procedure.

1. Unload board from machine if any.
2. Go to X ray source tab and toggle “Turn off X-Ray” and Power Off at Operator Console Panel

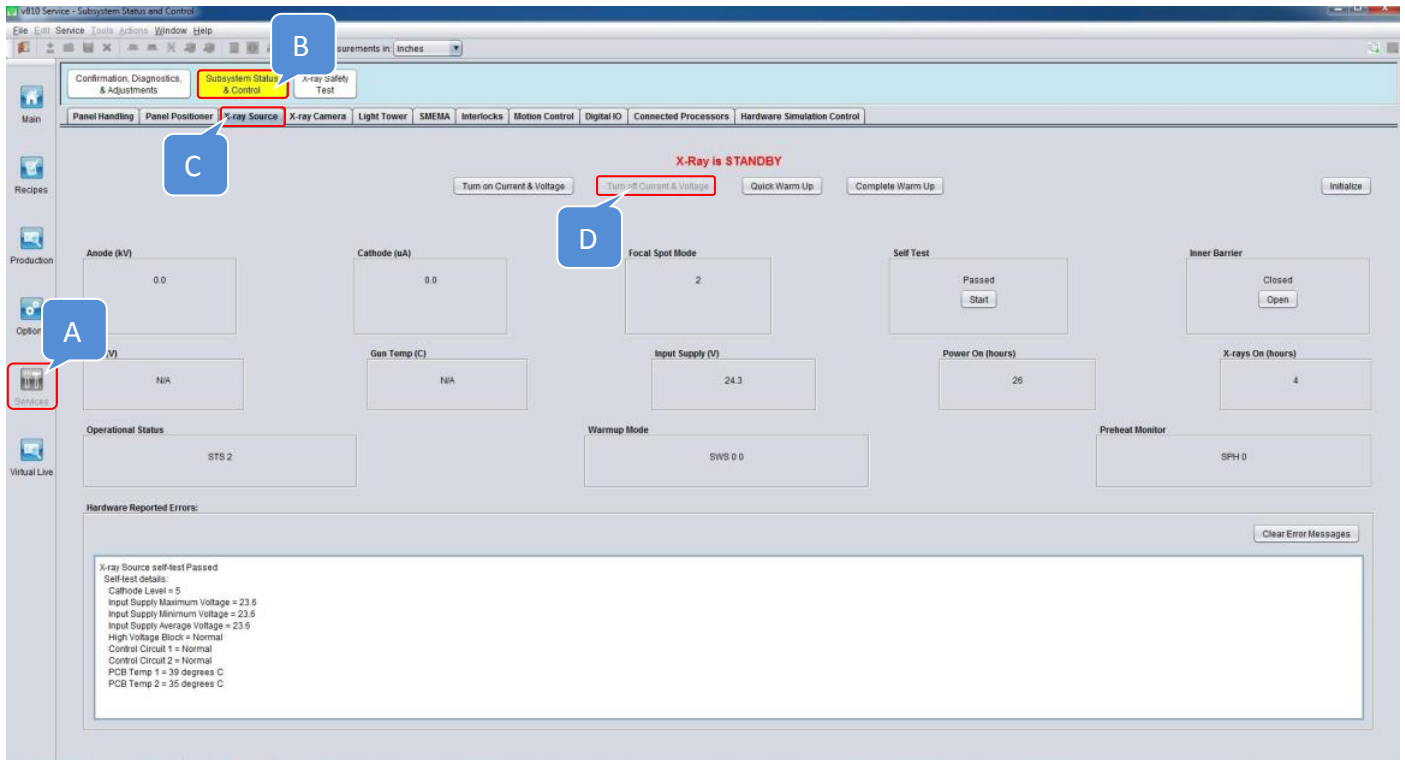


Figure 1 X ray Source Shutdown

3. Unscrew as shown and remove Filter Sensor Cover (P/N, 4LASS-270)



Figure 2 Filter Height Sensor Cover Removal

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

4. Open Sensor Amplifier Top Cover, unlock and disconnect Sensor Head End Connector as below Figure 3

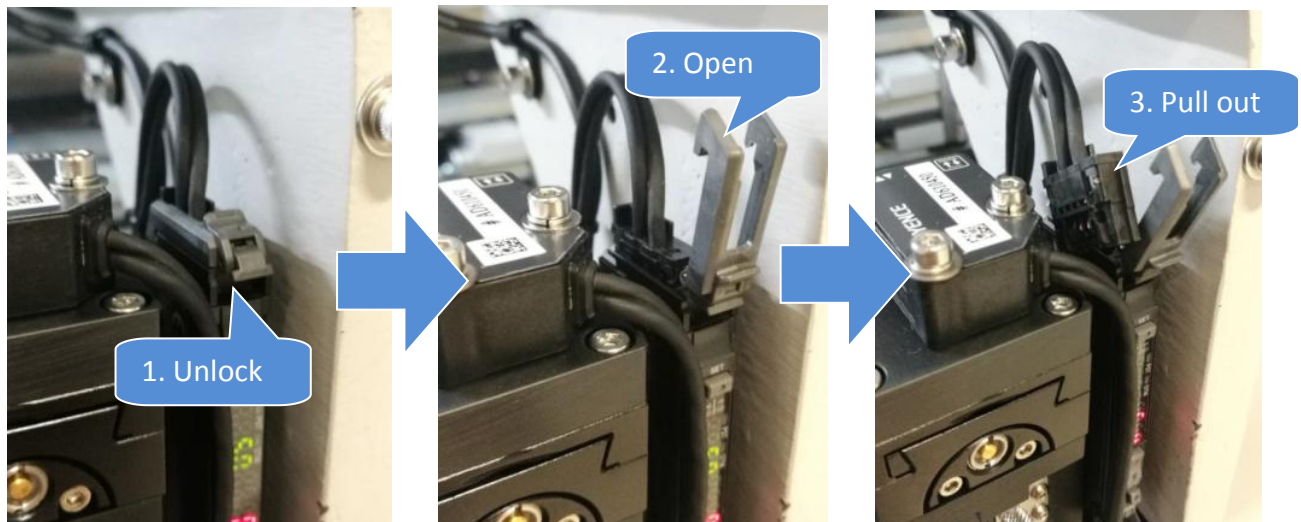


Figure 3 Sensor Head End Connector Removal

5. Close Amplifier Cover

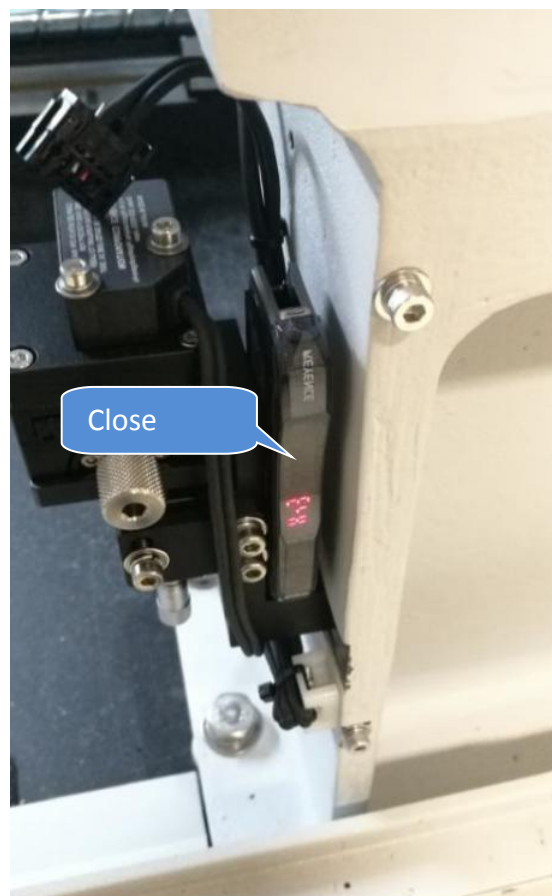


Figure 4 Closing Sensor Amplifier Cover

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

6. Lift and unlock the amplifier from holder. Gently remove as below Figure 5

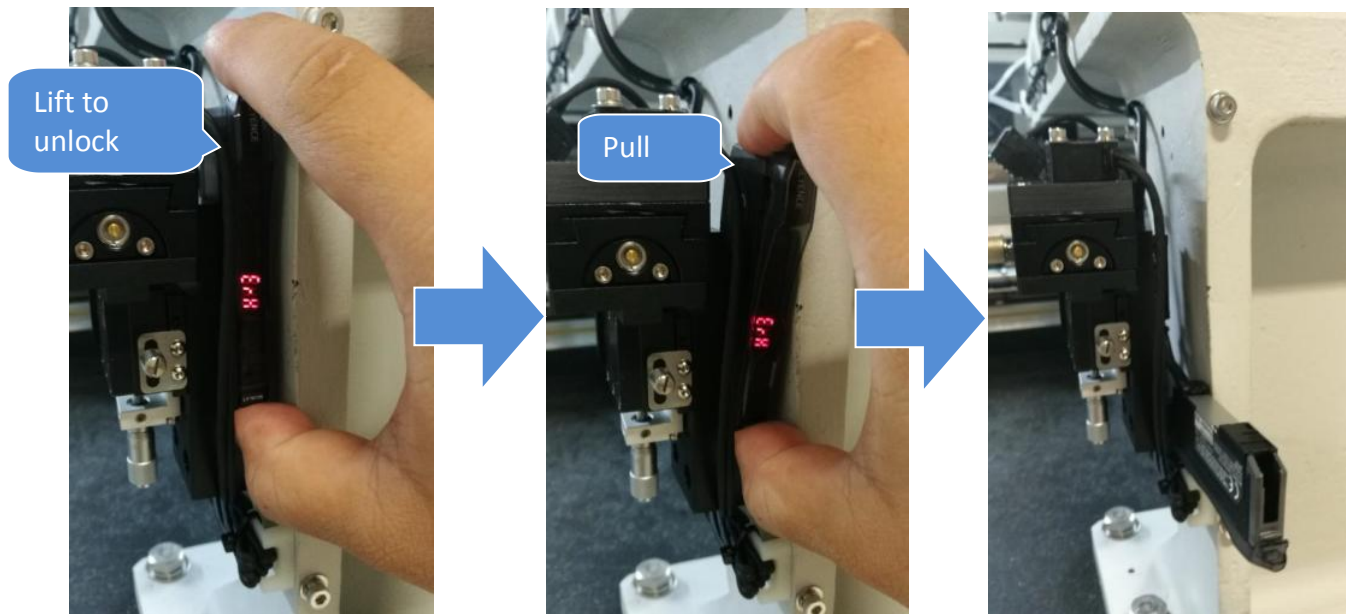


Figure 5 Sensor Amplifier Removal

7. Disconnect Left Filter Height Sensor Cable Connector as shown by refer to individual labeling



Figure 6 Sensor Amplifier Connector Removal

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

8. Unscrew and remove cable as shown. Remove necessary cable tie and completely remove amplifier from system.

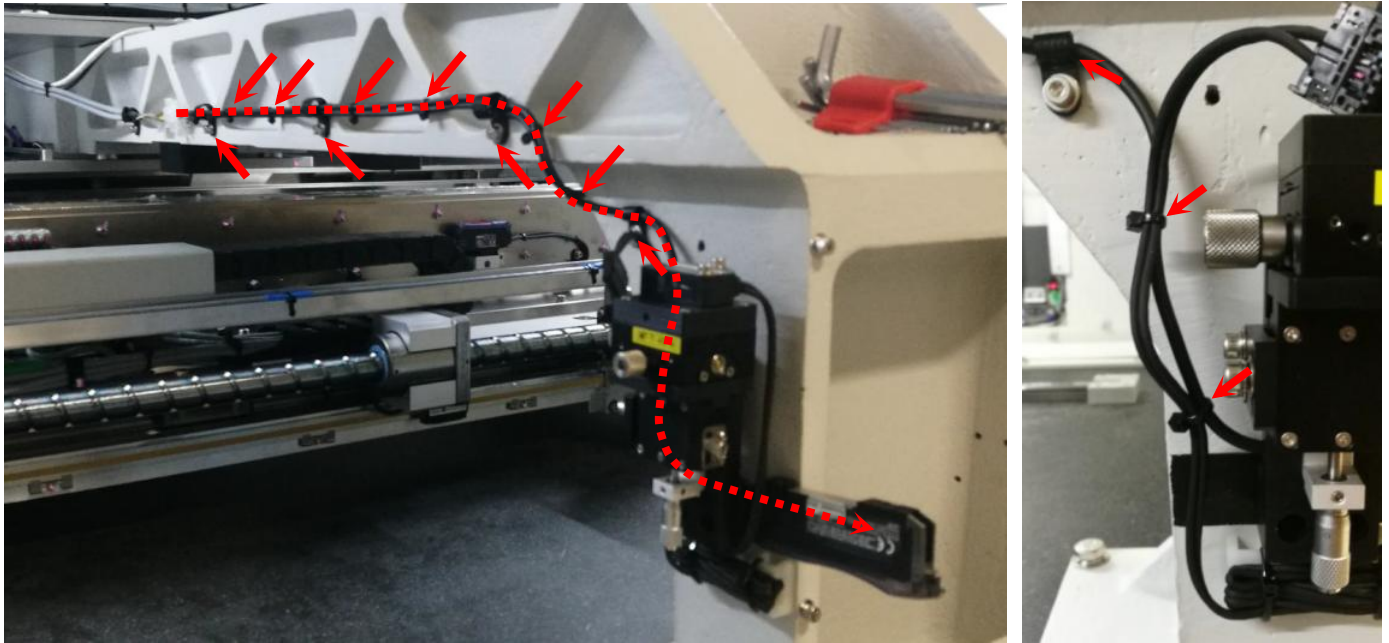


Figure 7 Sensor Amplifier Removal

Replacement Procedure

9. Prepare new part, VM sensor amplifier kit (P/N, 4XASP-A112) as shown.



Figure 8 VM Sensor Amplifier Kit

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

10. Route amplifier connector through the opening .Assemble new VM Sensor Amplifier Kit by refer to below Figure 9

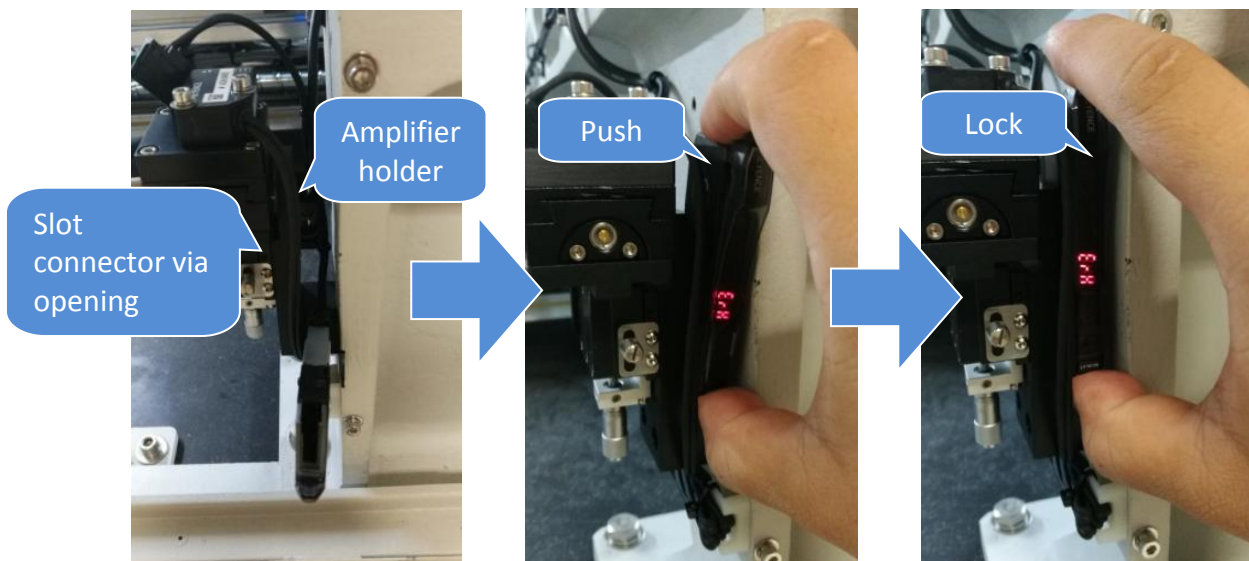


Figure 9 Sensor Amplifier Assembly

11. Route the cable as shown & secure with cable ties.

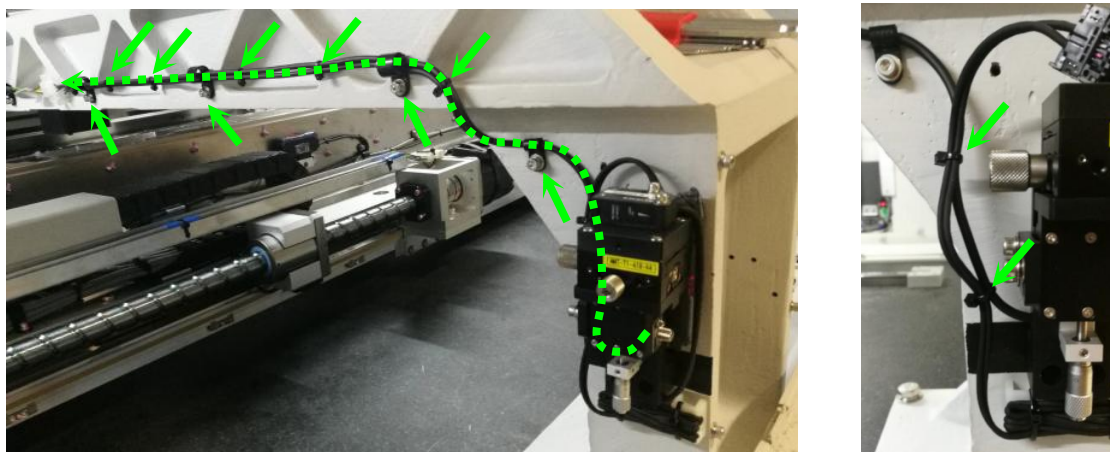


Figure 10 Sensor Amplifier Cable Routing

12. By refer to individual labeling & connect the Left Filter Height Sensor Connector accordingly



Figure 11 Sensor Amplifier Connector

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

13. Connect Sensor Head Connector to Amplifier with by refer to below Figure 12

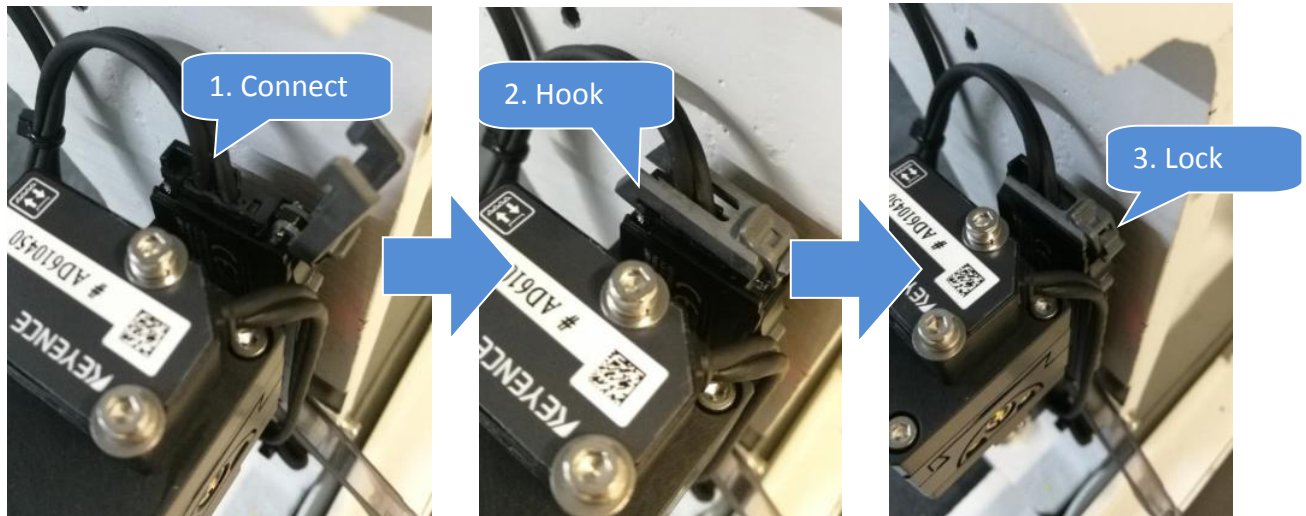


Figure 12 Sensor Head Connector Connect

14. Power Cycle SSCA to refresh Sensor Amplifier Threshold Reading



Figure 13 SSCA Power Cycle

Filter Height Sensor Amplifier Configuration

15. Functional block diagram is illustrated as below Figure 14

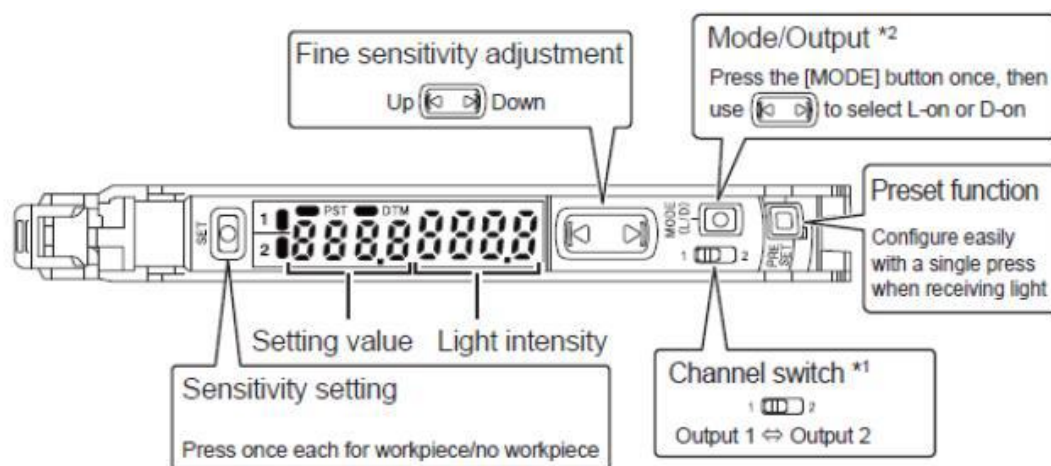


Figure 14 Functional Block Diagram

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

16. Open amplifier top cover, ensure the selected channel is Channel 1. Press the “Mode” button and hold for more than 3 seconds to enter the mode setting as Figure 20

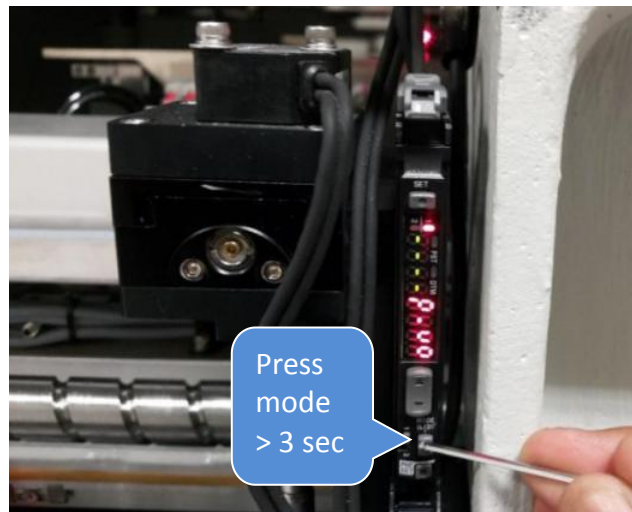


Figure 15 Keyence Amplifier Mode Setting

17. Press “Up” or “Down” until the “SuPr” mode is selected as shown in the Figure 16.

Remarks: Maximum intensity can reach more than 1100 when beam spot focus at reflector. If intensity reading is less than 1100, clean the reflector surface as shown in Figure 17.



Figure 16 SuPr Mode

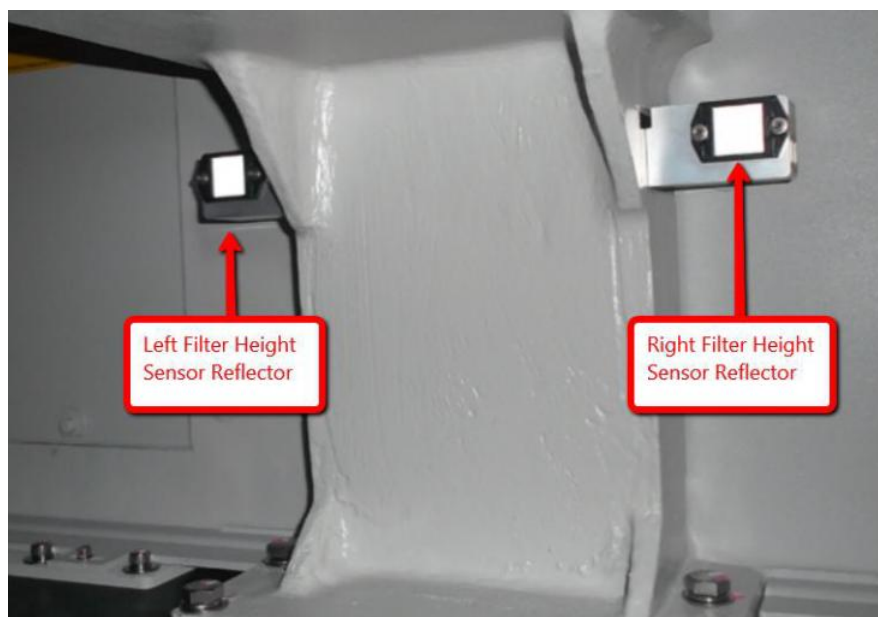


Figure 17 Filter Height Sensor Reflector

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

18. Press the “Mode” button followed by “Up” or “Down” until the “Std” option is selected as shown in the Figure 18.



Figure 18 "Std" Mode

19. Press the “Mode” button followed by “Up” or “Down” button to select the “Func” as shown in the Figure 19



Figure 19 "Func" Mode

20. Press the “Mode” button followed by “Up” or “Down” and select the “on-d” option as shown in the Figure 20



Figure 20 "on-d" mode

21. Press the “Mode” button followed by “Up” or “Down” button until value reach 5000 as shown in the Figure 21



Figure 21 Delay timer

22. Press the “Mode” button followed by “Up” or “Down” button to select the “dEtc” mode as shown in the Figure 22. Press “mode” button again followed by “Up” or “Down” button to select the “Std” option as shown in the Figure 22.



Figure 22 Std mode

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Amplifier Removal & Replacement Procedure	Effective Date	30 June 2017

23. Press the “Mode” button followed by “Up” or “Down” to select the “In OFF” mode as shown in the Figure 23.



Figure 23 In OFF mode

24. Press “mode” button again to exit the setting. Press “L/D” button followed by “Up” or “Down” button to select the “L-on” mode as shown in the Figure 24



Figure 24 L-on Setting

25. After few seconds, the amplifier will return to the main menu. Set the threshold for the sensor amplifier to 450 using “Up” or “Down” button as shown in the Figure 25



Figure 25 Threshold setting

26. Assemble Filter Height Sensor Cover. Remove tools and close all access door.



Figure 26 Filter Height Sensor Cover Assembly

27. Perform Filter Height Adjustment by refer to “ AXI V810 XXL Filter Height Sensor Adjustment Procedure ”