

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Height Sensor Removal & Replacement Procedure	Effective Date	12 April 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	12 April 2017	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Height Sensor Removal & Replacement Procedure	Effective Date	12 April 2017

Content

Removal Procedure.....	3
Replacement Procedure.....	5

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Height Sensor Removal & Replacement Procedure	Effective Date	12 April 2017

Removal Procedure

1. Unload board from machine if any.
2. Go to X ray source tab and toggle “turn off X-Ray” and power off at Operator Console Panel

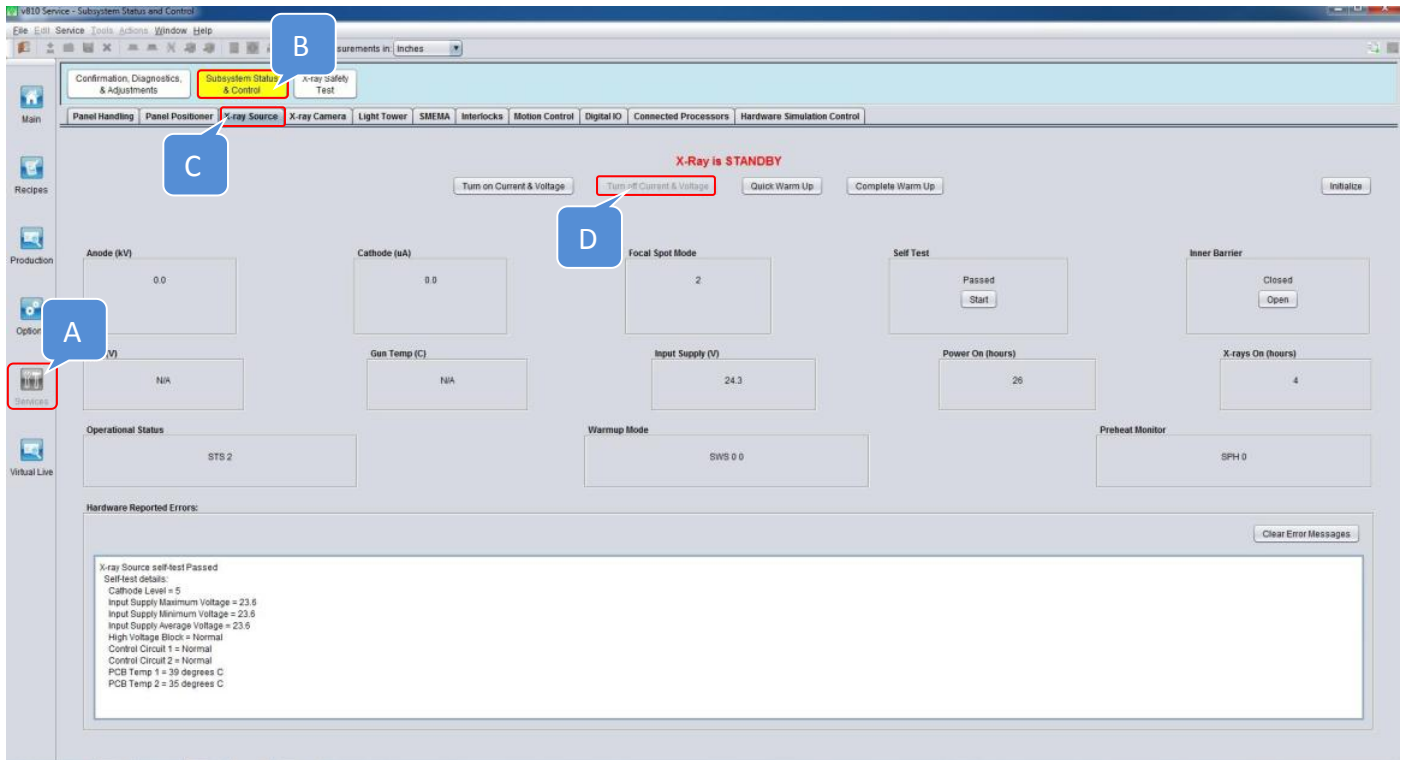


Figure 1 X-Ray Source Shut Down

3. Open front access door. Gently pull stage to front access door.
4. Unscrew as shown and remove the Right Laser Sensor Head.

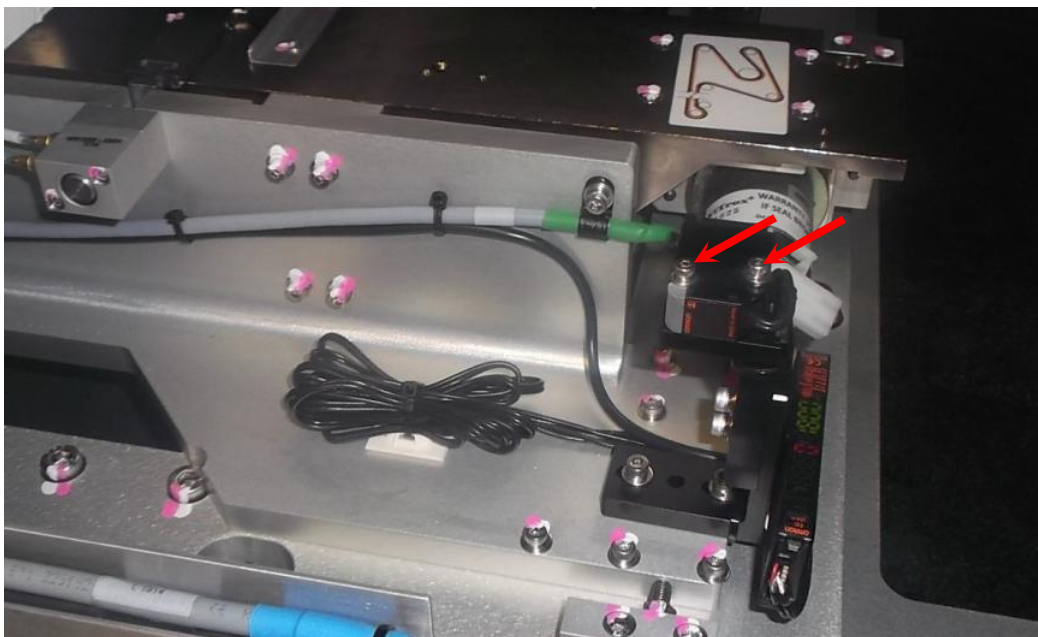


Figure 2 Right Laser Sensor Head

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Height Sensor Removal & Replacement Procedure	Effective Date	12 April 2017

5. Open the amplifier cover. Gently remove the sensor head end connector as Figure 3

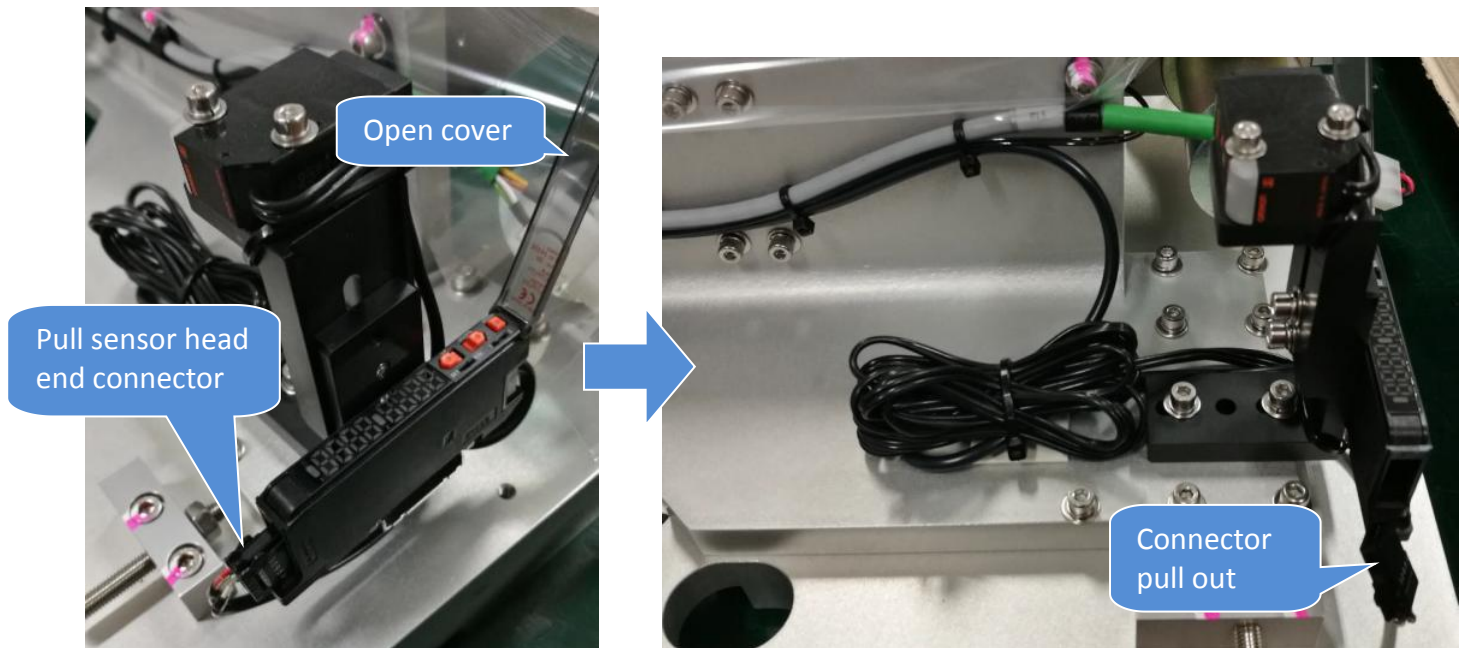


Figure 3 Sensor head end connector removal

6. Trace Laser Sensor Head Cable and completely remove from system. Remove necessary cable tie as well

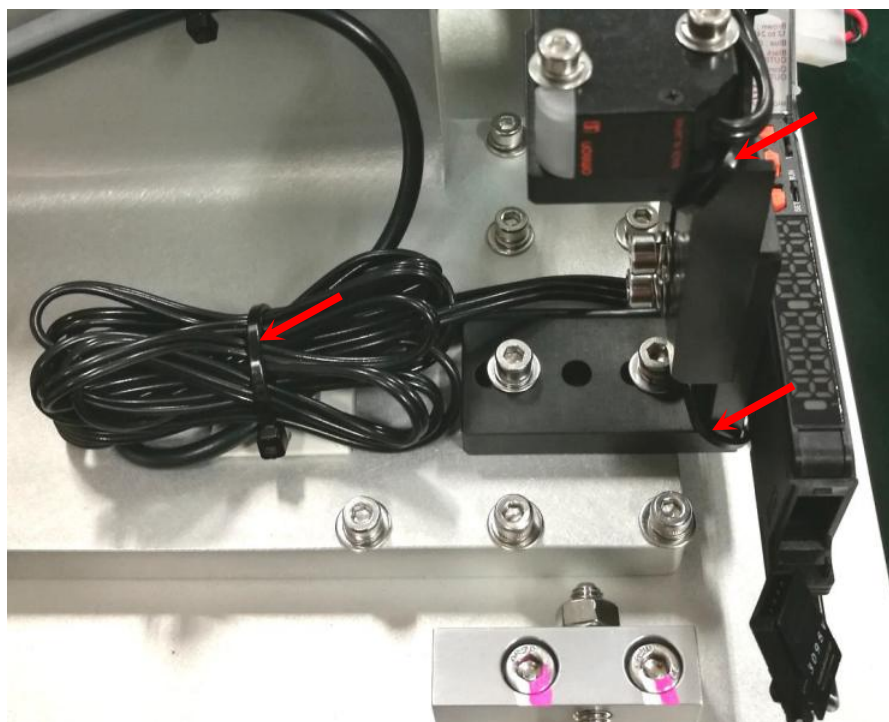


Figure 4 Laser Sensor Head Cable Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Height Sensor Removal & Replacement Procedure	Effective Date	12 April 2017

Replacement Procedure

- Prepare part, **SENSOR, LASER HEAD (P/N, 2284-0083)** as Figure 5



Figure 5

- Assemble 2284-0083 to top bracket and hand tight 2 x Screws as below Figure 6

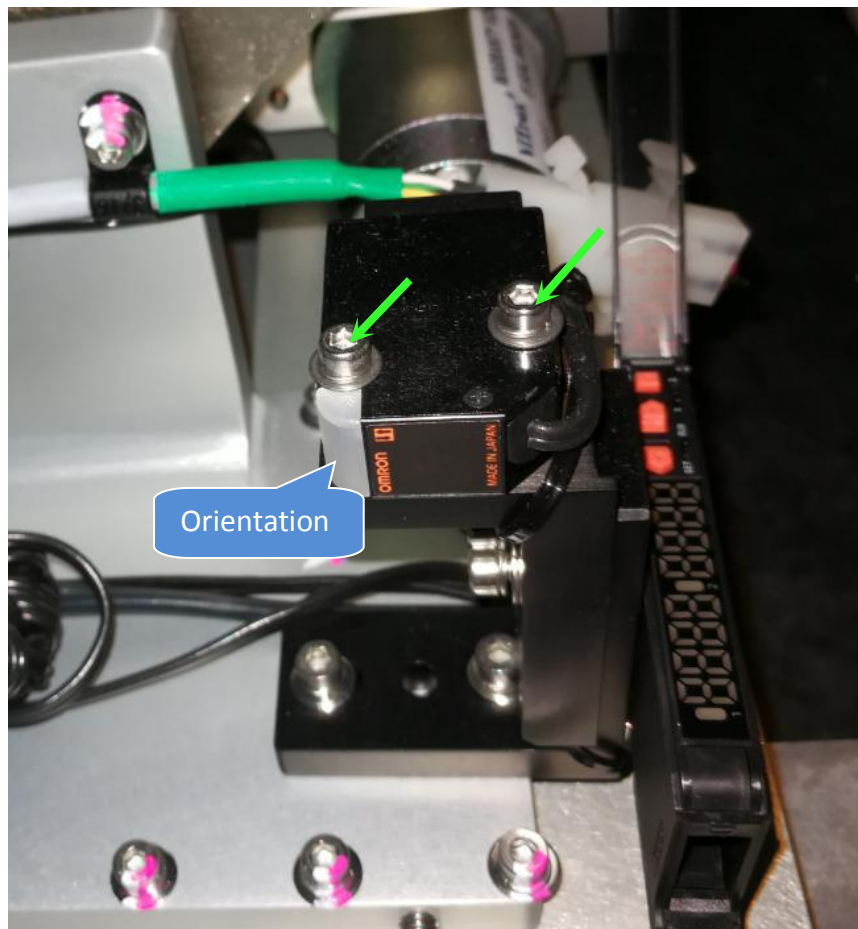


Figure 6 Laser sensor head assembly

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Height Sensor Removal & Replacement Procedure	Effective Date	12 April 2017

9. Connect 2284-0083 end connector at sensor amplifier by refer to below guide pin orientation. Close the sensor amplifier cover.

Remarks : Caution on cable snapping upon sensor amplifier cover closing

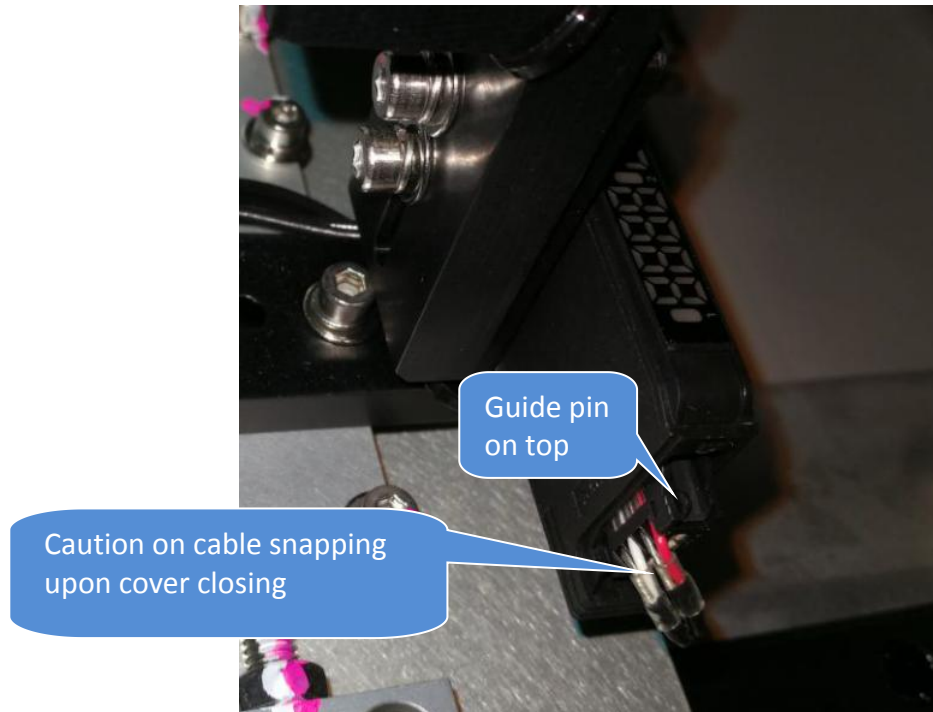


Figure 7 Sensor head end connector

10. Route the sensor head head cable as below cable. Secure excessive cable with cable tie mount. Apply necessary cable tie as well

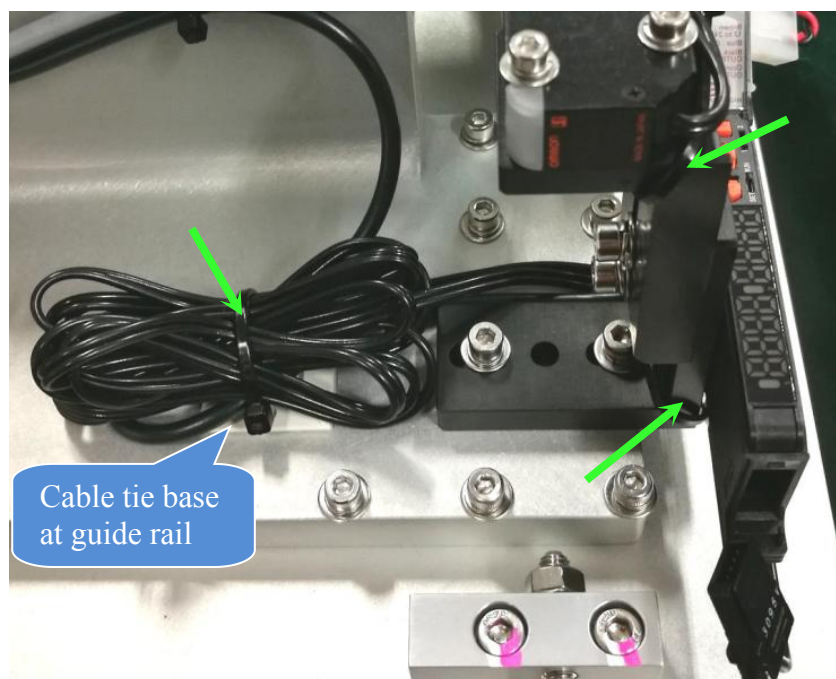


Figure 8 Cable Routing

11. Remove all tools from machine & close all access door.
12. Perform “ AXI V810 STD Filter Height Sensor Adjustment Procedure “