

	Work Instruction	Doc. Revision	01
	AXI V810 PIP Sensor Amplifier Setting	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐	Optical	☒	Mechanical
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	17 Nov 2016	First Release	MUHAMMED SHAMEEM
01	2 Oct 2016	Template update & Content update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 PIP Sensor Amplifier Setting	Effective Date	2 Oct 2016

Content

Amplifier setting.....	3
Lock Mode.....	6
Factory Default Setting (RESET).....	6

	Work Instruction	Doc. Revision	01
	AXI V810 PIP Sensor Amplifier Setting	Effective Date	2 Oct 2016

Amplifier setting

1. Press the “Mode” button for 3 seconds until the menu mode activated.

Toggle the Up and Down button until the “EASY” mode is selected as shown in the Figure 1

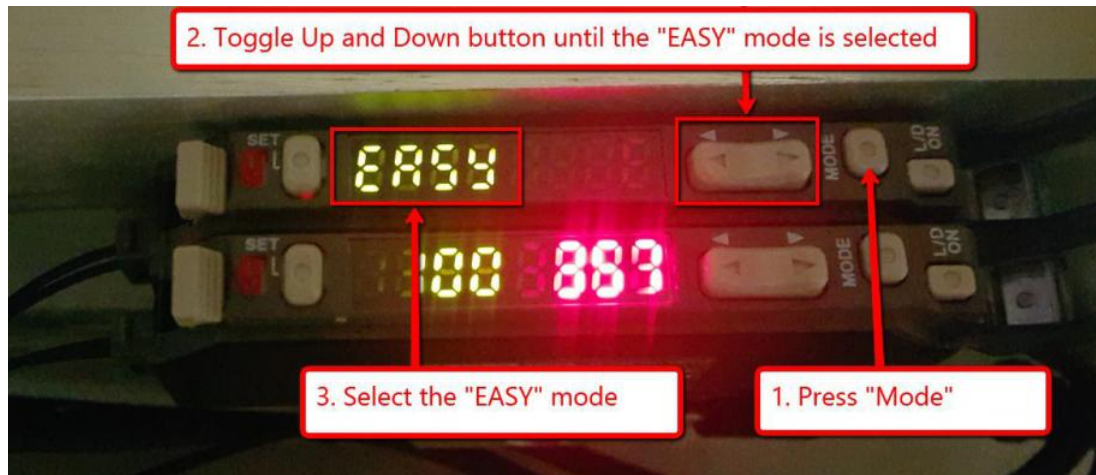


Figure 1 Access Mode

2. Press the “Mode” button to enter the Power Mode setting. Toggle the Up and Down button until the “Fine” mode is selected as shown in the Figure 2



Figure 2 Power Mode

	Work Instruction	Doc. Revision	01
	AXI V810 PIP Sensor Amplifier Setting	Effective Date	2 Oct 2016

- Press the "Mode" button to enter the Timer Function Setting. Toggle Up and Down until the "toFF ----" mode is selected as shown in the Figure 3

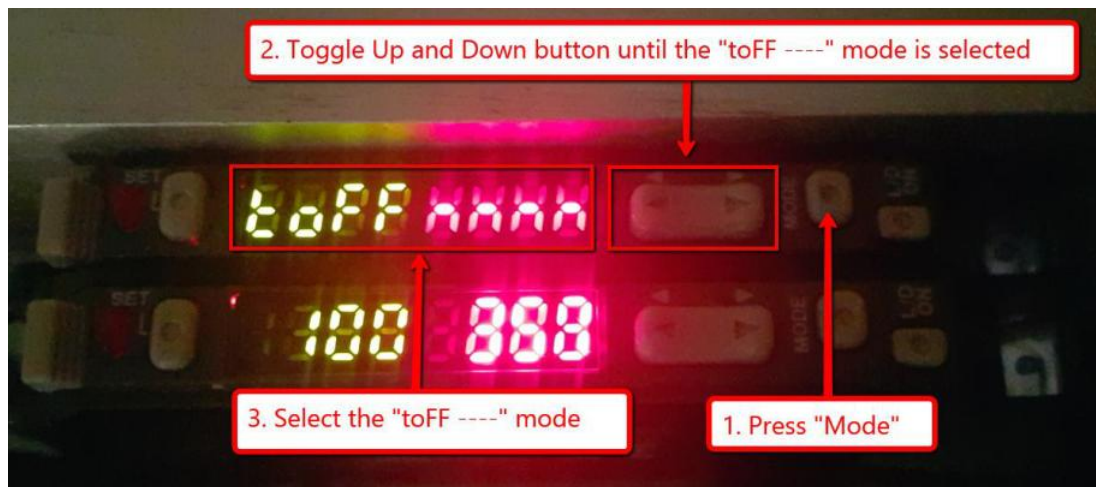


Figure 3 Timer Function Setting

- Press "Mode" to exit the setting
- Press the "L/D ON" and toggle Up and Down button until the "d on" mode is selected as shown in the Figure 4

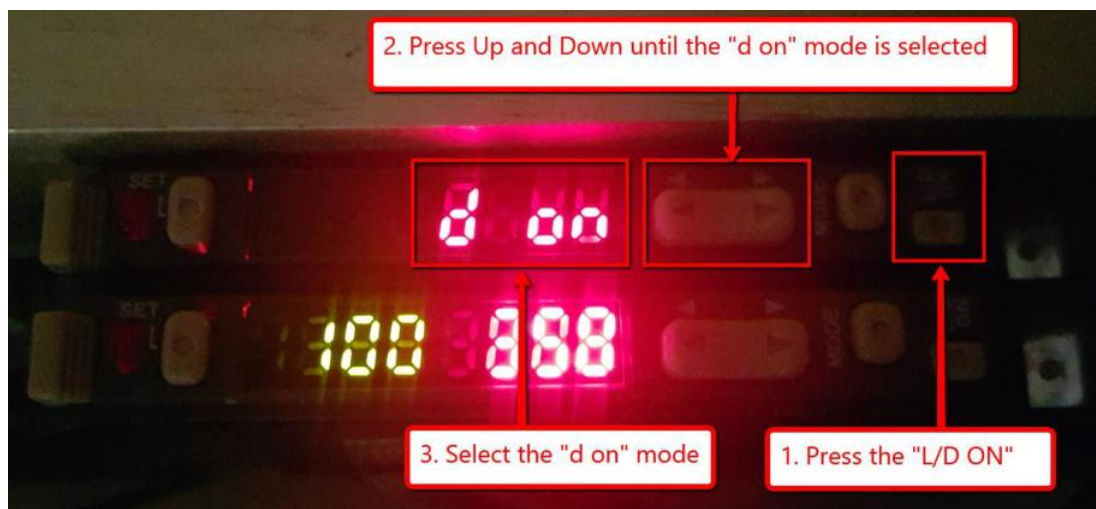


Figure 4 Output selector

	Work Instruction	Doc. Revision	01
	AXI V810 PIP Sensor Amplifier Setting	Effective Date	2 Oct 2016

6. Press the Up / Down button until the threshold is set to 100 as shown in the Figure 5

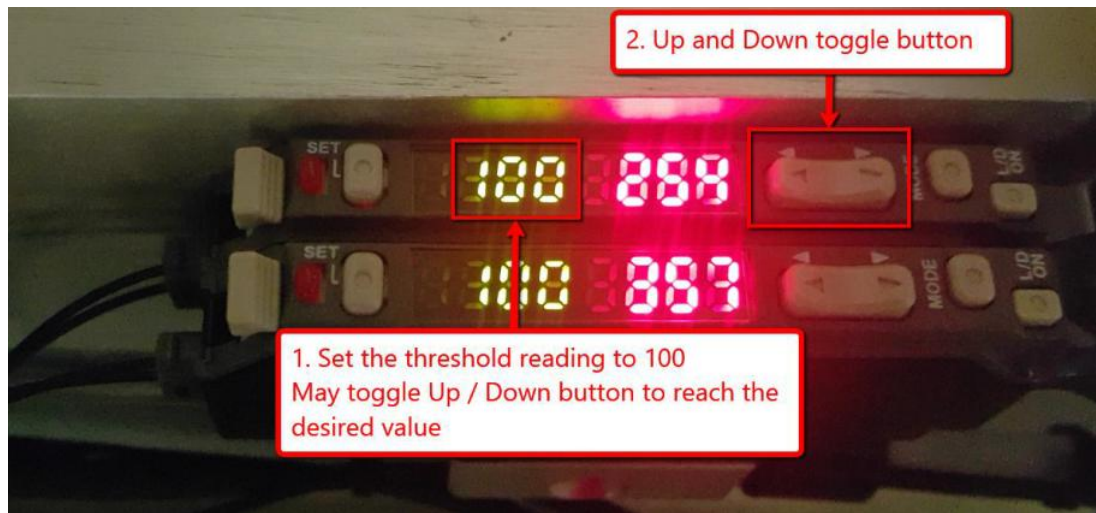


Figure 5 Threshold setting

	Work Instruction	Doc. Revision	01
	AXI V810 PIP Sensor Amplifier Setting	Effective Date	2 Oct 2016

Lock Mode

1. Press "Mode" button and "Up/Down" button for 3 seconds and will lock/unlock the amplifier setting as shown in Figure 6.

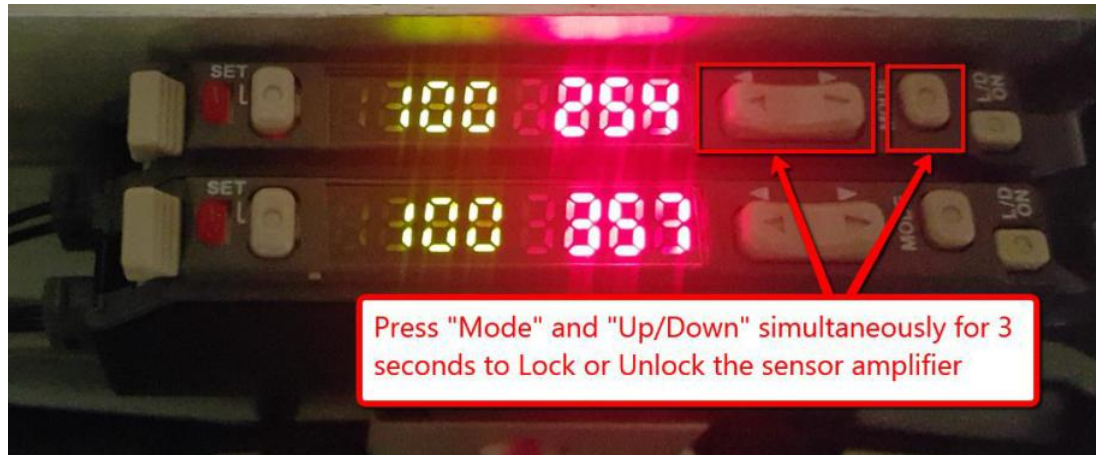


Figure 6 Lock Setting

Factory Default Setting (RESET)

1. Press "Set" and "L/D ON" button for minimum 5 seconds and it will return to default factory setting as shown in the Figure 7.

Remarks : Require to configure back the sensor amplifier after restore to factory default setting. May refer to Section " Amplifier setting"



Figure 7 Default Factory Setting