

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

Content

X Axis Kollmorgen Removal.....	3
X Axis Kollmorgen Replacement.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

X Axis Kollmorgen Removal

1. Unload board from machine if any
2. Close X ray Source at Operator Console
3. Close SSCA
4. Identify X axis Kollmorgen (PN,4XASP-A170)location by refer below Figure 1.

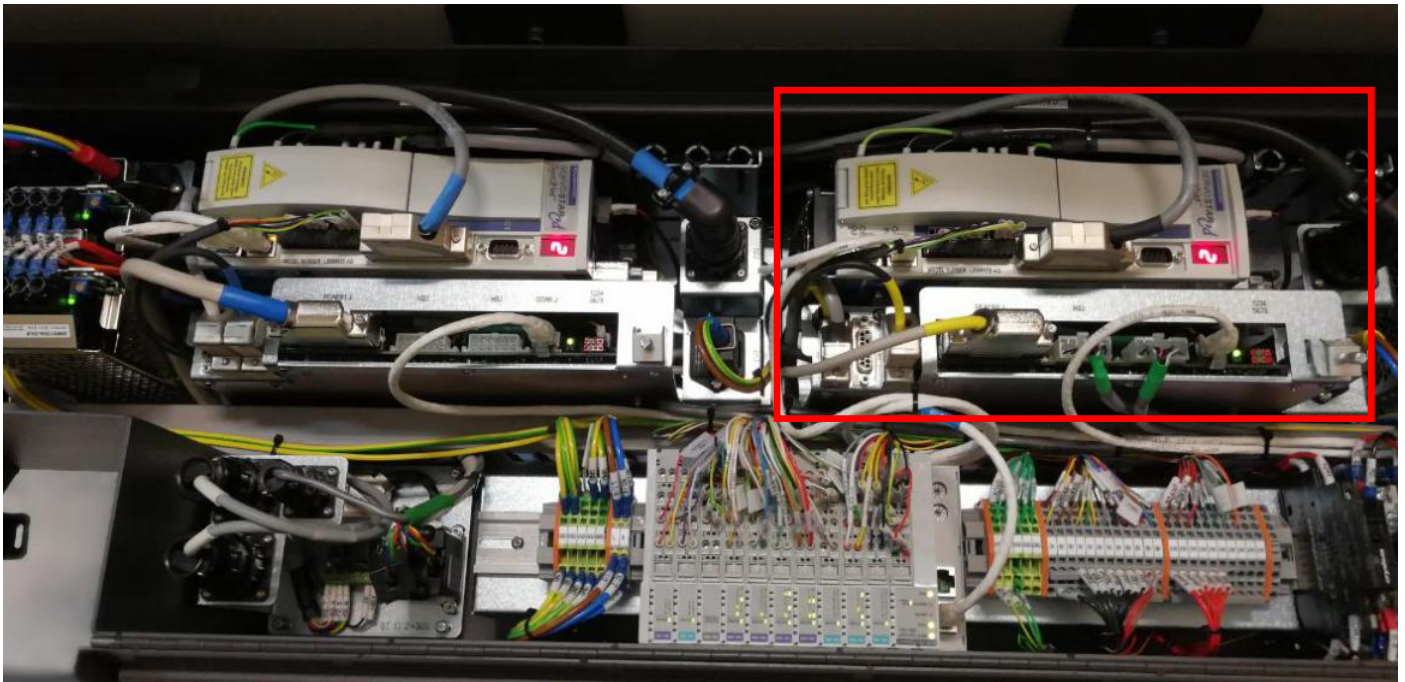


Figure 1

5. Disconnect Power Connector from 01J as below Figure 2.

Remarks :

If Kollmorgen is equipped with Vertical Type Power Connector, Retaining Clip will require to remove in advance

If Kollmorgen is equipped with Horizontal Type Power Connector, may unplug directly

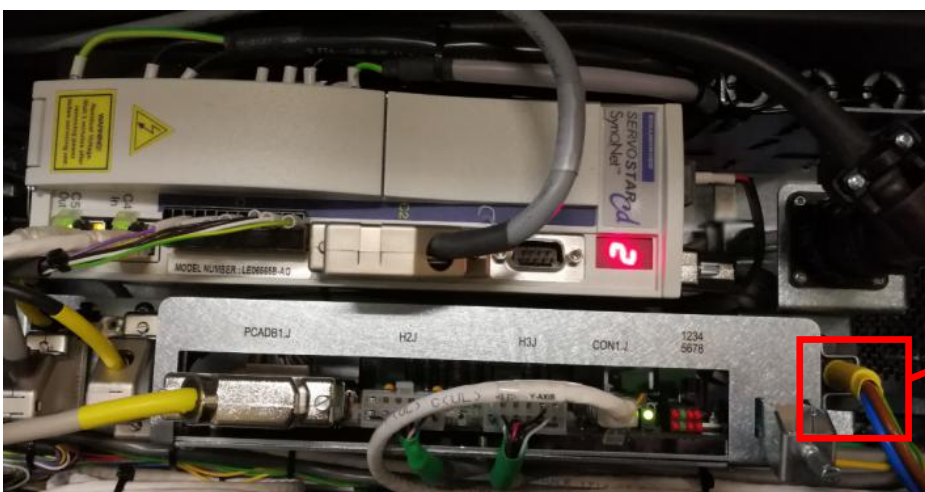


Figure 2



Vertical Type
Power Connector

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

6. Disconnect Y-Axis Motor Power Cable as Figure 3.

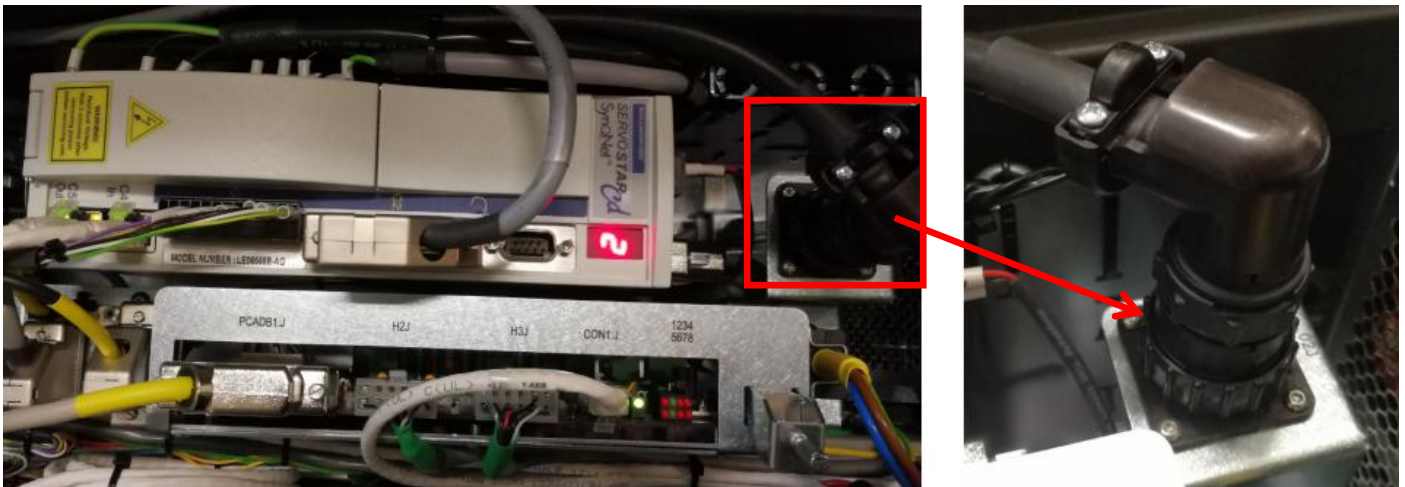


Figure 3

7. Disconnect Y-Axis Motor Rotary Cable as Figure 4

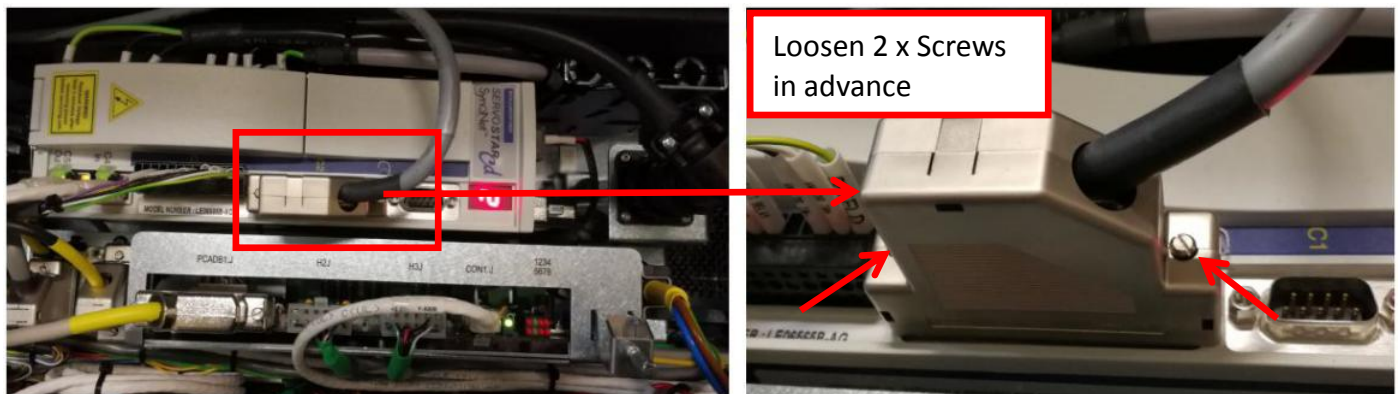


Figure 4

8. Disconnect 2 x Cat 5 Cable from C5 Out & C4 In as below Figure 5.



Figure 5

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

9. Disconnect 1 x Connector (24VDC) from 03J as Figure 6.

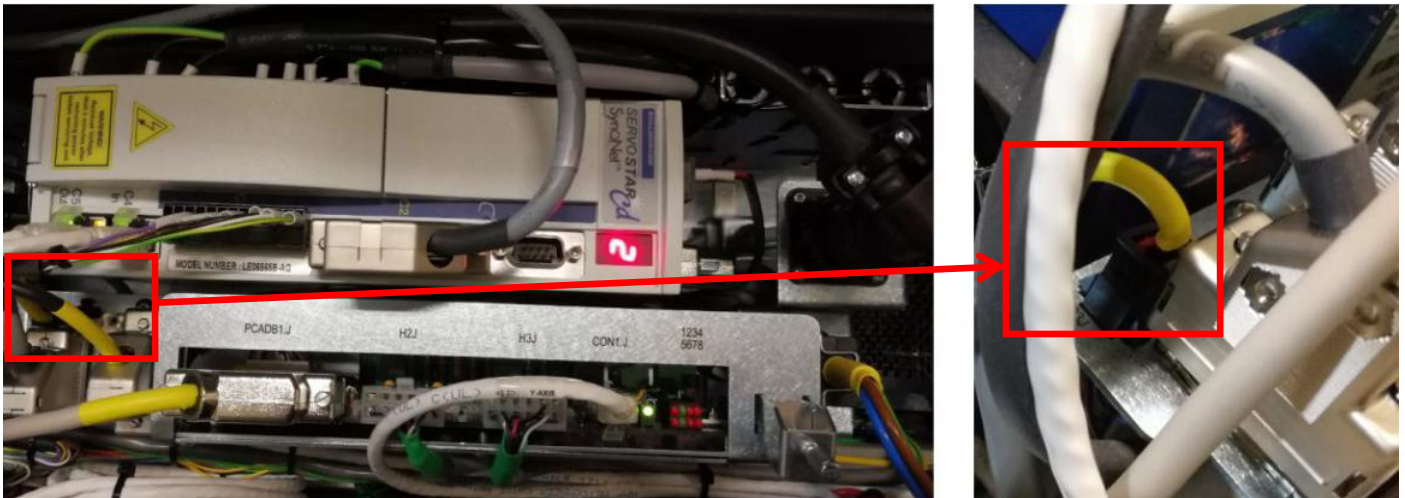


Figure 6

10. Disconnect Y axis encoder & Camera Triggers Out Connector from 07J & 05J as Figure 7

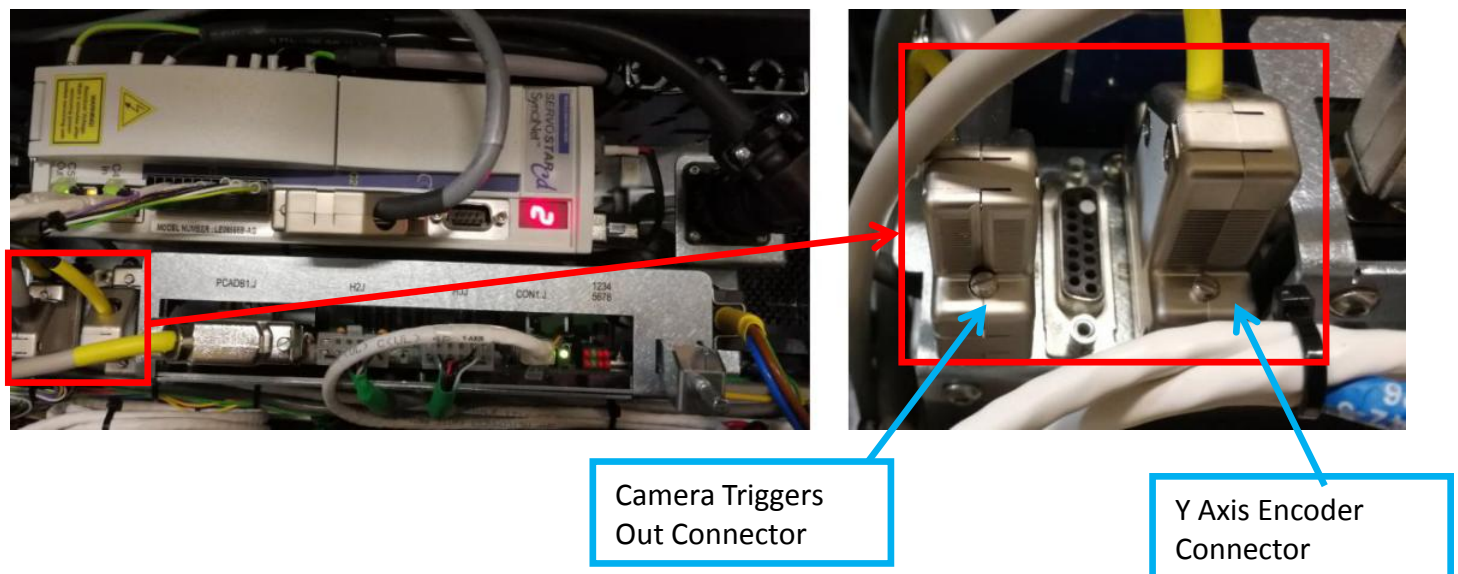


Figure 7

11. Disconnect Smema GPO/UPO Signal connector from PCAADB1J as Figure 8

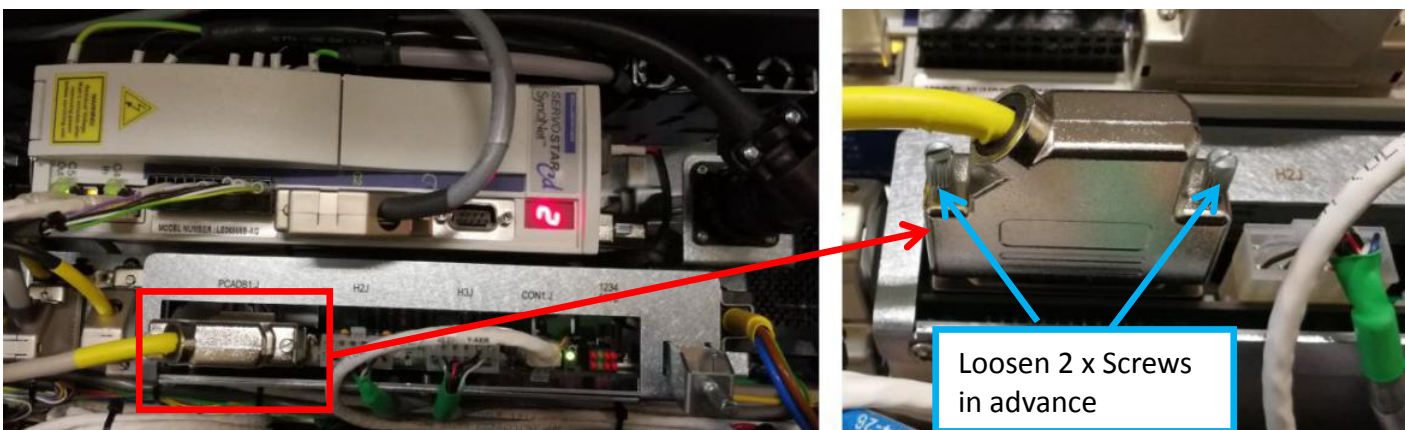


Figure 8

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

12. Disconnect Upstream & DownStream Connector from H2J & H3J as Figure 9

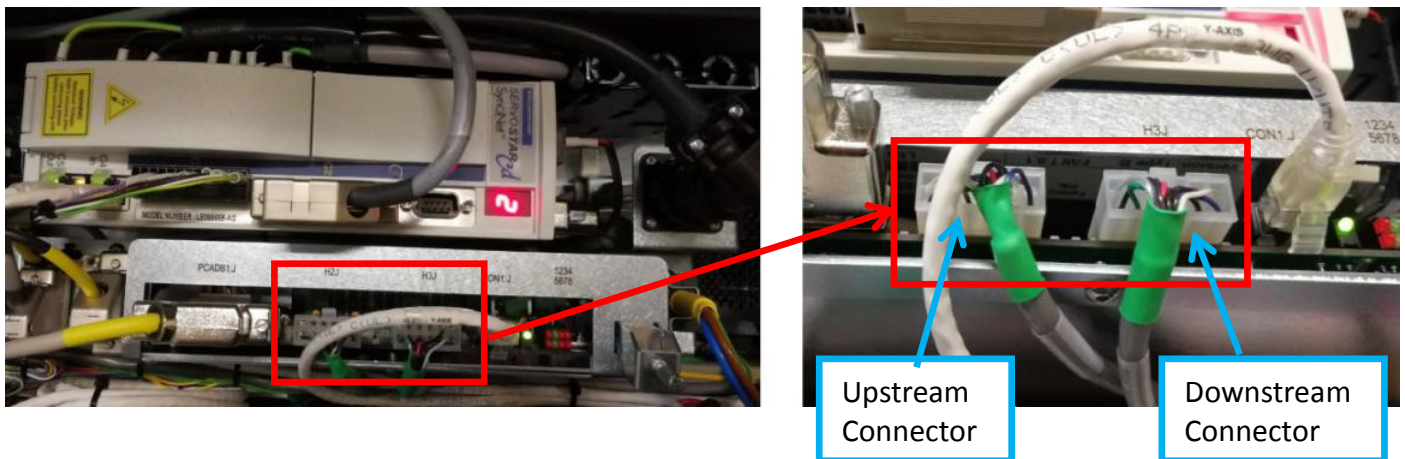


Figure 9

13. Disconnect Y axis Interlock Cat5 Cable from CON1J as Figure 10.

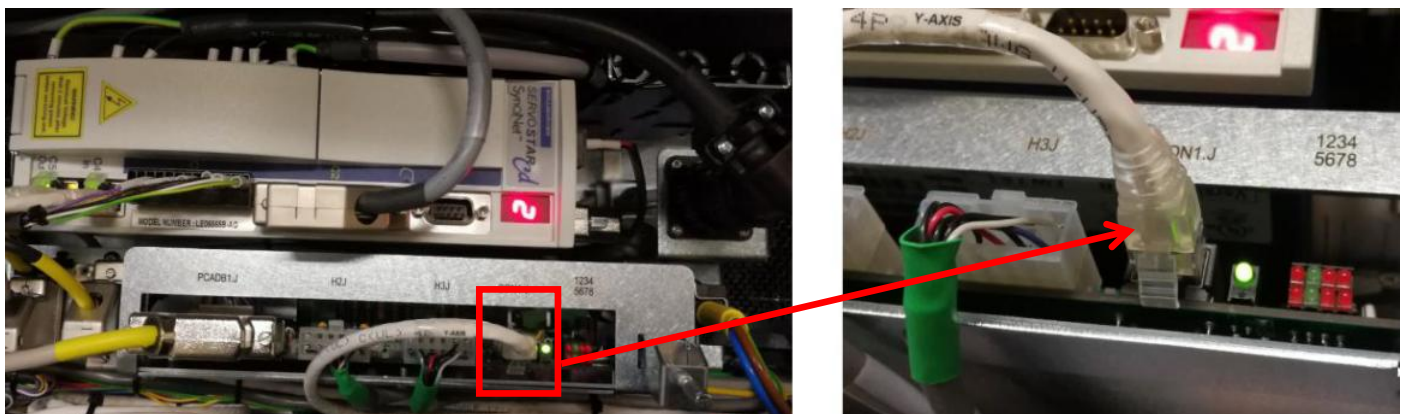


Figure 10

14. Loosen 4 x Screws at Kollmorgen Module Support base as Figure 11.



Figure 11

15. Gently remove entire X Axis Kollmorgen module from SSCA

X Axis Kollmorgen Replacement

16. May refer to below table for replacement step

Model	Machine SN	Referring Step
V810 Std S1/S2	MY10133156 & BELOW	Step 17~43
V810 XXL S1/S2	MY13138020 & BELOW	Step 17~43
V810 S2EX	MY10133156S2EX & BELOW	Step 17~43
V810 Std S1/S2	MY10133157 & ONWARD	Step 28~43
V810 XXL S1/S2	MY13138021 & ONWARD	Step 28~43
V810 S2EX	MY10133157 & ONWARD	Step 28~43

17. Identify Horizontal Type Power Connector where remove at Step 5. Loosen Philip screws at Horizontal Type of Power Connector as Figure 12

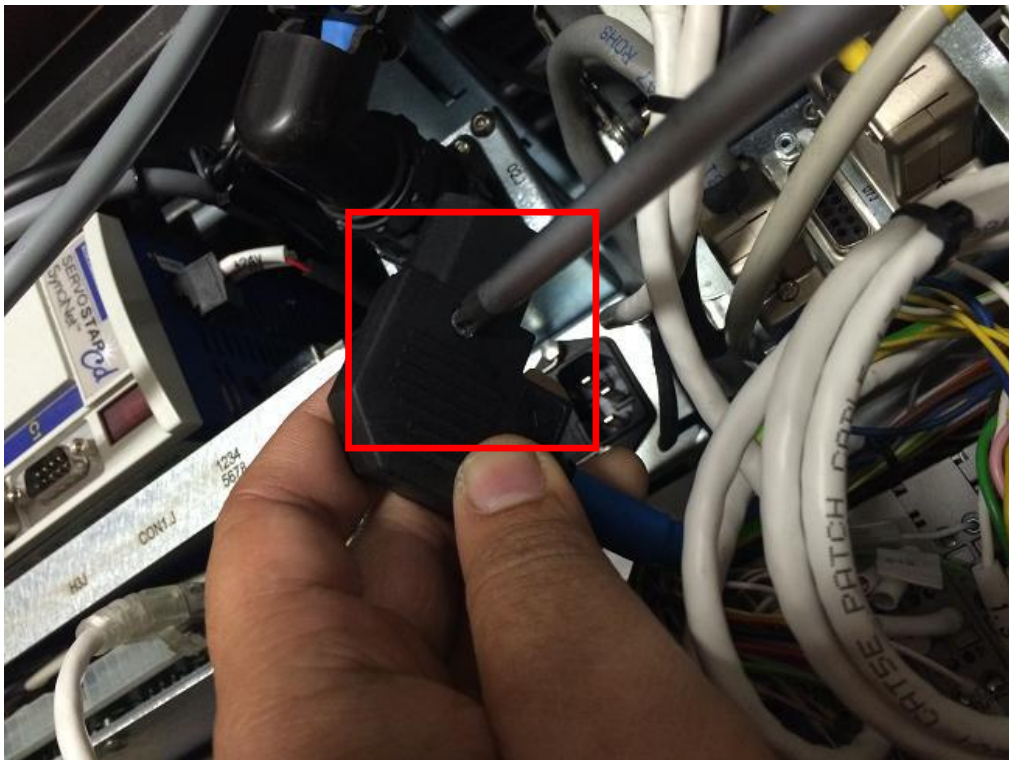


Figure 12

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

18. Open up insulator cover & identify Life(L),Ground(G) & Neutral(N) as Figure 13.

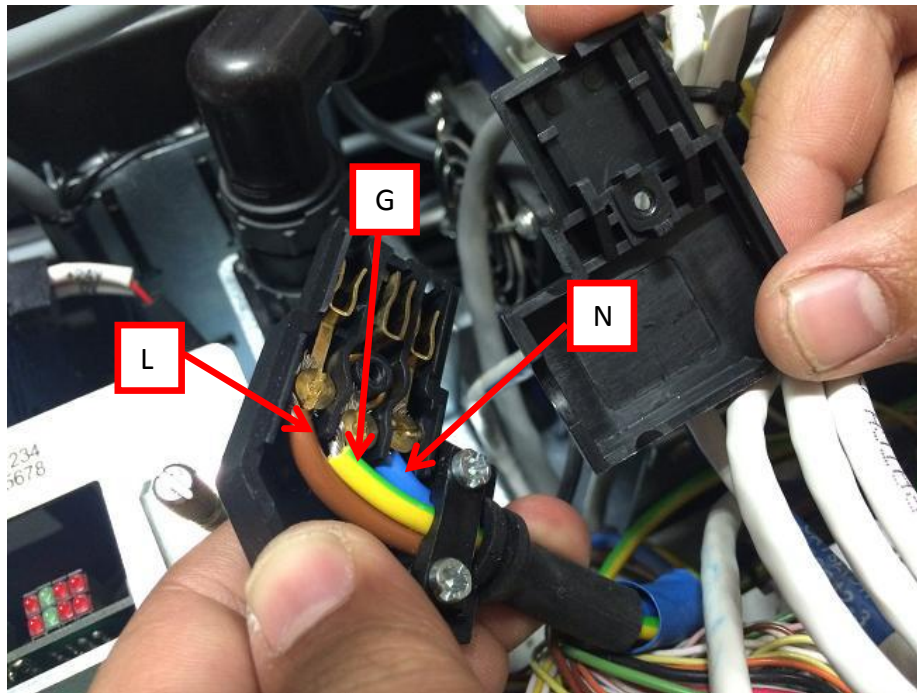


Figure 13

19. Loosen 3 x Flat Head Screw Terminal as Figure 14



Figure 14

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

20. Loosen 2 x Philip screws and remove cable clamp as Figure 15

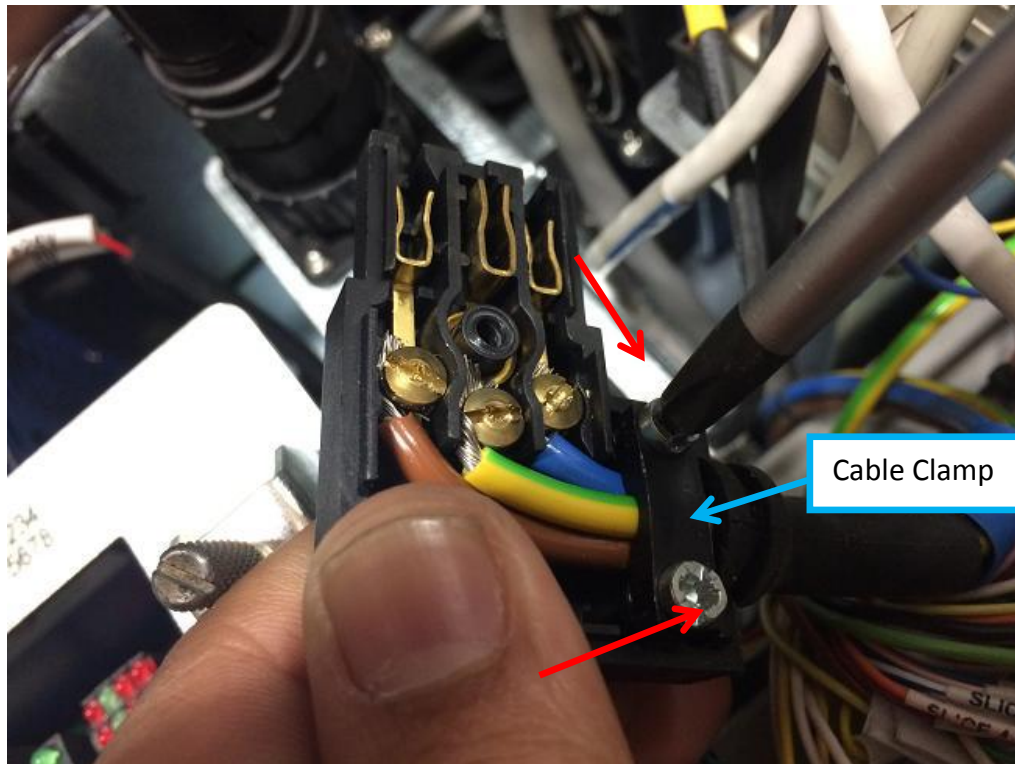


Figure 15

21. Remove 3 x Wire Cores from Horizontal Type Power Connector as Figure 16.

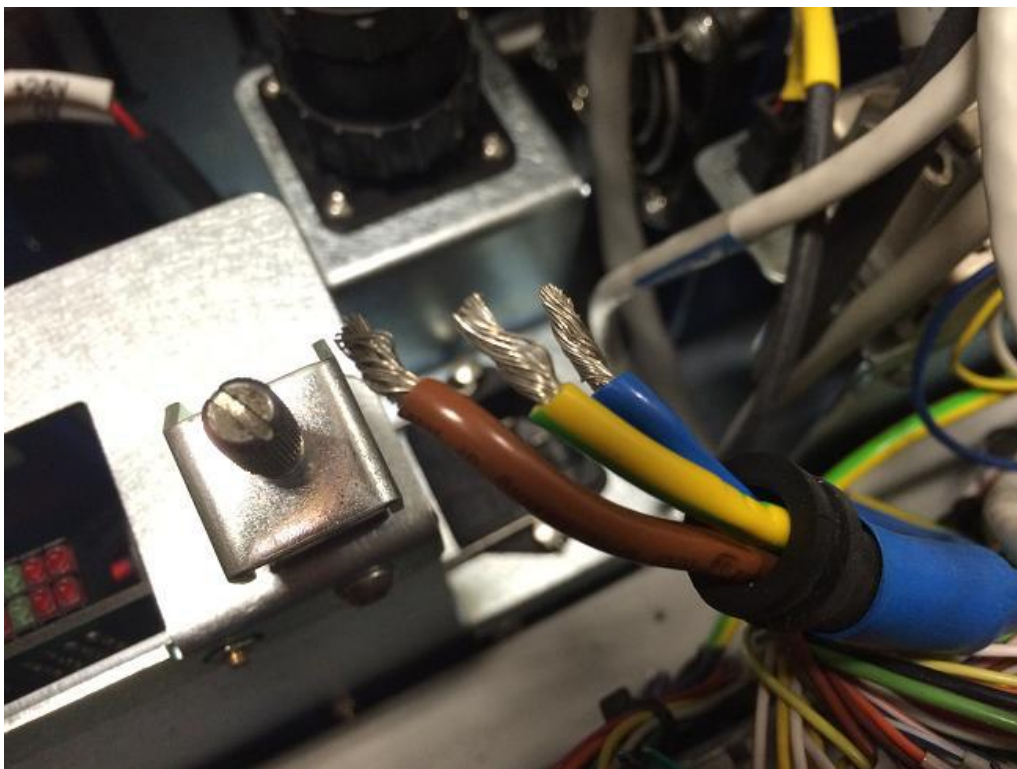


Figure 16

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

22. Gently Cut Brown(Life),Green/Yellow(Ground) & Blue(Neutral) into equivalent length. Strip away cable jacket by Cable Stripper.

Remarks : Caution on cable cutting length to avoid insufficient cable length

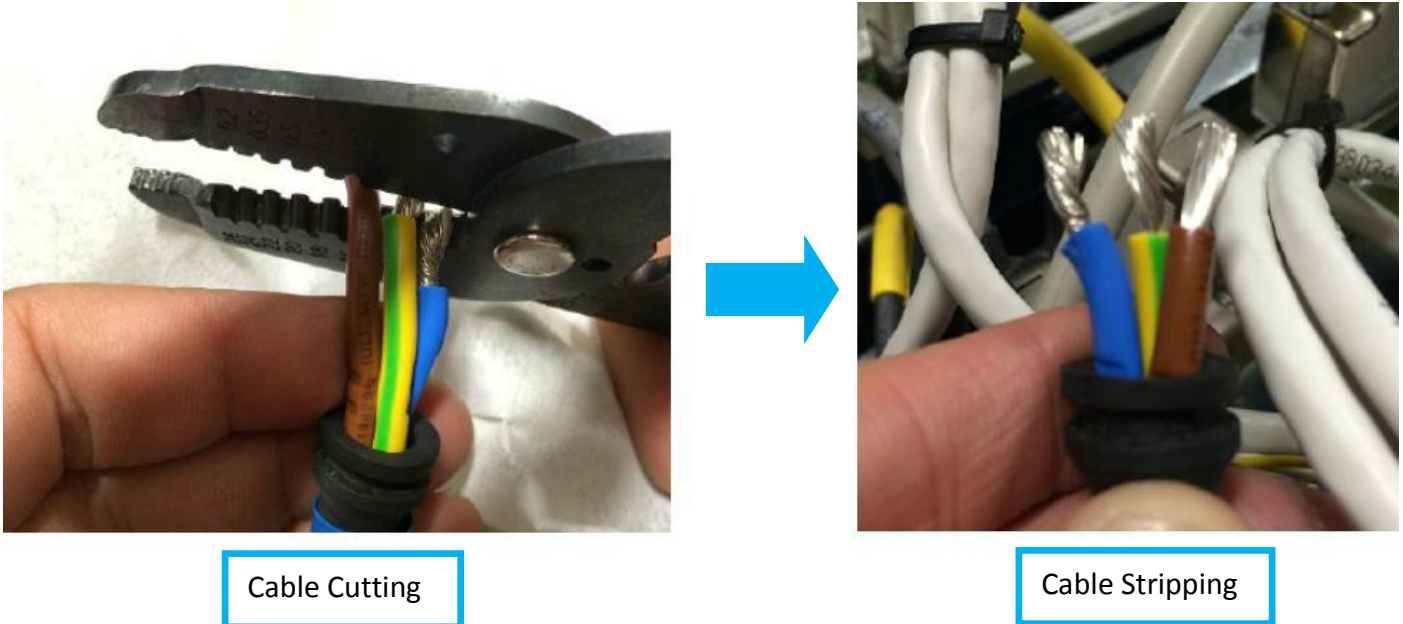


Figure 17

23. Unplug Vertical Type Power Connector from Kollmorgen Module as below Figure 18.

Remarks : Each Kollmorgen Spare Module (4XASP-A170) will equipped with 1 x vertical connector.

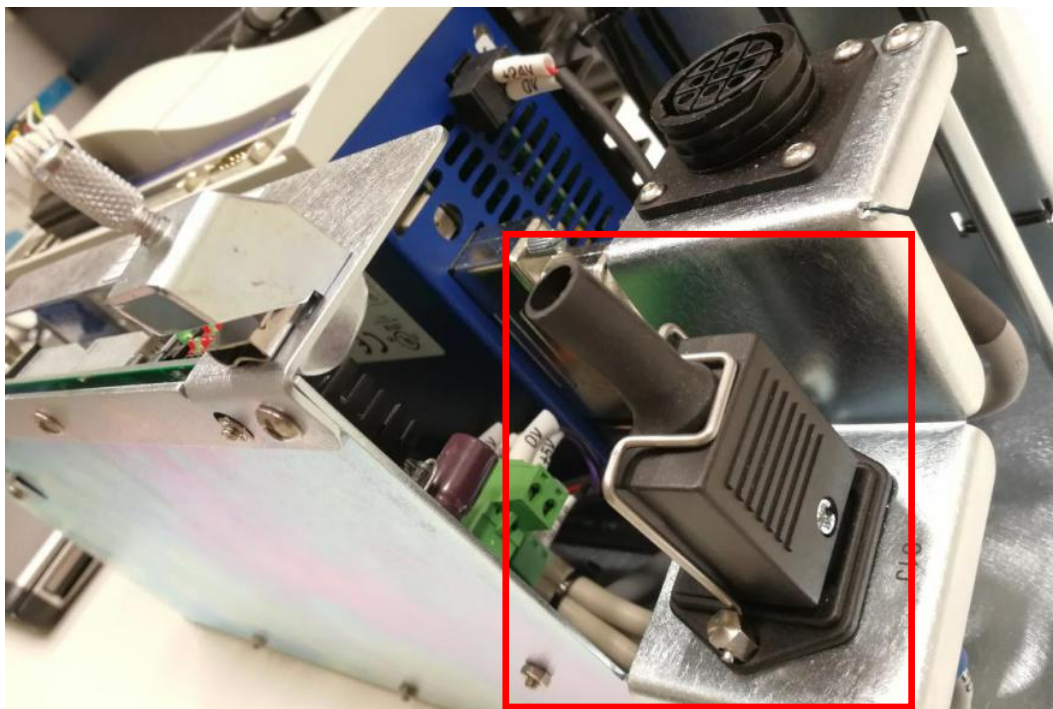


Figure 18

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

24. Open Insulator Cover from Vertical Type Power Connector as below Figure 19. Loosen 2 x Screws on the cable clamp & remove accordingly.

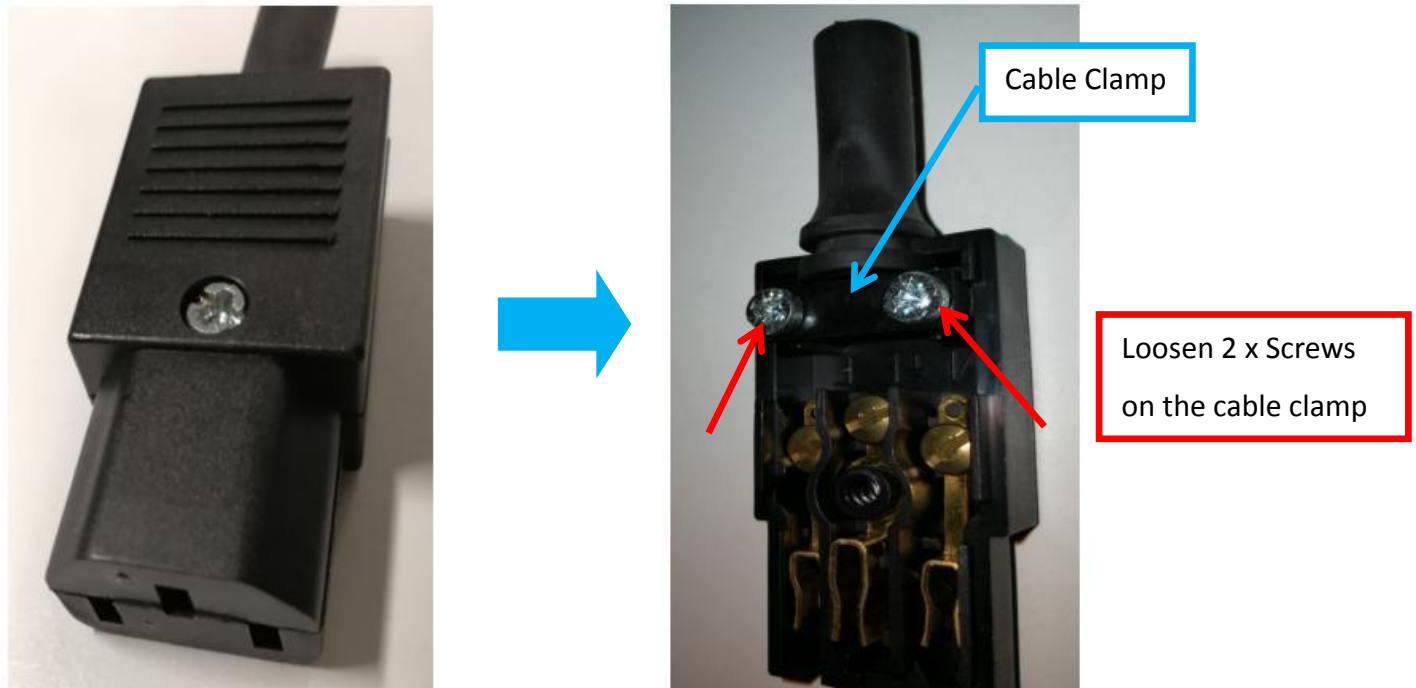


Figure 19

25. Identify the terminal for Life(L), Ground(G) & Neutral & assemble all three cables into respective screw terminals. May refer to below Figure 20.

Remarks : Sleeve Ring which include with Vertical Type Power Connector will not require for assembly.

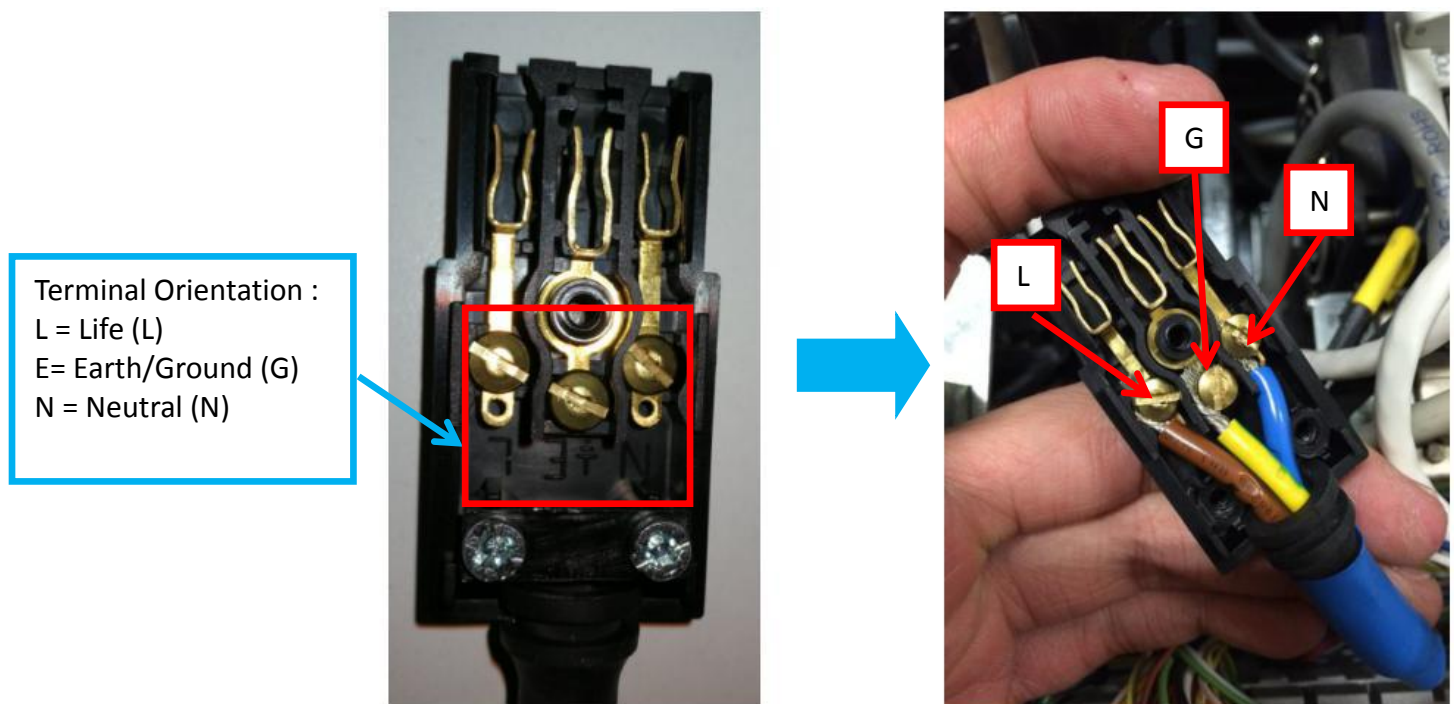


Figure 20

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

26. Gently position sleeve ring where attach with existing power cable into slot as Figure 21. Assemble cable clamp by tighten 2 x Philip screws as Figure 21.

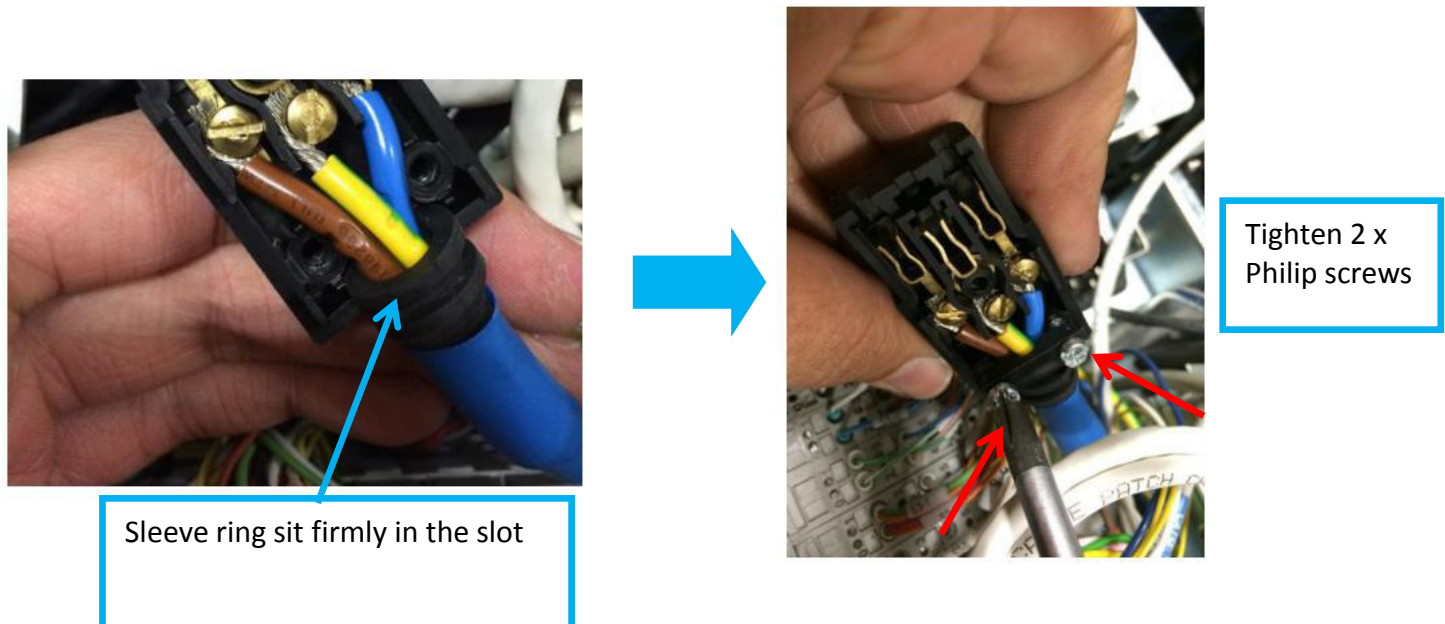


Figure 21

27. Assemble the Insulator Cover at Vertical Type Power Connector as Figure 22.

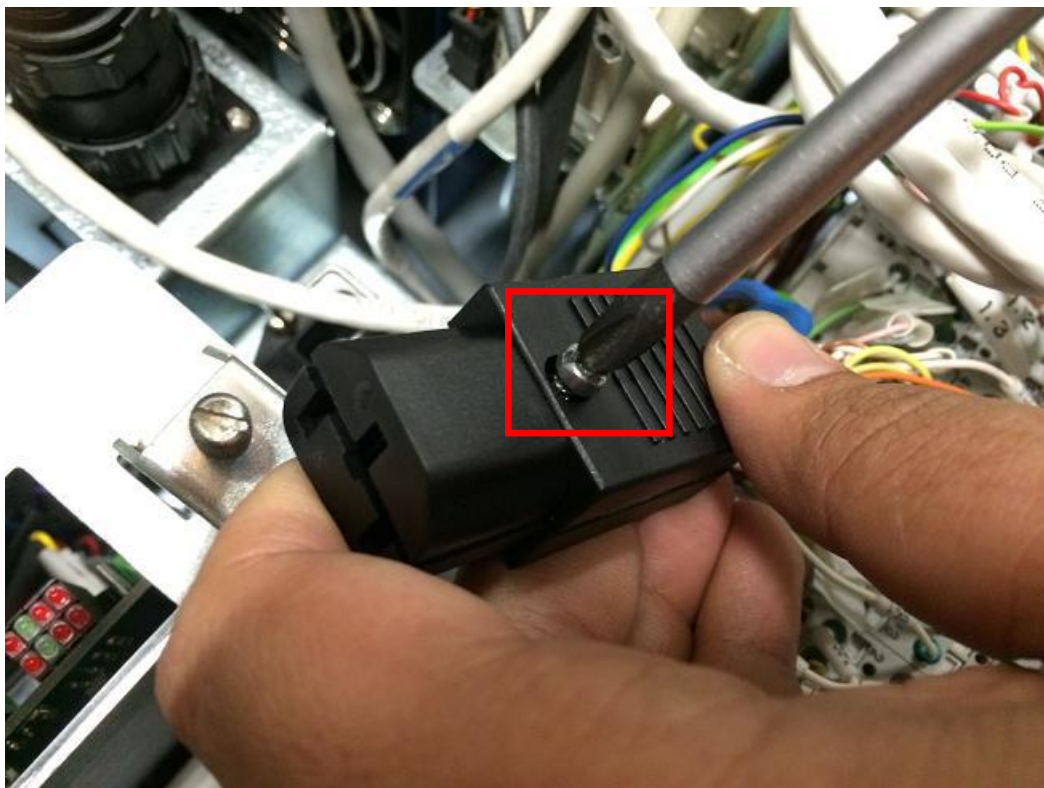


Figure 22

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

28. Gently slot Y-Axis Kollmorgen (Pn, 4XASP-A170) into SSCA. Tighten 4 x Screws at Kollmorgen Module Support base as Figure 23.



Figure 23

29. Connect Y axis Interlock Cat5 Cable at CON1J as Figure 24

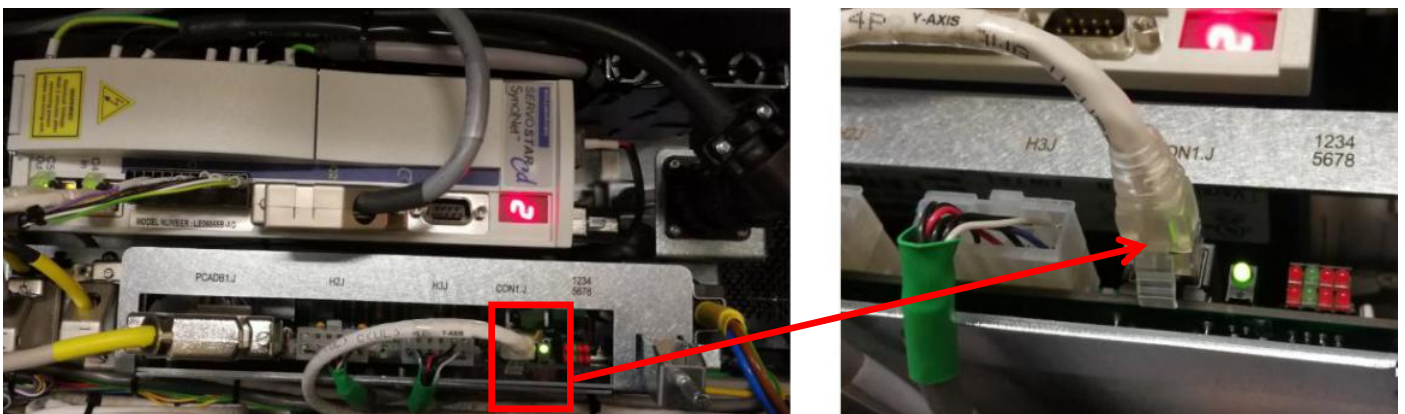


Figure 24

30. Connect Upstream & DownStream Connector at H2J & H3J as Figure 25

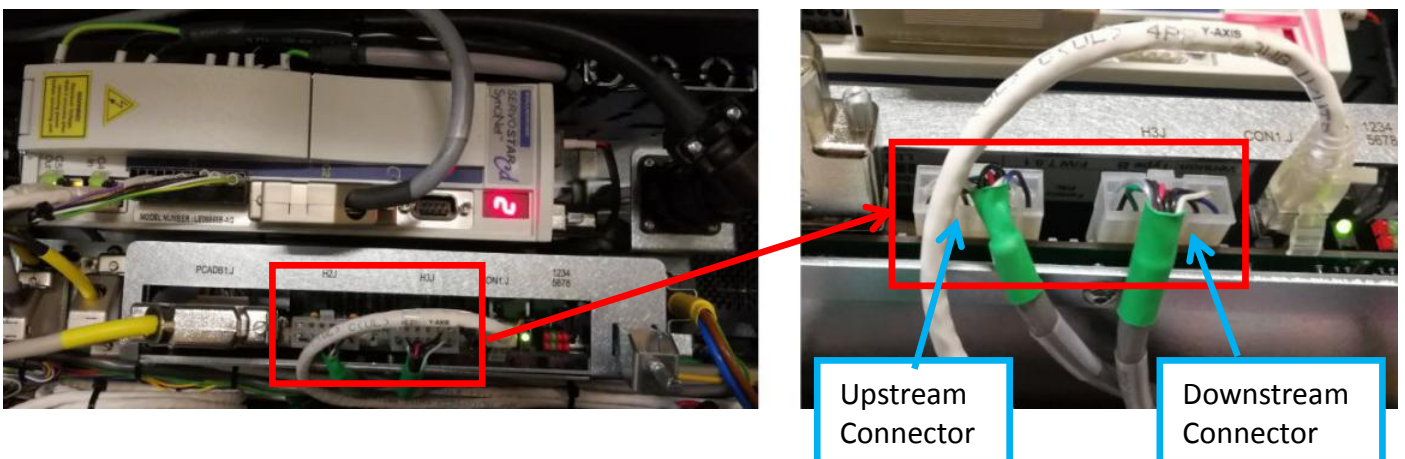


Figure 25

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

31. Connect Smema GPO/UPO Signal connector at PCAADB1J as Figure 26

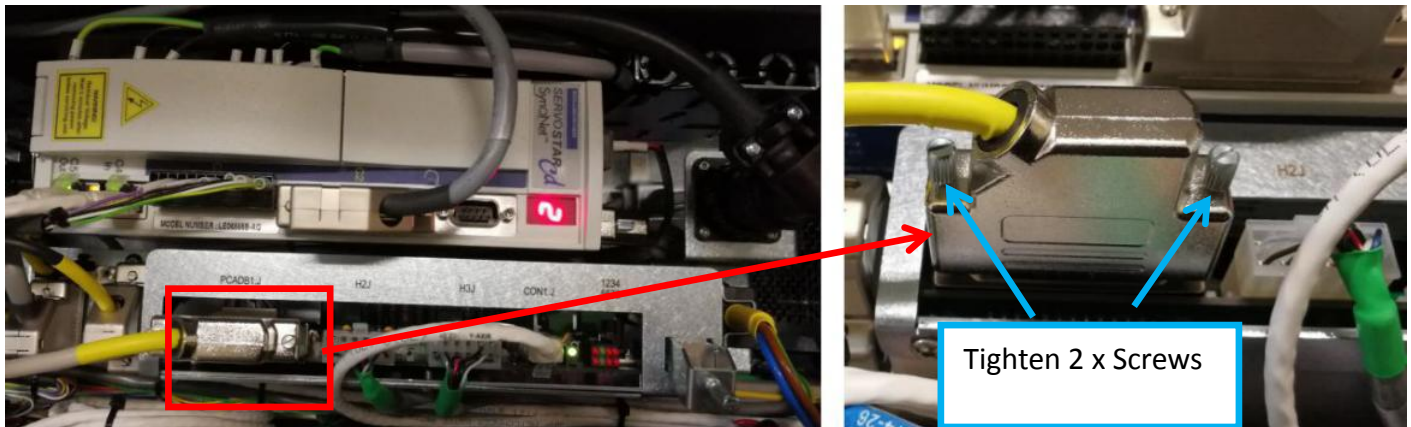


Figure 26

32. Connect Y axis encoder & Camera Triggers Out Connector at 07J & 05J as Figure 27

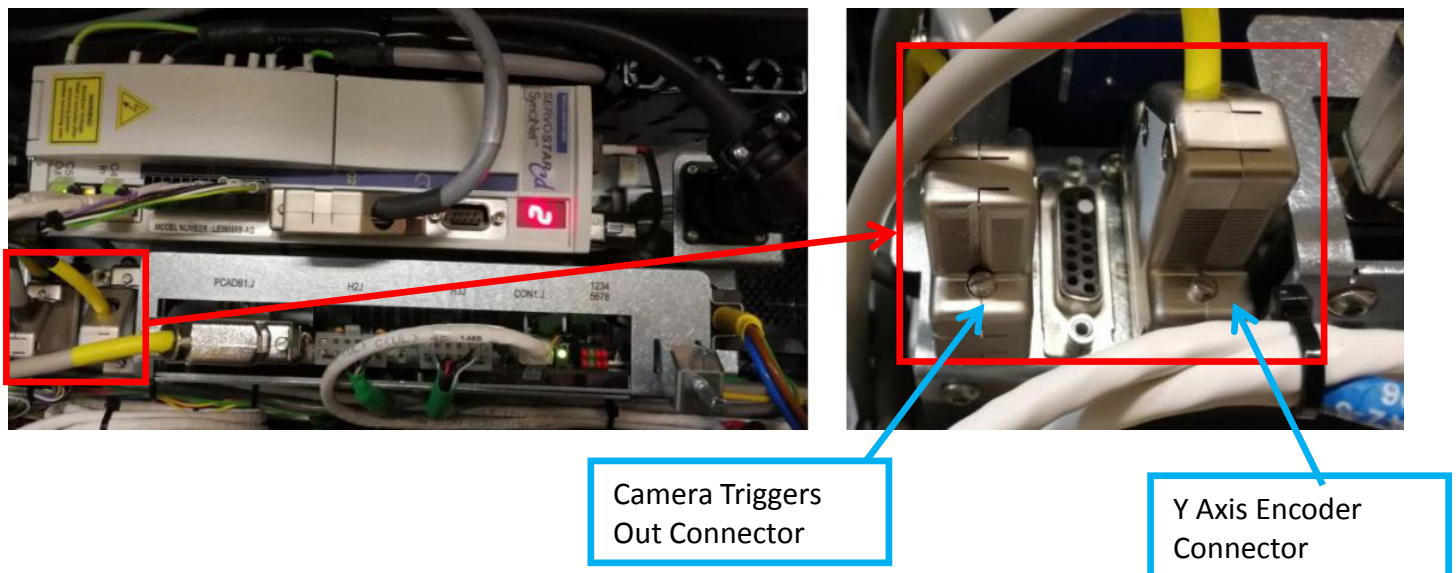


Figure 27

33. Connect 1x Connector (24VDC) at 03J as Figure 28.

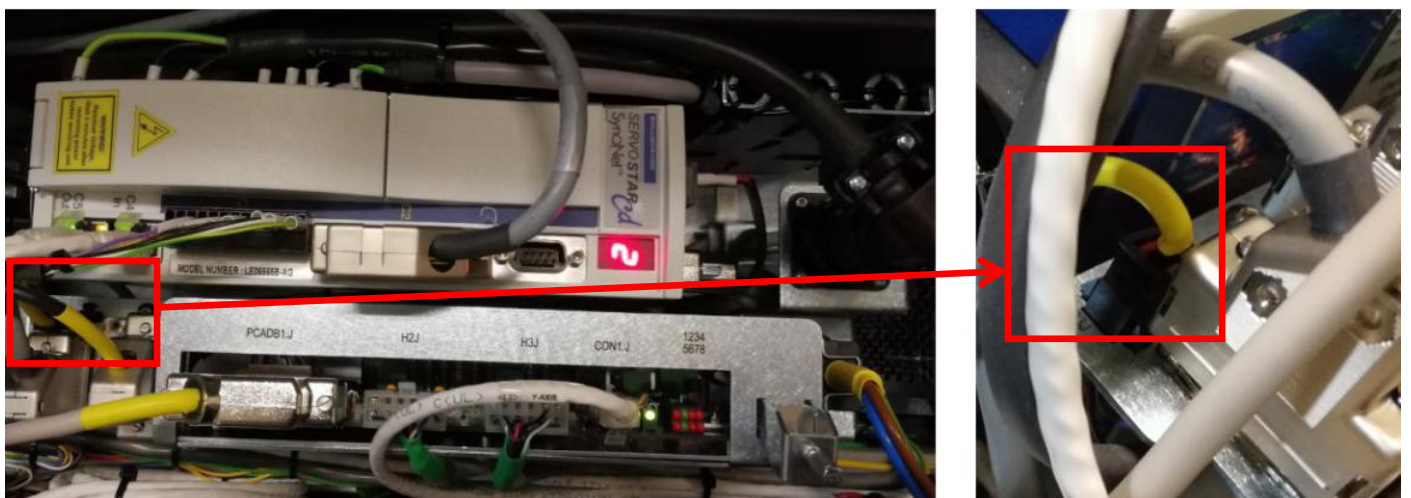


Figure 28

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

34. Connect 2 x Cat 5 Cable at C5 Out & C4 In as below Figure 29

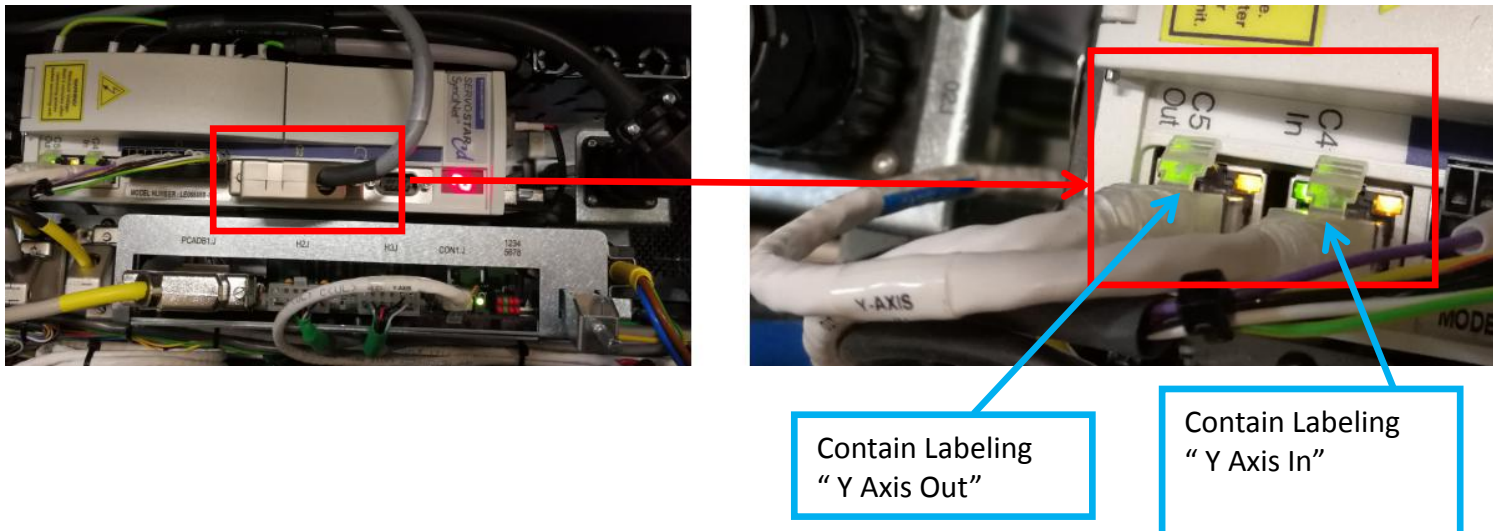


Figure 29

35. Connect Y-Axis Motor Rotary Cable as Figure 30

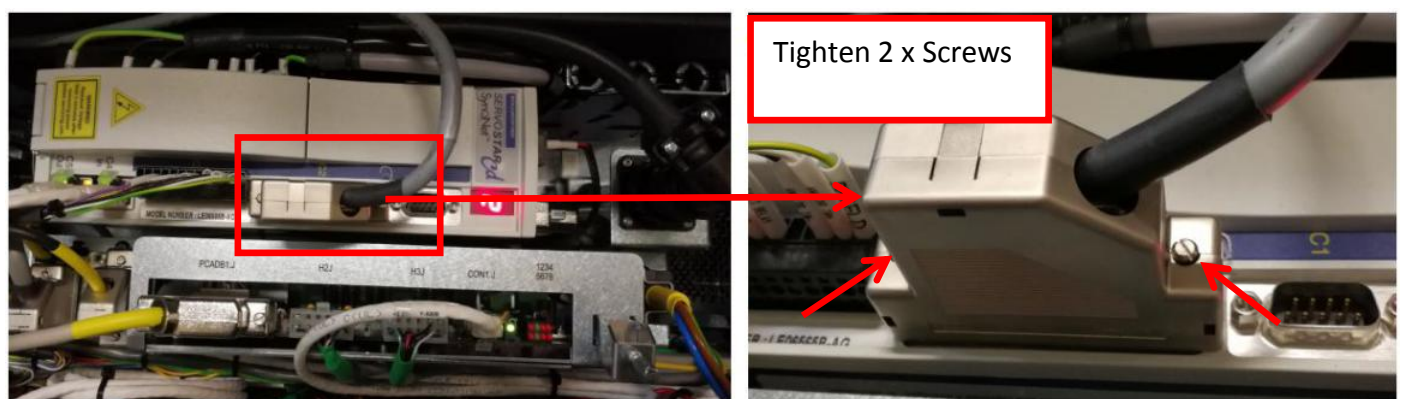


Figure 30

36. Connect Y-Axis Motor Power Cable as Figure 31.

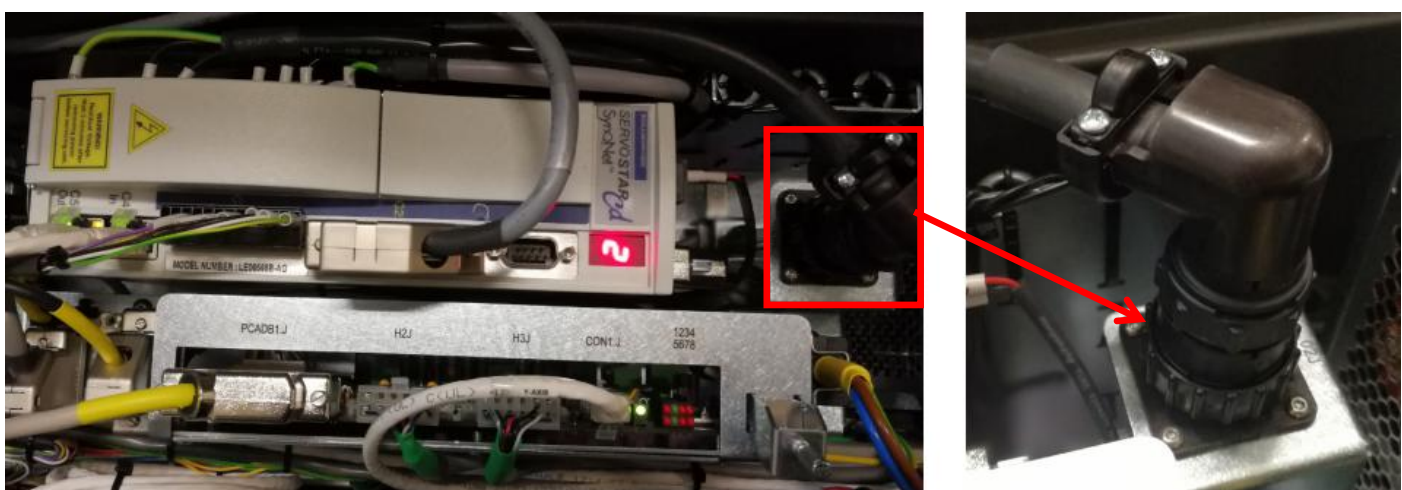


Figure 31

	Work Instruction	Doc. Revision	00
	AXI V810 Y Axis Kollmorgen Module Removal & Replacement	Effective Date	2 Oct 2016

37. Connect Power Connector at 01J as below Figure 32.

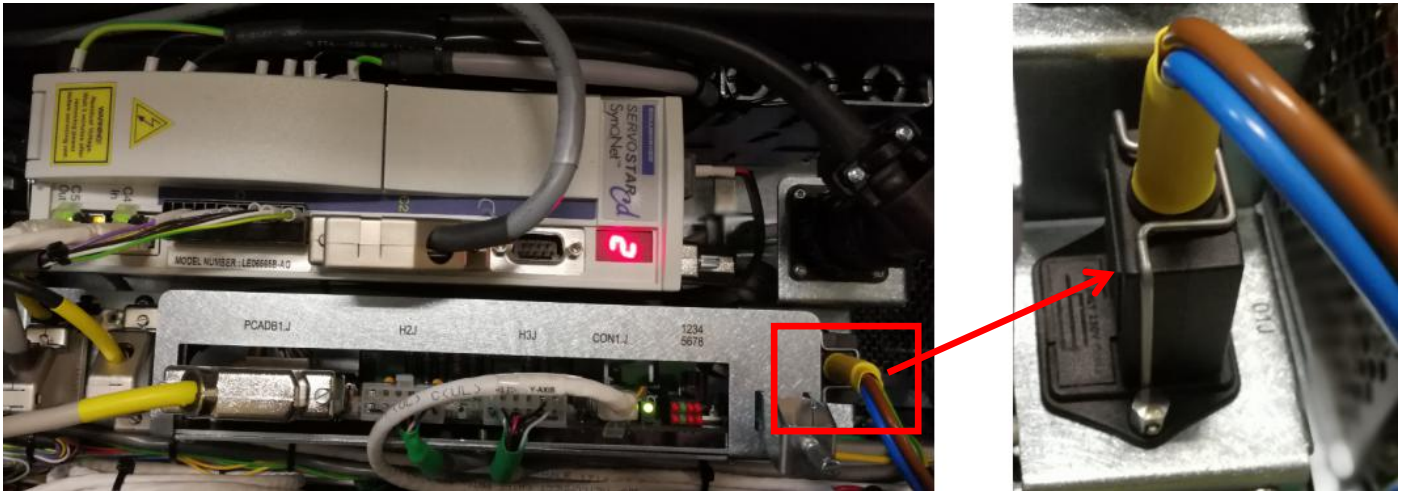


Figure 32

38. Turn On SSCA
39. Initialize at Digital IO Page
40. Perform " Upgrade Firmware" at Motion Control tab
41. Initialize at Motion Control tab
42. Turn on X ray Source at Operator Console Panel
43. Run 1 Loop of CD & A.