


Revision 09.04.20



Controls

- Volume
- Tone
- Sustain
- Focus
- Mids
- Pre

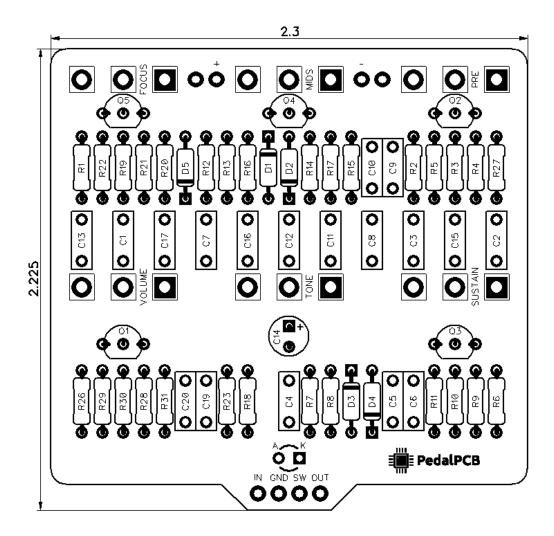

Bayonet Fuzz Parts List

RESISTORS (1/4W)			
R1	12K		
R2	100K		
R3	470K		
R4	12K		
R5	100R		
R6	1K		
R7	10K		
R8	100K		
R9	470K		
R10	12K		
R11	390R		
R12	10K		
R13	100K		
R14	470K		
R15	12K		
R16	390R		
R17	10K		
R18	56K		
R19	100K		
R20	470K		
R21	10K		
R22	2K7		
R23	1M		
R26	4K7		
R27	10K		
R28	10K		
R29	390R		

R30


R31

470K

CAPACITORS			
C1	10n		
C2	470p		
C3	100n		
C4	100n		
C5	100n		
C6	470p		
C7	100n		
C8	100n		
C9	470p		
C10	3n3		
C11	47n		
C12	100n		
C13	100n		
C14	100u		
C15	1u		
C16	47n		
C17	100n		
C19	100n		
C20	100n		

_			
ACITORS	TRANSI	TRANSISTORS	
10n	Q1 2	2N5089	
470p	Q2	2N5089	
100n	Q3	2N5089	
100n	Q4	2N5089	
100n	Q5	2N5089	
470p			
100n	DIODES	DIODES	
100n	D1	1N914	
470p	D2	1N914	
3n3	D3	1N914	
47n	D4	1N914	
100n	D5	1N5817	
100n			
100u	POTENT	TOMETERS	
1u	VOLUME	E A100K	
47n	TONE	B250K	
100n	SUSTAIN	N A100K	
100n	FOCUS	B250K	
100n	MIDS	A100K	
	PRE	A100K	



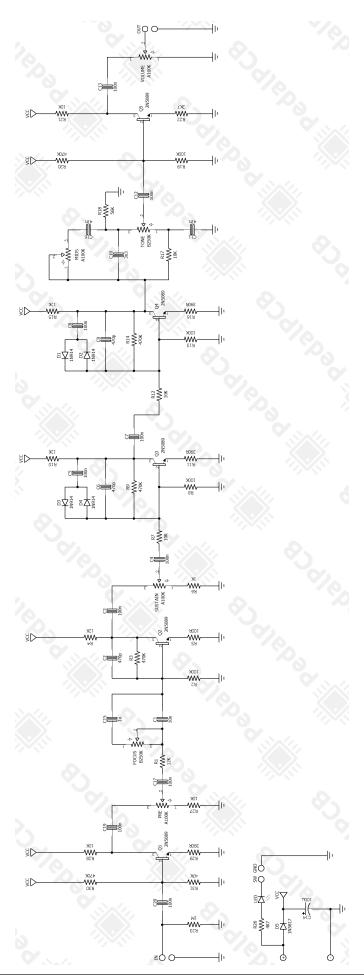



Bayonet Fuzz Wiring Diagram





Bayonet FuzzDrill Template
125B enclosure with top mounted jacks

