



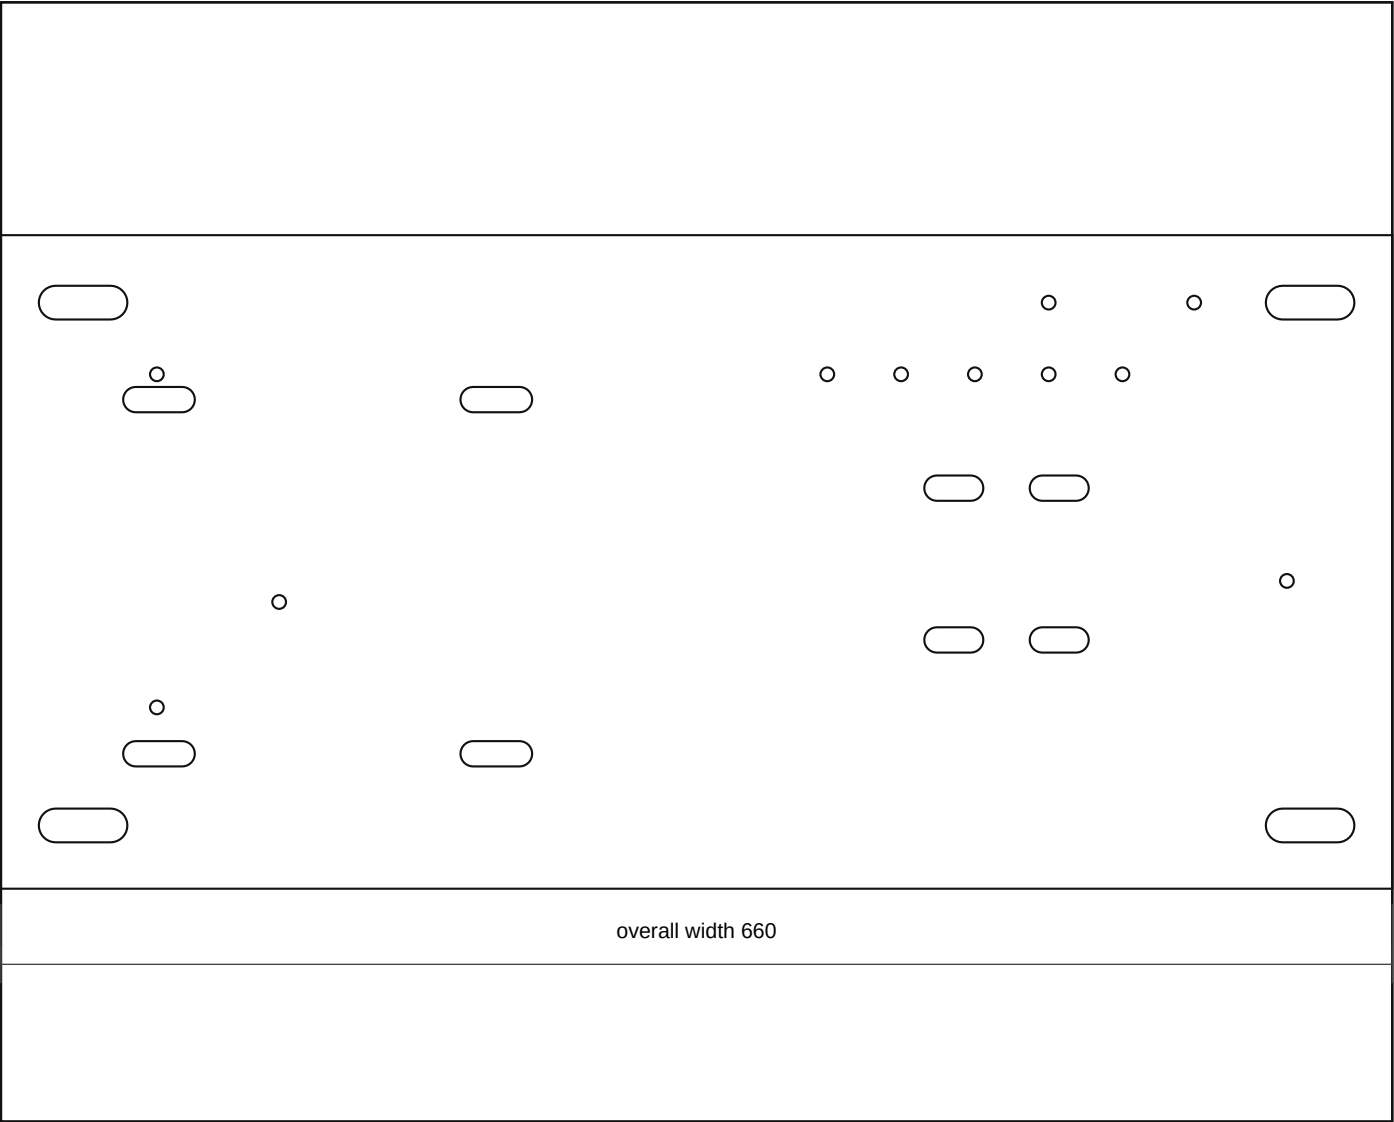

Fabrication Notes

- Raised front/radiator-side access ladder: 660 x 310 x 3.0 mm mild steel. This wider Rev F ladder moves the covered relay box fully outside the standard battery envelope and keeps its cover openable with the battery installed.
- The Relay Rev D flat aluminium base mounts vertically and flat against the outboard/access edge of this ladder/main service sheet, with the relay box's covered face reachable without lifting the battery and a 300 x 197 insulating sheet between the relay box's large uncovered bottom face and the aluminium base.
- Relay Rev D is now only the existing covered relay box, its exact-size bottom insulating sheet, and a flat aluminium mounting base directly attached to the main metal sheet; do not add separate red/black relay cable-boot or loom-card fabrication above the box.
- MIDI Rev D is the current hinged aluminium enclosure on a separated top/front shelf zone, with its leading edge aligned to the battery leading edge datum, the cutoff-switched power input entering the fuse 4 / second-from-last holder grommet, and five grommeted outputs leaving the opposite side.
- The far-side MIDI output grommet must be enlarged for the output that leaves with two power cables.
- The folded cutoff/kill-switch base/guard sits beside the MIDI fuse shelf rather than behind it, because there is not enough depth after the MIDI outputs for another heavy-cable device. Put the far-side cutoff stud to the battery and the near-side switched stud toward the relay/MIDI split.
- Model the battery positive entering the side-mounted cutoff/kill-switch first from the central battery terminal position. The cutoff output then splits from the side

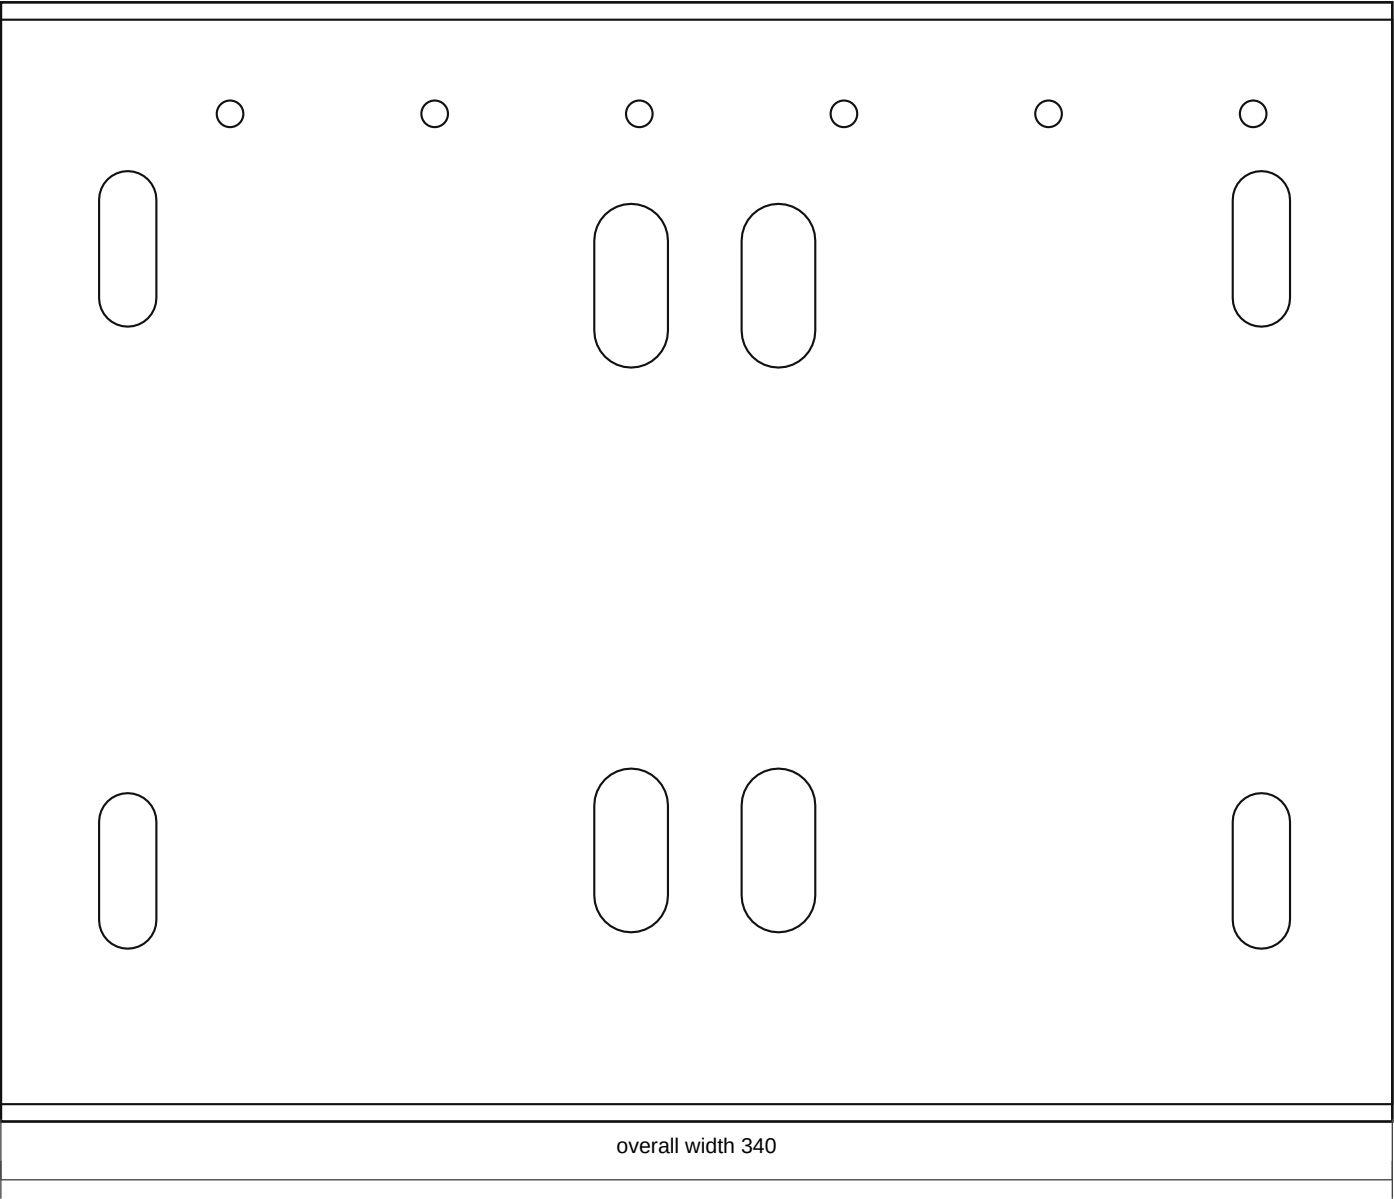


Fabrication Notes

- Compact battery stand top tray: 340 x 265 x 3.0 mm mild steel tray/deck around a standard N70/27-class battery envelope up to 318 x 180 x 230 mm with service allowance.
- The battery must be clamped by a removable top crossbar and J-rods/vertical rods outside the terminal path. Remove the hold-down before lifting the battery vertically out of the tray.
- Add low end/side stops or a formed edge so the battery cannot slide, but keep them low enough that the case can still be lifted out when the hold-down is removed.
- Electrical equipment uses the raised front/radiator-side access ladder: Relay Rev D vertical flat base directly attached to the outboard/access edge main sheet, MIDI Rev D hinged enclosure at the battery leading-edge datum, and the cutoff/kill switch beside the MIDI enclosure rather than after the fuse outputs. Route battery positive into the cutoff first, then split the cutoff output to the relay battery-side top hole and MIDI input. Do not use tray skin or the engine-side gap as a large backplane.
- Final battery footprint, central terminal positions/orientation, clamp path, bonnet clearance, front-cavity clearance, and LHD steering-side clearance are vehicle-measurement holds.
- Add an acid-resistant battery mat after paint; do not allow battery case or terminals to touch live studs or sharp steel edges.
- No bends in this part.

battery_stand_compact_single_chassis_pickup_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

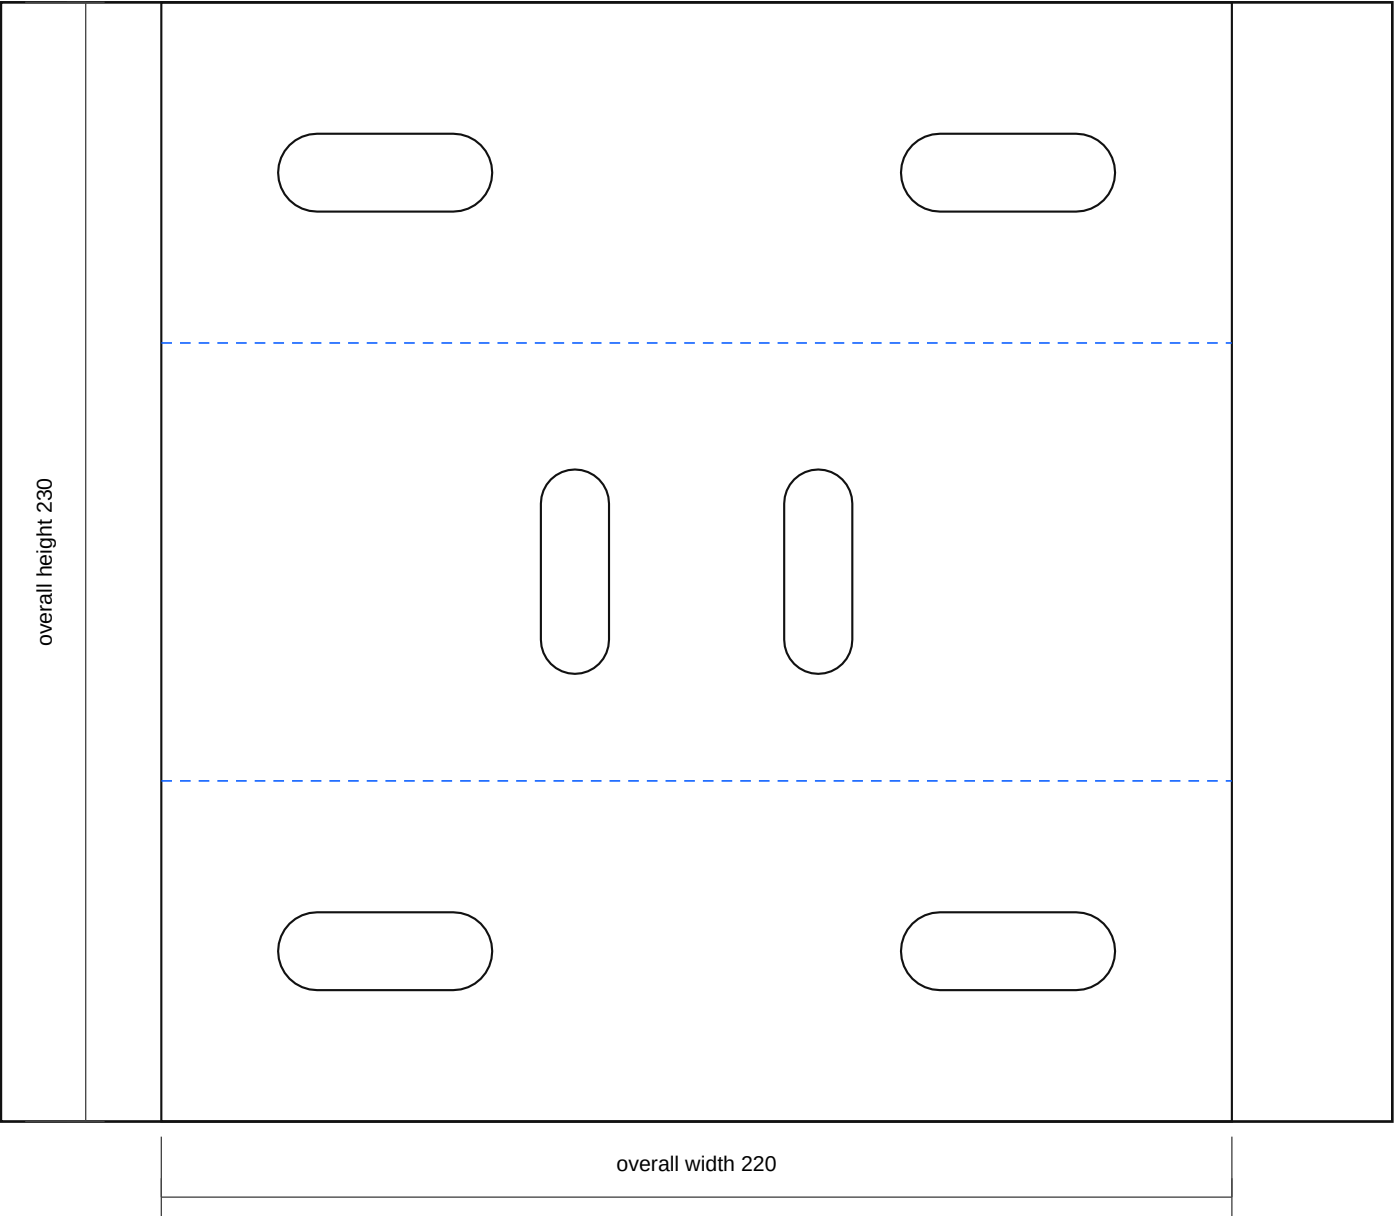

Fabrication Notes


- Compact single chassis saddle mount: nominal 220 x 230 x 4.0 mm mild steel flat pattern, formed over the one known chassis rail location.
- Bend blue lines 90 degrees downward to make a saddle: 70 mm near leg, measured chassis top cap nominal 90 mm, 70 mm far leg. Adjust the cap width after measuring the rail.
- Through-bolt both saddle legs and the chassis rail as one pickup location. Final slot pitch, bolt size, and crush-tube need are site-fit only.
- Top-cap slots take the upright/service-rail bridge. Do not add an independent second chassis fixing unless dry-fit proves the single-pickup route is not stiff enough.
- Deburr, radius leg bottoms, prime, isolate from fretting with an anti-chafe pad where appropriate, and protect before final assembly.
- Bend all blue dashed lines to 90 degrees.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_compact_single_chassis_pickup_rev_b.dxf
- SVG: battery_stand_compact_single_chassis_pickup_rev_b.svg

battery_stand_adjustable_offset_bar_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

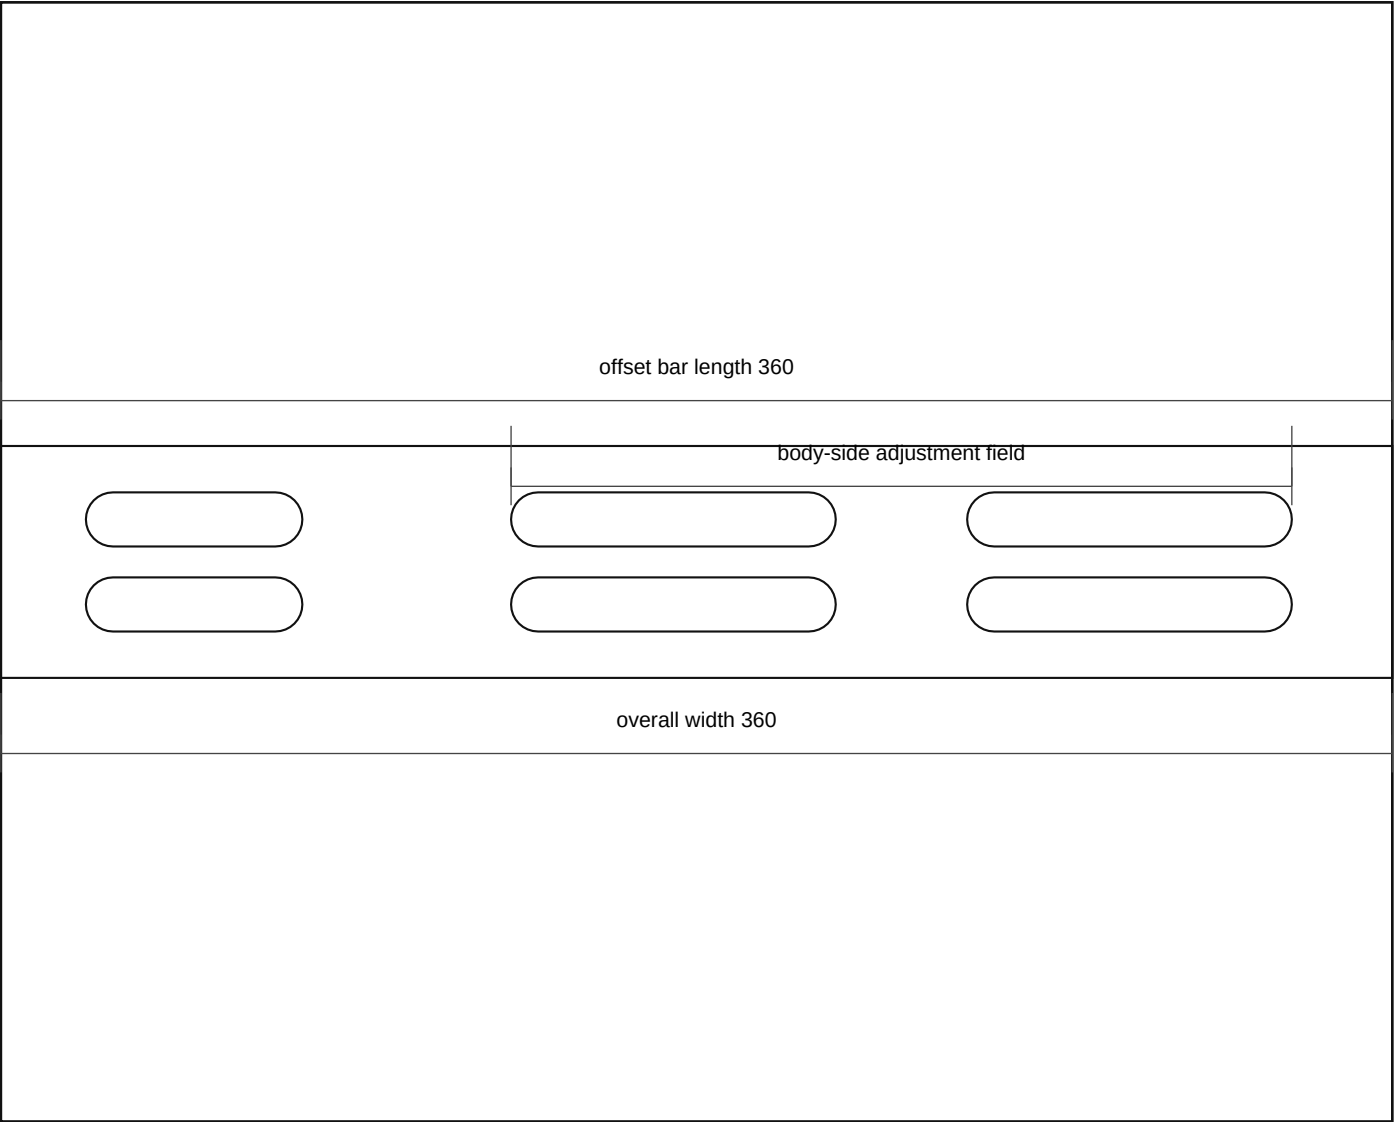

Fabrication Notes


- Adjustable body-side offset bar: 360 x 60 x 4.0 mm mild steel. Make two mirrored bars unless the mock-up proves one central bar and gussets are stiffer.
- This bar bolts from the formed chassis saddle/upright bridge toward the body/wing-side battery pocket so the tray/access-ladder offset can be configured.
- Use the slotted fields to set the final body-side offset after the battery, relay Rev D base, MIDI Rev D enclosure, cutoff, bonnet, steering, and hose clearances are mocked.
- Initial target is about 190 mm body/wing-side offset from the chassis pickup centreline, with 160-230 mm adjustment retained before final drilling.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_adjustable_offset_bar_rev_b.dxf
- SVG: battery_stand_adjustable_offset_bar_rev_b.svg

battery_stand_compact_single_mount_upright_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

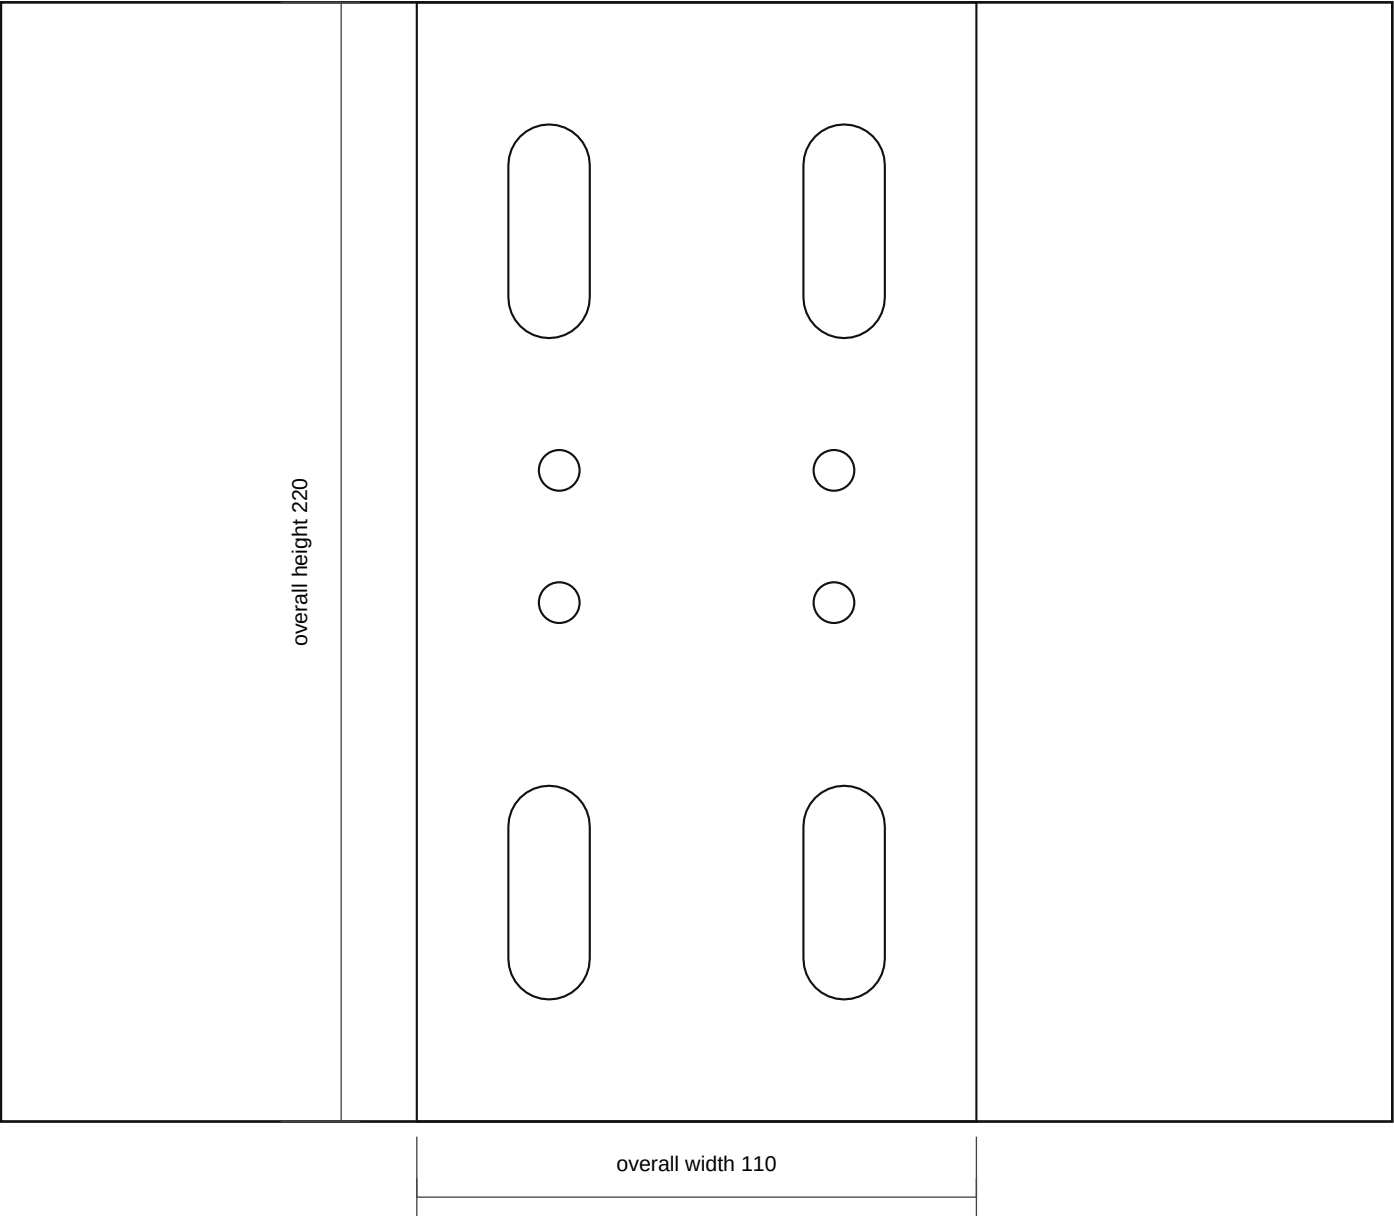

Fabrication Notes


- Compact single-mount upright bridge side plate: 110 x 220 x 4.0 mm mild steel between the one central chassis pickup and compact tray.
- Make two mirrored side plates around the single pickup bridge if the mock-up needs side-to-side stiffness. This is not a second chassis fixing location.
- Lower holes align to the formed chassis saddle top cap; upper holes align to the adjustable body-side offset bars and compact tray/front rail saddle.
- Mock the upper tray/front-rail pickup about 190 mm wing-side/outboard from the chassis pickup centreline using the slotted offset bars, with 160-230 mm side-jog adjustment because the chassis rail is more central than the required battery pocket and the electrical devices must sit in the edge cavity.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_compact_single_mount_upright_rev_b.dxf
- SVG: battery_stand_compact_single_mount_upright_rev_b.svg

battery_stand_compact_hold_down_crossbar_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

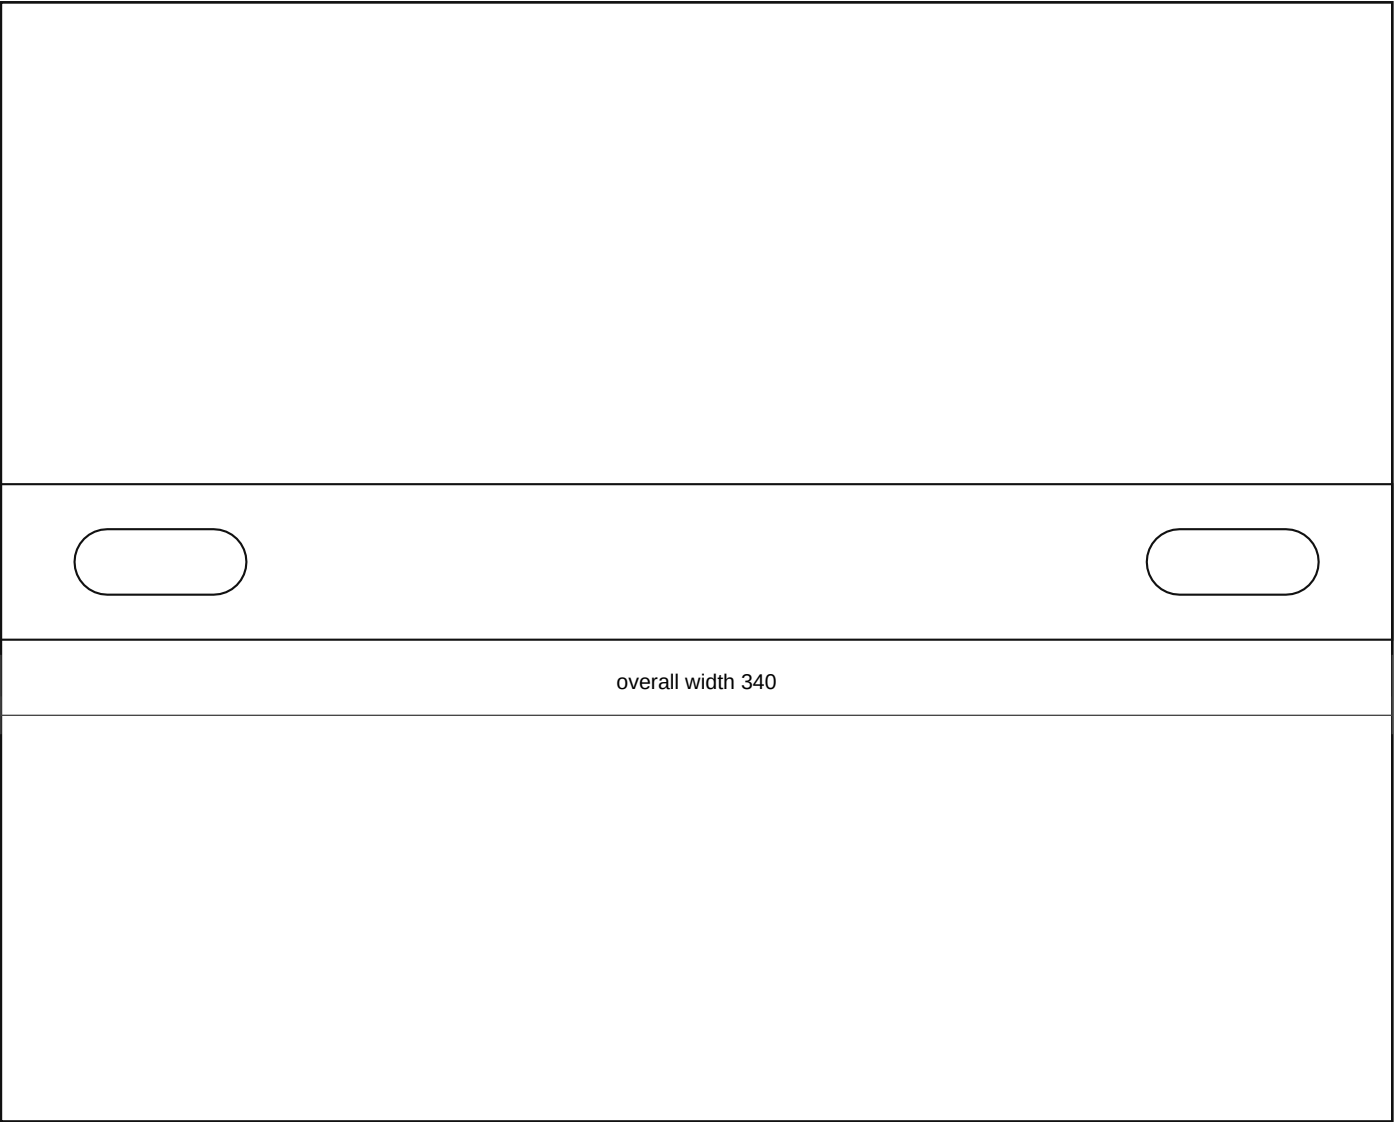

Fabrication Notes


- Compact battery hold-down crossbar: 340 x 38 x 3.0 mm mild steel or stainless. Length and slots cover the standard N70/27-class battery envelope but remain template values until the actual battery is measured.
- Use J-bolts or vertical rods that cannot touch battery terminals. Add insulated caps where needed.
- The crossbar is a service-removable restraint; the battery must lift out vertically after the crossbar and rods are removed.
- Do not over-tighten against a plastic battery case; retain the battery without distorting it.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_compact_hold_down_crossbar_rev_b.dxf
- SVG: battery_stand_compact_hold_down_crossbar_rev_b.svg

battery_power_compact_cutoff_tab_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

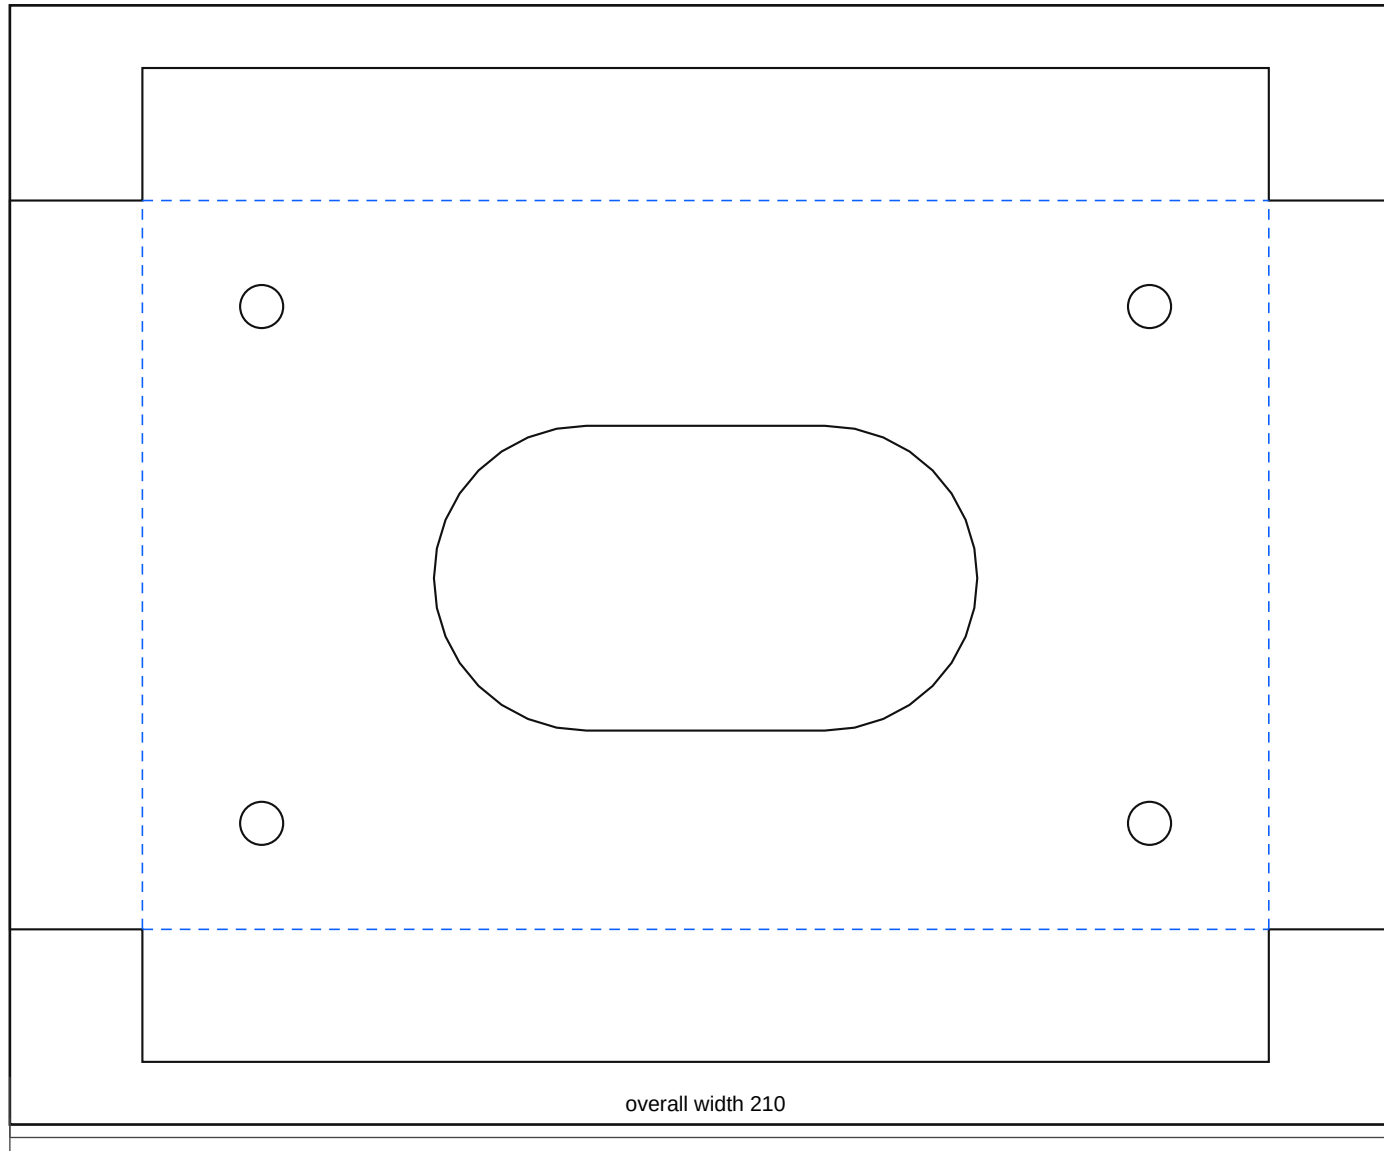

Fabrication Notes

- Folded cutoff aluminium base/guard: 210 x 150 flat pattern, 170 x 110 finished face, 20 mm guard lips bent upward toward the 100A breaker/terminal side.
- Use 3.0 mm 5052-H32 aluminium unless dry-fit proves the cutoff must bolt to a steel structural tab instead.
- Open final breaker mounting holes only after the actual 100A breaker body, reset lever sweep, terminal studs, and cable-lug depth are measured.
- Guard lips must not trap water, block emergency access/reset operation, or foul the breaker body, cable lugs, bonnet, or battery terminal service envelope.
- Bend all blue dashed lines to 90 degrees.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_power_compact_cutoff_tab_rev_b.dxf
- SVG: battery_power_compact_cutoff_tab_rev_b.svg