


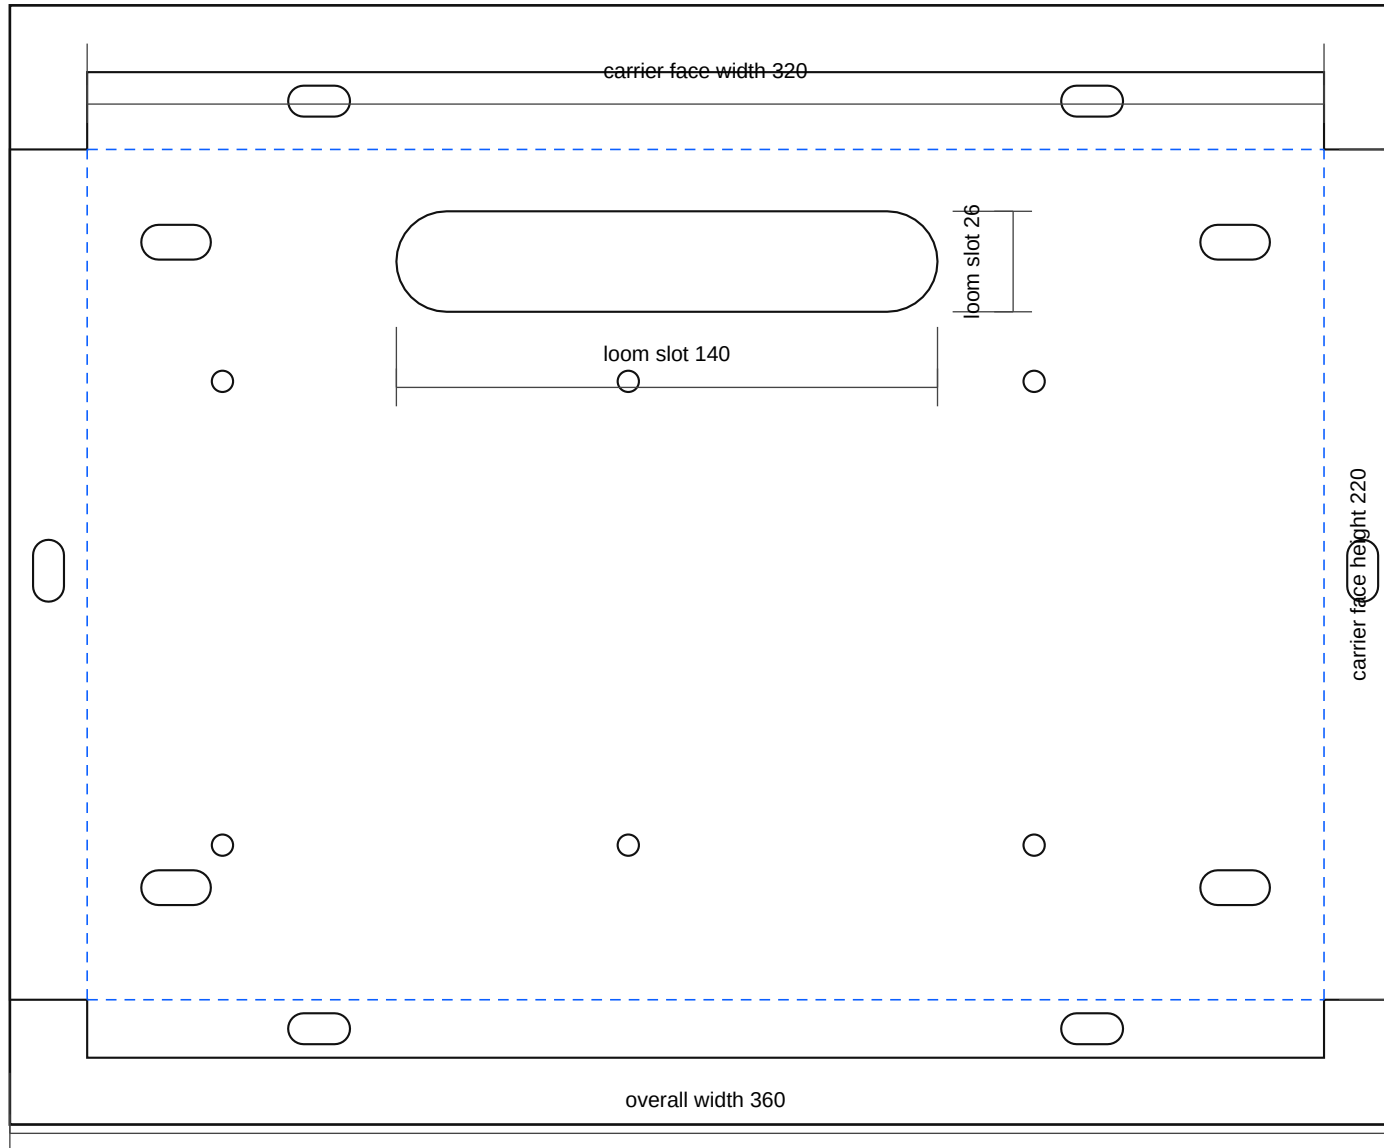


Fabrication Notes

- Relay carrier: 3.0 mm 5052-H32 aluminium. Finished face 320 x 220 with 20 mm side/bottom returns and 15 mm top return.
- Relay-box mount pattern remains slotted on purpose, even with the published housing size confirmed.
- Use 5-10 mm stand-off spacing between the relay box and the rear guard zone so the loom is not crushed against the carrier.
- Vehicle-side mount slots remain site-fit to suit the repaired battery/tray structure and inner-wing support.
- Bend all blue dashed lines to 90 degrees.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: relay_carrier_rev_c.dxf
- SVG: relay_carrier_rev_c.svg

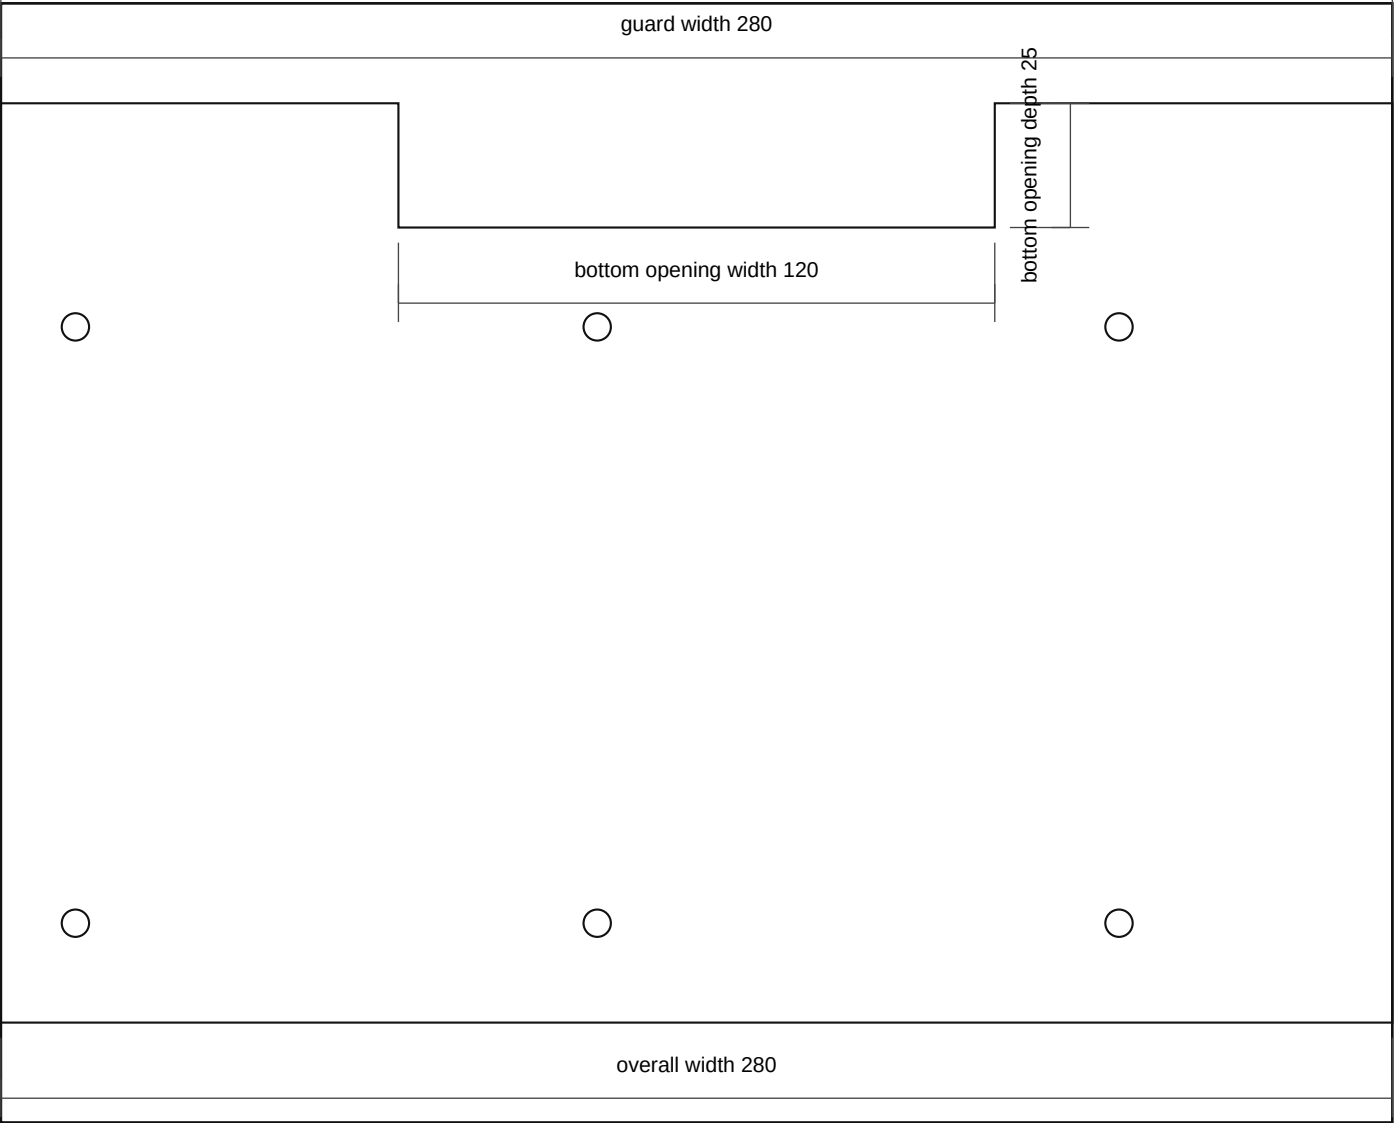

Fabrication Notes

- Rear splash guard: 3.0 mm ABS, HDPE, or polypropylene. This sits behind the relay box on spacers.
- Open lower center section gives loom drop room and leaves a drain path; this guard is not meant to fully seal the relay-box rear.
- Guard-to-carrier holes match the six spacer locations in the aluminium carrier when the guard is centered on the carrier face.
- If you want more side splash coverage later, that should be added as simple clipped side flaps rather than sealing this panel in.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: relay_rear_guard_rev_c.dxf
- SVG: relay_rear_guard_rev_c.svg