
Emulator Desk

A Mac control panel for the Freematics OBD-II Emulator MK2


App **v1.0**
Document **v1.0**

Emulator Desk drives a Freematics MK2 emulator from Google Chrome over its USB cable, so a Mac can do what the Windows-only Freematics GUI does. You set live engine values, the VIN, the bus protocol and trouble codes, and any OBD-II dongle or scan tool plugged into the emulator reads them as if it were in a real car. It is one HTML file with nothing to install.

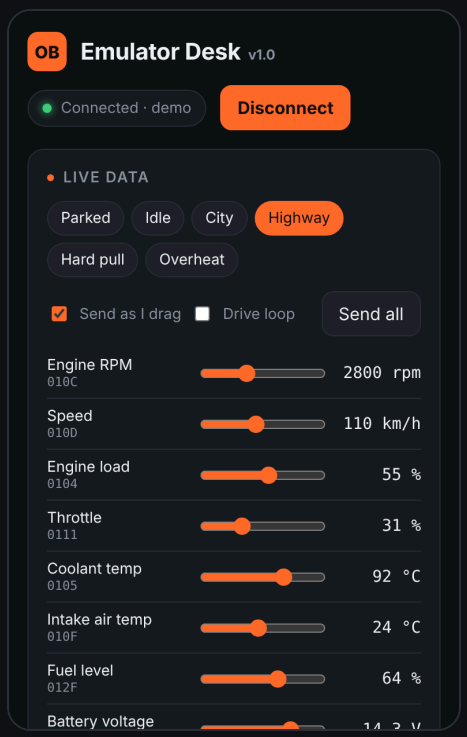


Live data

Ten sliders for the common Mode 01 values, with presets from Parked to Overheat. Values go out as you drag.

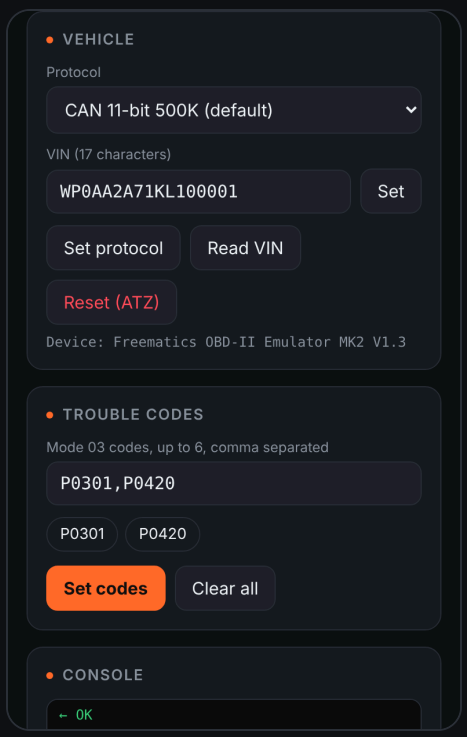

Vehicle and codes

Pick the protocol, set or read back the VIN, and load up to six Mode 03 trouble codes. Clear them in one tap.

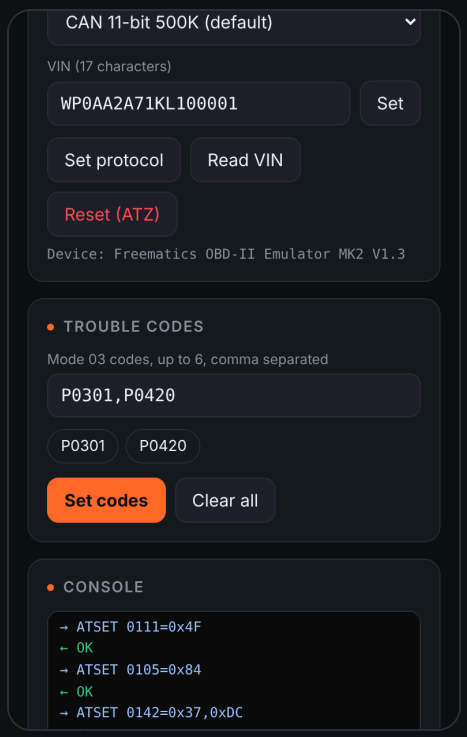

Console

Every command and reply is logged. Type any AT command by hand when you need something the panel doesn't cover.

10 live PIDs with sliders	**6** driving presets plus a drive loop	**7** bus protocols to choose from	**0** installs, accounts or servers

LIVE DATA

RPM, speed, load, throttle, coolant, intake and ambient temperature, fuel level, battery voltage and MAF. Each value is converted to the raw bytes the OBD-II standard uses, since the emulator's own decimal input rounds badly.

DRIVE LOOP

Cycles through pulling away, cruising near 90 km/h and braking to a stop, pushing new values every 0.6 seconds so a dongle sees a moving car.

GOOD TO KNOW

Values aren't read back from the emulator on connect, so press Send all to sync. Reset (ATZ) sets every PID to zero. Protocol names are from Freematics' docs; if a choice returns ERROR, your firmware doesn't support it.

COMING NEXT

Nothing planned yet.

Technical setup

Sources, integrations and what runs where

App **v1.0**
Document **v1.0**

SOURCES AND LIBRARIES

Piece	Version	What it does	Loaded from	Licence
Emulator Desk	1.0	The whole app: UI, command queue, PID encoding, presets, drive loop	One local file, `Emulator Desk.html`	Written for this app
Freematics AT command set	MK2 firmware V1.2 / V1.3	Commands the app sends: `ATE0`, `ATI`, `ATZ`, `ATSET`, `ATGET VIN`, `ATCLR DTC`	Built into the emulator	Freematics
OBD-II PID formulas	SAE J1979	Byte encodings for each slider (e.g. RPM × 4 as two bytes, temperature + 40)	Hard-coded in the app	Public standard
System fonts	n/a	SF Pro and SF Mono on Mac, Arial and Consolas elsewhere	The operating system	OS fonts

No third-party libraries, CDNs or web fonts are used.

INTEGRATIONS

Integration	Used for	Details
Web Serial API	Talking to the emulator	`navigator.serial.requestPort()`, opened at 38400 baud, 8N1. Commands end in `\r`. You pick the port in Chrome's chooser; no auth. Works in Chrome and Edge, not Safari or Firefox.
Freematics OBD-II Emulator MK2	The device being controlled	USB to serial through a CP2102 (newer units, `/dev/cu.usbserial-*`) or CH340 bridge, both with drivers built into macOS. Needs its 12V adapter for power. The app labels the chip from the USB vendor ID.
Your OBD-II dongle or scan tool	Reads the emulated car	Plugs into the emulator's 16-pin port. Emulator Desk never talks to it directly.

WHAT RUNS WHERE

On your Mac: everything. The page runs in Chrome and sends one command at a time, waiting up to 1.2 seconds for OK or ERROR before the next.

Network: none. The app makes no web requests and works offline.

Data kept: nothing. Slider values, VIN and codes live only in the open page and on the emulator itself.

Demo mode: add `?demo` to the address to try the app without hardware. The screenshots in this document use it with sample values.

REGENERATING THIS DOCUMENT

In `docs/overview`, run `node shoot.js` to retake the screenshots in demo mode at 390 × 844, then `node pdf.js` to print `overview.pdf` on Letter pages.