


Reference STMicroelectronics Application Note AN4938 for details on basic STMH74x circuits

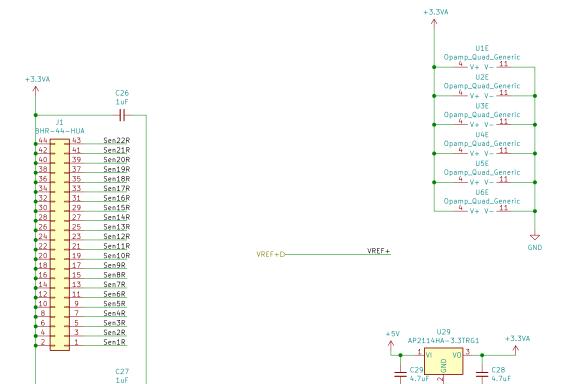



The resistors here set the gain of the transimpedance amplifiers. They should be (max expected current) \* R =  $\overline{\text{VREF}}$ +



GND

