ECET 250E

# Linear Circuits 1

Week 2 | Chapter 2: Basic Laws

**Camosun College**
Electronics & Computer Engineering Technology

**Mozhgan Bacon, PhD, P.Eng.**

Fall 2026

*Based on Fundamentals of Electric Circuits, 2026 Release — C.K. Alexander, M.N.O. Sadiku & S.J. Fredette (McGraw Hill)*

# Overview

This chapter will introduce **Ohm's law**: a central concept in electric circuits.

**Resistors** will be discussed in more detail.

**Circuit topology** and the **voltage and current laws** will be introduced.

Finally, **meters** for measuring voltage, current, and resistivity will be presented.

© McGraw Hill

# Resistivity

- Materials tend to resist the flow of electricity through them.
- This property is called "resistance".
- The resistance of an object is a function of its length, **L**, and cross-sectional area, **A**, and the material's resistivity (rho):

$$R = \rho \frac{l}{A}$$

© McGraw Hill

# Resistivity of Common Materials

Copyright © The McGraw-Hill Companies, Inc. Permission required for reproduction or display

**TABLE 2.1**

Resistivities of common materials.

| Material | Resistivity ($\Omega \cdot m$) | Usage |
|---|---|---|
| Silver | $1.64 \times 10^{-8}$ | Conductor |
| Copper | $1.72 \times 10^{-8}$ | Conductor |
| Aluminum | $2.8 \times 10^{-8}$ | Conductor |
| Gold | $2.45 \times 10^{-8}$ | Conductor |
| Carbon | $4 \times 10^{-5}$ | Semiconductor |
| Germanium | $47 \times 10^{-2}$ | Semiconductor |
| Silicon | $6.4 \times 10^{2}$ | Semiconductor |
| Paper | $10^{10}$ | Insulator |
| Mica | $5 \times 10^{11}$ | Insulator |
| Glass | $10^{12}$ | Insulator |
| Teflon | $3 \times 10^{12}$ | Insulator |

# Resistivity of Common Materials

- Resistivity also referred as Specific Electrical Resistance.
- Resistivity allows to compares the resistance of different materials at ***specified temperature*** as per their ***physical properties*** regardless of length, area of cross section.


Example:


- Copper - a good conductor, has low resistance
- Glass - a good insulator, has high resistance.

© McGraw Hill


# Resistor


- Resistors are classified in two main categories: fixed or variable.
- Fixed resistor – whose resistance is fixed by the manufacture and does not change
  - Schematic symbol

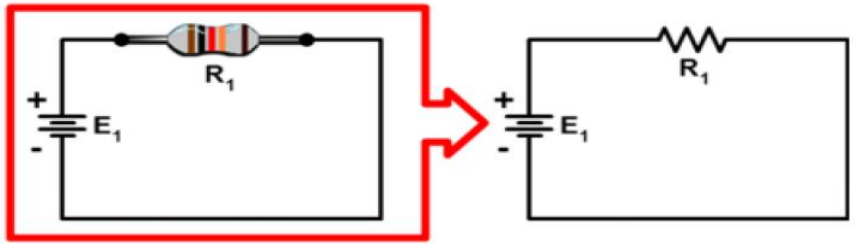

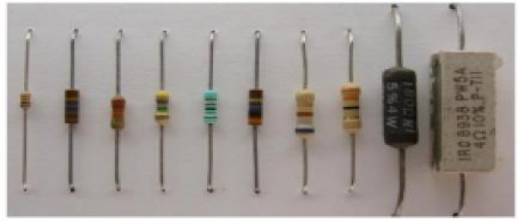- Variable resistor – whose resistance is adjustable from 0 to some value
  - Has three terminals
  - Two variable resistor types: potentiometer and rheostat
  - shaft for adjusting
  - Terminal 1,3 maximum, Terminal 1,2 or 2,3 adjusted resistance
  - Example: Volume control
  - Schematic symbol
  - Potentiometer – aka *Pot*
- Potentiometer Functions
  - Act as a voltage divider in the circuit

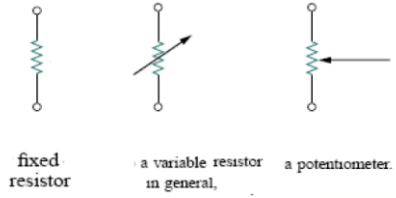


© McGraw Hill
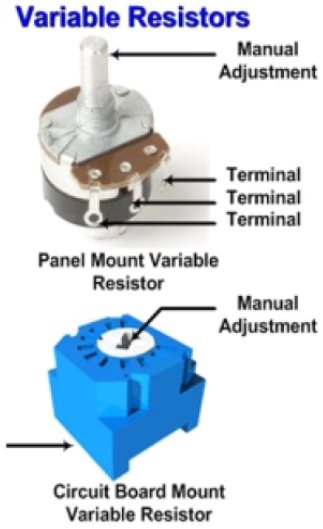
# Resistor Colour Code

- The resistor color code uses colors to represent numbers.
- Each color on the chart is equal to a number or percentage.
- Thus, these color bands provide a means to identify the resistor's resistance value and tolerance.



br bl br
③ ⓪ ①

$10 \times 10^2 \pm 5\%$

$10 \times 10^1 \pm 5\%$

$100\Omega \pm 5\%$

100 — 5%
×
100 — ?


$\frac{100 \times 5}{100} = 5$

95 → 105


4- Band Code




| Color | 1st Band | 2nd Band | 3rd Band | Decimal Multiplier | | Tolerance |
|---|---|---|---|---|---|---|
| Black | 0 | 0 | 0 | 1 | 1 | |
| Brown | 1 | 1 | 1 | 10 | 10 | ± 1 % |
| Red | 2 | 2 | 2 | 100 | 100 | ± 2 % |
| Orange | 3 | 3 | 3 | 1K | 1,000 | |
| Yellow | 4 | 4 | 4 | 10K | 10,000 | |
| Green | 5 | 5 | 5 | 100K | 100,000 | |
| Blue | 6 | 6 | 6 | 1M | 1,000,000 | |
| Violet | 7 | 7 | 7 | 10M | 10,000,000 | |
| Gray | 8 | 8 | 8 | | 100,000,000 | |
| White | 9 | 9 | 9 | | 1,000,000,000 | |
| Gold | | | | | 0.1 | ± 5 % |
| Silver | | | | | 0.01 | ± 10 % |
| None | | | | | | ± 20 % |

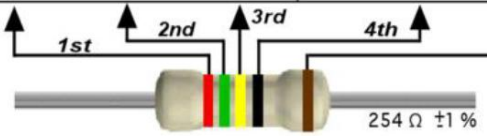


5- Band Code

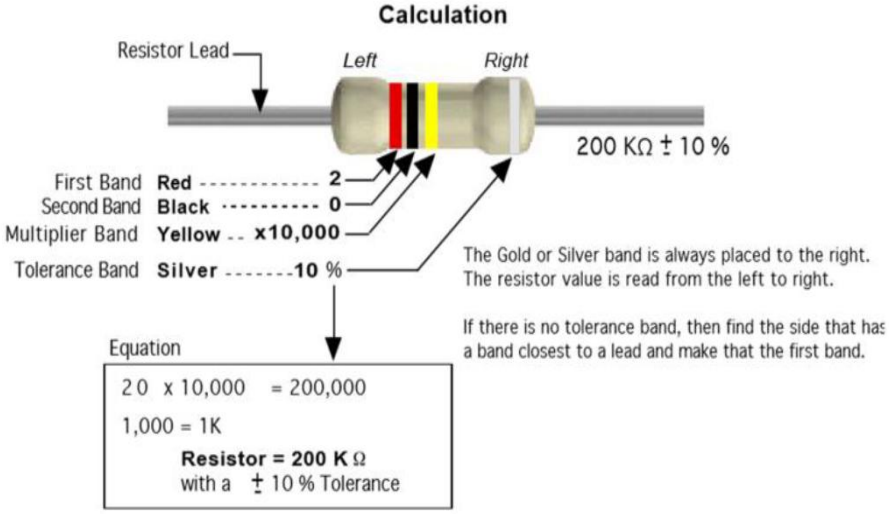


© McGraw Hill

# Conductance

- What is conductance?
  - Measures how well a material will conduct current.
  - It is reciprocal of resistance, denoted with symbol, G
  - Measured in Siemens (S)

$$\text{Conductance} = \frac{1}{\text{Resistance}}$$

**In symbol notation:**

$$G = \frac{1}{R} \quad \text{(measured in siemens, S)}$$

$\Omega^{-1}$

- Example: 1M Ohm resistance, is $10^{-6}$S conductance
- An Imp. Note:
  - Large the conductance, less the resistance
  - Thus greater the conductivity


$G = \frac{1}{1M} = 10^{-6} S$


© McGraw Hill

# Ohm's Law

- *In a resistor*, the **voltage** across a **resistor** is **directly proportional** to the **current** flowing through it.

$$V = IR$$

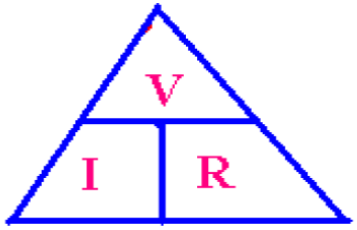


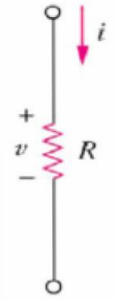
- The resistance of an element is measured in units of Ohms, Ω, (V/A).
- The **higher** the *resistance*, the **less** *current* will flow through for a given voltage.
- Ohm's law requires conforming to the passive sign convention.

Ohm's law states that the voltage *v* across a resistor is directly proportional to the current *i* flowing through the resistor.


© McGraw Hill

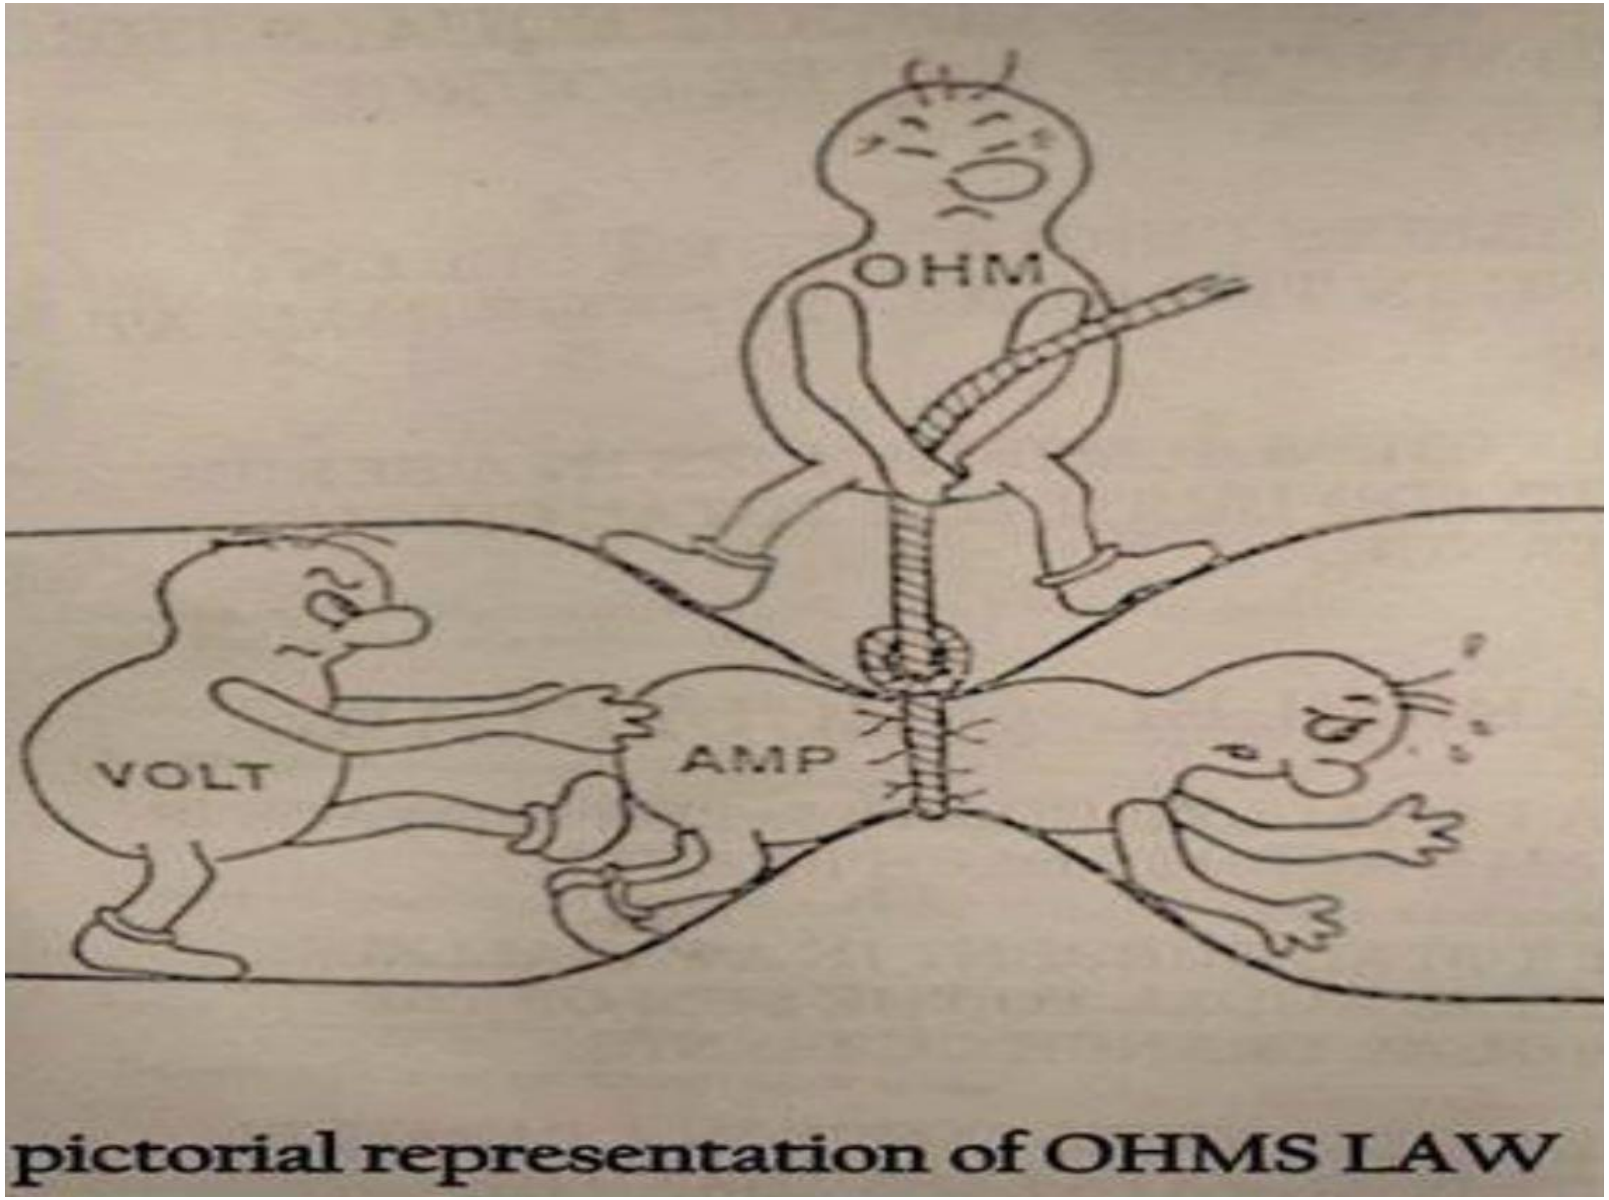


pictorial representation of OHMS LAW

© McGraw Hill


# How to mark voltage and current direction on a circuit ?

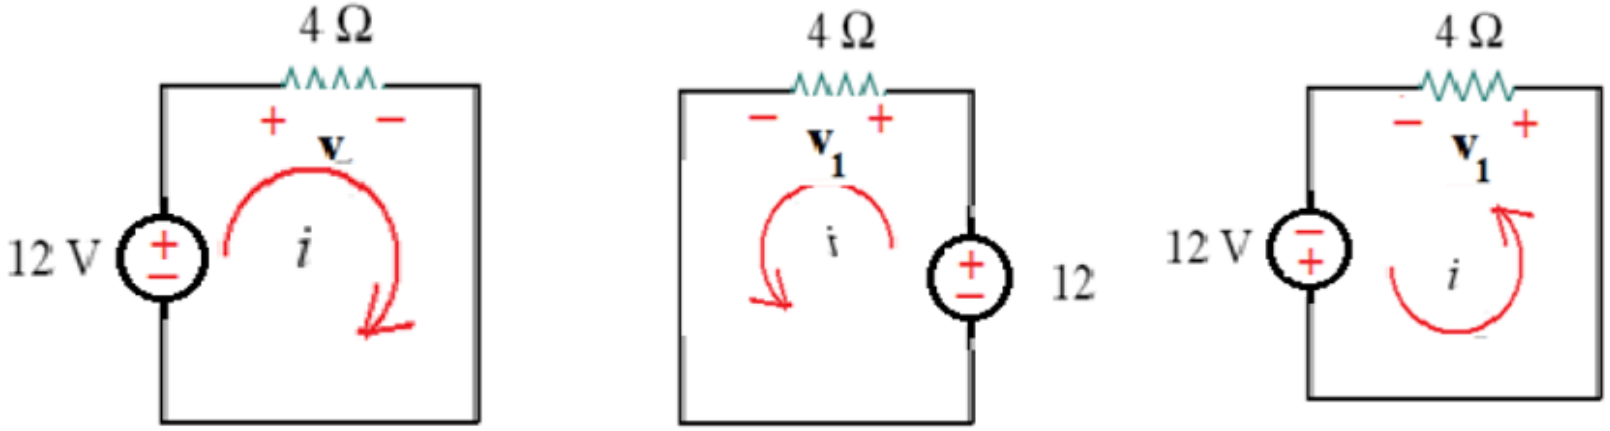




We know that the conventional current direction starts from the +ve terminal of the battery and enters the circuit.


Remember: whichever end of the resistor the current touches first, we mark that end as +ve and other end -ve, for the voltage sign.


© McGraw Hill

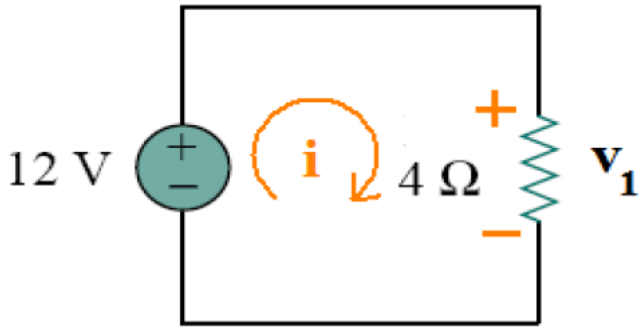


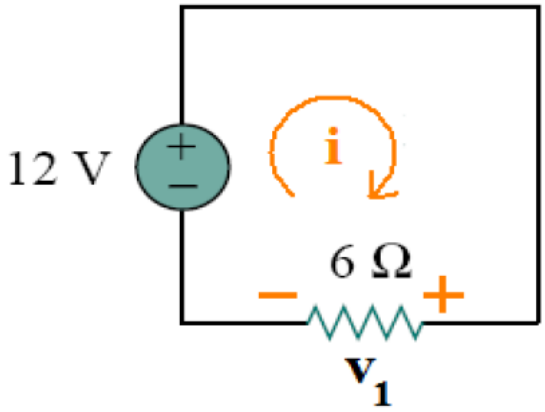


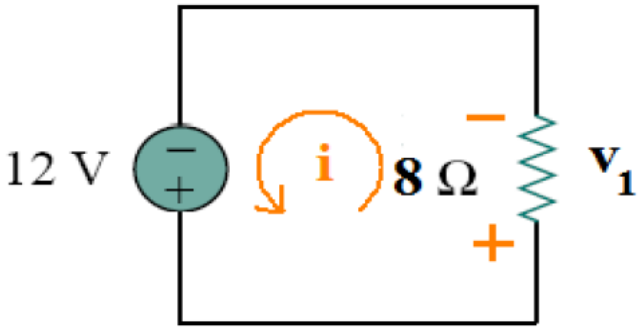
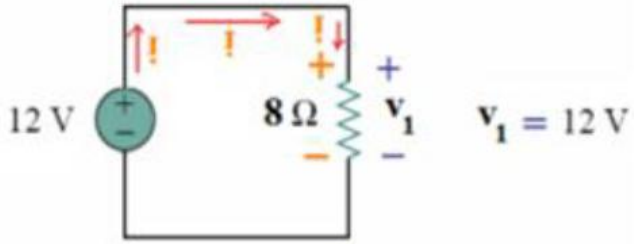

© McGraw Hill
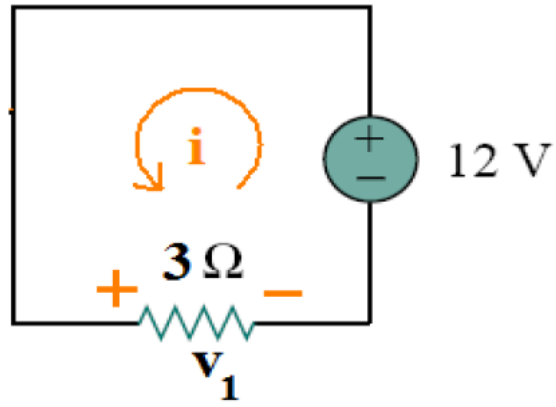
# Voltage Sign

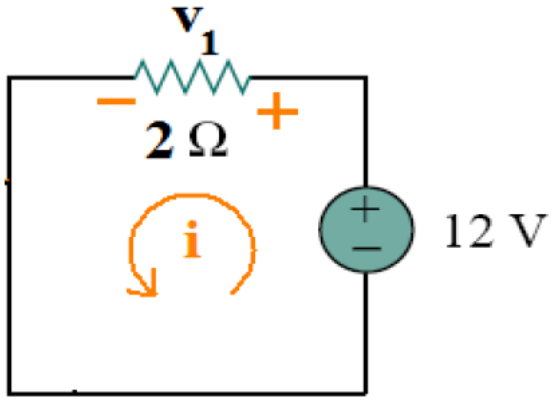If a voltage sign in already marked on a resistor ( circuit)
we must check whether the voltage sign conforms to the current direction or not.

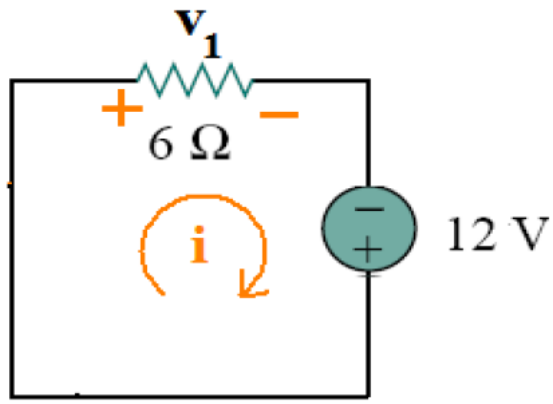
**Example 1**

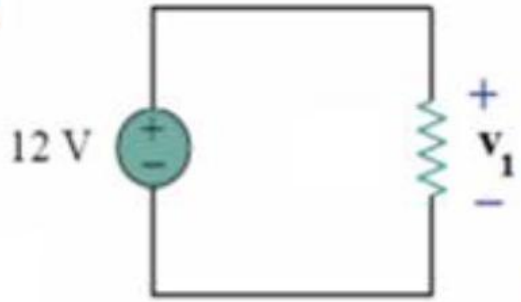



If the sign conforms to the current direction then it is OK.

**Example 2**

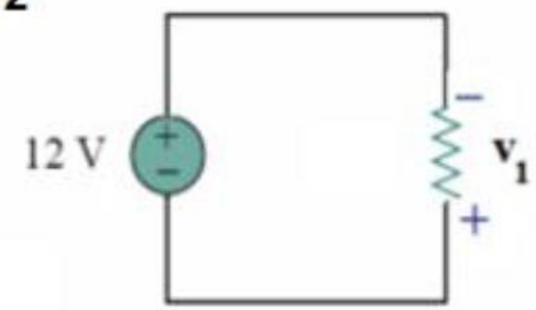


If the sign does not conform to the current direction,

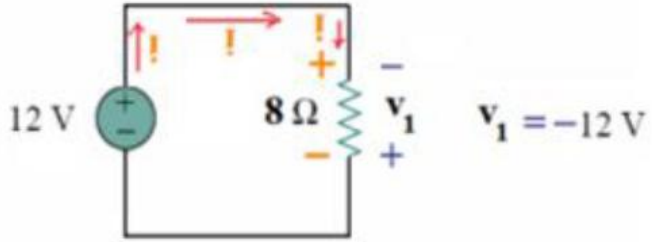the voltage value will be taken (written) as negative.

© McGraw Hill

# Short and Open Circuits


- A connection with almost **zero resistance** is called a short circuit.
- Ideally, any current may flow through the short.
- In practice this is a connecting wire.
- A connection with **infinite resistance** is called an open circuit.
- Here no matter the voltage, no current flows.

© McGraw Hill

## When R = 0

A **short circuit** is a circuit element with resistance approaching zero.

$$v = iR = 0$$

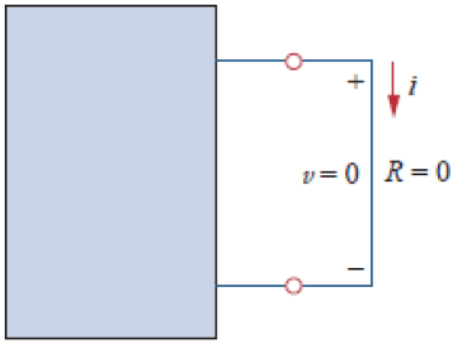



(a) Short circuit ($R = 0$)

## When R = ∞

An **open circuit** is a circuit element with resistance approaching infinity.

$$i = \lim_{R \to \infty} \frac{v}{R} = 0$$

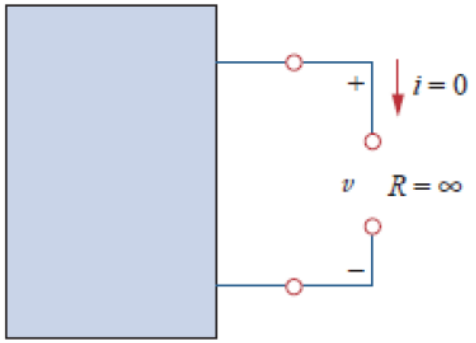



(b) Open circuit ($R = \infty$).

© McGraw Hill


# Linearity

- Not all materials obey Ohm's Law.
- Resistors that do are called linear resistors because their current voltage relationship is always linearly proportional.
- Diodes and light bulbs are examples of non-linear elements.

Copyright © The McGraw-Hill Companies, Inc. Permission required for reproduction or display

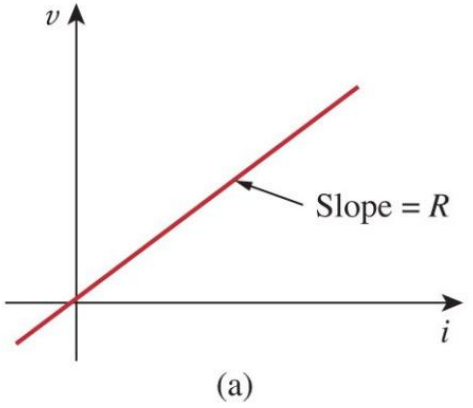


(a)

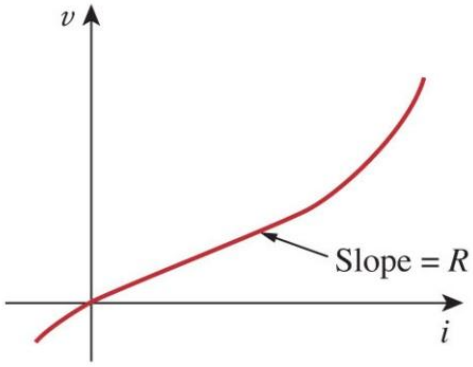


(b)

# Power Dissipation

- Running current through a resistor **dissipates power**.

$$P = vi = i^2 \times R = \frac{v^2}{R}$$


- The power dissipated is a non-linear function of current or voltage.
- Power dissipated is always **positive**.
- A resistor can never generate power.

© McGraw Hill

The power dissipated by a resistor can be expressed in terms of $R$.

$$p = vi = (iR)i = i^2R$$

$$= vi = v\left(\frac{v}{R}\right) = \frac{v^2}{R}$$

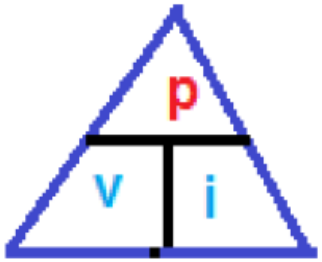


A resistor always absorbs power from the circuit.

A battery supplies power

© McGraw Hill

# Examples

## Example 2.1

An electric iron operates at 120 V and draws a current of 2 A. Find its resistance.

$I=V/R$

## Practice Problem 2.1

A toaster has a heating element with resistance of 15 Ω. If it is connected to a 110 V supply, how much current does it draw?

© McGraw Hill

# Examples

## Example 2.2

In the circuit shown in Fig. 2.8, calculate the current i, the conductance G, and the power p.

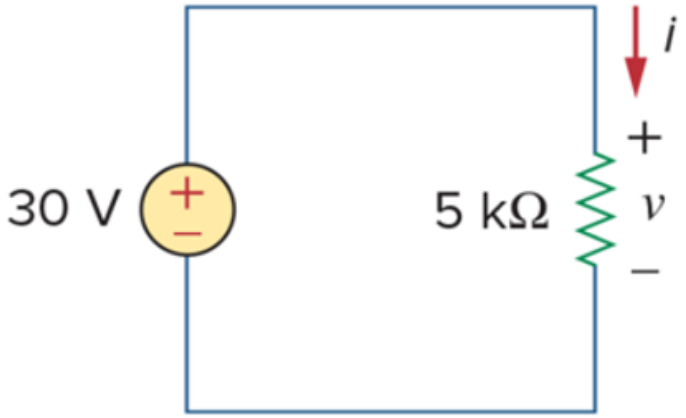



Figure 2.8
For Example 2.2.

© McGraw Hill

# Examples

## Practice Problem 2.2

For the circuit shown in Fig. 2.9, calculate the voltage v, the conductance G, and the power p.

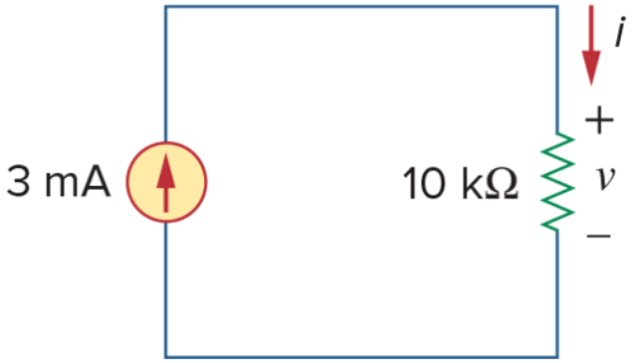



Figure 2.9
For Practice Prob. 2.2

© McGraw Hill

# Examples

## Example 2.3

A voltage source of 20sinπt V is connected across a 5-kΩ resistor. Find the current through the resistor and the power dissipated.

## Practice Problem 2.3

A resistor absorbs an instantaneous power of $30\cos^2 t$ mW when connected to a voltage source v=15cost V. Find i and R.

© McGraw Hill

# Nodes Branches and Loops


- Circuit elements can be interconnected in multiple ways.
- To understand this, we need to be familiar with some network topology concepts.
- A **branch** represents a single element such as a voltage source or a resistor.
- A **node** is the point of connection between two or more branches.
- A **loop** is any closed path in a circuit.


© McGraw Hill

# BRANCHES

A branch represents a single element such as a voltage source or a resistor.

In other words, a branch represents any two-terminal element.

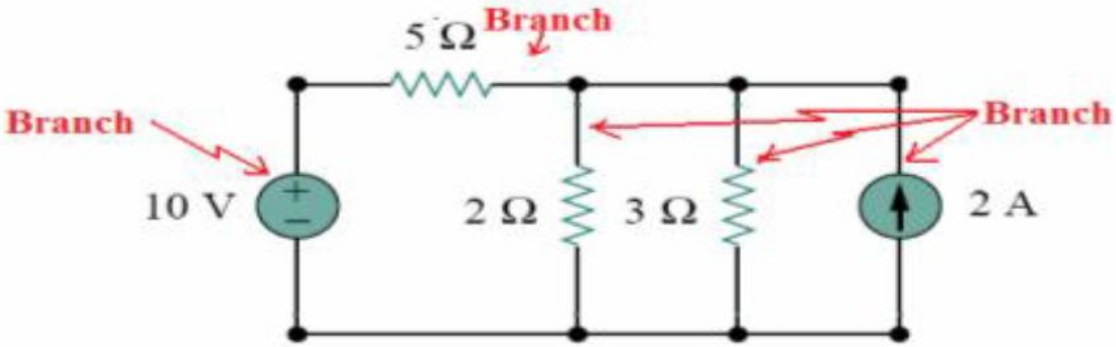

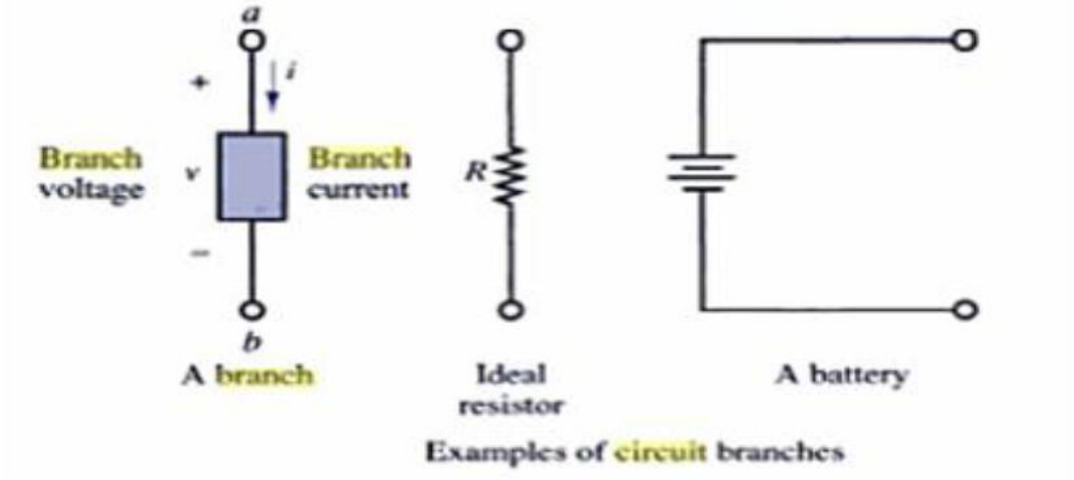



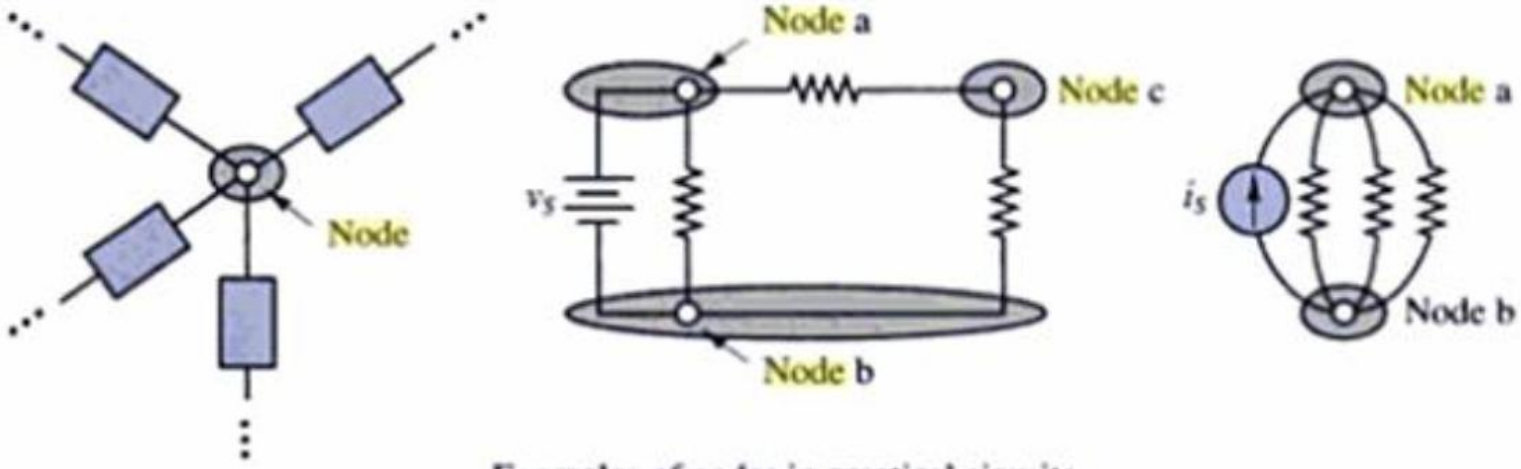

Examples of circuit branches

© McGraw Hill

# NODES

A node is the point of connection between two or more branches.

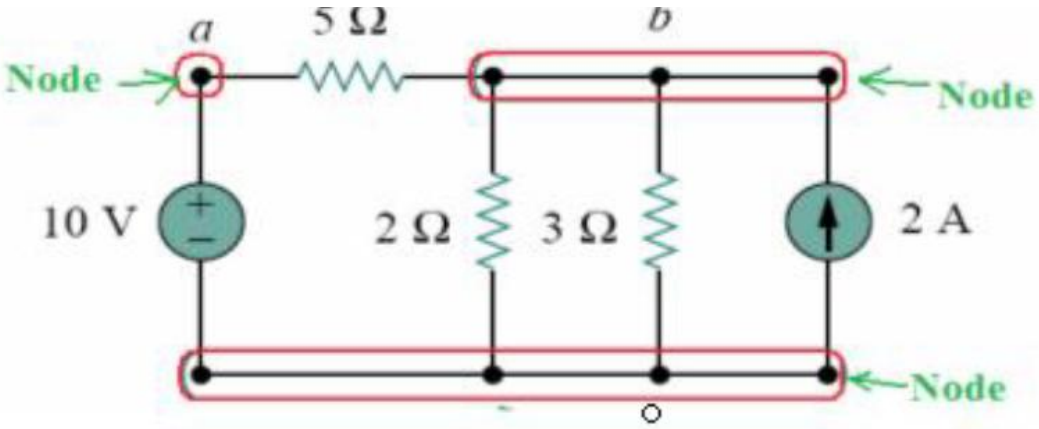



Examples of nodes in practical circuits

© McGraw Hill


# (A circuit can be drawn in several ways)

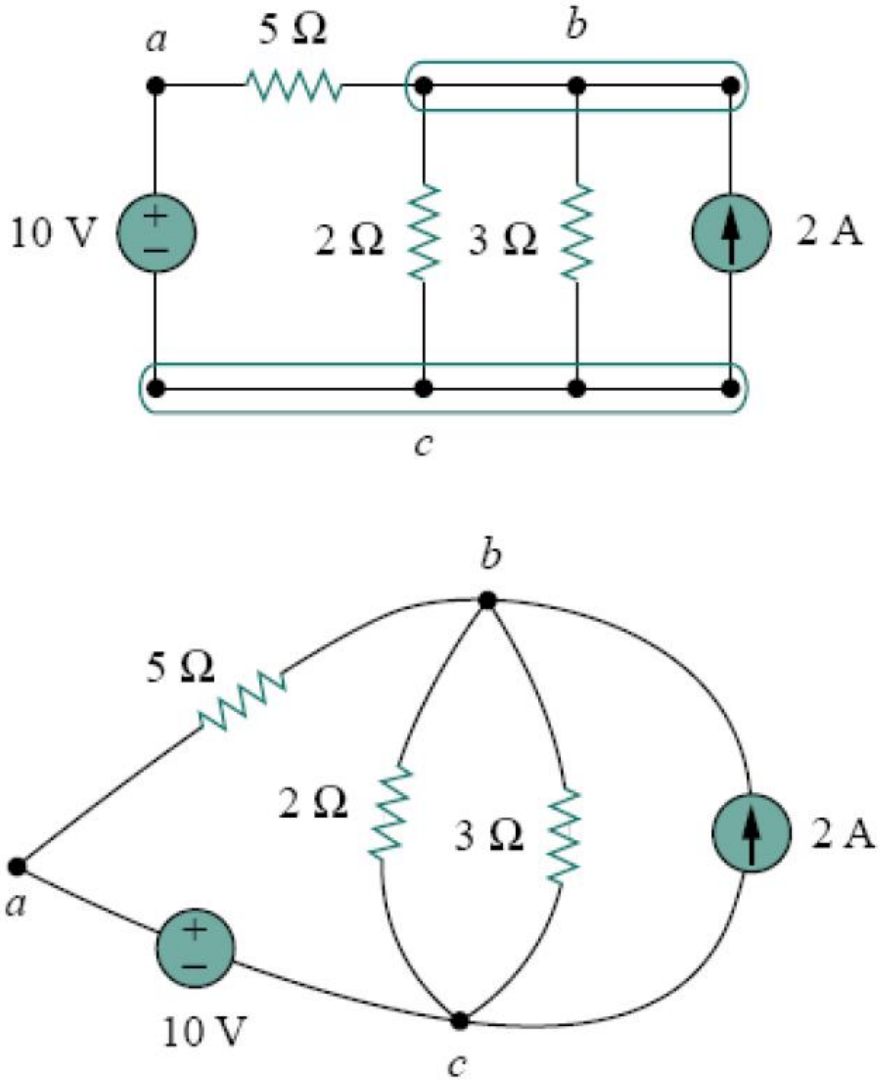




© McGraw Hill


A loop is any closed path in a circuit.


A loop is a closed path formed by starting at a node, passing through a set of nodes, and returning to the starting node without passing through any node more than once.

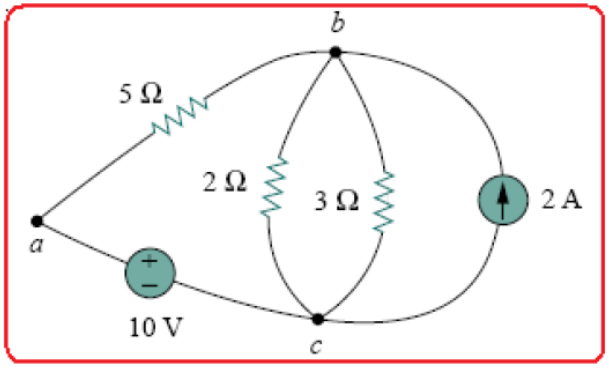


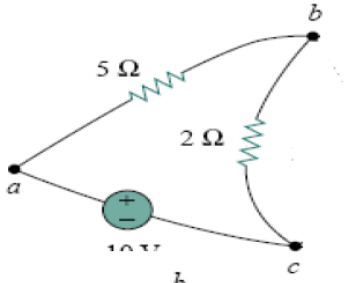


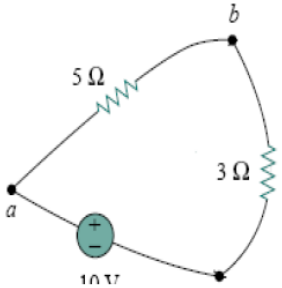
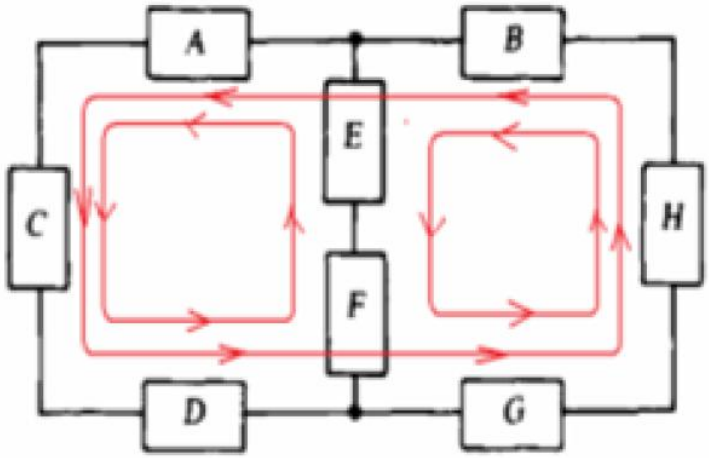


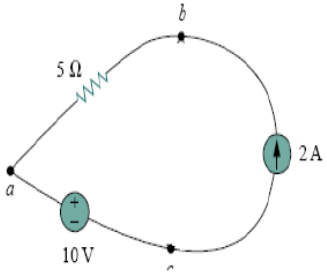
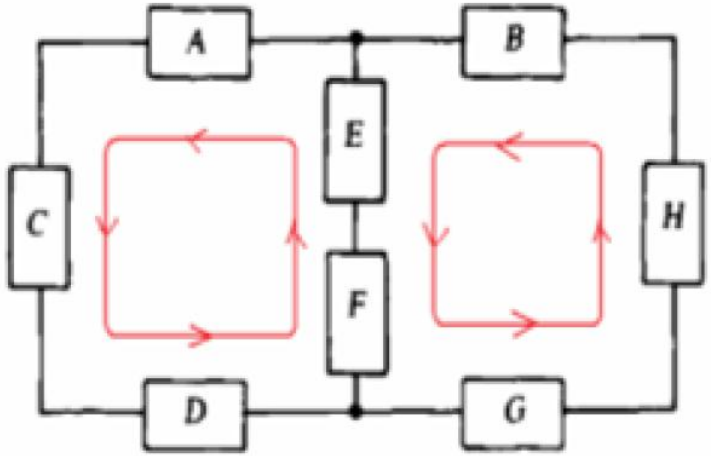

© McGraw Hill

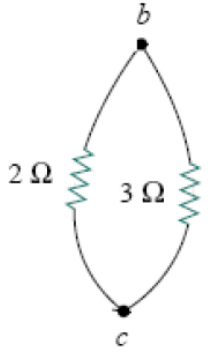A *mesh* is a loop that does not have a closed path in its interior.

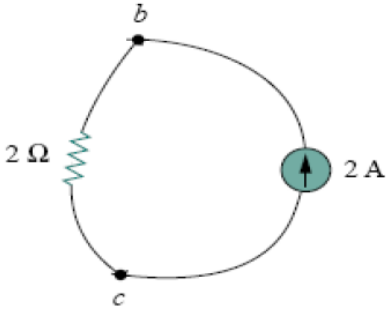No components are inside a mesh.

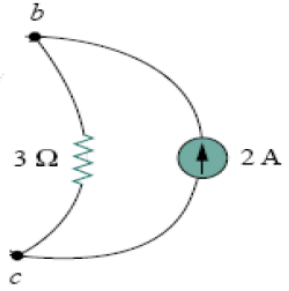


LOOP




Mesh

Relation between Nodes ,Branch and Loop

$$b = l + n - 1$$

© McGraw Hill

# Examples

## Example 2.4

Determine the number of branches and nodes in the circuit shown in Fig. 2.12. Identify which elements are in series and which are in parallel.

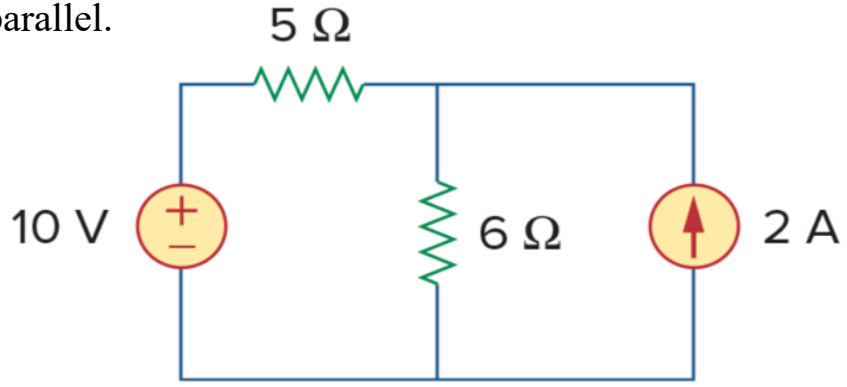



Figure 2.12
For Example 2.4.

Solution: Since there are four elements in the circuit, the circuit has four branches: 10 V, 5 Ω, 6 Ω, and 2 A. The circuit has three nodes as identified in Fig. 2.13. The 5-Ω resistor is in series with the 10-V voltage source because the same current would flow in both. The 6-Ω resistor is in parallel with the 2-A current source because both are connected to the same nodes 2 and 3.

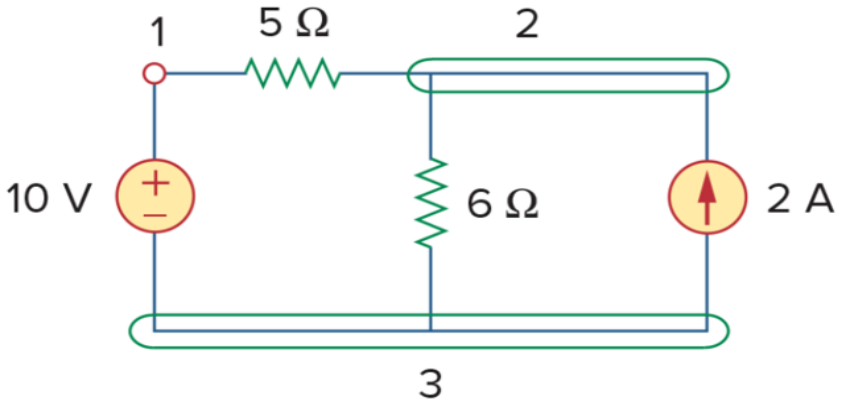



Figure 2.13

The three nodes in the circuit of Fig. 2.12.

© McGraw Hill

# Examples

## Practice Problem 2.4

How many branches and nodes does the circuit in Fig. 2.14 have? Identify the elements that are in series and in parallel.

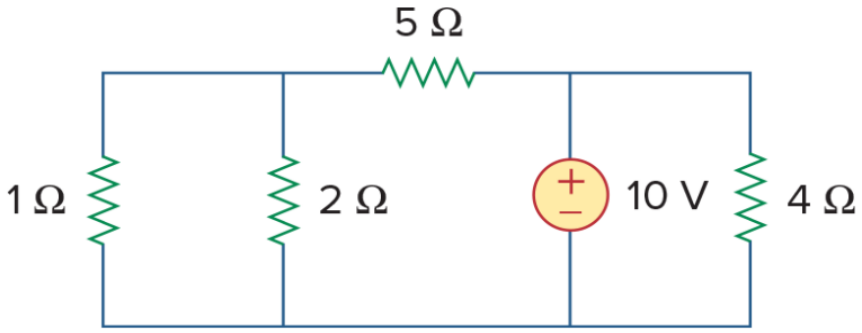



Figure 2.14
For Practice Prob. 2.4.

**Answer:** Five branches and three nodes are identified in Fig. 2.15. The 1-Ω and 2-Ω resistors are in parallel. The 4-Ω resistor and 10-V source are also in parallel.

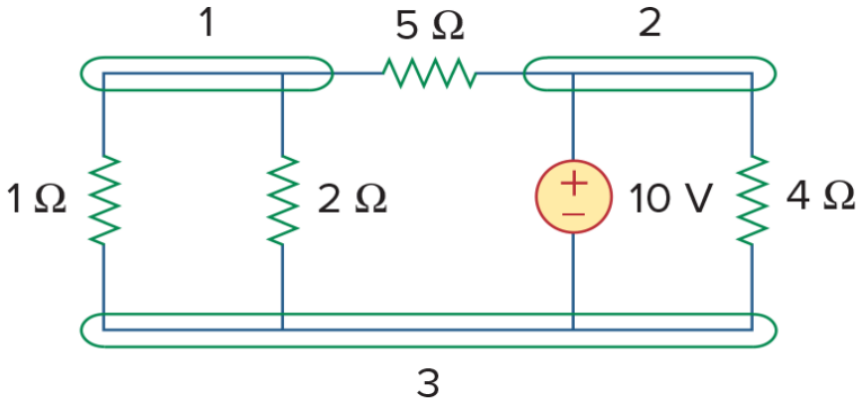



Figure 2.15
Answer for Practice Prob. 2.4.

**5** branches and **3** nodes. The 1 ohm and 2 ohm resistors are in parallel. The 4 ohm resistor and the 10 volt source are also in parallel.

© McGraw Hill

# Network Topology

- A **loop** is independent if it contains at least one branch not shared by any other independent loops.
- Two or more elements are in **series** if they share a **single node** and thus carry the same current.
- Two or more elements are in **parallel** if they are connected to the **same two nodes** and thus have the same voltage.

© McGraw Hill

# Kirchhoff's Laws

Ohm’s law is not sufficient for circuit analysis.

Kirchhoff's laws complete the needed tools.

There are two laws:

- Kirchhoff's **Current law (KCL).**
- Kirchhoff's **Voltage law (KVL).**

© McGraw Hill

# KCL

- Kirchhoff's current law is based on conservation of charge.
- It states that the algebraic sum of currents entering a node (or a closed boundary) is **zero**.
- It can be expressed as:

$$\sum_{n=1}^{N} i_n = 0$$


© McGraw Hill

# KCL

Kirchhoff's current law (KCL) states that the algebraic sum of currents entering a node (or a closed boundary) is zero.

Mathematically, KCL implies that

$$\sum_{n=1}^{N} i_n = 0$$

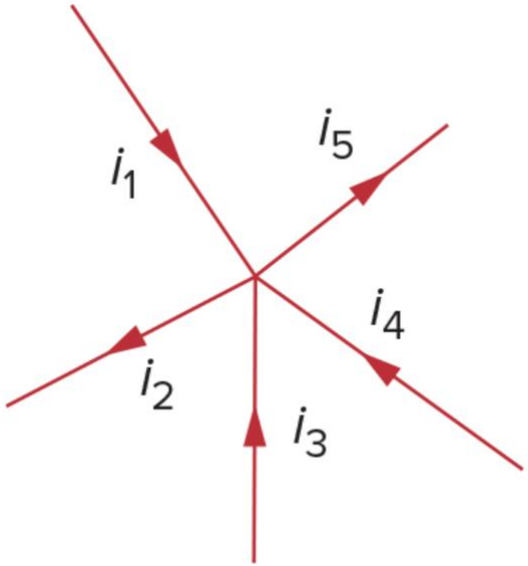



Applying KCL gives $i_1 + (-i_2) + i_3 + i_4 + (-i_5) = 0$

© McGraw Hill

# KCL

## Alternative form of KCL:

The sum of the currents entering a node is equal to the sum of the currents leaving the node.

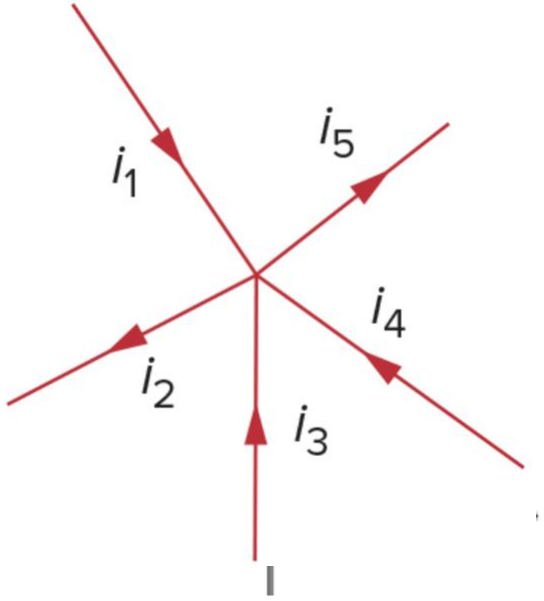


$$i_1 + i_3 + i_4 = i_2 + i_5$$

( current entering )  (current leaving )

© McGraw Hill

# KVL

- Kirchhoff's voltage law is based on conservation of energy.
- It states that the algebraic sum of voltages around a closed path (or loop) is zero.
- It can be expressed as:

$$\sum_{m=1}^{M} v_m = 0$$


© McGraw Hill

**Kirchhoff's voltage law (KVL)** states that the algebraic sum of all voltages around a closed path (or loop) is zero.

Expressed mathematically, KVL states that

$$\sum_{m=1}^{M} v_m = 0$$

To illustrate KVL, consider the circuit in Fig. 2.19.

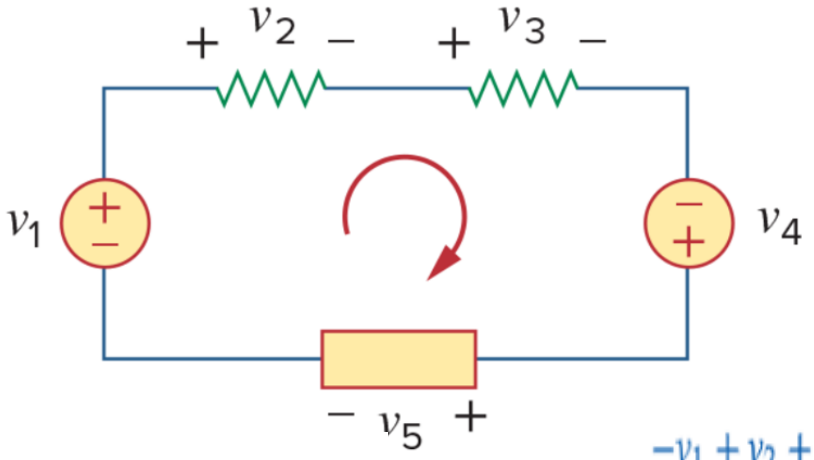



Sum of voltage drops = Sum of voltage rises

$$v_2 + v_3 + v_5 = v_1 + v_4$$

$$-v_1 + v_2 + v_3 - v_4 + v_5 = 0$$

© McGraw Hill

Kirchhoff's voltage law (KVL) states that the algebraic sum of all voltages around a closed path (or loop) is zero.

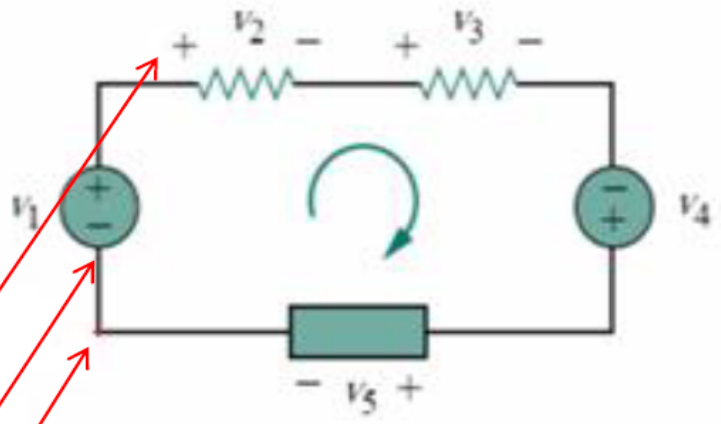


We start from any one corner


( I prefer left bottom corner, and go clockwise)

Note down the sign that comes first,
Write down that sign with voltage name


$$-v_1 + v_2 + v_3 - v_4 + v_5 = 0$$

© McGraw Hill


## Let us do some practice of writting voltage equations.

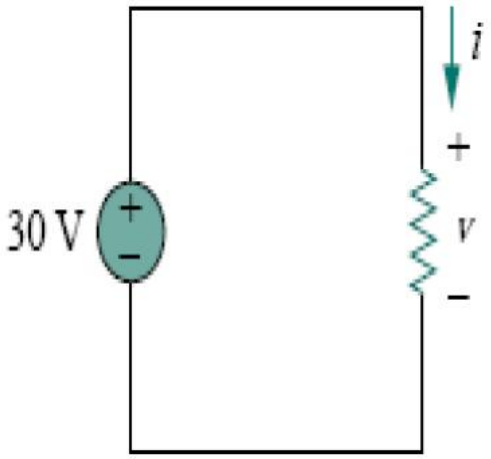


$-30 + v = 0$

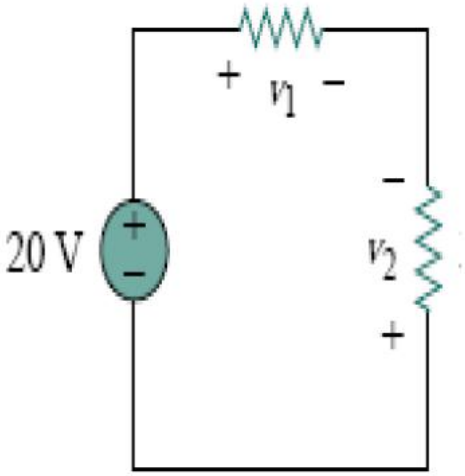


$-20 + v1 - v2 = 0$

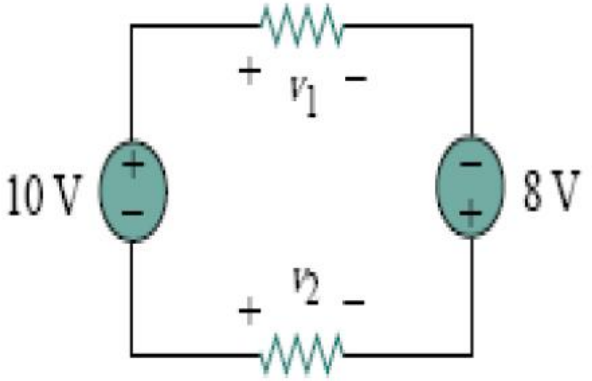


$-10 + v1 - 8 - v2 = 0$

© McGraw Hill

# Examples

## Example 2.5

For the circuit in Fig. 2.21(a), find voltages V1and V2

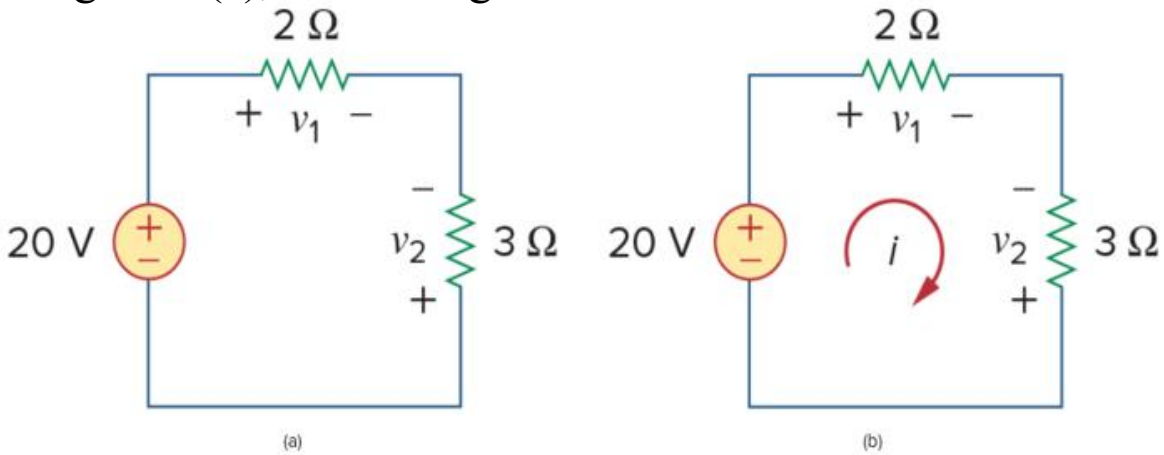



Figure 2.21
For Example 2.5.

# Examples

## Example 2.6

Determine $v_o$ and $i$ in the circuit shown in Fig. 2.23(a).

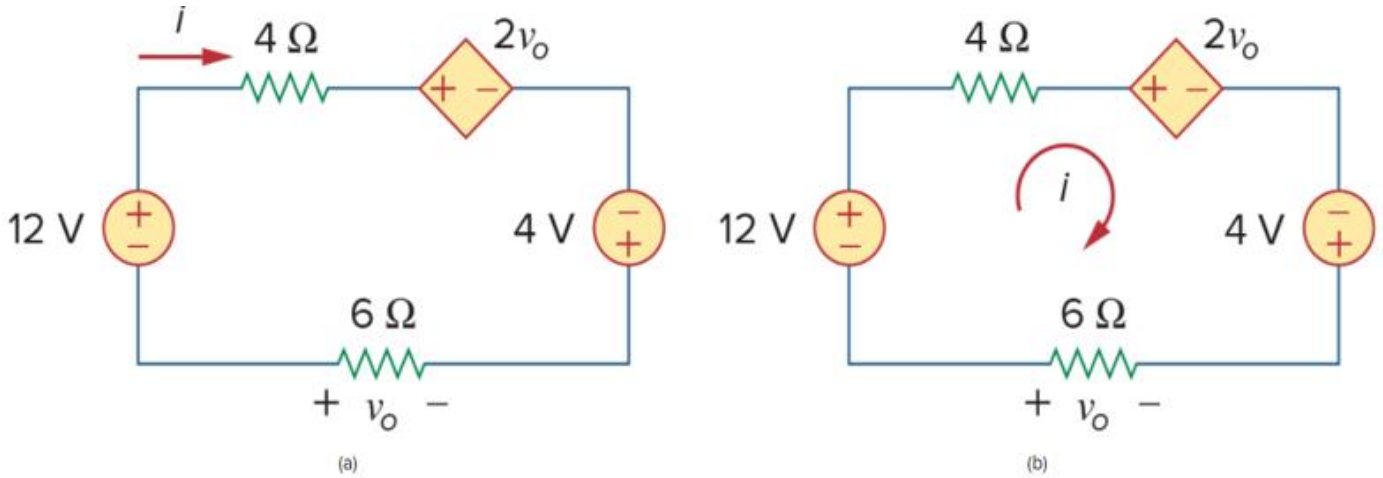



Figure 2.23
For Example 2.6.

© McGraw Hill

# Examples

## Example 2.7

Find current $i_o$ and voltage $v_o$ in the circuit shown in Fig. 2.25.

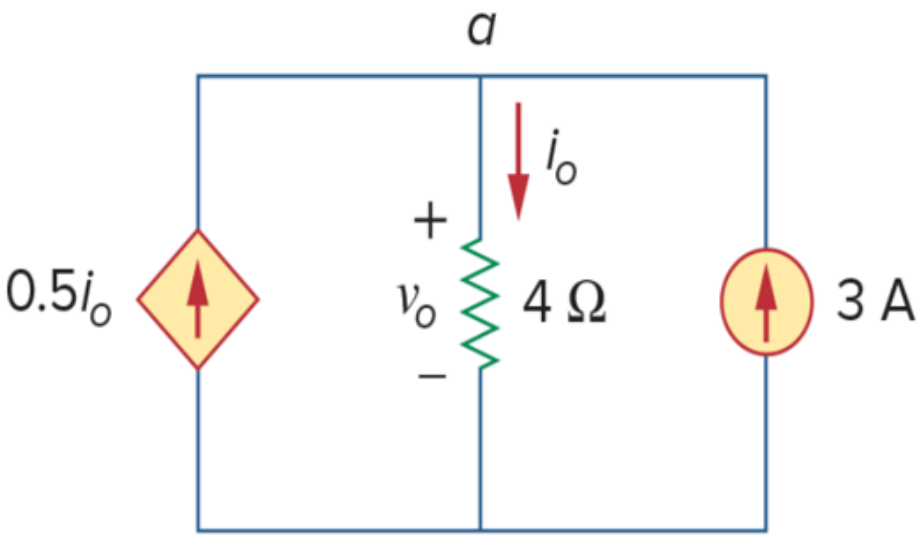



Figure 2.25
For Example 2.7.

© McGraw Hill

# Examples

## Practice Problem 2.7

Find $v_o$ and $i_o$ in the circuit of Fig. 2.26.

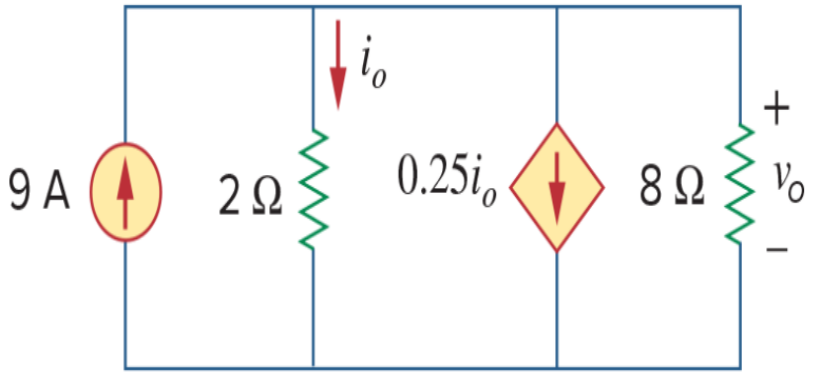



Figure 2.26
For Practice Prob. 2.7.


**Answer:** 12 V, 6 A.

© McGraw Hill

# Examples

## Example 2.8

Find currents and voltages in the circuit shown in Fig. 2.27(a).

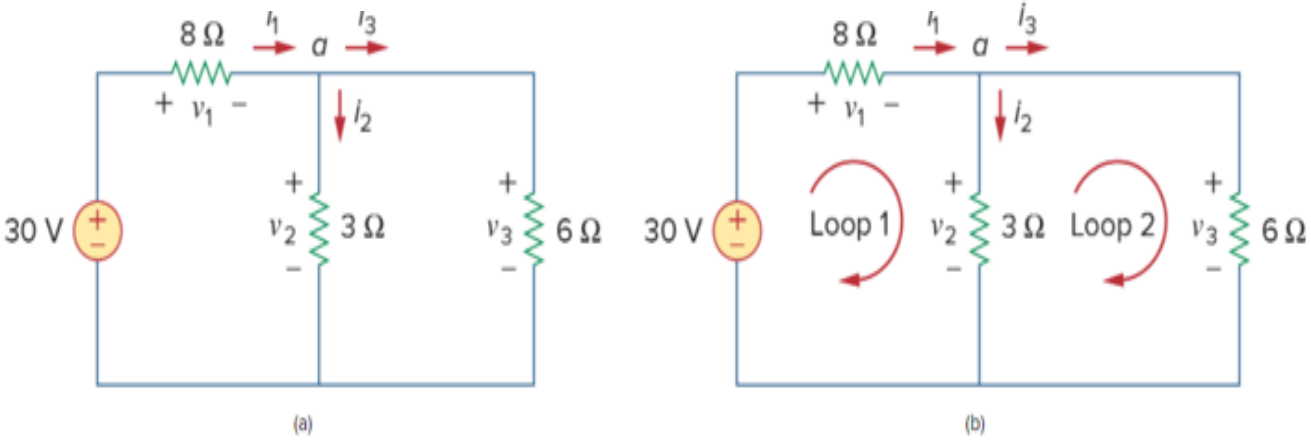



© McGraw Hill


# Series, Parallel Connection


Two or more elements are in series if they are cascaded or connected sequentially and consequently carry the same current.

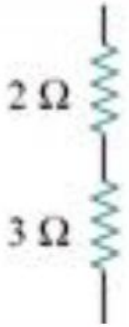



Two or more elements are in parallel if they are connected to the same two nodes and consequently have the same voltage across them.

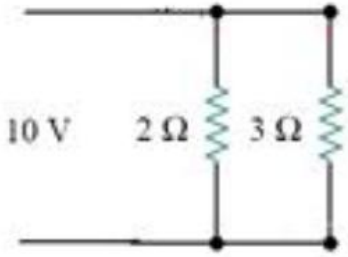




© McGraw Hill

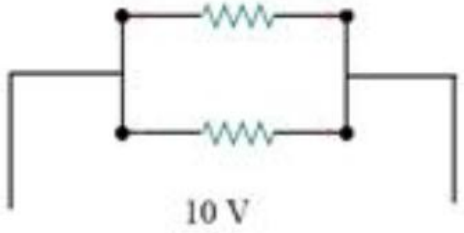
If same current flows through the resistors; the resistors are said to be in series.



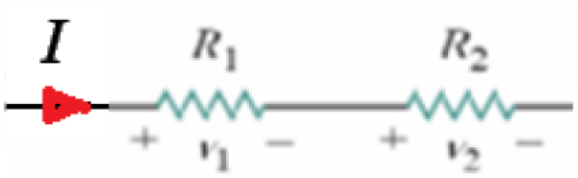


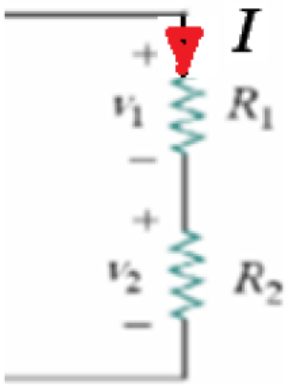

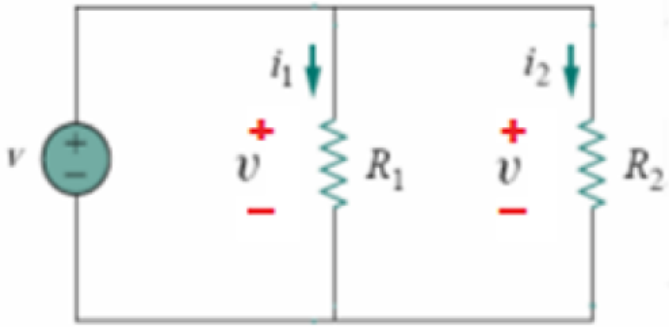If same voltage appears across resistors, the resistors are in parallel.

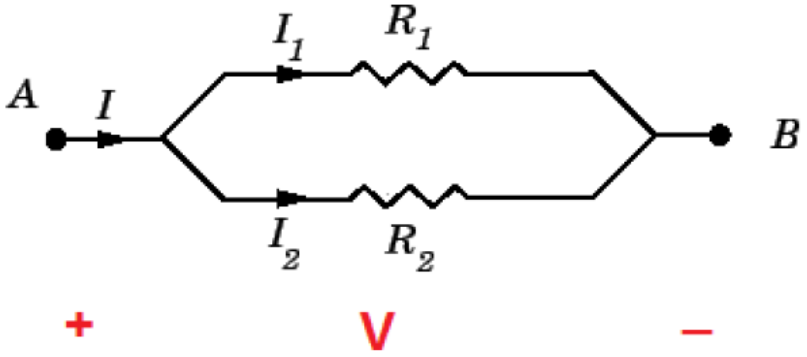




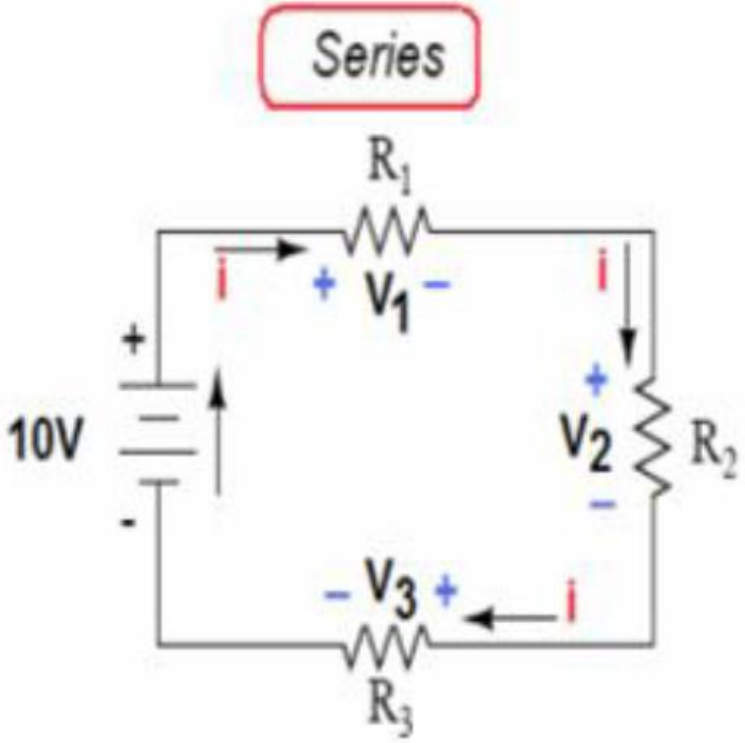

© McGraw Hill




Same current

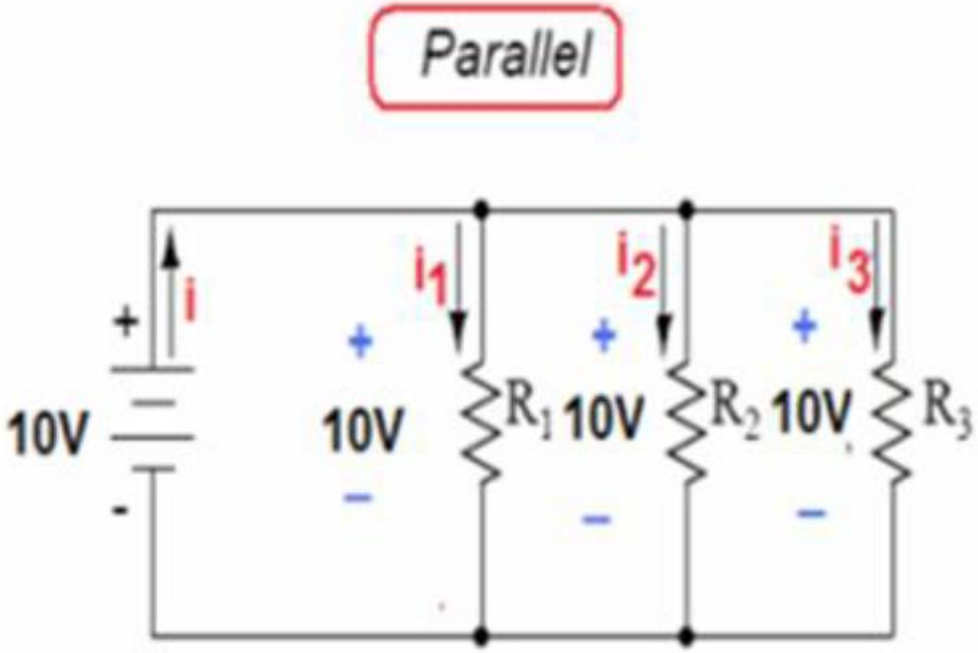Different voltage




Different current


Same voltage

© McGraw Hill

# Series Resistors

- Two resistors are considered in **series** if the **same current** pass through them.
- Take the circuit shown:
- Applying Ohm's law to both resistors.

Copyright © The McGraw-Hill Companies, Inc. Permission required for reproduction or display

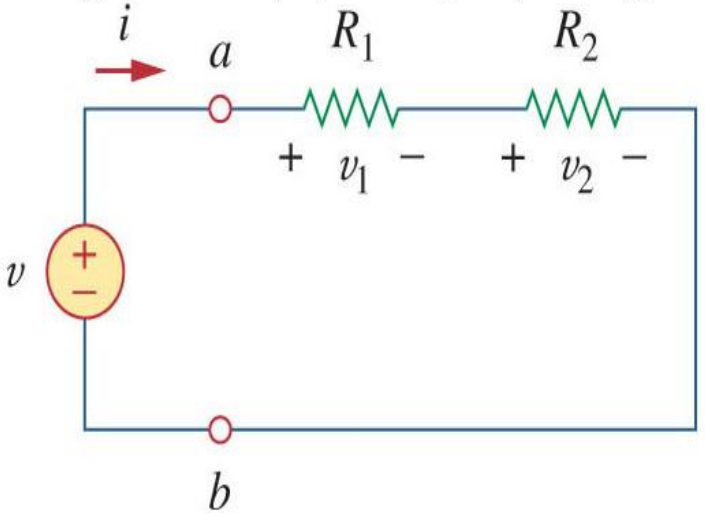


$$v_1 = iR_1 \quad v_2 = iR_2$$

- If we apply KVL to the loop we have:

$$-v + v_1 + v_2 = 0$$

# Series Resistors

- Combining the two equations:

$$v = v_1 + v_2 = i\left(R_1 + R_2\right)$$

- From this we can see there is an equivalent resistance of the two resistors:

$$R_{eq} = R_1 + R_2$$

- For N resistors in series:

$$R_{eq} = \sum_{n=1}^{N} R_n$$

© McGraw Hill

The equivalent resistance of any number of resistors connected in series is the sum of the individual resistances.


For $N$ resistors in series then,

$$R_{eq} = R_1 + R_2 + \cdots + R_N \tag{2.30}$$


© McGraw Hill

# SERIES RESISTORS

$$R_{eq} = R_1 + R_2$$

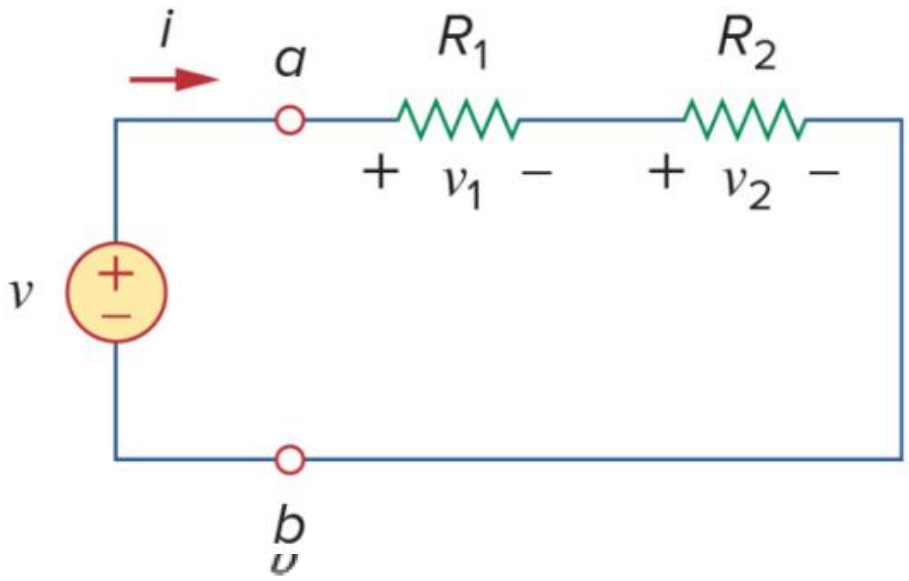


A single-loop circuit with two resistors in series.

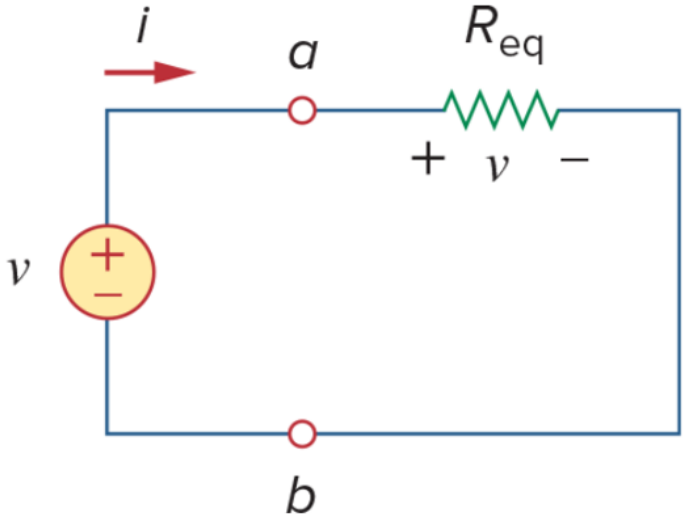



Equivalent circuit

© McGraw Hill

# Voltage Division

- The voltage drop across any one resistor can be known.
- The current through all the resistors is the same, so using Ohm's law:

$$v_1 = \frac{R_1}{R_1 + R_2} v \qquad v_2 = \frac{R_2}{R_1 + R_2} v$$

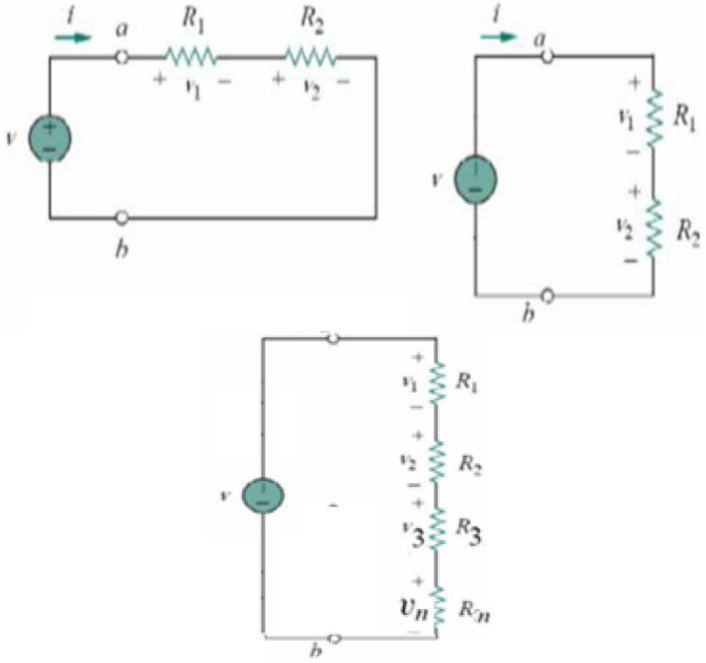



- This is the principle of voltage division.

$$v_n = \frac{R_n}{R_1 + R_2 + \cdots + R_N} \times v$$

© McGraw Hill

# Parallel Resistors

- When resistors are in parallel, the voltage drop across them is the same. $v = i_1 R_1 = i_2 R_2$

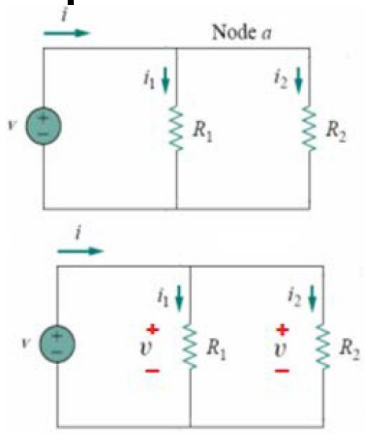



- By KCL, the current at node $a$ is

$$i = i_1 + i_2$$

- The equivalent resistance is:

$$R_{eq} = \frac{R_1 R_2}{R_1 + R_2}$$

Copyright © The McGraw-Hill Companies, Inc. Permission required for reproduction or display

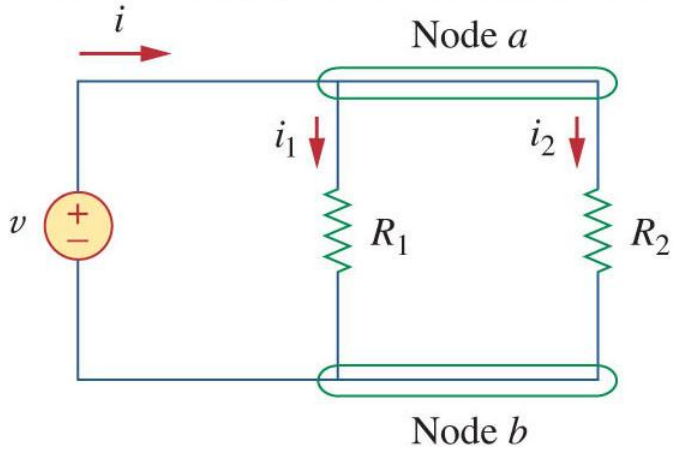


The equivalent resistance of two parallel resistors is equal to the product of their resistances divided by their sum.

**3** resistors in parallel $\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \frac{1}{R_3}$

**N** resistors in parallel $\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \cdots + \frac{1}{R_N}$

$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \cdots + \frac{1}{R_N} \tag{2.38}$$

It is often more convenient to use conductance rather than resistance when dealing with resistors in parallel. From Eq. (2.38), the equivalent conductance for $N$ resistors in parallel is

$$G_{eq} = G_1 + G_2 + G_3 + \cdots + G_N \tag{2.40}$$

where $G_{eq} = 1/R_{eq}, G_1 = 1/R_1, G_2 = 1/R_2, G_3 = 1/R_3, \ldots, G_N = 1/R_N$.

Conductances in parallel behave as a single conductance whose value is equal to the sum of the individual conductances.


The equivalent conductance of resistors connected in parallel is the sum of their individual conductances.

© McGraw Hill

# Current Division

- Given the current entering the node, the voltage drop across the equivalent resistance will be the same as that for the individual resistors.

$$v = iR_{eq} = \frac{iR_1R_2}{R_1 + R_2}$$

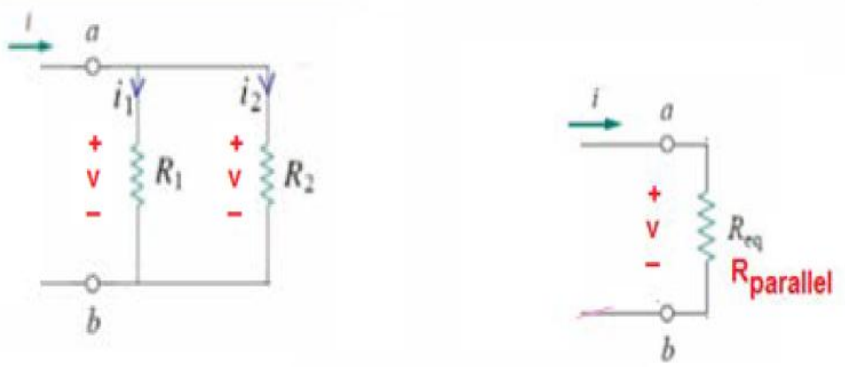


- This can be used in combination with Ohm's law to get the current through each resistor:

$$i_1 = \frac{iR_2}{R_1 + R_2} \qquad i_2 = \frac{iR_1}{R_1 + R_2}$$

$$i_1 = \frac{R_2}{R_1 + R_2} \times i \quad , \quad i_2 = \frac{R_1}{R_1 + R_2} \times i$$

(note the mismatch at the numerator)

© McGraw Hill

## Example 2.9

Find $R_{eq}$ for the circuit shown in Fig. 2.34.

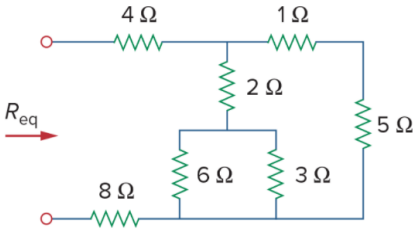



Figure 2.34
For Example 2.9.

### Solution:

To get $R_{eq}$, we combine resistors in series and in parallel. The 6-Ω and 3-Ω resistors are in parallel, so their equivalent resistance is

$$6\ \Omega \parallel 3\Omega = \frac{6 \times 3}{6+3} = 2\ \Omega$$

(The symbol ∥ is used to indicate a parallel combination.) Also, the 1-Ω and 5-Ω resistors are in series; hence their equivalent resistance is

$$1\ \Omega + 5\ \Omega = 6\ \Omega$$

Thus the circuit in Fig. 2.34 is reduced to that in Fig. 2.35(a). In Fig. 2.35(a), we notice that the two 2-Ω resistors are in series, so the equivalent resistance is

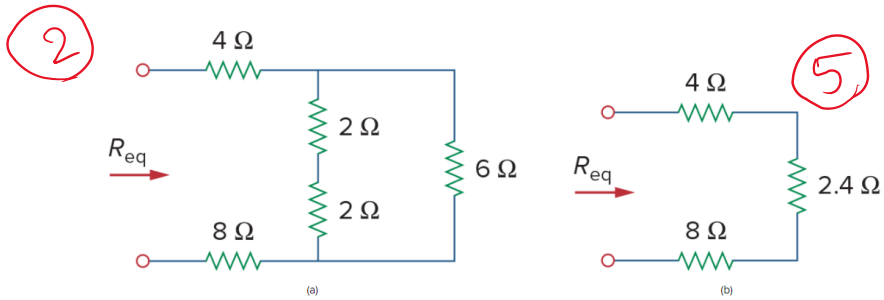



Figure 2.35
Equivalent circuits for Example 2.9.

This 4-Ω resistor is now in parallel with the 6-Ω resistor in Fig. 2.35(a); their equivalent resistance is

$$4\ \Omega \parallel 6\ \Omega = \frac{4 \times 6}{4+6} = 2.4\ \Omega$$


The circuit in Fig. 2.35(a) is now replaced with that in Fig. 2.35(b). In Fig. 2.35(b), the three resistors are in series. Hence, the equivalent resistance for the circuit is

$$R_{eq} = 4\ \Omega + 2.4\ \Omega + 8\ \Omega = 14.4\ \Omega$$


**Hint:**

1. Solve for the parallel components first.
2. Solve starting from Right .

Identify the branches that are in parallel (same voltage)

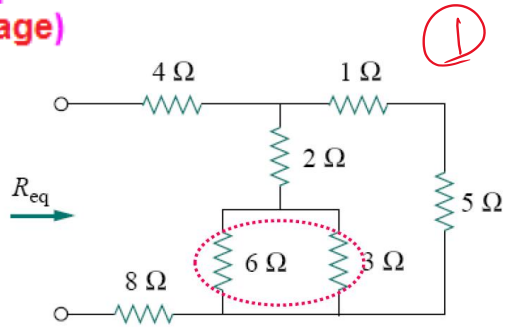


Adding the series components

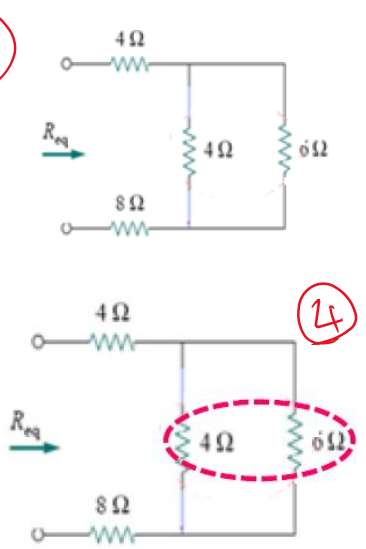

## Example 2.10

Calculate the equivalent resistance $R_{ab}$ in the circuit in Fig. 2.37.

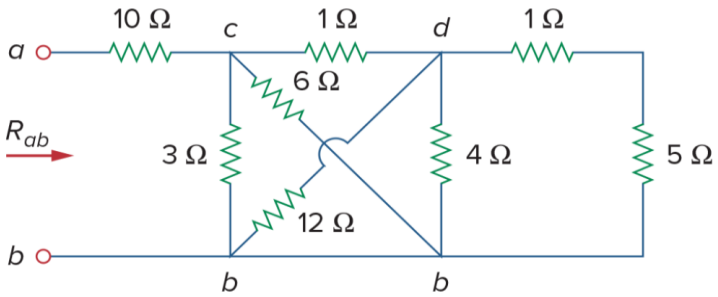



Figure 2.37
For Example 2.10.

### Solution:

The 3-Ω and 6-Ω resistors are in parallel because they are connected to the same two nodes $c$ and $b$. Their combined resistance is

$$3\ \Omega \parallel 6\ \Omega = \frac{3\times 6}{3+6} = 2\ \Omega \tag{2.10.1}$$

Similarly, the 12-Ω and 4-Ω resistors are in parallel since they are connected to the same two nodes $d$ and $b$. Hence

$$12\ \Omega \parallel 4\ \Omega = \frac{12\times 4}{12+4} = 3\ \Omega \tag{2.10.2}$$

Also the 1-Ω and 5-Ω resistors are in series; hence, their equivalent resistance is

$$1\ \Omega + 5\ \Omega = 6\ \Omega \tag{2.10.3}$$

With these three combinations, we can replace the circuit in Fig. 2.37 with that in Fig. 2.38(a). In Fig. 2.38(a), 3-Ω in parallel with 6-Ω gives 2-Ω, as calculated in Eq. (2.10.1). This 2-Ω equivalent resistance is now in series with the 1-Ω resistance to give a combined resistance of $1\ \Omega + 2\ \Omega = 3\ \Omega$. Thus, we replace the circuit in Fig. 2.38(a) with that in Fig. 2.38(b). In Fig. 2.38(b), we combine the 2-Ω and 3-Ω resistors in parallel to get

$$2\ \Omega \parallel 3\ \Omega = \frac{2\times 3}{2+3} = 1.2\ \Omega$$

This 1.2-Ω resistor is in series with the 10-Ω resistor, so that

$$R_{ab} = 10 + 1.2 = 11.2\ \Omega$$


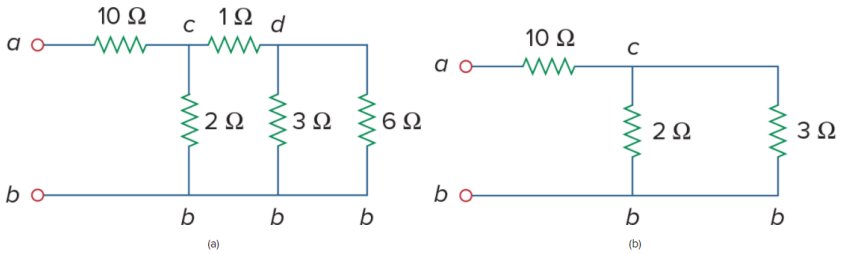



Figure 2.38
Equivalent circuits for Example 2.10.

1. Solve for the parallel components first.
2. Solve starting from Right .

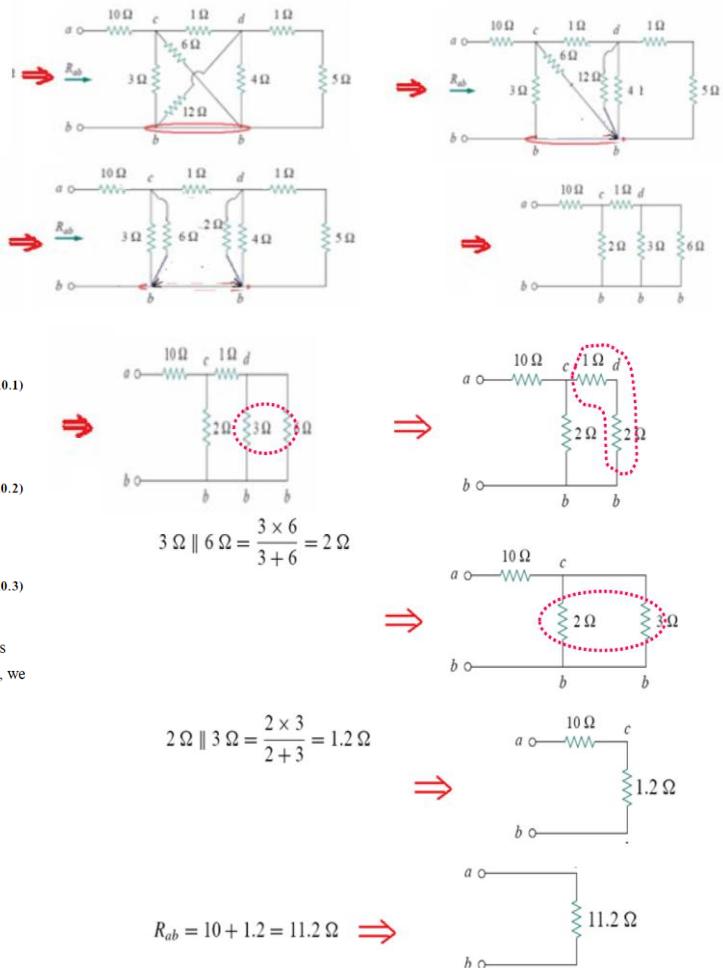


© McGraw Hill

## Practice Problem 2.10

Find $R_{ab}$ for the circuit in Fig. 2.39.


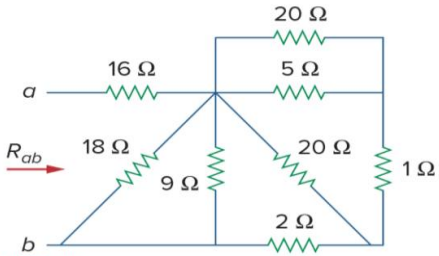



Figure 2.39
For Practice Prob. 2.10.

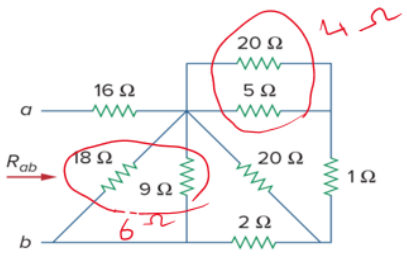



Answer: 19 Ω.


Page 49

Combining the 9-ohm resistor and the 18-ohm resistor yields [9x18]/[9+18] = 6 ohms.

Combining the 5 ohm and the 20 ohm resistors in parallel produces [5x20/(5+20)] = 4 ohms We now have the following circuit:

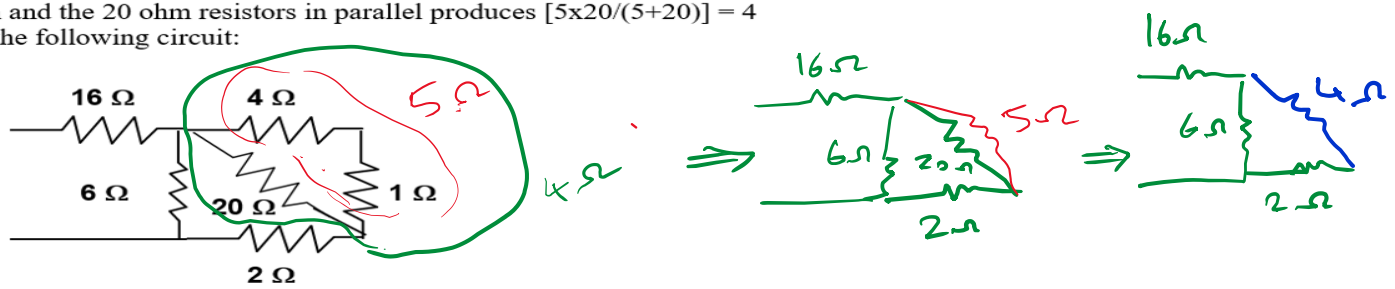


The 4 ohm and 1 ohm resistors can be combined into a 5 ohm resistor in parallel with a 20 ohm resistor. This will result in [5x20/(5+20)] = 4 ohms and the circuit shown below:

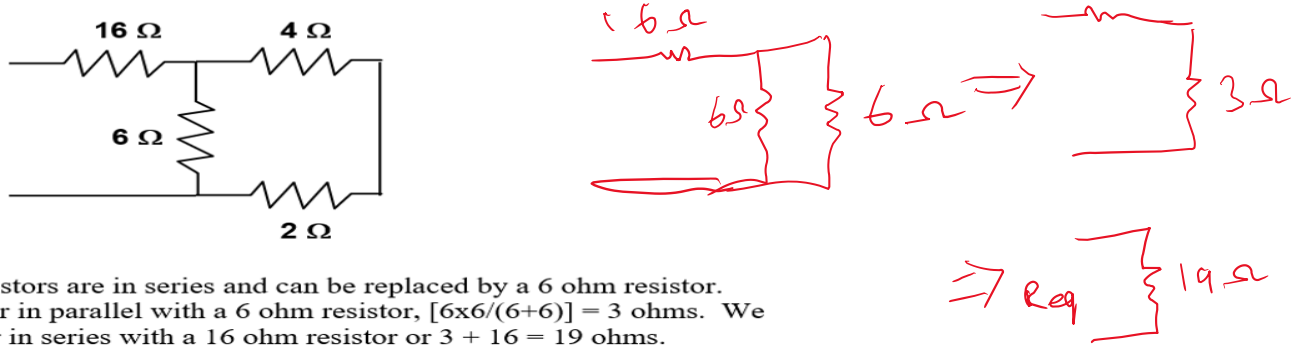


The 4 ohm and 2 ohm resistors are in series and can be replaced by a 6 ohm resistor. This gives a 6 ohm resistor in parallel with a 6 ohm resistor, [6x6/(6+6)] = 3 ohms. We now have a 3 ohm resistor in series with a 16 ohm resistor or 3 + 16 = 19 ohms. Therefore:

**$R_{eq}$ = 19 ohms**

© McGraw Hill

## Example 2.11

Find the equivalent conductance $G_{eq}$ for the circuit in Fig. 2.40(a).

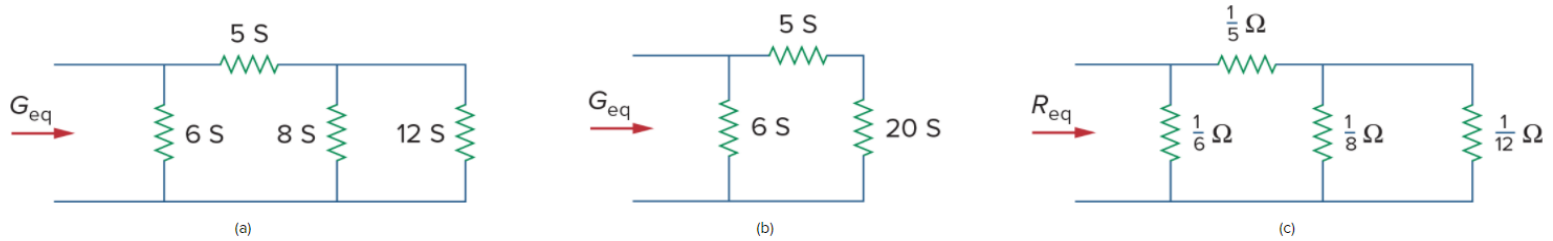



Figure 2.40
For Example 2.11: (a) original circuit, (b) its equivalent circuit, (c) same circuit as in (a) but resistors are expressed in ohms.

### Solution:

The 8-S and 12-S resistors are in parallel, so their conductance is

$$8\ \text{S} + 12\ \text{S} = 20\ \text{S}$$

This 20-S resistor is now in series with 5 S as shown in Fig. 2.40(b) so that the combined conductance is

$$\frac{20 \times 5}{20 + 5} = 4\ \text{S}$$

This is in parallel with the 6-S resistor. Hence,

$$G_{eq} = 6 + 4 = 10\ \text{S}$$

We should note that the circuit in Fig. 2.40(a) is the same as that in Fig. 2.40(c). While the resistors in Fig. 2.40(a) are expressed in siemens, those in Fig. 2.40(c) are expressed in ohms. To show that the circuits are the same, we find $R_{eq}$ for the circuit in Fig. 2.40(c).

$$R_{eq} = \frac{1}{6} \parallel \left(\frac{1}{5} + \frac{1}{8} \parallel \frac{1}{12}\right) = \frac{1}{6} \parallel \left(\frac{1}{5} + \frac{1}{20}\right) = \frac{1}{6} \parallel \frac{1}{4}$$

$$G_{eq} = \frac{1}{R_{eq}} = 10\ \text{S}$$

This is the same as we obtained previously.

© McGraw Hill

## Example 2.12

Find $i_o$ and $v_o$ in the circuit shown in Fig. 2.42(a). Calculate the power dissipated in the 3-Ω resistor.

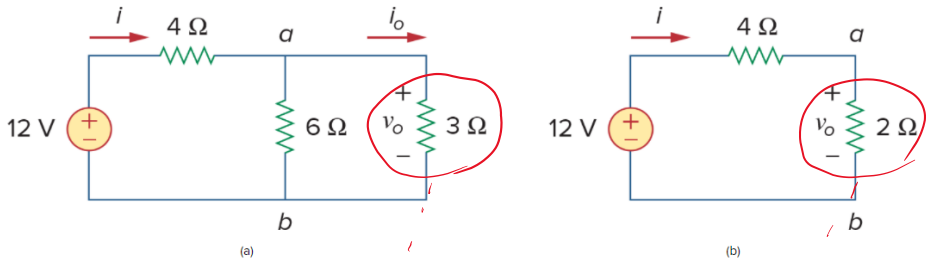



Figure 2.42
For Example 2.12: (a) original circuit, (b) its equivalent circuit.

### Solution:

The 6-Ω and 3-Ω resistors are in parallel, so their combined resistance is

$$6\ \Omega \parallel 3\ \Omega = \frac{6 \times 3}{6+3} = 2\ \Omega$$

Thus, our circuit reduces to that shown in Fig. 2.42(b). Notice that $v_o$ is not affected by the combination of the resistors because the resistors are in parallel and therefore have the same voltage $v_o$. From Fig. 2.42(b), we can obtain $v_o$ in two ways. One way is to apply Ohm's law to get

Page 50

$$i = \frac{12}{4+2} = 2\ \text{A}$$

and hence, $v_o = 2i = 2 \times 2 = 4$ V. Another way is to apply voltage division, since the 12 V in Fig. 2.42(b) is divided between the 4-Ω and 2-Ω resistors. Hence,

$$v_o = \frac{2}{2+4}(12\ \text{V}) = 4\ \text{V}$$

Similarly, $i_o$ can be obtained in two ways. One approach is to apply Ohm's law to the 3-Ω resistor in Fig. 2.42(a) now that we know $v_o$; thus,


$$v_o = 3i_o = 4 \quad \Rightarrow \quad i_o = \frac{4}{3}\ \text{A}$$

Another approach is to apply current division to the circuit in Fig. 2.42(a) now that we know $i$, by writing

$$i_o = \frac{6}{6+3}i = \frac{2}{3}(2\ \text{A}) = \frac{4}{3}\ \text{A}$$

The power dissipated in the 3-Ω resistor is

$$p_o = v_o i_o = 4\left(\frac{4}{3}\right) = 5.333\ \text{W}$$

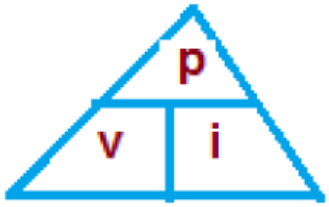

## Example 2.13

For the circuit shown in Fig. 2.44(a), determine: (a) the voltage $v_o$, (b) the power supplied by the current source, (c) the power absorbed by each resistor.

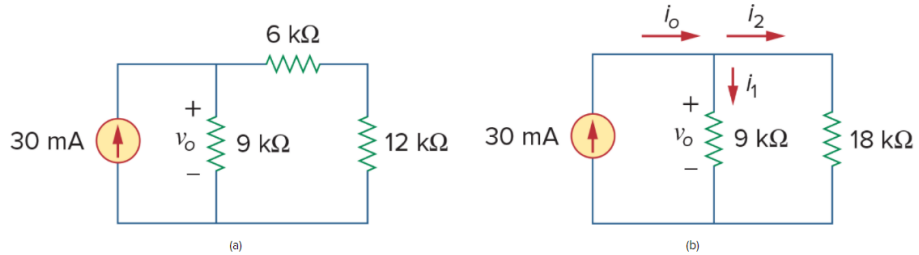



Figure 2.44
For Example 2.13: (a) original circuit, (b) its equivalent circuit.

### Solution:

(a) The 6-kΩ and 12-kΩ resistors are in series so that their combined value is $6 + 12 = 18$ kΩ. Thus the circuit in Fig. 2.44(a) reduces to that shown in Fig. 2.44(b). We now apply the current division technique to find $i_1$ and $i_2$.

$$i_1 = \frac{18{,}000}{9{,}000 + 18{,}000}(30\text{ mA}) = 20\text{ mA}$$
$$i_2 = \frac{9{,}000}{9{,}000 + 18{,}000}(30\text{ mA}) = 10\text{ mA}$$

Notice that the voltage across the 9-kΩ and 18-kΩ resistors is the same, and $v_o = 9{,}000i_1 = 18{,}000i_2 = 180$ V, as expected.

Page 51

(b) Power supplied by the source is

$$p_o = v_o i_o = 180\,(30)\text{ mW} = 5.4\text{ W}$$

(c) Power absorbed by the 12-kΩ resistor is

$$p = iv = i_2\,(i_2 R) = i_2^2 R = \left(10 \times 10^{-3}\right)^2 (12{,}000) = 1.2\text{ W}$$

Power absorbed by the 6-kΩ resistor is

$$p = i_2^2 R = \left(10 \times 10^{-3}\right)^2 (6{,}000) = 0.6\text{ W}$$

Power absorbed by the 9-kΩ resistor is

$$p = \frac{v_o^2}{R} = \frac{(180)^2}{9{,}000} = 3.6\text{ W}$$

or


$$p = v_o i_1 = 180\,(20)\text{ mW} = 3.6\text{ W}$$

Notice that the power supplied (5.4 W) equals the power absorbed ($1.2 + 0.6 + 3.6 = 5.4$ W). This is one way of checking results.

© McGraw Hill

# Measurement Devices: Ammeter

- Connect the test leads to the DMM as shown below
  - To measure current the multimeter must be connected in series with the circuit under test. Remember, current is the flow of charge. The charge must flow through the meter.
- Push the power switch to the ON position
- Press Shfit + DCI or ACI switch (depends on what you are measuring
- Connect the red and black lead to the circuit as shown in the diagram
  - Always place the red test lead at a point that is more positive than the black test lead.
- Note: the highest current range and never exceed it

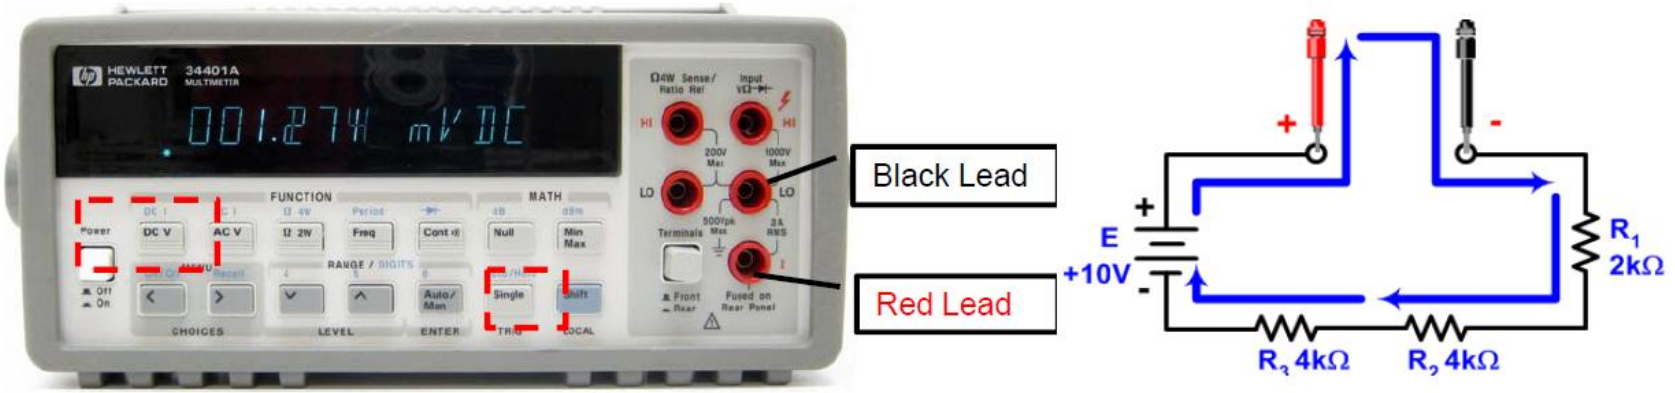


© McGraw Hill

# Voltmeter


- Connect the test leads to the DMM as shown below
- Push the power switch to the ON position
- Press DCV or ACV switch (depends on what you are measuring
- Connect the black lead to the circuit common and the red lead to a desired point
- Note: the highest volt range and never exceed it




© McGraw Hill

# Voltmeter II


- As shown in the diagram on the right, reversing the leads (red lead on ground), will cause meter display to display a negative voltage reading.
  - If this condition should occur while measuring voltage, reverse the test leads.

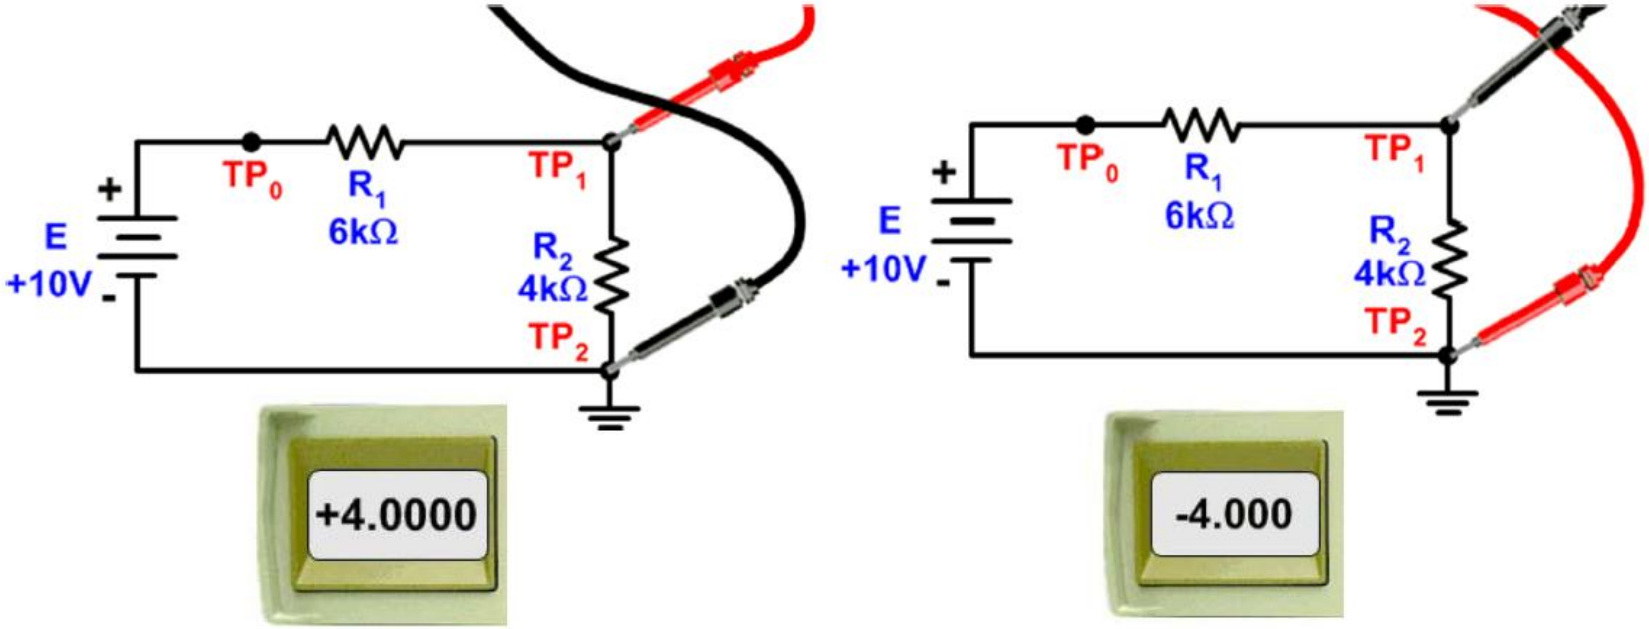



© McGraw Hill

# Ohmmeter

- Connect the red and black lead to the DMM as shown in the diagram
- Push the power switch to the ON position
- Press Ω 2W switch
- Connect the test leads across the resistance being measured.
  - When taking resistance measurements always turn the power OFF! Test lead placement is not referenced to ground when measuring resistance. Placing the positive or negative lead on either side of the resistor produces the same result.

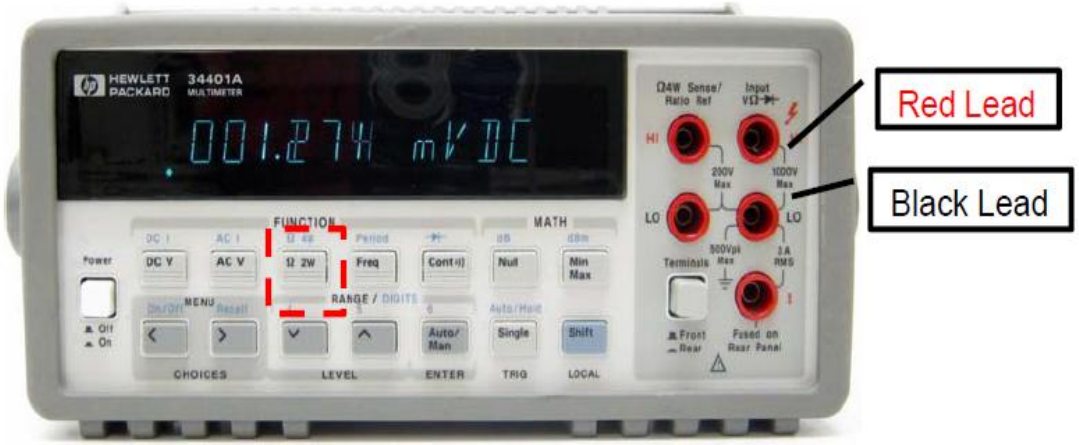


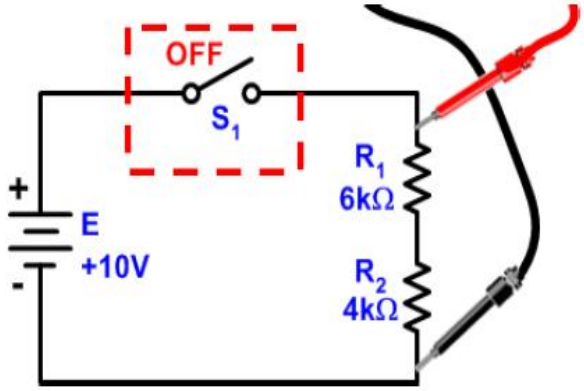




© McGraw Hill


# Ohmmeter II

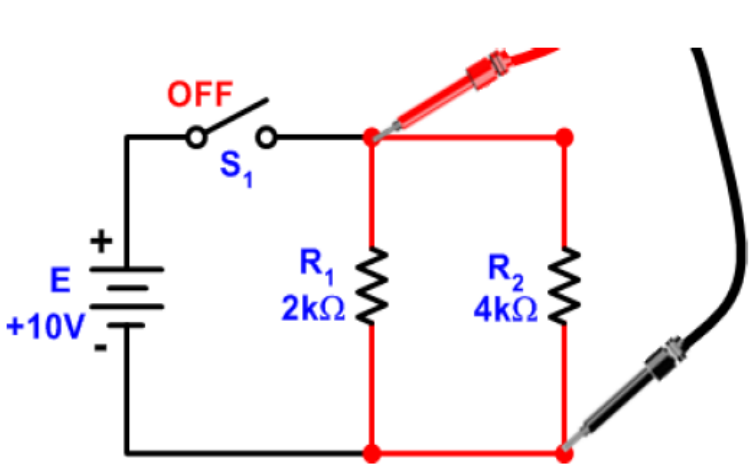
- Placing the meter in this circuit as shown will measure the combined resistance of $R_1$ and $R_2$.
  - Notice that $R_1$ and $R_2$ are connected at two points.
- To measure the resistance of $R_1$ only, $R_1$ must be isolated from $R_2$ by opening the path between $R_1$ and $R_2$.

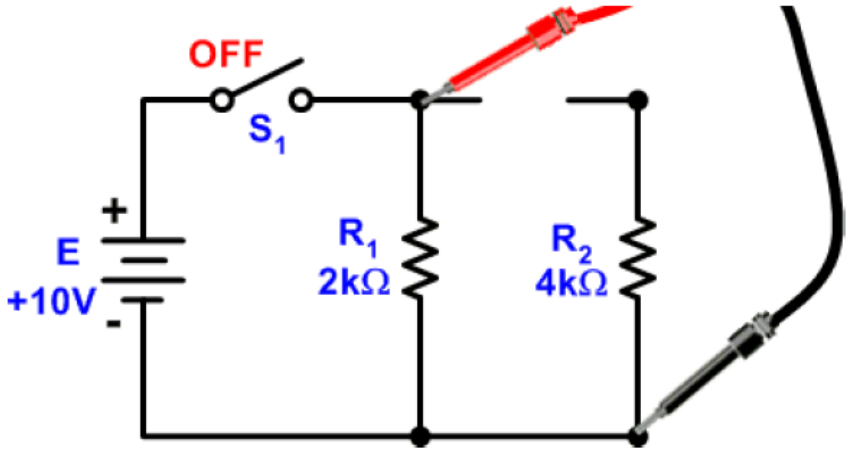


© McGraw Hill


1A
A
Ammeter
Schematic
Symbol
E
10V
R1 10Ω
1A
Ammeter
Schematic
Symbol
E
10V
R1 10Ω

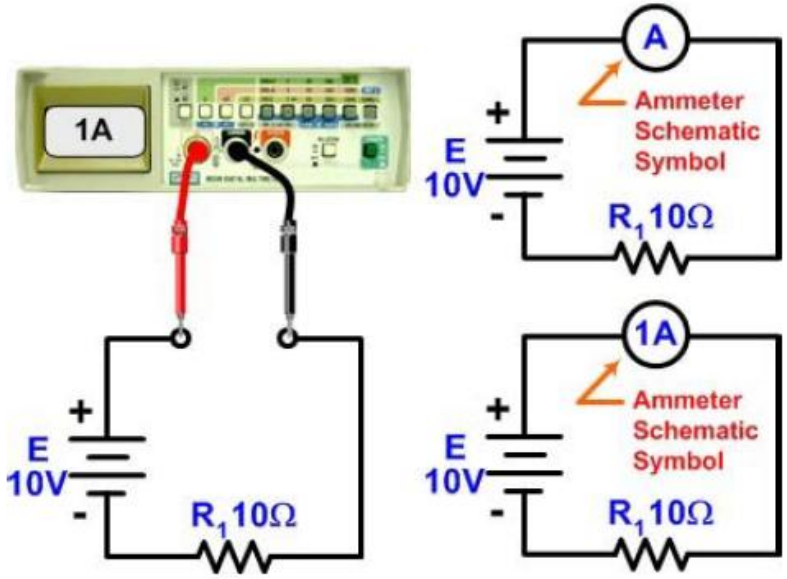
10V
E
10V
R1 10Ω
V
Voltmeter
Schematic
Symbol
R1
10Ω
E
10V
R1 10Ω
10V
Voltmeter
Schematic
Symbol
R1
10Ω

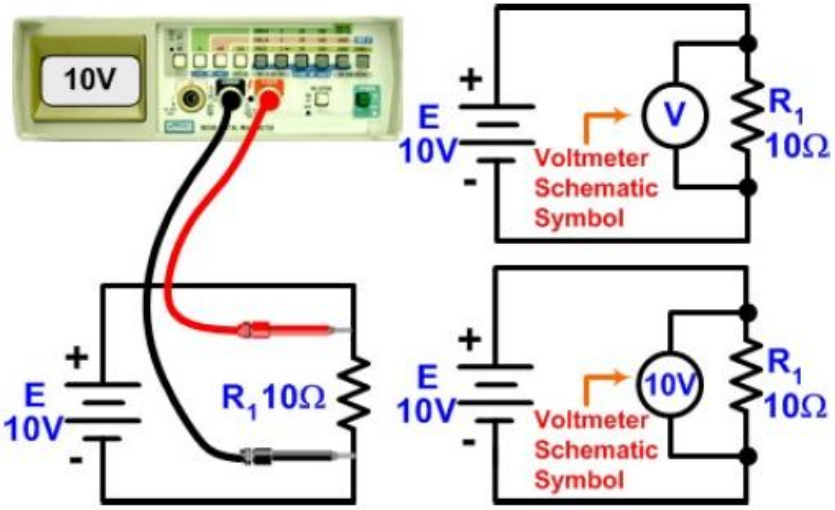© McGraw Hill




Because learning changes everything.®

www.mheducation.com

© McGraw Hill LLC.