



WARNING

Read all safety warnings, all instructions listed below, and the tool manual. Failure to follow warnings and instructions may result in electric shock, fire, and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

DREMEL CHUCK

WARNING

Do not use router bit with the Dremel chuck. Bit may become a projectile and cause serious injury. Dremel Chuck allows you to quickly and easily change accessories on Dremel Rotary Tools without changing collets. Accepts accessories with 1/32" – 1/8" shank. To loosen, first press shaft lock button and rotate the shaft by hand until the lock engages the shaft preventing further rotation.

CAUTION

Do not engage lock while the Rotary Tool is running. With the shaft lock engaged use the wrench or the EZ Twist Nose Cap to loosen the chuck and open the jaws. Remove the accessory from the chuck. If necessary, continue loosening the chuck so that the new accessory fits between the jaws. Insert the new accessory into the chuck far enough so that there is approximately 1/4" between the end of the chuck and the beginning of the working part of the accessory (drill bit flutes, sand paper, engraving end, etc.). With the shaft lock engaged, tighten the chuck using the EZ Twist Nose Cap or wrench to secure the accessory.

Helpful Tips when using the Dremel Chuck

- The Dremel Chuck and the collet and collet nut system are interchangeable on this tool. While the chuck will provide you with the best experience for changing accessories, the collet and collet nut will provide a more precise accessory holding solution especially in heavier side load applications. If you will be using your rotary tool for routing, heavy wood or metal cutting, heavy sanding, or carving you will probably have a better experience using the collet and collet nut.
- The Dremel Chuck needs to be securely tightened in order to retain the accessory during use. If you find the accessory slipping in the chuck, use the included EZ Twist Nose Cap or wrench to tighten the chuck around the bit. If further slippage persists, switch to using the collet and collet nut.
- The jaws of the chuck can become displaced if dropped, pried against, or filled with dust causing the accessory to no longer run true and concentric. This is often called run-out.

To reset the jaws, apply the following procedure:

1. Remove the accessory from the chuck.
2. Clean the chuck if necessary using compressed air.

WARNING


Always wear safety goggles when cleaning tools with compressed air.

3. Press shaft lock button and tighten the chuck until the jaws extend past the outer surface of the chuck, approximately 1/8".
4. Push the end of the chuck firmly against a hard flat surface to be sure the jaws are all seated axially.
5. Continue to hand tighten the chuck until the jaws completely close.
6. Loosen the chuck and reinsert a straight accessory.
7. Turn the tool by hand and observe if there is any run-out. If there is obvious run-out, repeat the procedure.

WARNING

With the shaft lock engaged, tighten the chuck using the EZ Twist Nose Cap or wrench to secure the accessory.

8. Turn the tool on to the lowest speed setting and observe for run-out. If there is obvious run-out, check that the accessory is straight before repeating the procedure.

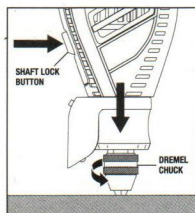

Portaherramientas / Diversos
Mandrins / Divers

4486

Collets / Miscellaneous

Mandril Dremel
Mandrin Dremel

DREMEL

Quickly and easily change accessories without changing collets! Accepts accessories with 1/32" – 1/8" shanks.

Changez d'accessoire rapidement et facilement sans changer le mors! Accepte les accessoires à queue de 0,8 à 3,2 mm (1/32 à 1/8 po).

¡Cambie rápida y fácilmente de accesorios sin cambiar de portaherramientas! Acepta accesorios con vástagos desde 1/32 hasta 1/8 depulgada.



Dremel®
Racine, WI 53408-1126 USA
www.dremel.com

Made in Germany
Fabriqué en Allemagne
Fabricado en Alemania
60829435JJ

2615004486



Dremel®—A division of the
Robert Bosch Tool Corporation
P.O. Box 081126
Racine, WI 53408-1126 USA
USA 1-800-437-3635
Canada 1-888-285-3476
www.dremel.com

DREMEL EZ
FASTER ACCESSORY CHANGES™

Also Available
Aussi disponible
También disponible



EZ LOCK™

EZ402 Mandrel
Mandrin / Mandril



EZ DRUM™

EZ407 Drum Mandrel
Mandrin à cylindre
Mandril de tambor