

PROFESSIONAL QUALITY

RIVET NUT TOOL INSTRUCTION MANUAL WE-889



2025.07 Amazon

WETOLS

PROFESSIONAL QUALITY

RIVET NUT TOOL INSTRUCTION MANUAL
WE-889

Parts Included	Qty
Nutsert Tool & Case	1
Mandrel Tool	1
Mandrel Lock Pin	1
M3-0.5 Mandrel	1
M4-0.7 Mandrel	1
M5-0.8 Mandrel	1
M6-1.0 Mandrel	1

Parts Included	Qty
M8-1.25 Mandrel	1
M10-1.50 Mandrel	1
M12-1.75 Mandrel	1
3/8-16 Mandrel	1
1/4-20 Mandrel	1
5/16-18 Mandrel	1
10/24-1.06 Mandrel	1

Read instructions entirely
before using this part.

Installing Mandrel



Step 1: Insert mandrel into stem (Fig A)

Step 2: Insert lock pin into hole so it catches on bearing. Use end of tool to push in if needed (Fig B, C)



(Fig A)



(Fig B)



(Fig C)

Step 3: Install the mandrels matching nose piece into stem (Fig D)

Step 4: Tighten with included tool (Fig E) you will need to hold the stem while tightening.



(Fig D)



(Fig E)



Tool Uses

Fig 1: The open end is used to tighten or loosen the mandrel nose piece.

Fig 2: The closed center area is to use to tighten or loosen the mandrel knob (if needed).

Fig 3: The pointed end is used to install or remove the mandrel lock pin.



(Fig 1)



(Fig 2)



(Fig 3)

Maintenance

Occasionally apply light oil to the nose piece, mandrel, main shaft, mandrel lock pin and hinges.


Troubleshooting

If the nutsert is not set firmly at the first fastening attempt, open handles slightly and tighten knob slightly and re-crush nutsert. Do not over tighten.


If nutsert is stuck on mandrel, use tool on knob for extra leverage.

If nutsert is deformed and you find it difficult to thread the bolt into the nutsert, you may clearance the nutsert with a rotary rasp bit or file.


If deformed nutsert cannot accept a bolt, you may have to remove nutsert completely. This can be done by drilling out nutsert with slightly smaller drill bit then the bit sized used for drilling the nutsert hole.

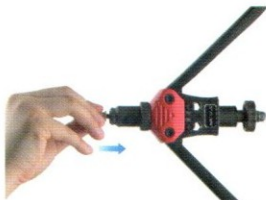

(Fig A)

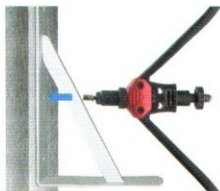

(Fig B)

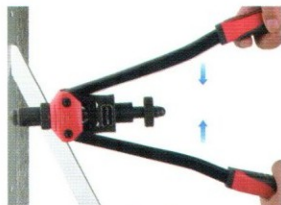

(Fig C)


Step 1: Make sure hole is drilled the correct size and there are no burrs.

Step 2: Install the nut on the mandrel(make sure the arms are opened completely)(A) Adjust nosepiece for the specific nutsert type so that the nutsert receives full thread engagement on the mandrel.

Step 3: Insert the rivet nut into the previously drilled whole(B)

Step 4: Pressing the arms to rivet the nut in place(C) Only use hand pressure. Excessive force can damage the nutsert and/or tool.

NOTE:Excessive side force can damage or break the mandrel threads.

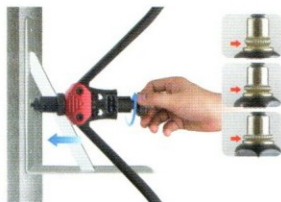

(Fig D)



(Fig E)

Step 5:Repeat step D E at least B-C times to ensure that the nut is fully tightened(D). If not, open handles and tighten the knob slightly, then repeat step E. Re-adjust nosepiece if necessary.

Step 6: Once nutsert is installed,spread open handles and rotate knob counter clockwise to remove mandrel from nutsert.(E)


NOTE: It is good practice to check the threads after each install by threading a bolt into nutsert and making sure it threads in easily.

WETOLS
PROFESSIONAL QUALITY

Made in China

WETOLS

PROFESSIONAL RIVETING SUIT

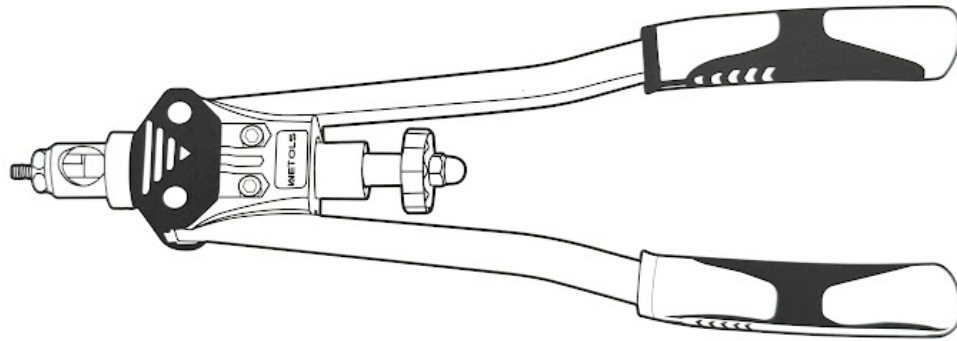

WE-889

WETOLS

PROFESSIONAL RIVETING SUIT

Scan with the
Transparency App



00789430944725

747

LOT:
WE889_20251105



MADE IN CHINA