Tenebrio photoperiod rig · system wiring

The Pi switches the 12 V supply of each LED strip with a relay. Each sensor has its own cable to the Pi. Not to scale.

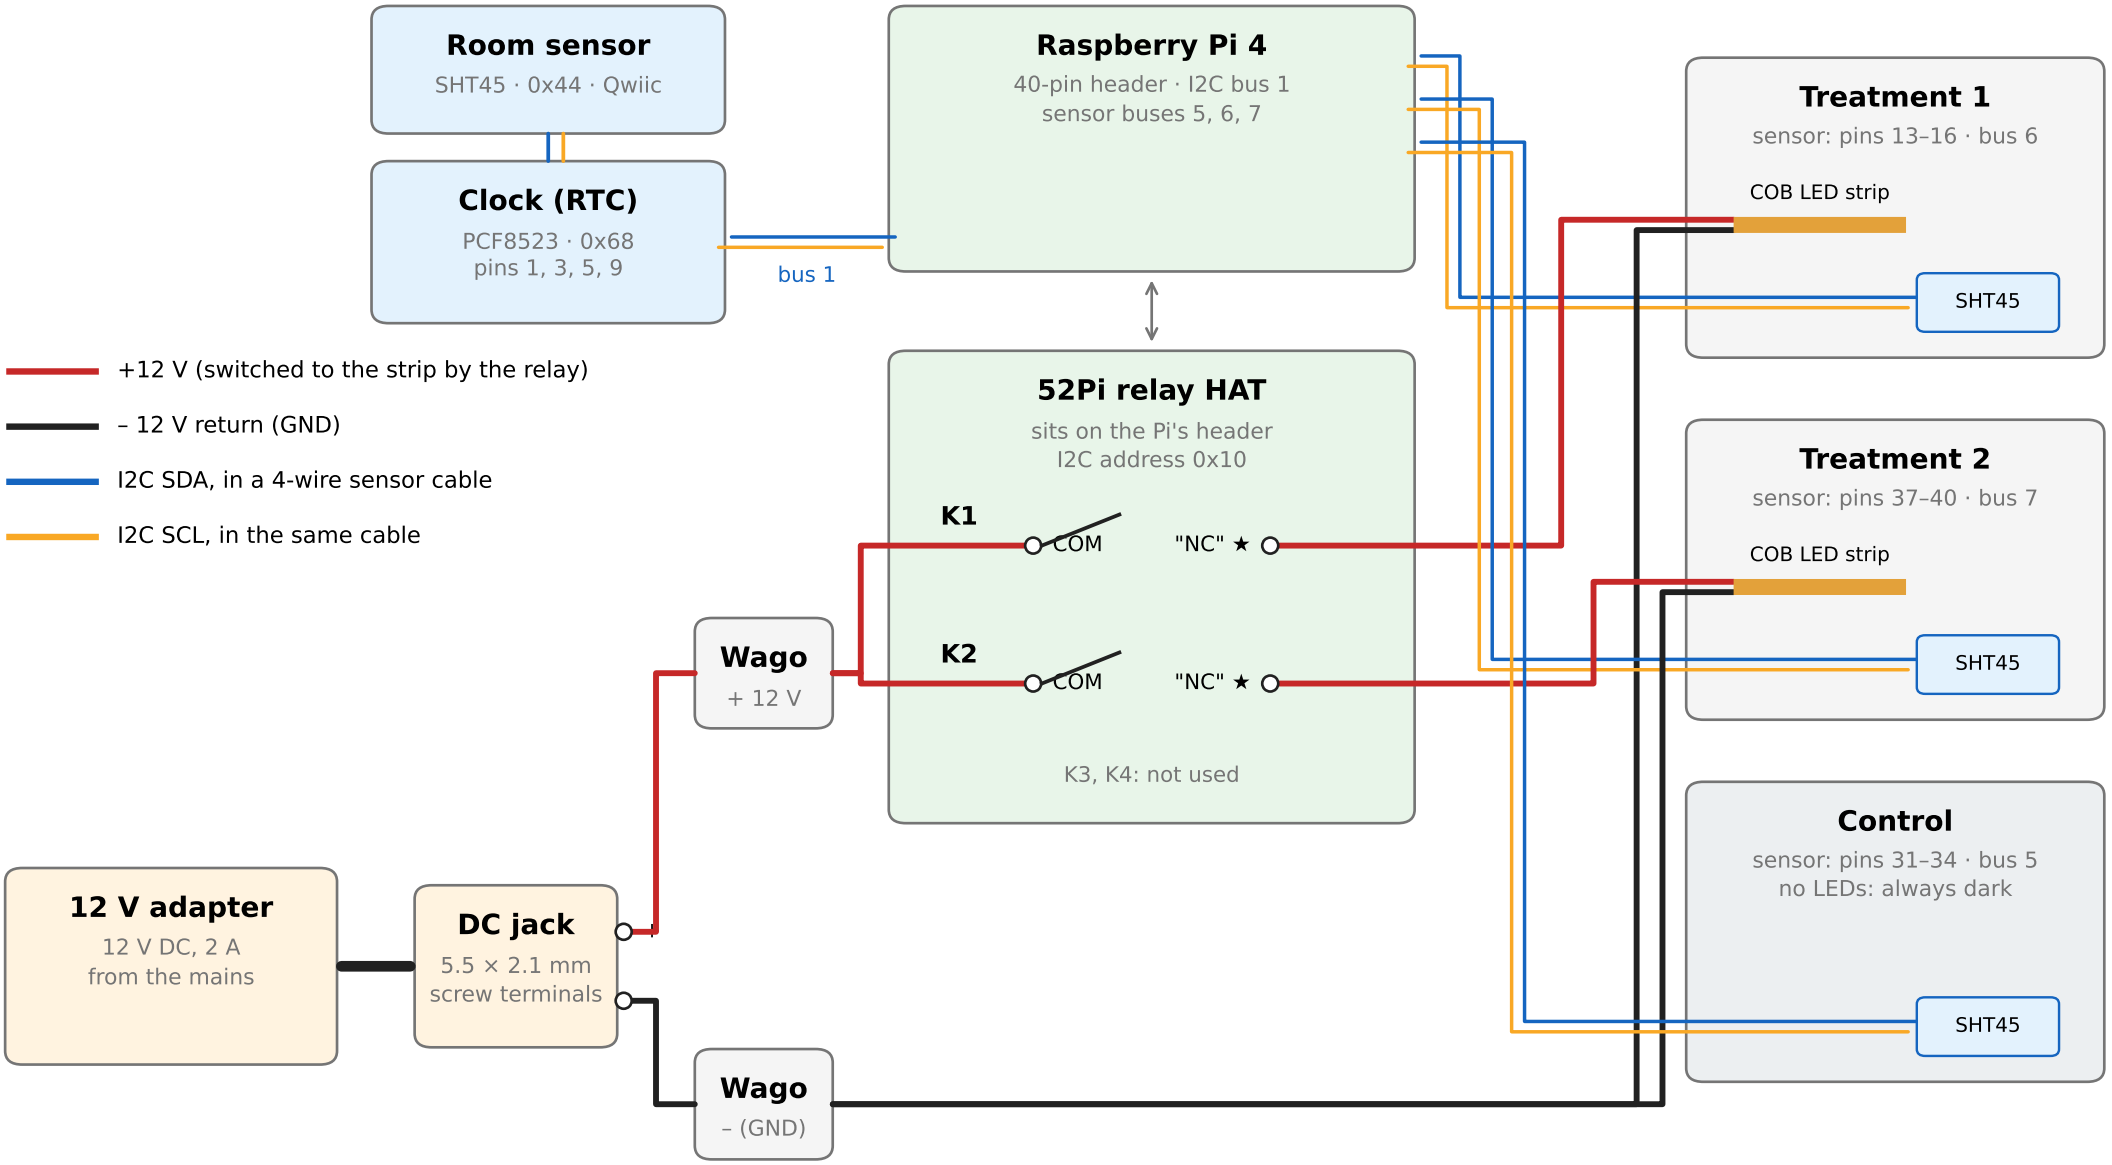

★ On our relay HAT the screw labels are swapped: the screw printed "NC" is the real normally-open contact. Test yours with a multimeter before you connect the strips. With the Pi off, COM must NOT connect to the screw you use. Then a Pi that is off or starting keeps every light off.

• Each sensor cable carries power, GND, SDA and SCL. The pin blocks are on docs/sensor-wiring.pdf. Never use the 5 V pins (2 and 4) for a sensor.

• Use the same strip type and the same length in every lit enclosure. Cover the sensor's green power LED with opaque tape, or the dark phase is not dark.