

ZT HEAVY DUTY FLIP UP LENS COVER INSTALLATION GUIDE

1. INSTALL ADAPTER RING AND TIGHTEN FIRMLY BY HAND.

TIP: if you're finding it difficult to grip the adapter ring, wear a rubber glove.




2. INSTALL THE FLIP UP COVER BY HAND.



3. ROTATE THE FLIP UP COVER TO YOUR PREFERRED ORIENTATION.




4. ONCE YOU HAVE ACHIEVED THE DESIRED POSITION FOR THE FLIP UP COVER, USE THE ZEROTECH MULTI-TOOL TO TIGHTEN THE LOCKRING FIRMLY.

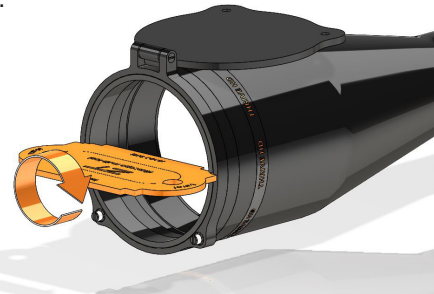

NOTE: If you wish to install an objective sunshade on your scope, please be sure to remove the adapter ring from the objective as well. Sometimes, it may be beneficial to wear a rubber glove to grip and remove the adapter ring.

FITTING THE SUNSHADE - PURCHASED SEPARATELY

5. REMOVE THE FLIP UP LENS COVER WITH YOUR ZT MULTI-TOOL.

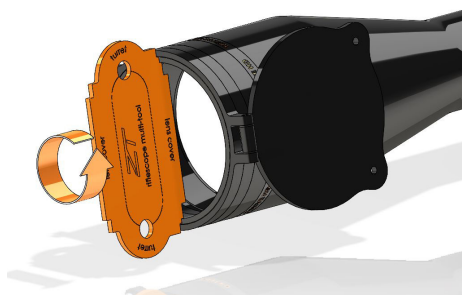

6. REMOVE THE ADAPTER RING BY HAND IF REQUIRED.



7. FIT THE SUNSHADE AND TIGHTEN FIRMLY.



8. IF YOU WISH TO INSTALL THE FLIP UP LENS COVER ON THE SUNSHADE, SIMPLY THREAD THE ADAPTER RING AND FLIP UP LENS COVER INTO THE SUNSHADE AND SECURE WITH THE ZT MULTI-TOOL.



REFER TO STEPS 1, 2 & 3 AT THE BEGINNING OF THE MANUAL.