


Wiring diagram: Shelly DevKit M1 → site U10 (WBR3 footprint) on the Q11 control board


Control board X2Q322_K_V4 (260703), controller X2Q311OW. Q11 board viewed from the component side, board edge with the module antenna at the bottom. DevKit viewed from the top, as in the photo. DevKit powered from the Q11 board through a removable jumper.

AMPERE POINT, 28 September 2026, EN v1 (from PL v2 of 24 September 2026).

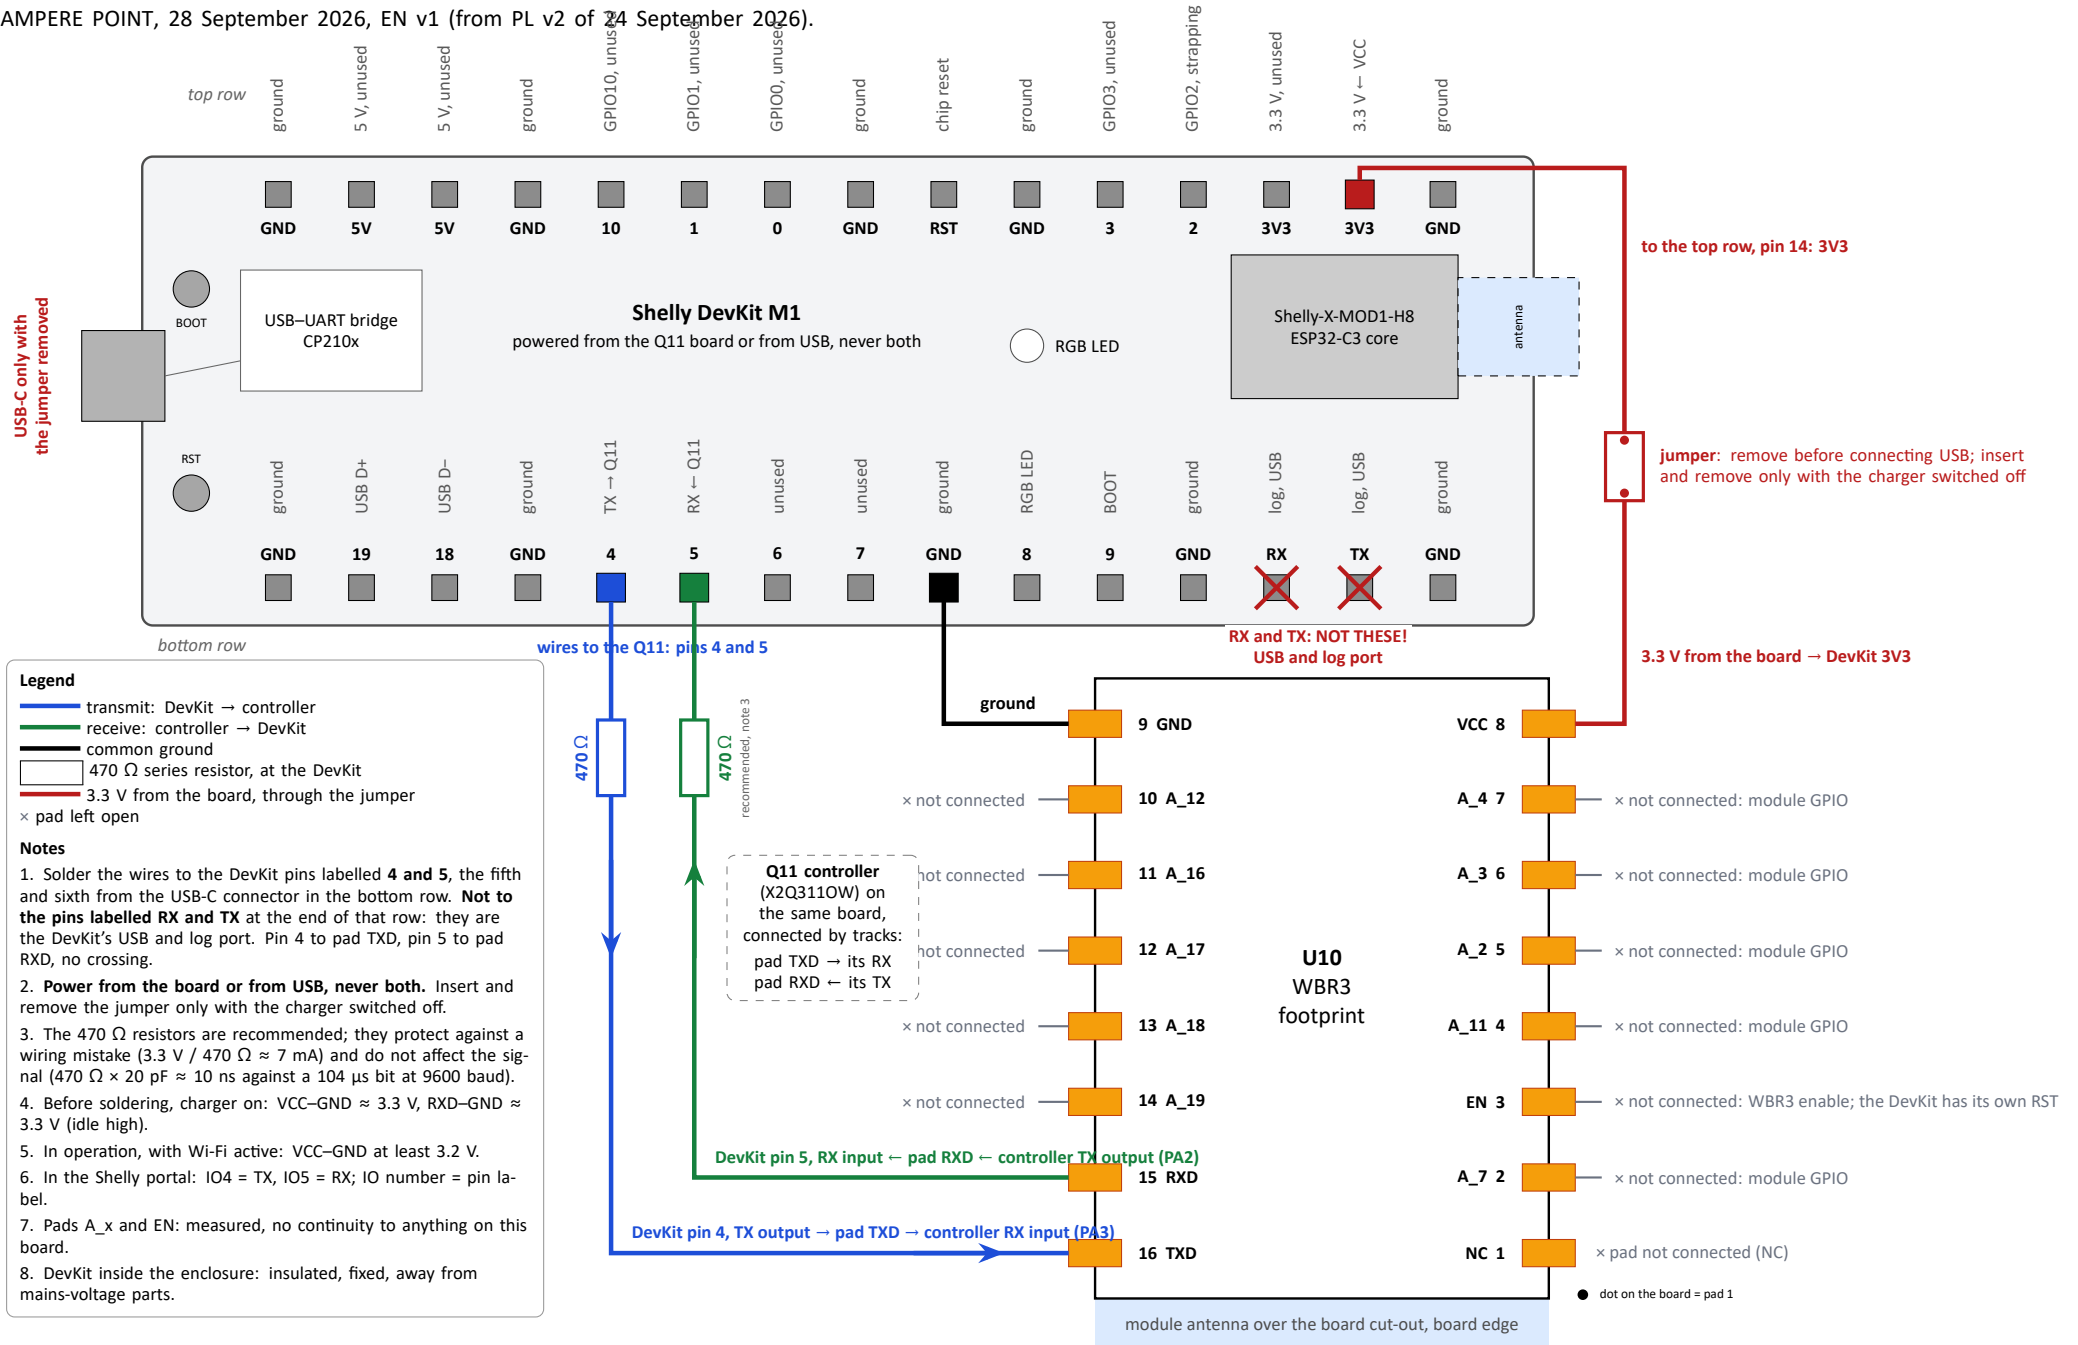

Site U10: function of every pad with the WBR3 → with the DevKit → with the Shelly X1 at the same position

Component side, board edge with the antenna at the bottom. Left column: pads 9–16 from the top. Right column: pads 1–8 from the bottom, dot next to “U10” = pad 1. Pad names from the WBR3 datasheet. X1 pad names from the Shelly X1 datasheet v14 (IO layout), derived by overlaying the two footprints; to be verified on a physical X1 sample.

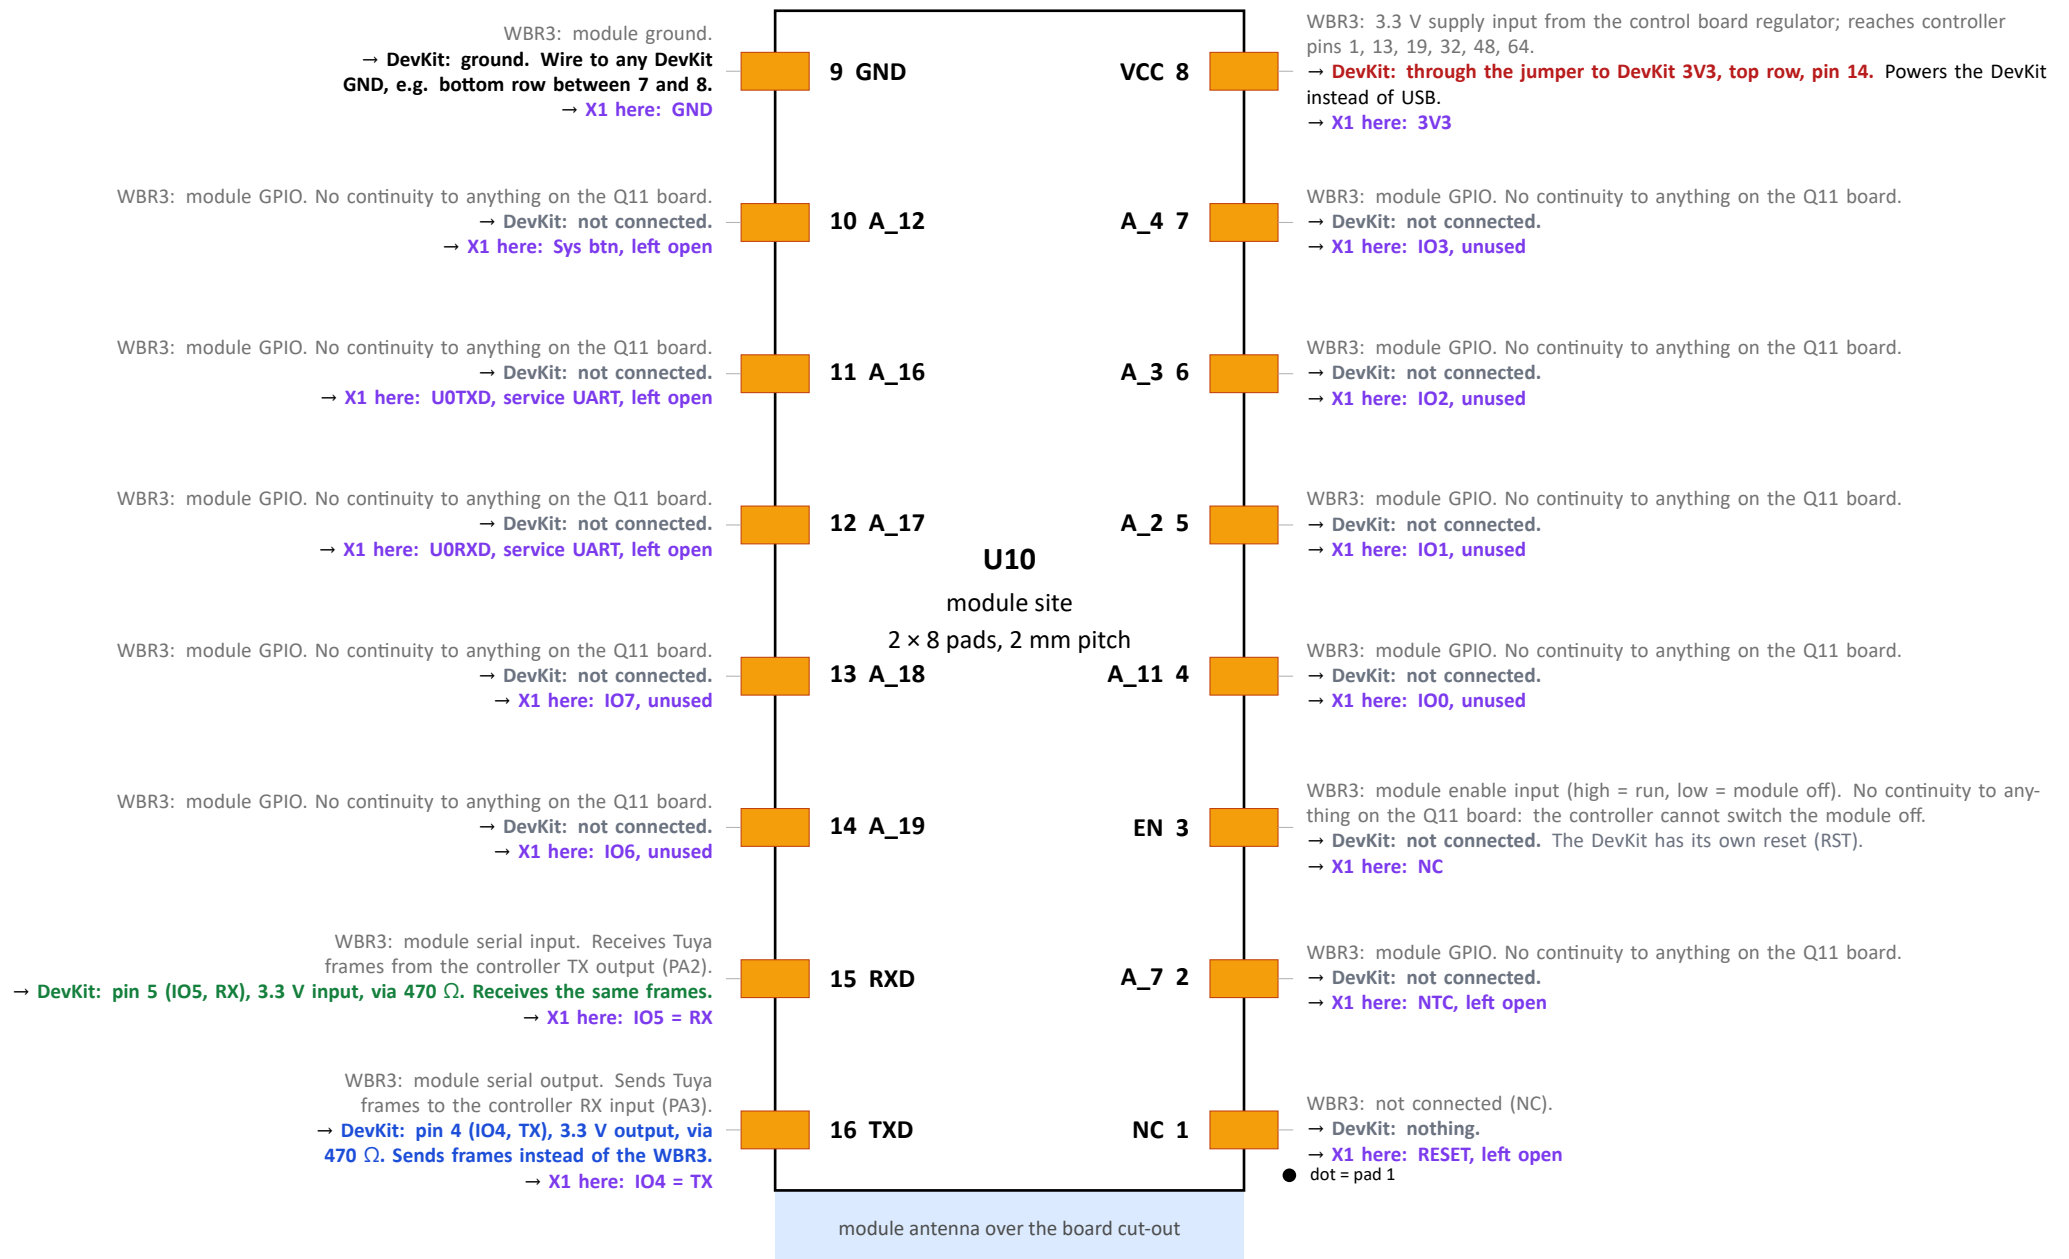

Colours: blue transmit DevKit → controller, green receive controller → DevKit, black ground, red 3.3 V from the board to the DevKit, grey pad left open, purple Shelly X1 pad at the same position.