


Setting the charging current automatically

If your charger begins every session at 6 A instead of the value you selected, this guide solves it. You will create one automation that watches the charger and sets your chosen current the moment charging starts. It takes about two minutes and requires no changes to your existing schedule.


What this rule does

Charging will still start at 6 A, but within a few seconds the automation raises the current to the value you choose — 13 A in this example. Your schedule stays exactly as it is; the automation simply corrects the current afterwards.

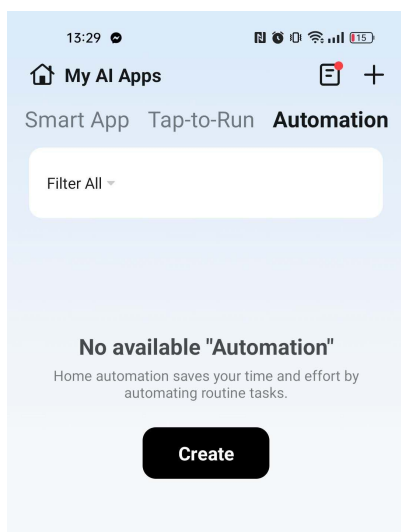

1 Open the Automation tab


In the app, go to the *Smart* tab at the bottom, then *Automation* at the top. Press *Create*, or the *+* button in the top right corner if you already have other rules.

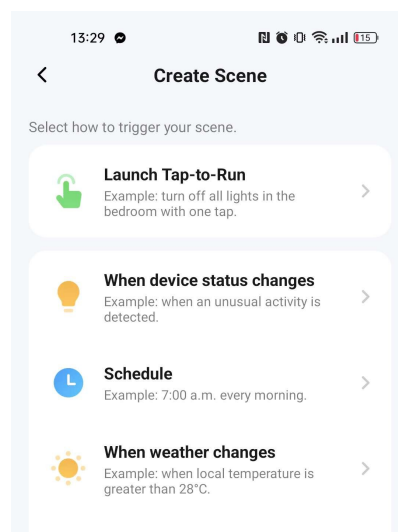

2 Choose the trigger type


Select *When device status changes*. This makes the rule watch the charger, rather than fire at a fixed hour.

Setting the charging current automatically

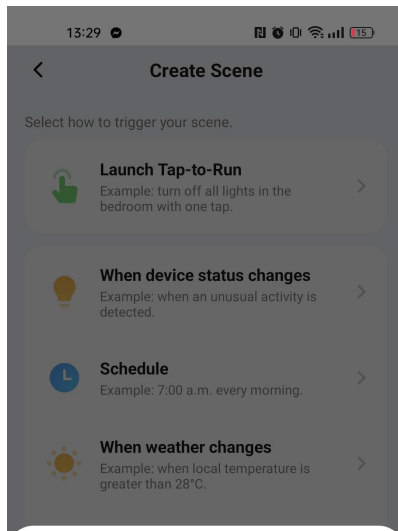


3 Choose how to pick the device

Press *Select a single device*.

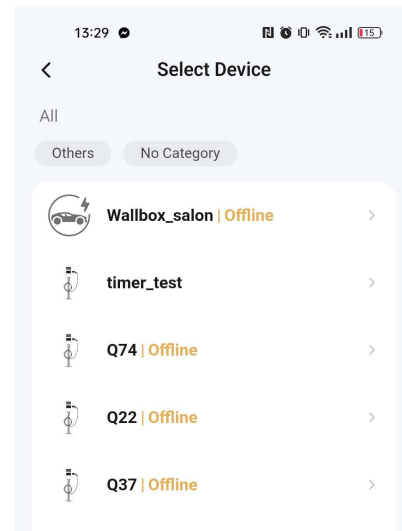


4 Pick your charger

Select your charger from the list of devices in your account.

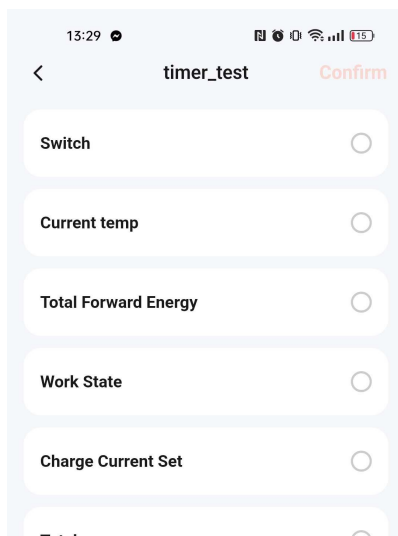

5 Choose the parameter to watch


A list of the charger's parameters appears. Select *Work State*.

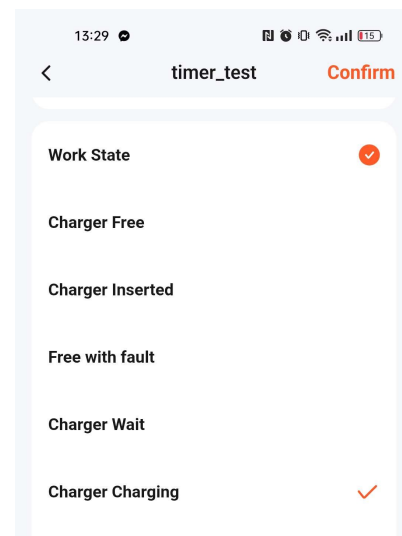

6 Select the state


From the list of states, choose *Charger Charging* and confirm. The rule will now fire the moment the charger begins charging.

Setting the charging current automatically

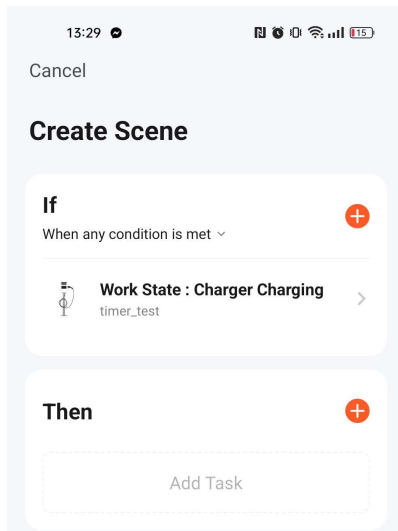


7 The condition is saved

You return to the scene screen. The condition is visible under *If*. Now press the + button next to *Then* to add the action.

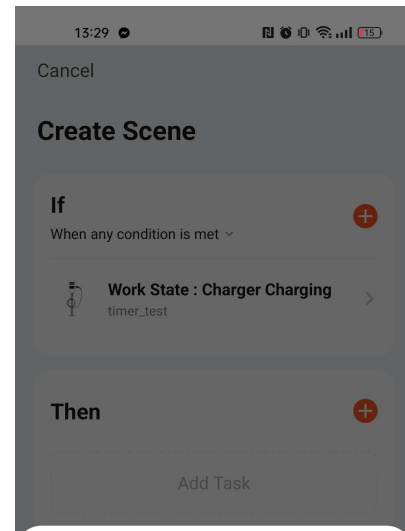


8 Choose the device again

Press *Select a single device* and pick the same charger.

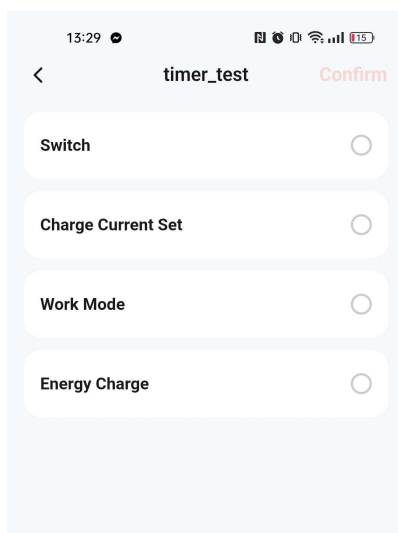

9 Choose what to change

From the list, select *Charge Current Set*. Do not select *Switch* — on this charger the switch cannot start charging, only stop it.

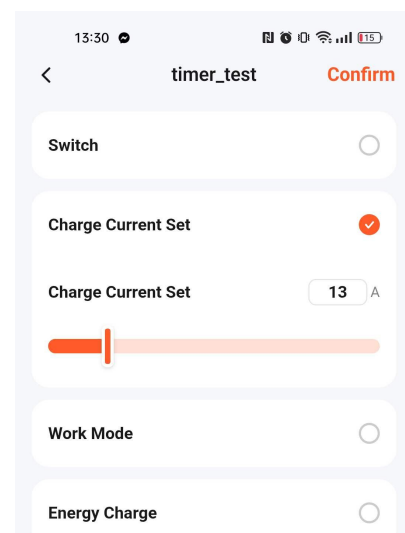


10 Set your current

Use the slider or type the value directly. Set the current you normally want to charge with — 13 A in this example — and confirm.

Setting the charging current automatically


The app will not save the rule without a city

Before you can save, the app needs to know your location. It uses it to calculate local time. If you have never set it, the *Confirm* button stays greyed out and nothing happens when you press it. The next three steps take care of this once — later rules will not ask again.

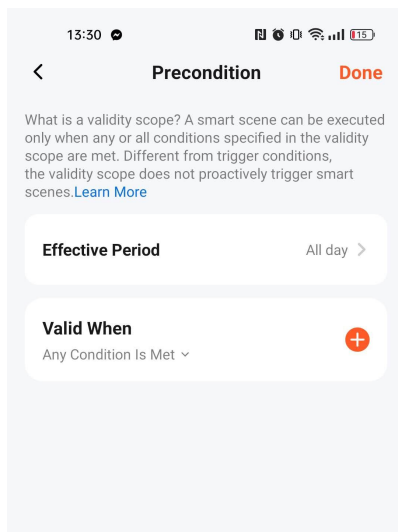

11 Open Precondition


On the scene screen, press *Precondition*, then *Effective Period*.

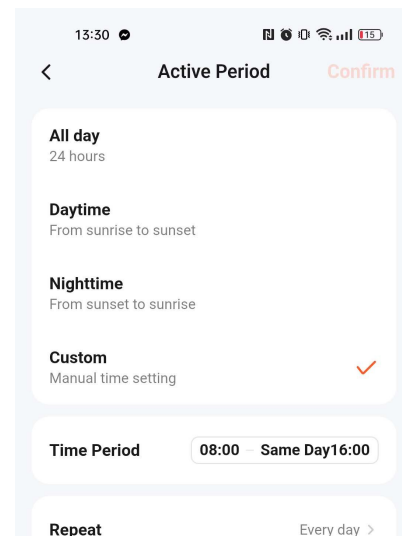

12 Check the city


Leave the period set to *All day*. At the bottom you will see *City*. If it says *Not Set* in red, press it — without this the *Confirm* button will not work.

Setting the charging current automatically

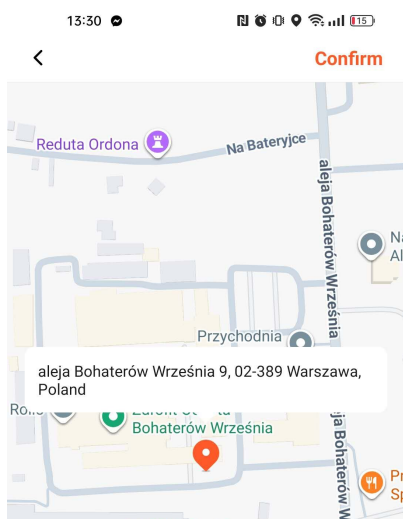

13 Select your location

Zoom to your area on the map and confirm. Any nearby point is fine — the app only needs it for the local time zone.

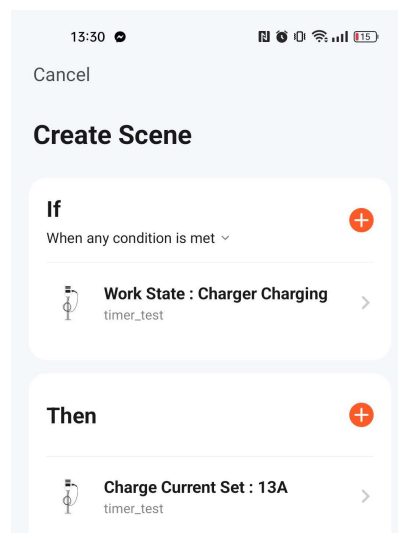

14 Confirm and return

Press *Confirm*, then *Done*. You return to the scene screen with *Precondition* showing *All day*.

Check the finished rule before saving

The rule should read:

If — Work State : Charger Charging **Then** — Charge Current Set : 13A **Precondition** — All day

Press **Save** and make sure the rule appears in the list with its toggle switched on.

That is all

From now on, every charging session will begin at 6 A and switch to your chosen current within a few seconds. Nothing else needs to be changed — your existing schedule keeps working as before.

One thing to avoid

Do not add *Switch : ON* as a second action. On this charger that command has no effect on starting a session. If you want different currents on different days, create several such rules and switch them on or off as needed.

If anything is unclear, please write to us: hello@amperepoint.com