

PROCEDURE TO INITIALIZE DVD**PART A: OPERATIONAL RECORDS AUTOMATIC ARCHIVING**

1. Check on the Technical Supervision position the RECORDING computer <REC> that is actually MASTER.

**Note:**

Refer to the *Specific Configuration Data Table* of the SMM document for the correct value of the following parameters:

<REC> for the hostname of the Recording computer,


<Archive Time> for the fixed periodic time of archiving.

2. Insert a blank DVD in the DVD drive of this recording computer.
3. From a position belonging to the same partition as the recording computer, launch "ecm" tool and then click on the "**Rec tools**" button to start the recording Graphical User Interface.


The REC Utilities window is displayed




4. The list of 'Available Nodes' is opening. Click then on the name of the 'MASTER' recording node.
5. The 'TOOLS' window is displayed.

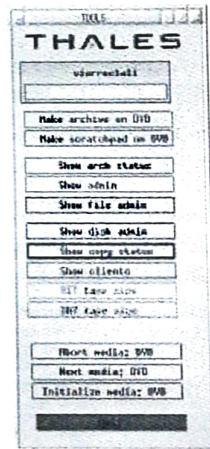

6. Select the DVD on the "**Media Selected**" button
7. Click on "**Initialize media: DVD**" button

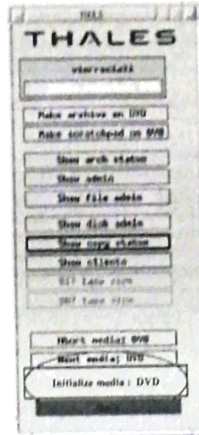

8. Click on "**show copy status**" to ensure the running status of the archiving process is NOT 'Waiting for next DVD'.

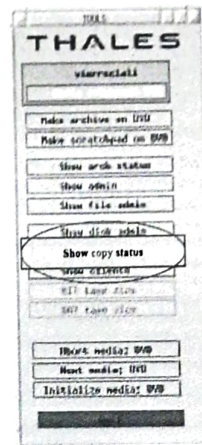

9. At <Archive Time> the archiving process will start automatically. The '**copy status**' will be '**busy archiving**'.
10. At the end of the archiving the '**Copy status**' will be '**archived**'.