

Equipment: TOPSKY ATC SYSTEM		ADM 7.18			
		Rev –	Sheet 1/2		
Subject: HOW TO ARCHIVE TRACES FILES FROM MAINTENANCE POSITION TO USB KEY					
Related Maintenance Procedure: Specific Configuration Data Table					
TOOLS REQUIRED: 1 – Standard USB Key 2 – Specific NA		TEST EQUIPMENT REQUIRED: 1 – Standard NA 2 – Specific NA			
SPARE / CONSUMABLE: NA					
DOCUMENTATION: NA					
ALLOCATED TIME: 10 MIN					
PRELIMINARY CONDITION: NA					

PART A: ARCHIVE TRACES FILE TO A USB KEY

1. Open a terminal on the <Maintenance position> of the <Platform Name> under the “root” account :

```
system> su - root
Password : *****
```



Notes:

Refer to the *Specific Configuration Data Table* of the SMM document for the correct hostname of <Maintenance Position> according with the <Platform Name>

Traces directories are designed with the following format : <YYYY_MM_DD_xm> where “xm” defines “am” or “pm”

2. get access to the Traces directory :

```
root> cd /ref/traces [ENTER]
```

3. list all the Traces directories. These directories are with the following format : <YYYY_MM_DD_xm>

```
root> ls -al [ENTER]
```

4. Connect a USB Key on a free USB 2.0 port (black) of the Maintenance position to archive Traces on and mount it.



Note:

Use the “fdisk -l” command after plugging the USB key to identify the associated USB device.

Replace the <x> parameter by the real value of the device identifier.

```
root> fdisk -l
Disk /dev/sd<x> : <size> bytes
.....
root> mount /dev/sd<x>1 /media/usb
```

5. create a compressed file on temporary directory to check its size before archiving :

```
root> tar cvfz /tmp/<YYYY_MM_DD_xm>.tar.z <YYYY_MM_DD_xm>
```

6. check the size of the compressed file :

```
root> du -sh /tmp/<YYYY_MM_DD_xm>.tar.z
```

7. Archive on the USB Key the selected Traces directory as compressed file (.tar.z) :

```
root> cp /tmp/<YYYY_MM_DD_xm>.tar.z /media/usb
```

8. Check the archived Traces file on USB Key :

```
root> ls -al /media/usb/
```

9. Un-mount the USB Key :

```
root> umount /dev/sd<x>1
```

10. Delete the archived Traces directory from the Maintenance position :

```
root> rm -rf <YYYY_MM_DD_xm>
```

Equipment: TOPSKY ATC SYSTEM		ADM 7.76			
		Rev –	Sheet 1/4		
Subject: DPR DATASET BACKUP AND RESTORE ON MAINTENANCE POSITION					
Related Maintenance Procedure: Specific Configuration Data Table					
TOOLS REQUIRED: 1 – Standard - USB key (minimum size : 2Gb) 2 – Specific NA		TEST EQUIPMENT REQUIRED: 1 – Standard NA 2 – Specific NA			
SPARE / CONSUMABLE: NA					
DOCUMENTATION: NA					
ALLOCATED TIME: 10 MIN					
PRELIMINARY CONDITION: NA					

**Notes:**

Use the “fdisk -l” command after plugging the USB key to identify the associated USB device.

Replace the <x> parameter by the real value of the device identifier.

Replace the <date> parameter by the date of archive creation.

Refer to the *Specific Configuration Data Table* of the SMM document for the correct value of the
Version of Dataset : <Vx.y>

PART A: DPR DATASET FILES BACKUPING FROM DPR NODE

1. Login as *root* on the Maintenance position:

```
Login : root
Password : *****
root>
```

2. Plug USB key on the Maintenance position and mount it:

```
root> fdisk -l
Disk /dev/sd<x> : <size> bytes
.....
root> mount /dev/sd<x>1 /media/usb
```

3. Open a xterm window, change directory to dataset directory:

```
root> cd /usr/system/OFFL
```

4. Copy the dataset to the media in compressed format file:

```
root> tar czf /media/usb/dataset_<Vx.y>_<date>.tgz <Vx.y>
```

5. Un-mount the USB key:

```
root> umount /dev/sd<x>1
```

6. Remove the USB key from the computer

PART B: DPR DATASET FILES RESTORING ON DPR NODE

7. Login as *root* on the Maintenance position:

```
Login : root
Password : *****
root>
```

1. Plug USB key on the Maintenance position and mount it:

```
root> fdisk -l
Disk /dev/sd<x> : <size> bytes
.....
root> mount /dev/sd<x>1 /media/usb
```

2. Open a xterm window, change directory to dataset directory:

```
root> cd /usr/system/OFFL
```

3. Copy the dataset from the media to DPR position:

DPR DATASET BACKUP AND RESTORE ON MAINTENANCE POSITION	ADM 7.76	Rev –	Sheet 3/4
--	----------	-------	-----------

```
root> tar xzf /media/usb/dataset_<Vx.y>_<date>.tgz
```

4. Un-mount the USB key:

```
root> umount /dev/sd<x>1
```

5. Remove the USB key from the computer

Equipment: TOPSKY ATC SYSTEM		ADM 7.82			
		Rev A	Sheet 1/2		
Subject: JADE DATABASE BACKUP					
Related Maintenance Procedure: Specific Configuration Data Table					
TOOLS REQUIRED: 1 – Standard blank USB Key 2 – Specific NA		TEST EQUIPMENT REQUIRED: 1 – Standard NA 2 – Specific NA			
SPARE / CONSUMABLE: NA					
DOCUMENTATION: NA					
ALLOCATED TIME: 10 MINUTES					
PRELIMINARY CONDITION: NA					

PART A: JADE DATABASE BACKUP TO A USB KEY

1. Connect the USB Key to the upper free USB port (black) on the front panel of the Maintenance position.
2. Open a terminal on the Maintenance position under the *system* account :

```
su -  
Password : *****
```



Notes:

Use the “fdisk -l” command after plugging the USB key to identify the associated USB device.

Replace the <x> parameter by the real value of the device identifier.

-
3. Mount USB Key on the position:

```
root> fdisk -l  
Disk /dev/sd<x> : <size> bytes  
.....  
root> mount /dev/sd<x>1 /media/usbkey
```



Note:

Backup identification is done with <site>_<ddmmyy> parameters.

Refer to the *Specific Configuration Data Table* of the SMM document for the correct value of
<Site> parameter that is the backup site name,

<ddmmyy> is the backup date with the following format : day-month-year (example 251213).

-
4. Backup Jade Analytical and Statistical Databases to USB Key:

```
root> pg_dump jade_statistical -Ujade > /media/usbkey/jade_statistical_<Site>_<ddmmyy>  
root> pg_dump jade_analytical -Ujade > /media/usbkey/jade_analytical_<Site>_<ddmmyy>
```

5. Un-mount USB Key:

```
root> umount /dev/sd<x>1
```

6. Go back to “system” account

```
root> exit
```

Equipment: TOPSKY ATC SYSTEM		ADM 7.86			
		Rev –	Sheet 1/2		
Subject: HOW TO UPDATE A SYSREF ACCOUNT TO USB KEY					
Related Maintenance Procedure: NA					
TOOLS REQUIRED: 1 – Standard USB Key 2 – Specific		TEST EQUIPMENT REQUIRED: 1 – Standard NA 2 – Specific NA			
SPARE / CONSUMABLE:					
DOCUMENTATION: NA					
ALLOCATED TIME: 10 MINUTES					
PRELIMINARY CONDITION: Execute this procedure after an update of SYSREF account performed on the Maintenance position.					

PART A: UPDATE A SYSREF ACCOUNT FROM MAINTENANCE POSITION TO USB KEY

1. Connect the USB Key to a free USB 2.0 port (black) of the Maintenance position.
2. Open a terminal on the Maintenance position under the “root” account :

```
system> su - root
Password : *****
```

3. get access to the SYSREF folder :

```
root> cd /ref
```

4. check that the actual SYSREF folder already exists :

```
root> ls
sysref
```

5. Identify the USB Key device and then mount it on the Maintenance position.

**Notes:**

Use the “fdisk -l” command after plugging the USB key to identify the associated USB device.

Replace the <x> parameter by the real value of the device identifier.

Replace the <date> parameter by the date of the archive.

```
root> fdisk -l
Disk /dev/sd<x> : <size> bytes
.....
root> mount /dev/sd<x>1 /media/usb
```

6. Backup the new SYSREF account from the Maintenance position to USB Key:

```
root> tar -cvjpf archive_<date>.bz2 ./sysref
root> mv archive_<date>.bz2 /media/usb/
```

7. Un-mount the USB Key where x has to be replaced by the identified USB device:

```
root> umount /dev/sd<x>1
```

8. Unplug the USB Key from the Maintenance position.

4.4 APPENDIX C: START A NODE IN REPLAY MODE PROCEDURE

/Equipment: TOPSKY ATC SYSTEM		ADM 7.59	
		Rev D	Page 29/38
Sujet: START A NODE IN REPLAY MODE			
Associated maintenance procedure: NA			
TOOLS REQUIRED: 1 – Standard USB key with ATC data 2 – Specific NA		TEST EQUIPMENT REQUIRED: 1 – Standard NA 2 – Specific NA	
SPARE / CONSOMMABLE: NA			
DOCUMENTATION: NA			
ESTIMATED TIME: 30 MIN			
PRELIMINARY STEP: The operational supensor shall free a position for replay.			

PART A: REPLAY PREPARATION



Warning!

Is not possible to replay when REC nodes are synchronising.

1. From DBM position, connect remotely on OPS position

```
maerdbm01sv :run> rsh maerops01sv
```


2. From OPS position, start “ECM” tools.

```
maerops01sv :run> ecm
```

3. Left click on “*Recording tool*”.
4. The "REC Utilities" window is displayed.
 - Left click on REC ‘**MASTER**’ node.



5. The “TOOLS” window is displayed,
6. Left click on “**Show admin**”

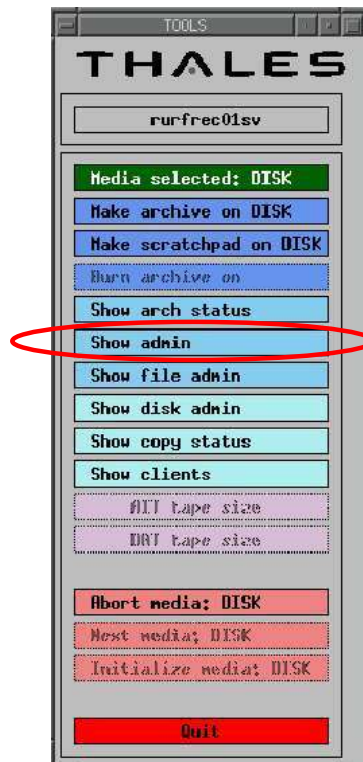


NOT EXPORT CONTROLLED

THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

VERSION DESCRIPTION DOCUMENT - VDD – TOPSKY-ATC SYSTEM

7. The following window is displayed:

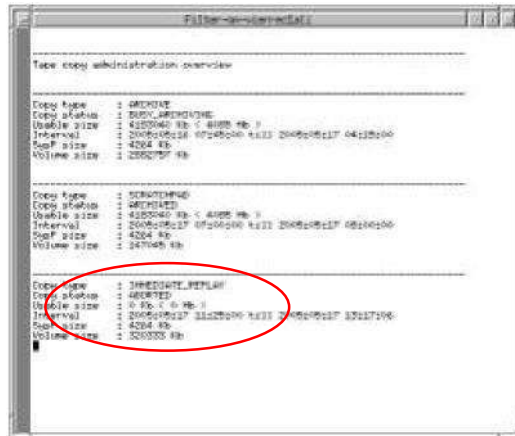

8. Check the status of the field **IMMEDIATE REPLAY** :

- If status is **FAILED**, it is not possible to replay.
- In this case, stop and start REC master node.
- After restarting, make sure the status is **NOT_USED**,

9. Left click on **"Abort media: DISK"** and select **"ARCHIVE"**. Then, left click again on **"Abort media: DISK"** and select **"SCRATCHPAD"**.



NOT EXPORT CONTROLLED

THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

PART B: PROCEDURE TO FREE REPLAY POSITION

From operational supervisor window (OPS):

1. In the menu bar, at the bottom right of the screen, left click the button « **SUP ON** ».
2. Log in as "supervisor" user:

Login: **OPSUP**

Password: *********

3. In the menu bar at the bottom of the screen, click the button « **Info** ».
4. The window « **INFORMATION DIALOGUE WINDOW** » is displayed. Left click on « **SECT** ».
5. The window « **CONFIGURATION** » is displayed. In this window, assign (sectorize) the sectors from the position that will be used for the REPLAY to another position.



Attention !

The position selected for replay must be « free ».

6. Left click on the buttons « **STORE** » and « **OPS** » to apply new sectorization.
7. Check that the position selected for the replay is set to « **FREE** » mode.
8. In the menu bar, at the top of the screen, click on the "user" button "**FREE**".
9. A sub-window is displayed with only two possible choice « **Shadow** » or « **Replay** »
 - Click on « **Replay** » to select this function.
10. The « **PLAYBACK PREPARATION** » window is displayed. Enter the following data:
 - The name of the position to replay such as **CWPxx**.
 - The selected period of time (date and time) to replay (**DDMMYY HHMM**).
 - The media used for the **REPLAY** (internal HD or external USB HD).
 - The audio track Number (if any).
11. Click on « **ENTER** » button to confirm your selection:
 - The « **FONCTION IN PROGRESS** » window is displayed as the system checks the data availability.
12. After a few seconds, the node restart automatically and the « **PLAYBACK CONTROL** » window is displayed.
 - According to your needs, select the corresponding replay speed (x1 à x10) and mode « **PASSIVE** » or « **INTERACTIVE** ».
13. Click on « **CONTINUE** » to valid your selection.
 - The RECORDED Air Situation is then displayed on the controller position.

PART C: PROCEDURE TO START REPLAY FROM USB EXTERNAL DEVICE



Warning!

REPLAY shall be initialized from the node hosted the CSCI **REP (OPS for Mauritius)**


1. From DBM connect remotely on OPS position.

```
maerdbm01sv :run> rsh maerops01sv
```

2. From OPS position, run “ECM” tool of **Enroute** partition.


```
maerops01sv :run> ecm
```

3. The **ECM** window is displayed.

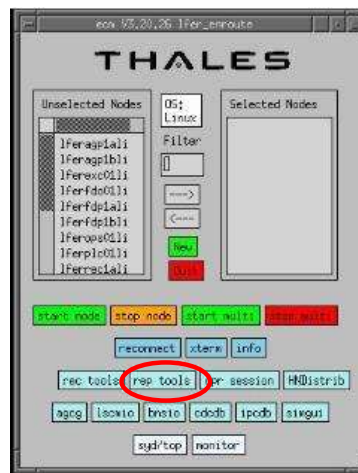

- Left click on “**rep tools**”.

4. The following window is displayed:

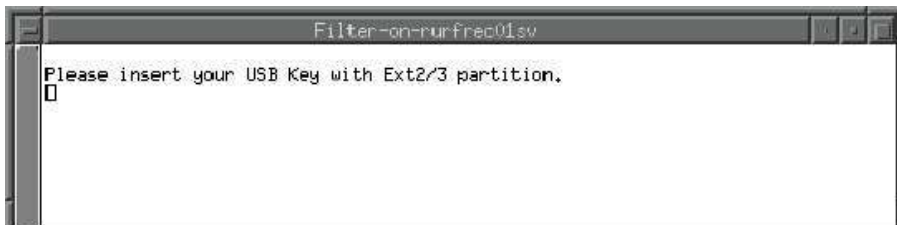

- Insert external USB disk on the OPS position
- Wait until the device is detected.

5. The “**REP Utilities**” window is displayed.


NOT EXPORT CONTROLLED

THALES GROUP LIMITED DISTRIBUTION


This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.



- Left click on **“Choose DVD”** and in the list displayed, select the desired period to be replayed

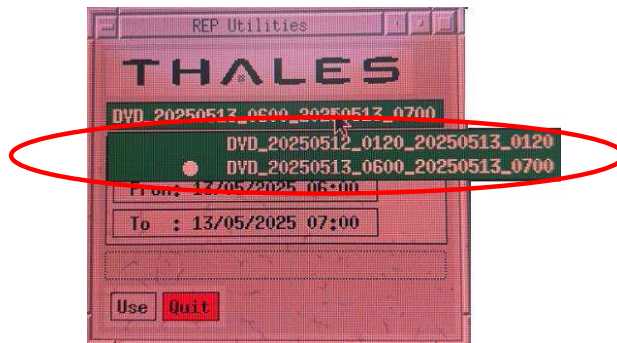

6. The **“REP Utilities”** window is filled with the selected **“DVD recording data:”**

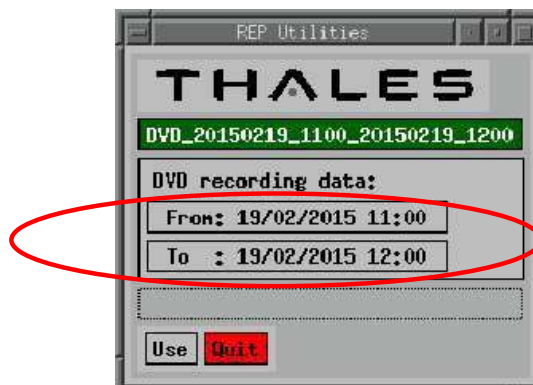

- Left click on **“Use”** before starting replay.

7. The message « **Click here only at REPLAY end** » appears in **red** :



- Continue with replay on operational position following **"PART B"** of this procedure.
- At the end of replay, A la fin du replay sur l'OPSUP, exécuter la partie **"PART D"** de cette procédure.

PART D: PROCEDURE TO STOP A REPLAY SEQUENCE



Warning !

Never stop a replay session clicking on « STOP NODE » from the RCMS.

From the position in REPLAY mode:

1. Press simultaneously the « **Shift** » + « **REPLAY** » keys.
 - The « **PLAYBACK CONTROL** » window is displayed back :
 - Click on « **STOP** ».
2. The « **PLAYBACK PREPARATION** » window is displayed back:
 - Click on the «*» « star » button on the top right corner.
3. The **LIVE** air situation is displayed again after a few minutes.

From the position in REP node (OPS):

4. When the replay session is ended, click on the “Quit” red button to free the disk and possibly select another “DVD like” storage date and time or end the replay.



- The external USB media can be removed from the **REP** computer.

NOT EXPORT CONTROLLED

THALES GROUP LIMITED DISTRIBUTION

This document may not be reproduced, modified, adapted, published, translated, in any way, in whole or in part or disclosed to a third party without the prior written consent of THALES.
© 2026 THALES All rights reserved.

ATM Replay Procedure (Maerexc03sv)

1. **Access Technical Position (TKSUP):**
 - Switch to Floating Position.
 - Select EXC 03 to "OPS" (Maerexc03sv icon should turn green on RCMS).
 - Matsexc03sv will display blue status on Mats Icon.
2. **Check User Status:**
 - On the Maerexc03sv screen, verify that the user is marked as "Free".
3. **Initiate Replay:**
 - Click on the "Free" user and select "Replay".
 - Fill in the **PLAYBACK PREPARATION** window:
 - **Position name:** STA01
 - **Starting:** 130924 0500
 - **Media:** Disk
 - **Audio:** (leave blank)
 - Press **ENTER**. The screen will go black for a few minutes until the playback window appears.
4. **Close Playback Window:**
 - Press **Shift + Replay Button** to show the Playback window.
 - Click on "Stop" in the Playback Window and then close the application by clicking *.
5. **For Archived Replays:**
 - If the replay date is outside the current month, request an archived DVD from the Watch Technician and insert it into the DVD Drive of workstation maerops01sv (OPS Supervisor Position).
 - Example: For 12 August 2024, use the archived date of 13 August 2024, and repeat steps 1-4.

Position Summary:

- **Oceanic Position Executive:** Maerexc01sv (STA01)
- **Approach Position Executive:** Maerexc02sv (STA02)
- **Simulator Position Executive:** Maerexc03sv (STA03)
- **Tower Position Executive:** Maertwr01sv (STA04)
- **Oceanic Position Planner:** Maerplc01sv (STA05)
- **Approach Position Planner:** Maerplc02sv (STA06)
- **Simulator Position Planner:** Maerplc03sv (STA07)