





Core

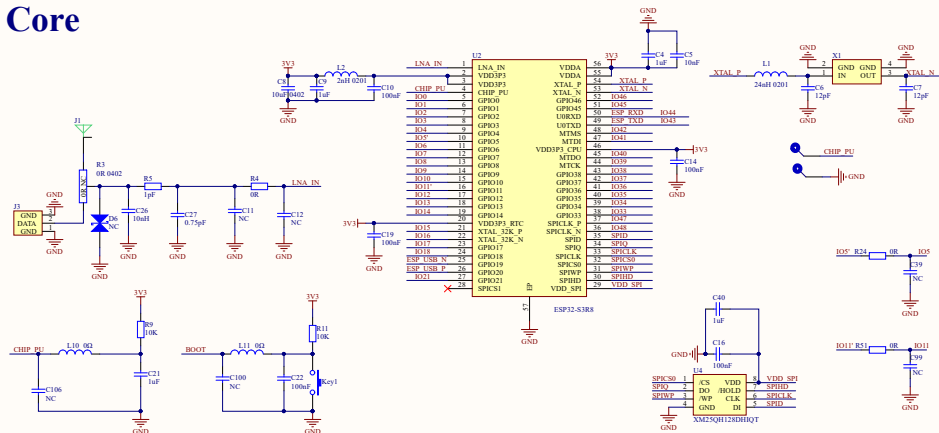

Camera

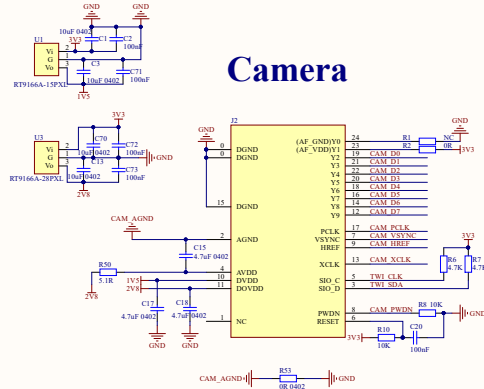


GPIO	LCD	SD Card	Camera	Codec	BAT	Other	PIN OUT
E000						BOOT	I2C
E001	OSPI D0 LCD M0S0						
E002	OSPI D1 LCD M0S0						
E003	OSPI D2 LCD D0C						
E004	OSPI D3						
E005	OSPI DCK LCD D0C						
E006	OSPI CS LCD L0S						
E007	TP SCL		T01 CLK	CODEC SCL		SCL	I07
E008	TP SDA		T01 SDA	CODEC SDA		SDA	I08
E009	TP INT						
E010				I2S SCLK			
E011				I2S LRCK			
E012				I2S ANDOUT			
E013				I2S DSDIN			
E014							
E015					PWR KEY		
E016		SD CLK					
E017		CAM VSYN					
E018		CAM HREF				USB N	
E019						USB P	
E020			CAM D7				
E021			CAM SCLK				
E022			CAM D6				
E023			CAM D5				
E024			CAM D4				
E025			CAM D3				
E026		SD CMD					
E027		SD D0					
E028			CAM D0			I10SD	
E029			CAM D1			I08SD	
E030			CAM D2				
E031	TP RST						
E032	LCD RST						
E033		AD CS					
E034			CAM FWDS				
E035				PS CTRL		RAF EN	
E036							PWR LED
E037						CHRG DET	
E038	AD0 ADC					RAF ADC	
E039	AD10 PWM0	LCD BL					

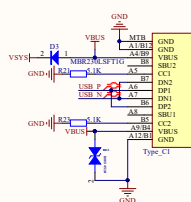
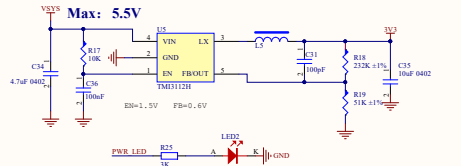


Power


R44			
866K	820K	360K	160K
0.2A	0.27A	0.5A	1A
150K	82K	66K	
1.2A	2A	2.5A	

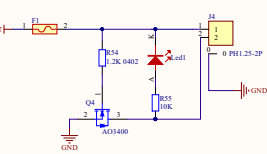

Type-C

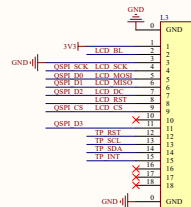


LCD

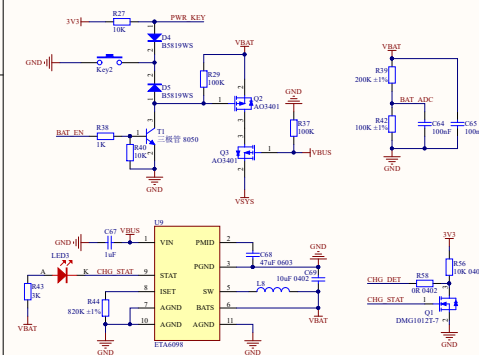


BAT

DAC

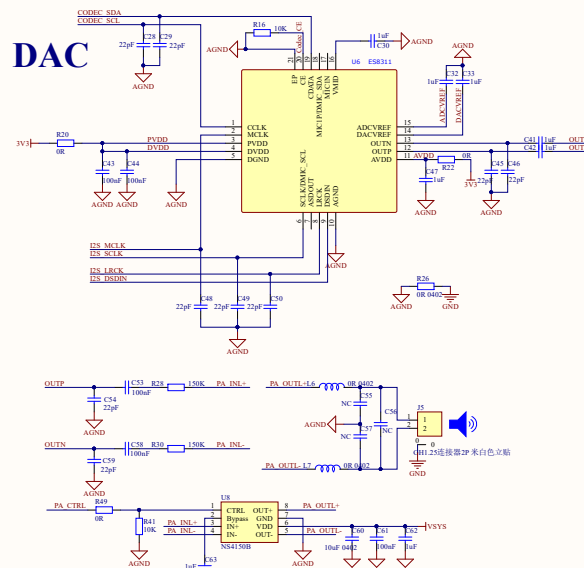


PA

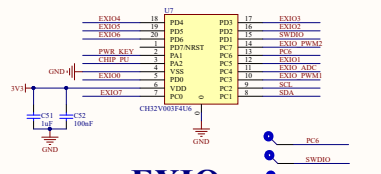

EXIO



ADC

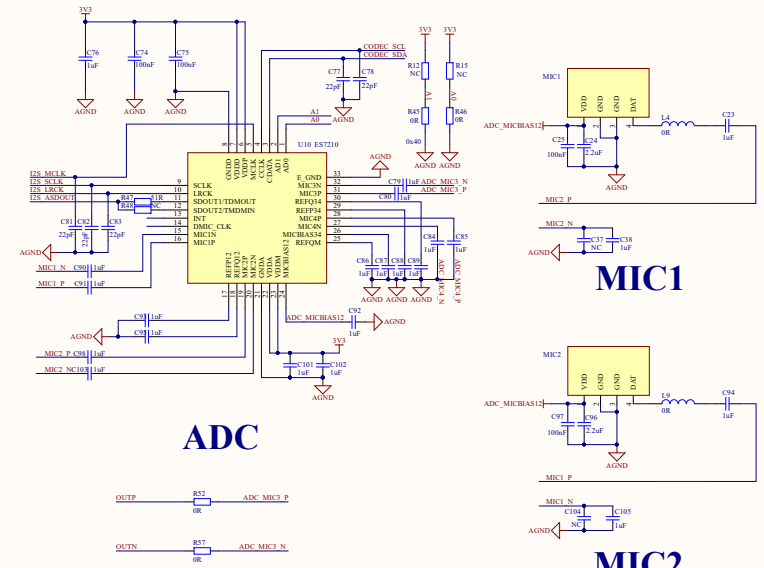

MIC2

AEC

SD Card

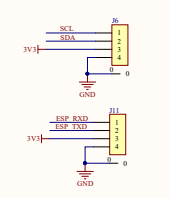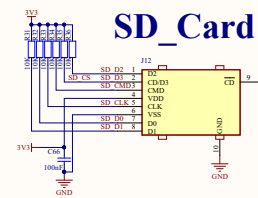

W
ESP32-S3-CAM-OVxxxx