

DEBIX TD101H User Guide

Version: V1.2 (2026-09)

Complied by: Polyhex Technology Company Limited (<http://www.polyhex.net/>)

DEBIX TD101H is a 10.1-inch touch screen HDMI™ LCD monitor with 1280 x 800 resolution. The LCD monitor supports VGA and HDMI video signal input, power amplifier speaker and headphone output, touch operation, and remote control function. It is compatible with DEBIX series computers with HDMI ports.



Figure 1

REVISION HISTORY		
Rev.	Date	Description
1.0	2024.09.10	First version
1.1	2026.03.13	Updated Table 1 DEBIX TD101H Specification
1.2	2026.09.07	Added Chapter 1 (Security) and supplemented HDMI trademark attribution notice.

INDEX

Chapter 1 Security	4
1.1. Safety Precaution	4
1.2. Safety Instruction	4
1.3. Technical Support	5
Chapter 2 DEBIX TD101H User Guide	7
1.1. Overview	8
1.1.1. DEBIX TD101H	8
1.1.2. DEBIX TD101H-C (with enclosure)	9
1.2. Button Setting	11
1.3. Interfaces	12
1.4. Packing List	13
Chapter 3 Getting Started	14
2.1. Menu Setting	14
2.2. FAQ	16

Chapter 1 Security

1.1. Safety Precaution

Read the following safety precautions carefully before installing, connecting, or operating the product.

Table 1 Terms and conventions

Symbol	Meaning
<i>Warning!</i> 	Always disconnect the power cord from the device whenever there is no workload required on it. Do not connect the power cable while the power is on. Sudden power surges can damage sensitive electronic components.
<i>Caution!</i> 	Always ground yourself to remove any static electric charge before touching <i>DEBIX</i> product. Modern electronic devices are very sensitive to electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag.

1.2. Safety Instruction

To avoid malfunction or damage to this product please observe the following:

1. Disconnect the device from the DC power supply before cleaning. Use a cloth. Do not use liquid detergents or spray-on detergents.
2. Keep the device away from moisture.
3. During installation, set the device down on a reliable surface. Drops and bumps will lead to damage.
4. Before connecting the power supply, ensure that the voltage is in the required range, and the way of wiring is correct.
5. Carefully put the power cable in place to avoid stepping on it.
6. If the device is not used for a long time, power it off to avoid damage caused by sudden overvoltage.

7. If one of the following situations occur, get the equipment checked by service personnel:

- Liquid has penetrated into the equipment.
- The equipment has been exposed to moisture.
- The equipment does not work well, or you cannot get it to work according to the user's manual.
- The equipment has been dropped and damaged.
- The equipment has obvious signs of breakage.

8. Do not place the device outside the specified ambient temperature range. This will damage the machine. It needs to be kept in an environment at controlled temperature.

9. Due to the sensitive nature of the equipment, it must be stored in a restricted access location, only accessible by qualified engineer.

DISCLAIMER: Polyhex assumes no liability for the accuracy of any statement of this instructional document.

Trademark Notice:



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

1.3. Technical Support

1. Visit DEBIX website <https://www.debix.io/> where you can find the latest information about the product.

■ Official Resources:

Debix Documentation: <https://debix.io/Document/manual.html>

Debix Blog: <https://debix.io/Software/blog.html>

Debix GitHub: <https://github.com/debix-tech>

2. Contact your distributor, sales representative or Polyhex's customer service center for technical support if you need additional assistance. Please have the following info ready before you call:

- Product name and memory size
- Description of your peripheral attachments
- Description of your software(operating system, version, application software, etc.)
- A complete description of the problem
- The exact wording of any error messages

■ TechSupport Platforms:

Discord Community (recommended): <https://discord.com/invite/adaHHaDkH2>

Email: teksupport@debix.io

■ Social Media:

YouTube: <https://www.youtube.com/@debix-io>

LinkedIn: <https://www.linkedin.com/company/debix-io/>

Facebook: <https://www.facebook.com/debix.io>

Instagram: <https://www.instagram.com/debix.io>

X: https://x.com/debix_io

Chapter 2 DEBIX TD101H User Guide

DEBIX TD101H is a 10.1-inch touch screen HDMI LCD monitor with 1280 x 800 resolution.

This LCD monitor supports VGA and HDMI video signal input, power amplifier speaker and headphone output, touch operation, and remote control function. It is compatible with DEBIX series computers with HDMI ports.

Main Features:

- VGA and HDMI video signal input
- Touch operation
- Headphone output
- Power amplifier speaker
- Remote control function
- No-signal automatic power off function

1.1. Overview

1.1.1. DEBIX TD101H


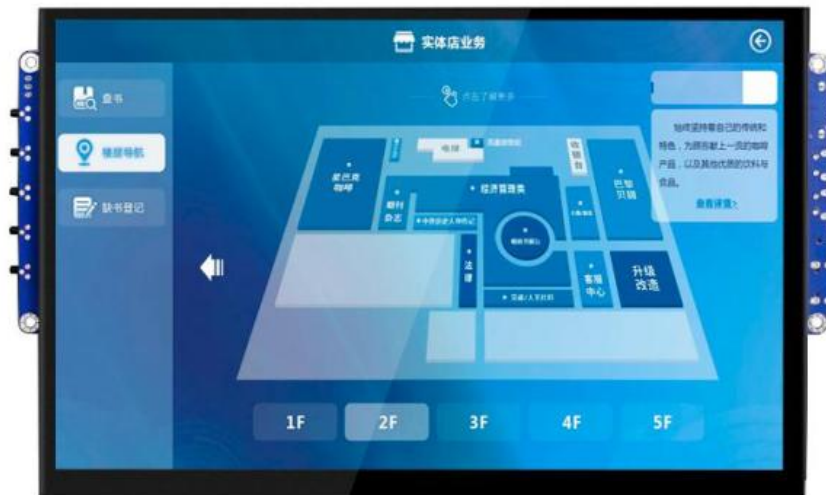


Figure 2 DEBIX TD101H Front View

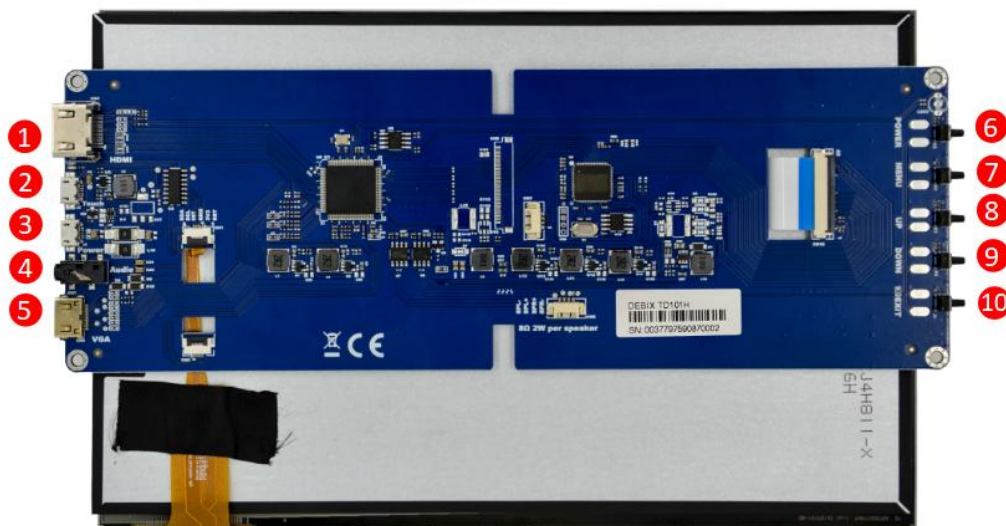

- | | |
|---------------------|-----------|
| (1) HDMI | (6) POWER |
| (2) Touch and Power | (7) MENU |
| (3) 5V Power | (8) UP |
| (4) Audio | (9) DOWN |
| (5) VGA | (10) EXIT |

Figure 3 DEBIX TD101H Back View & Interfaces

1.1.2. DEBIX TD101H-C (with enclosure)

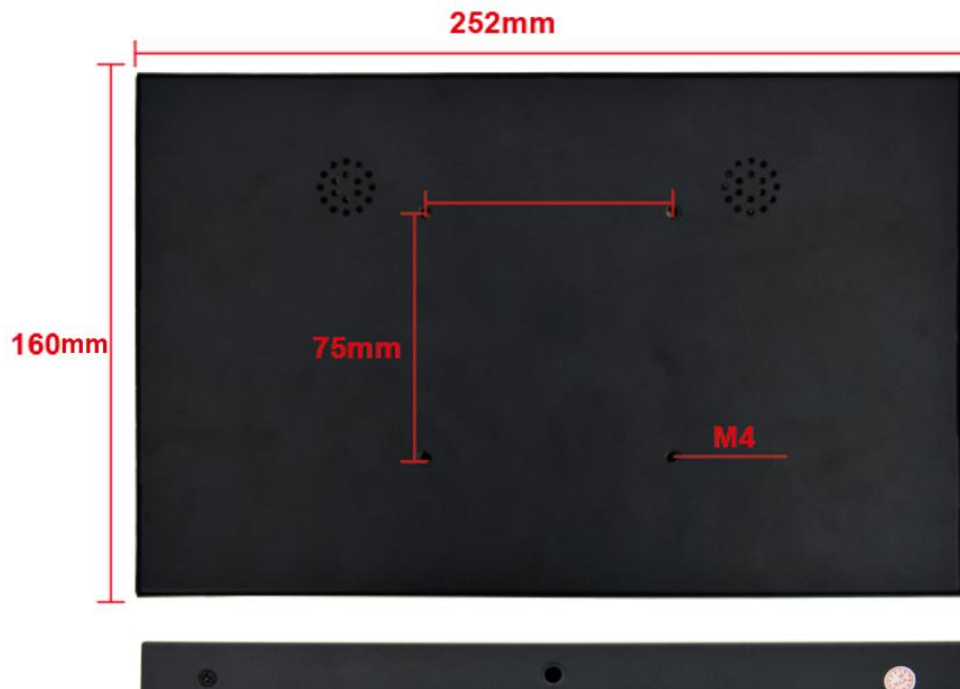
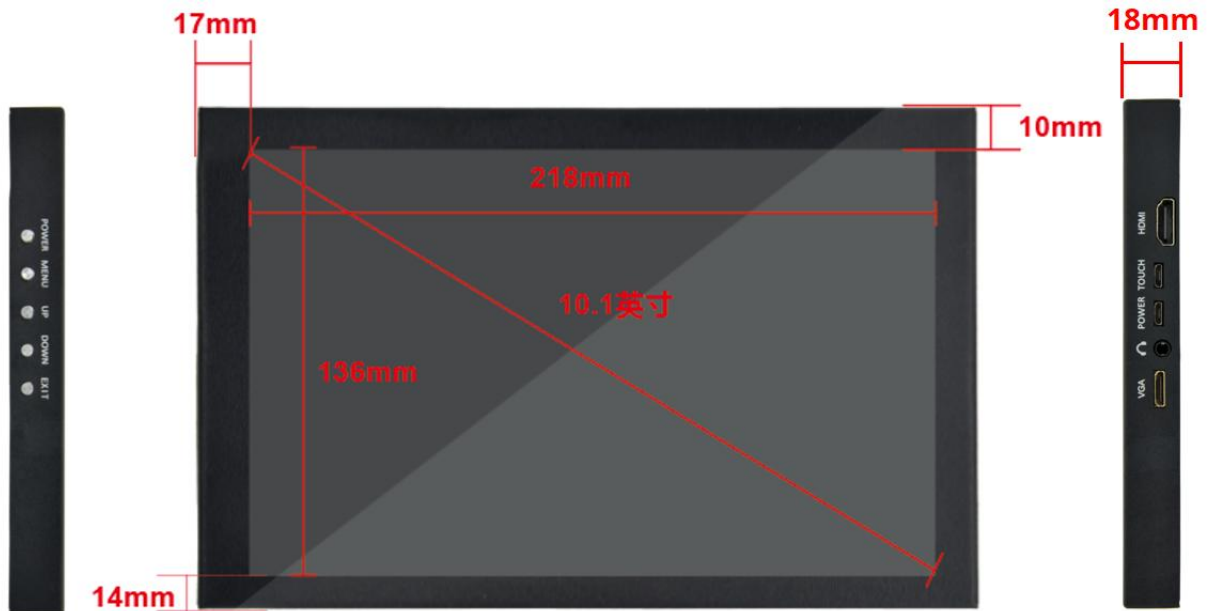




Figure 4 DEBIX TD101H-C (with enclosure)

DEBIX TD101H supports VGA and HDMI video signal input, touch operation, remote control function, etc. The data specifications are as below.

Table 1 DEBIX TD101H Specification

DEBIX TD101H	Specification
LCD Size	10.1 inches
Resolution	1280 x 800
Active Area	216.00mm x 136.00mm
Outline Dimension (DEBIX TD101H)	230.00mm x 148.00mm
Outline Dimension (DEBIX TD101H-C)	252.00mm x 160.00mm x 17.00mm
Touch Operation	1 x Micro USB
Optional Function	(1) Power amplifier speaker (2) Remote control function
Operating Temp.	-10°C~60°C

Storage Temp.	-20℃~70℃
Operating Humidity	90%RH (no condensation)
Input Voltage	DC 5V
Net Weight	365g (±0.5g)
Net Weight (DEBIX TD101H-C)	841g (±0.5g)

1.2. Button Setting

The buttons of the DEBIX TD101H LCD monitor is composed of POWER, MENU, UP, DOWN, EXIT. The detailed button settings are as below.

Table 2 DEBIX TD101H Button Setting

Button	Description
POWER	Power switch button. In the off state, press the POWER button to turn on the LCD monitor. In the power-on state, press the POWER button to shut it down.
MENU	Menu button. Press the MENU button once to bring up the menu window. Then press again to confirm the selection.
UP	Up/left button. Press the UP button to increase the volume.
DOWN	Down/right button. Press the DOWN button to decrease the volume.
EXIT	Return or exit button.

1.3. Interfaces

The interfaces of the DEBIX TD101H are shown as below.

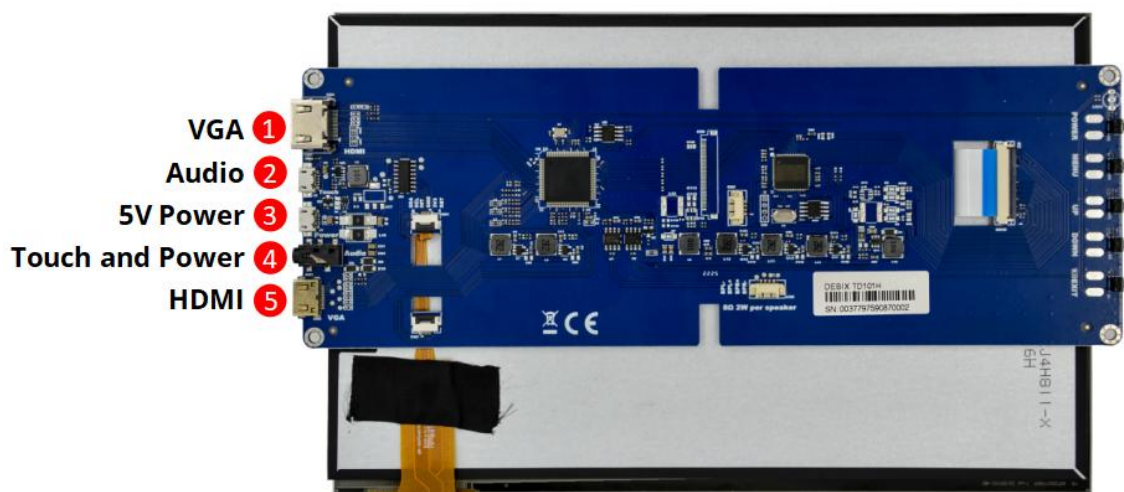


Figure 5 DEBIX TD101H Interfaces

The interfaces of the DEBIX TD101H-C are shown as below.



Figure 6 DEBIX TD101H-C Interfaces

The interfaces are described as below.

Table 3 Interfaces Description

Interface	Description
VGA	Mini-HDMI package interface. For using this VGA interface, it requires a cable for converting VGA signal to mini-HDMI signal.
HDMI	Standard HDMI interface. (The screen will not light up without connecting a signal source)
TOUCH	The TOUCH interface connector is a micro-USB port. This interface is a two-in-one interface for touch operation and power supply. The work indicator will light up when connecting this interface. The standard input is 5V2A.

AUDIO	The AUDIO interface connector is a standard 3.5mm headphone jack.
POWER	The POWER interface connector is a micro-USB port. The standard input is 5V2A. (standby power port)

1.4. Packing List

(1) The packing list of the DEBIX TD101H:

- 1 x DEBIX TD101H
- 1 x HDMI cable
- 1 x Micro USB to USB-A cable

(2) The packing list of the DEBIX TD101H-C (with enclosure):

- 1 x DEBIX TD101H-C (with enclosure)
- 1 x HDMI cable
- 1 x Micro USB to USB-A cable
- 1 x Display holder

Chapter 3 Getting Started

2.1. Menu Setting

After pressing the MENU button, you can set the six parameter categories of Brightness, image, color temperature, OSD Settings, reset, and more. Among them, there are 12 languages that can be set in the menu category: English, Simplified Chinese, French, German, Spanish, Polish, Korean, Russian, Italian, Japanese, Dutch, Turkish. (The device automatically recognizes the signal by default, no special setting is required.)

The details are shown as below:

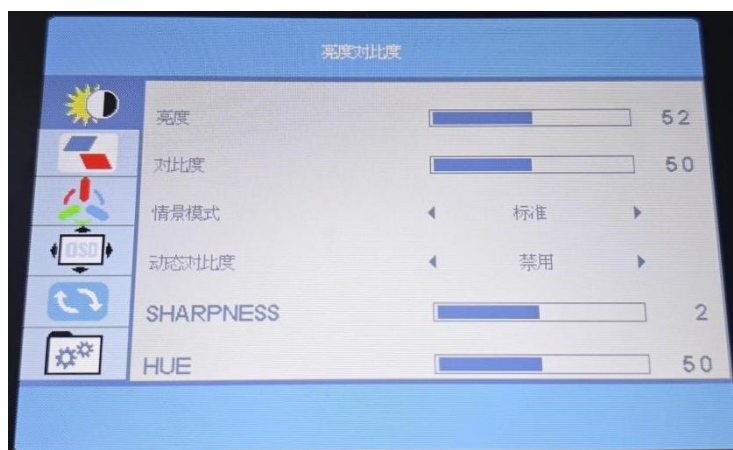


Figure 7

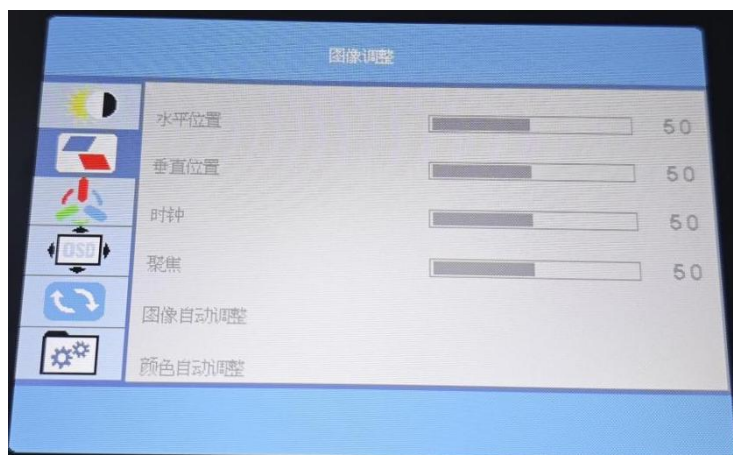


Figure 8

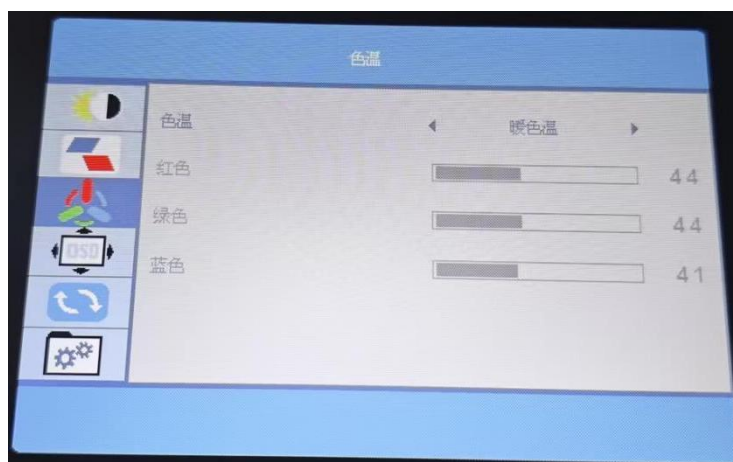


Figure 9

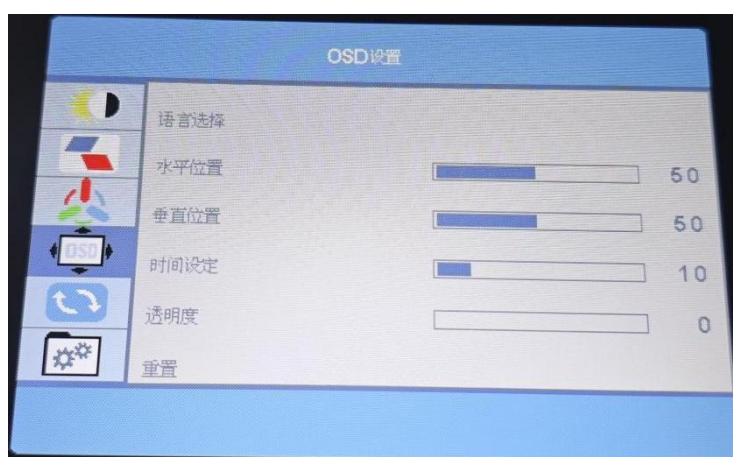


Figure 10

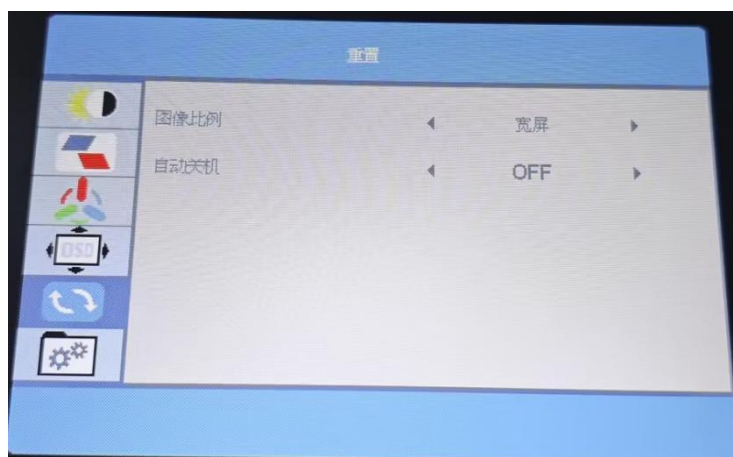


Figure 11

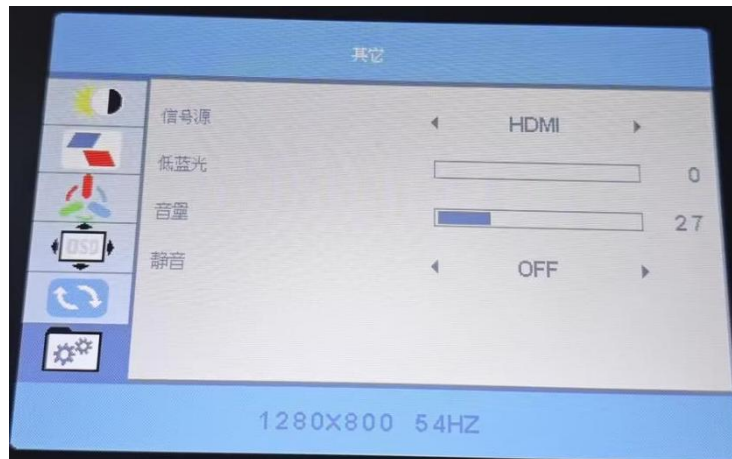


Figure 12

2.2. FAQ

Q1: How do I turn it on when it still shows a black screen after powering up?

A1: When powered on, the display will turn on naturally. If the screen is still black, there is no signal input. Line connection order: (1) Connect the micro USB to the touch interface of the screen; (2) Connect HDMI cable or VGA cable.

Q2: What should I do if I have connected an HDMI or VGA signal cable after powering it up and it still shows a black screen?

A2: First, make sure that there is no problem with the power cable connection, and the indicator light at the touch interface shows red, which means it is normal. Then, check whether the connected signal source device is turned on and whether there is a normal display signal output. Finally, check whether there is any problem with the data cable, HDMI cable or VGA cable, and check whether there is any problem such as bad contacts at the interface.

Q3: I bought a touch screen monitor, but why is there no response when I touch the screen?

A3: First consult the customer service about the system version supported by the touch function. Then check whether the micro USB cable is connected to the touch interface of the screen, and whether the other end is connected to the USB output port of the device (such as a computer). If these two steps are correct, it may be that the power supply of the USB interface of the device is insufficient, please add another 5V2A power supply connect to the power interface.

Q4: There is sound after the headset is connected, but why is there no sound when the monitor plays alone?

A4: Our products do not have built-in speakers by default. If you need to add speakers, please inform customer service in advance.