


5Port 2Position Solenoid Valve

Single Solenoid
SIV511-IP-SD2-***





External Pilot

SIV511-EP-SD2-***




Double Solenoid
SIV520-IP-SC2-CN2-***

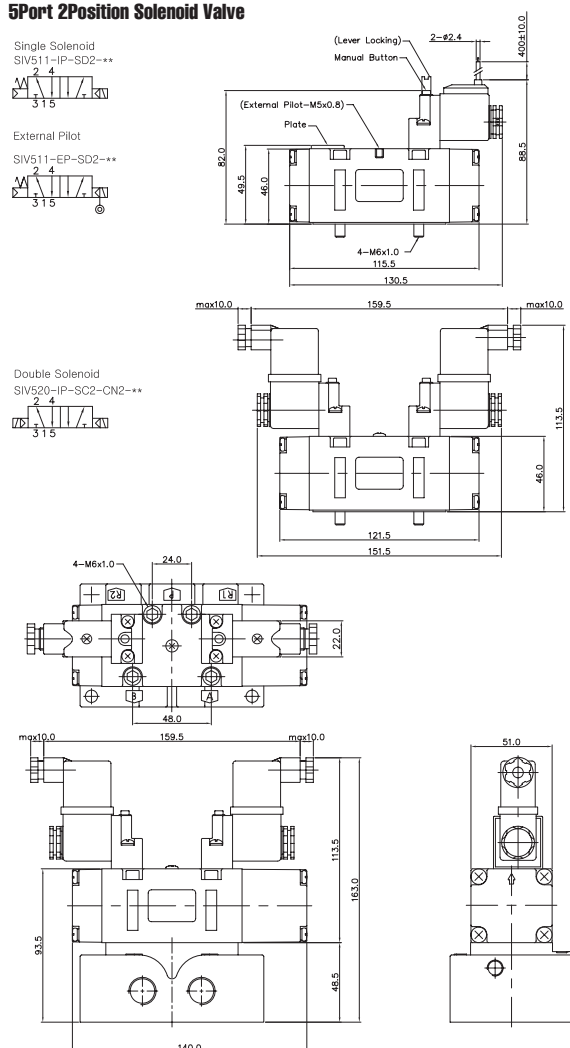


5Port 3Position Solenoid Valve


Closed Center
SIV533-IP-SC2-CN2-***



Exhaust Center
SIV543-IP-SC2-CN2-***



Pressure Center
SIV553-IP-SC2-CN2-***




5Port 2Position Pneumatic Valve

Single Pneumatic
SIP511




Double Pneumatic
SIP520

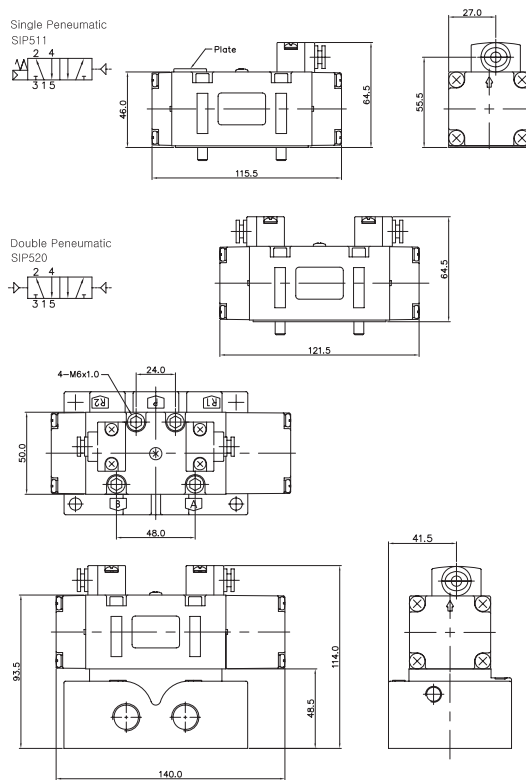


5Port 3Position Pneumatic Valve


Closed Center
SIP533



Exhaust Center
SIP543



Pressure Center
SIP553



Sub Base Ordering Code

SIB5

1

-

S

Sub Base Series

SIB5

SIV500 Solenoid Valve

Port & Thread

0 None

2 G 3/8

3 G 1/2

4 G 3/4

7 NPT 3/8

8 NPT 1/2

9 NPT 3/4

Function

S

Single Station Sub Base, Without Pilot Ports


SP

Single Station Sub Base, With Pilot Ports


SIB50 SINGLE SUB BASE

(SIV500 Solenoid & Pneumatic Valve Use Sub Base)



Single Station Sub Base Dimension

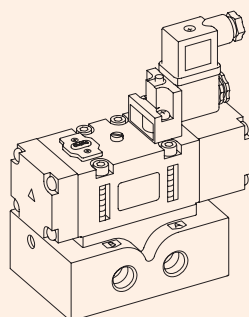

Sub Base Gasket
(Material: NBR)



Sub Base
(Material: Al)

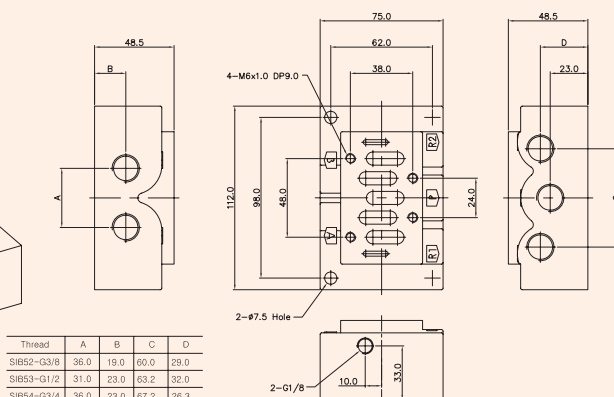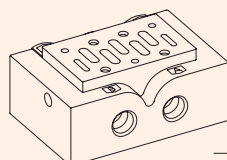

Thread	A	B	C	D
SIB52-G3/8	36.0	19.0	60.0	29.0
SIB53-G1/2	31.0	23.0	63.2	32.0
SIB54-G3/4	36.0	23.0	67.2	26.3