36 ft (10.97 m) Landing Pad - 16 x 9 ft panels

Outer ID 45 (8.23 m) > middle ID 16 (1.60 m) > inner ID 0 (0.30 m) | DICT_4X4_50 | TOP = row A

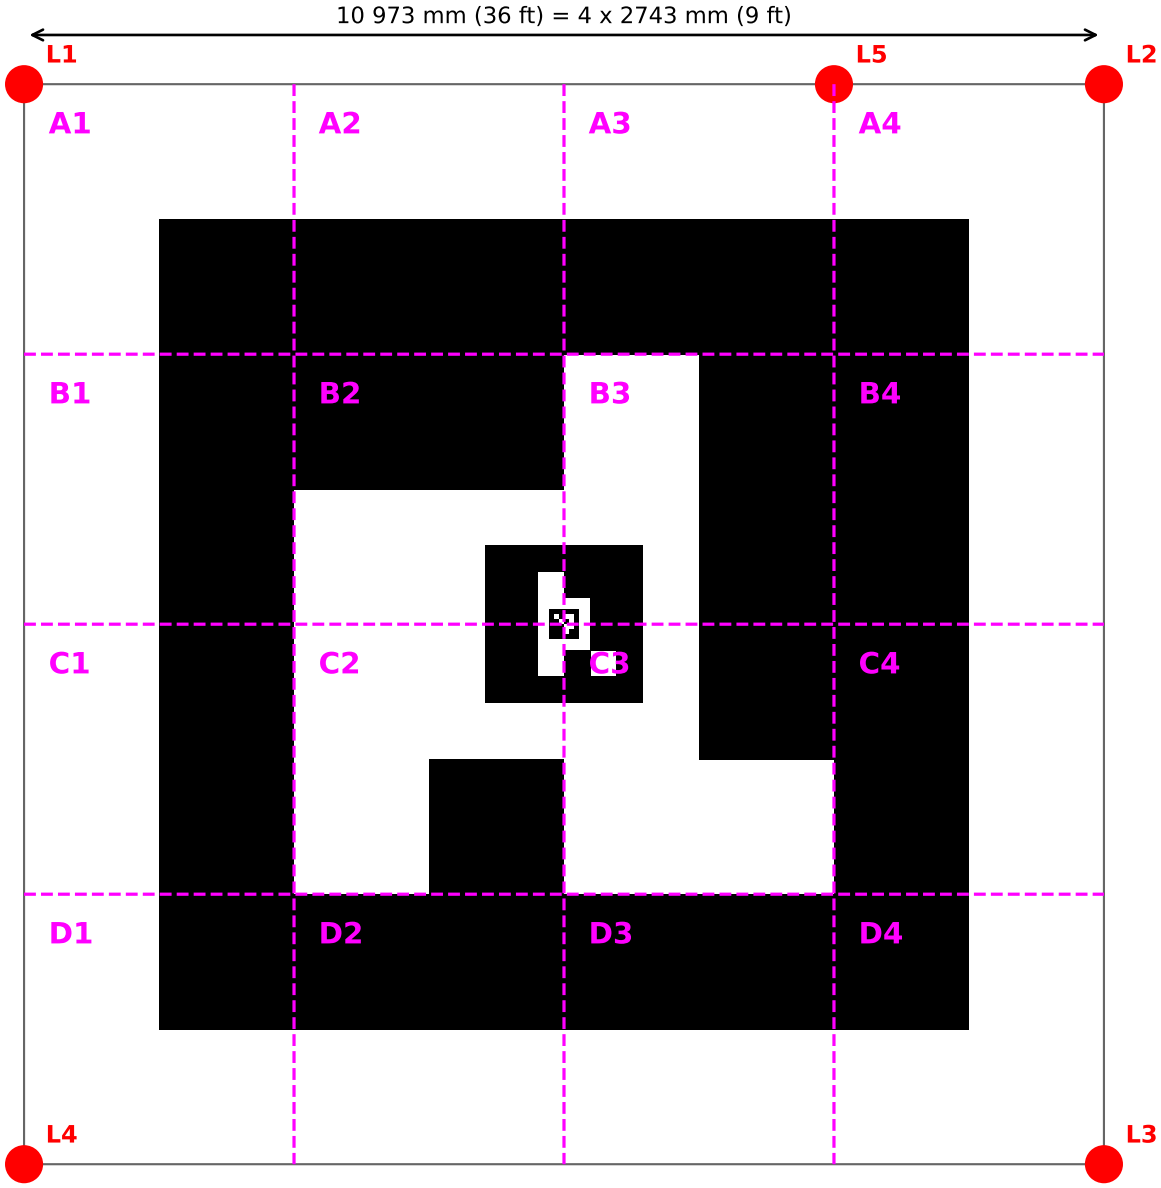

Part	Size
Whole sheet (16 panels)	10 973 x 10 973 mm (36 x 36 ft)
Each panel	2743.2 x 2743.2 mm (9 x 9 ft)
White border	1372 mm each side
Outer ID 45 black edge	8230 mm, cell 1372 mm
Middle ID 16 black edge (centre)	1600 mm, cell 267 mm
Inner ID 0 black edge (centre)	300 mm, cell 50 mm
Red dots L1-L5	Night IR LED positions (outside sheet)

Centre detail (panels B2 B3 C2 C3)

Middle and inner markers cross the centre seams. Align these 4 panels most carefully (+/-3 mm).

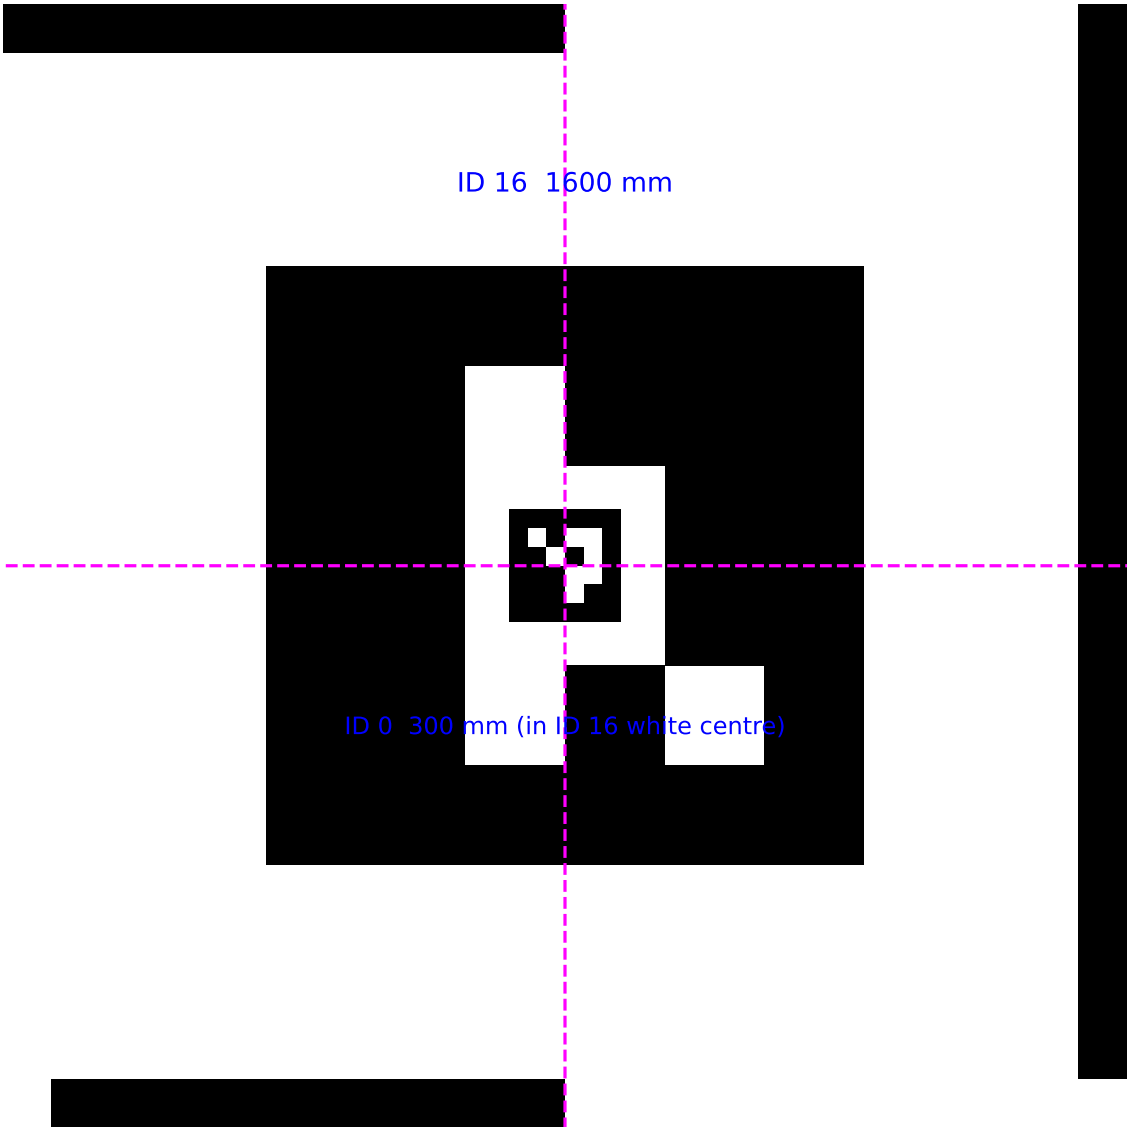

All seams fall exactly on black/white cell edges (verified).

Panels A1..D4: row letter = from TOP edge, number = from LEFT edge (front view).

Each panel file: PANEL_<name>_row<r>_col<c>_2743x2743mm_9ft.pdf

Printing (tell the press)

Files

- 16 PDFs in folder print_panels (A1-A4, B1-B4, C1-C4, D1-D4), each exactly 2743.2 x 2743.2 mm.

- Vector PDF: print at 100 % scale. NO fit-to-page, NO bleed, NO extra white margin, NO crop marks.

Material

- Matte white flex (not glossy), solid pure black. Same material and same batch for all 16.

- Ask the press to write the panel name (A1…) and an arrow to TOP on the BACK of every panel.

Check before paying

- Every panel 2743 mm (+/- 10 mm) both sides, corners square (diagonals equal +/- 15 mm).

- 4 panels (A1 D1 A4 D4 corners) are mostly white with black near one corner - that is correct.

- Panels B2 B3 C2 C3 contain the small centre markers: check the tiny 50 mm cells are sharp.

Size check after joining

- Outer black square 8230 mm, 1372 mm white each side. Middle marker 1600 mm, inner 300 mm.

- If any size differs, send the measured OUTER, MIDDLE and INNER black edges - software needs them.

Joining 16 panels

Ground

- Flat, clean, at least 13 x 13 m. Sweep stones. Work on a calm (no wind) day.

Steps

1. Lay all panels FACE UP in the 4 x 4 order of page 1 (A1 top-left ... D4 bottom-right).
2. Check black shapes continue across every seam. Check the centre markers on page 2.
3. Join one ROW at a time: flip two neighbour panels face down together (edge stays touching), butt the edges (no gap, no overlap), tape the whole seam with 75-100 mm cloth/duct tape. Better: ask the press/tent maker to heat-weld or stitch seams with a 50 mm back strip.
4. Join the 4 rows the same way. Tape the cross points twice.
5. Turn face up. No gap/step > 5 mm at any seam; the sheet lies flat without waves.
6. Eyelets every 1 m along the outer edge (in the white border), plus along long seams on the back strip.

Weight / wind

- 10.97 m x 10.97 m = 120 m2 of flex (~55-65 kg at 480 GSM). Needs 4-6 people.
- Downwash and wind lift it: stake every 1 m and add sand bags on the border.

Installing, flight use and night

Site

- Open level ground, no poles/trees/vehicles near. No shadow across the pad during landing.
- Point row A (TOP) to a fixed reference (e.g. north) and note it.

Which marker works where (simulation, 1280x800 camera, image-pyramid dete

- ID 45 (8.23 m): about 12-140 m. ID 16 (1.6 m): about 3-80 m. ID 0 (0.30 m): about 0.6-12 m.
- With today's 640x400 camera: ID 45 ~12-140 m, ID 16 ~3-40 m, ID 0 ~0.6-6 m.
- Real range will be lower than simulation: field test step by step (10, 20, 40, 80, 120 m).

Software status (important)

- Daemon today reads only ID 0 with size 0.242 m. For this pad ID 0 is 0.30 m.
- Reading ID 16 / ID 45, image pyramid and 1280x800 camera mode are NOT implemented yet.
- PLND_ALT_MIN = 0 and PLND_ALT_MAX = 0 are needed above 8 m.

Night IR LEDs

- L1-L4 at the 4 sheet corners (10.97 m square), L5 on the TOP edge 8.23 m from L1.
- 5 x 940/850 nm 3-10 W IR emitters or CCTV IR lights, DC driver (no PWM), IP65, pointing up.
- Full LED guide: NIGHT_IR_BEACON_AND_TEST_GUIDE.md / GUIDE_nested_pad_print_and_install.pdf.