



SECTION 'X-X'

* Use of "Super plastisizer chemical" is must, during all concreting work.

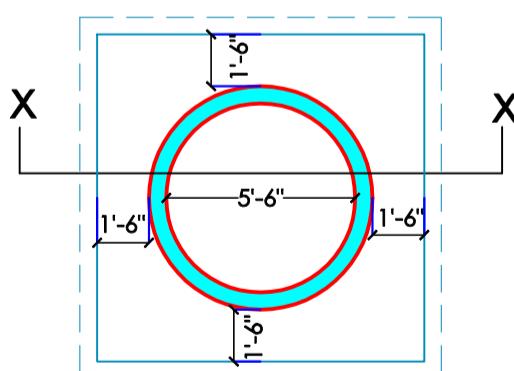

KEY PLAN UP TO PL. LVL.

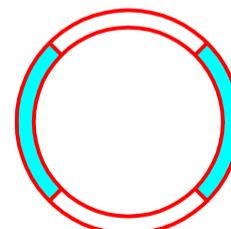

KEY PLAN ABOVE PL. LVL.

LIFT FOUNDATION & PARDI DETAILS

FOR Shri. MITHU JI @ PALLADAM