



BlooglyBlob

Body foam template

Print at 100% (actual size), landscape. Turn off Fit, Shrink and Scale to page.

Check the 50 mm bar with a ruler before cutting. Cut from 4 mm white foam.

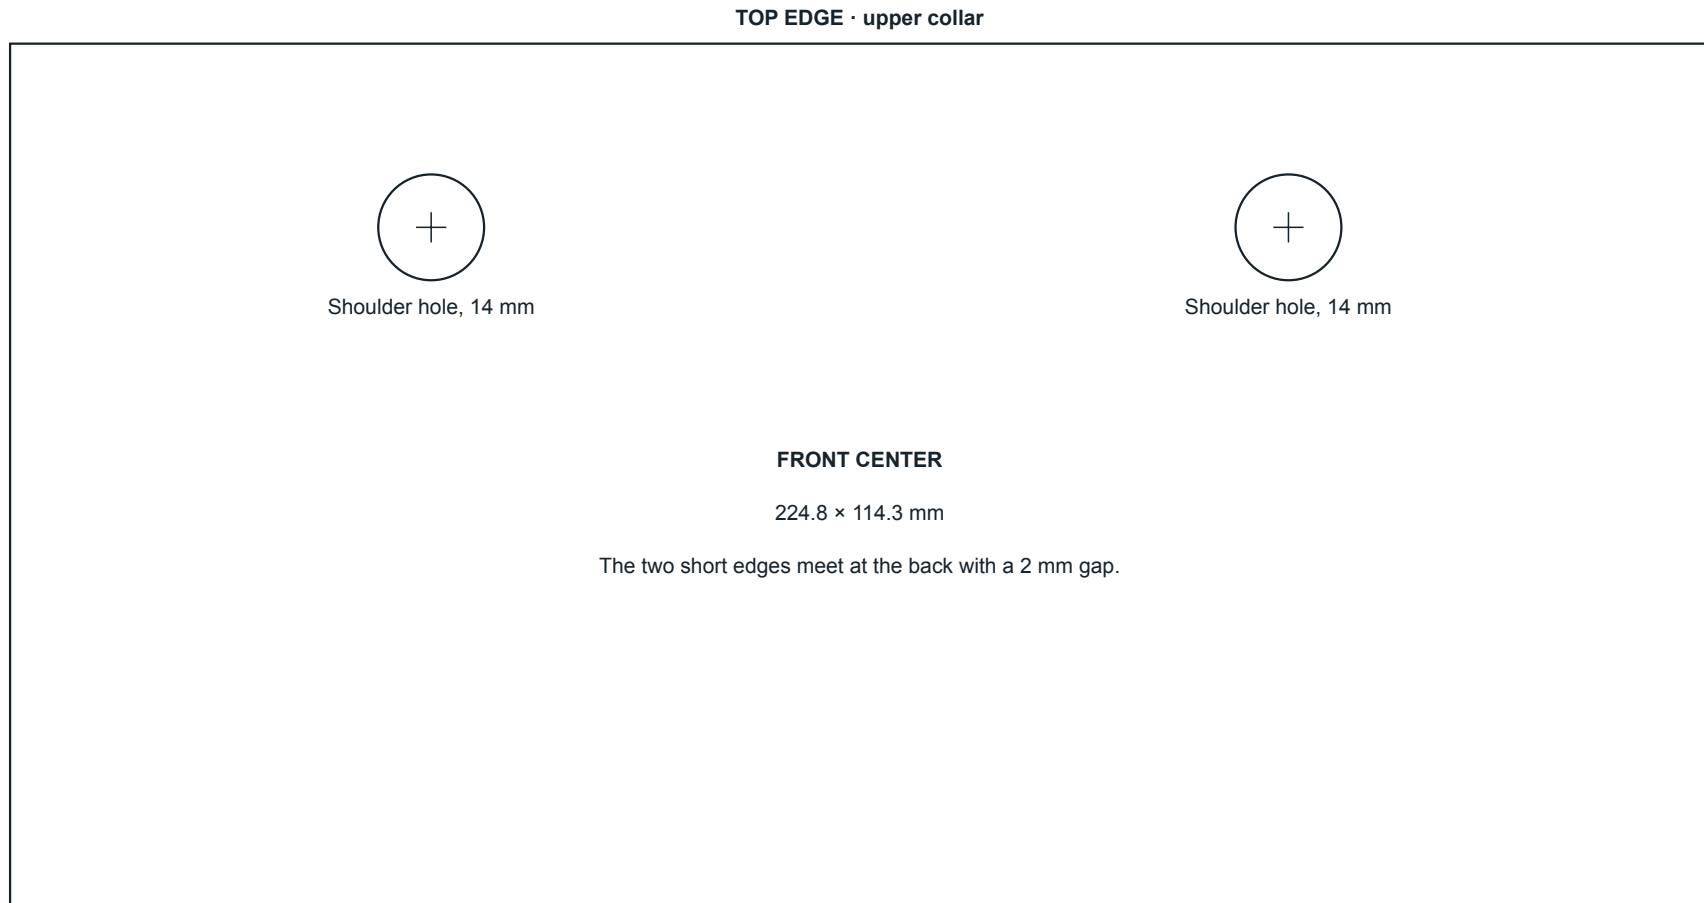

Cut the outline a little long. Trim the ends after a test-fit between the collars.

At the test-fit, mark each hole center over its shoulder servo shaft.