



Pana Wave Laboratory

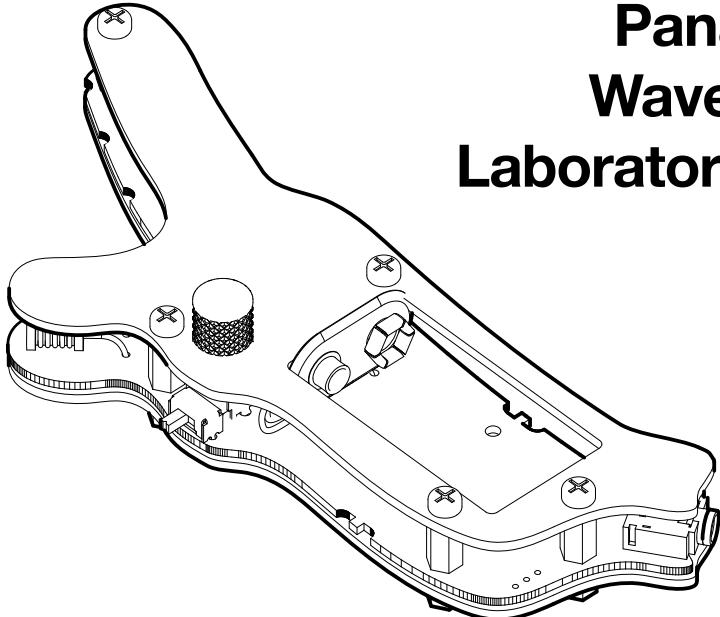

3

Connect the 9V Battery to the battery clip.

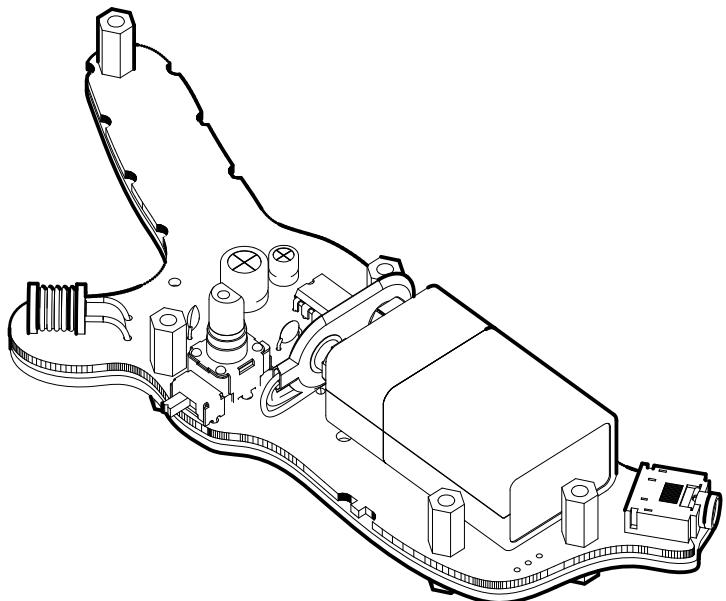


Manual

dennisdebel.nl


1

To install the 9V battery you will need the included Hex key (M1.5) and a Phillips driver (M3)

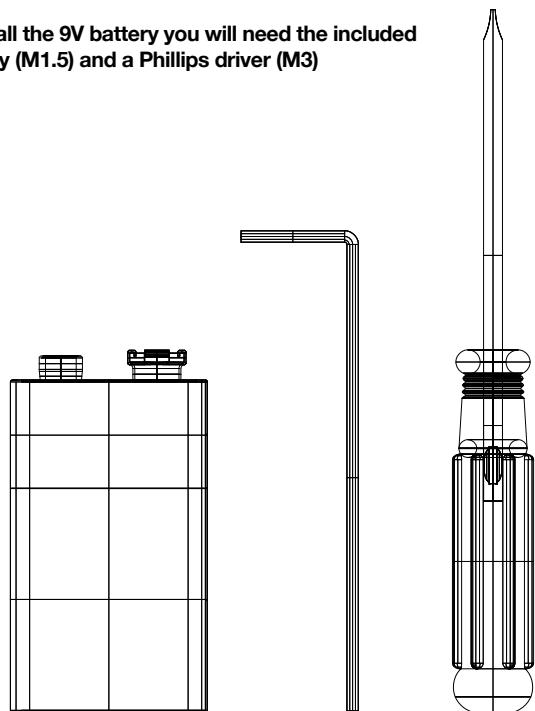

2

Remove the 5 Phillips head screws (M3), Remove the potentiometer knob by loosening the set screw (M1.5 Hex). Take off the face-plate.

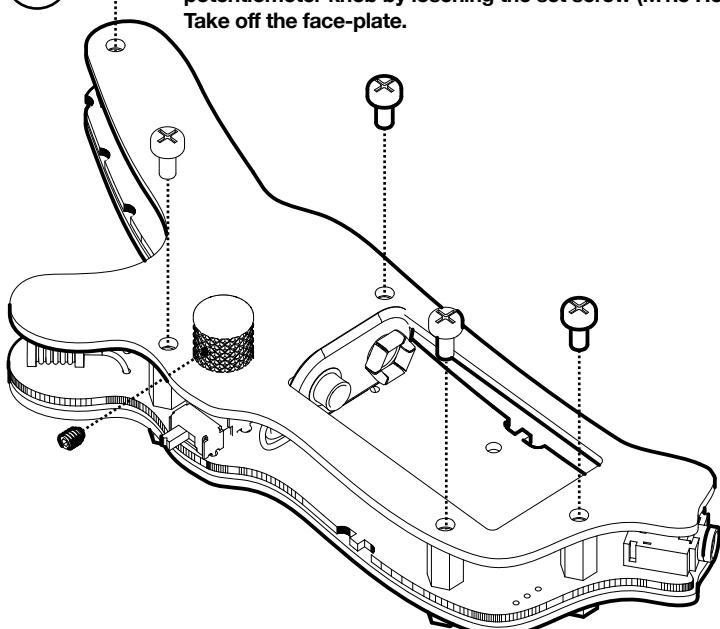

4

Align the face-plate over the 9V Battery and standoff holes. Re-seat the screws and potentiometer knob set screw.

5

Done! Connect your stereo headphones (320Ω recommended) to the 3.5mm mini-jack, Switch on the power and explore your surroundings!

