

Quick Start

Six pushes and one nut to install it, then four things before the first glass. **Nothing is cut, and nothing is threaded** on the path drawn here. Prop this sheet against the cabinet door; the bound guide in the kit carries everything around it.

BEFORE YOU START

The hole is cut. One 1-3/8 in hole through the countertop, the standard single-hole faucet opening. Cutting it is not part of today — guide, page 6.


Your kitchen has a 1/4-in line. A soft plastic cold-water tube on a push fitting under the sink, the kind a fridge runs on. A braided hose on a shut-off instead? Use the white tee and the guide's pages 10–11 in place of 3, 4 and 5.

The cylinder is here. A filled 5 lb CO2 cylinder, and an adjustable wrench for the regulator's nut. The regulator itself is in the kit; step 7 puts it on.

1

Lower the faucet


Feed the three tubes and the cable down through the hole and lower the faucet after them. Then push it **back**, away from you, until it stops. That is the seat; nothing is measured. The tubes are long on purpose. Leave them long.

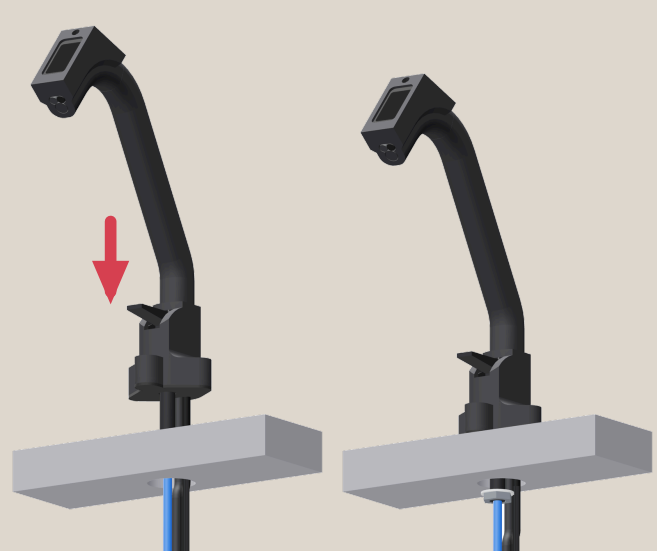

4

Release the line


Press the fitting's collar **in** with the collet press from the kit, or a thumbnail, and pull the tube **out**. Keep a cup under it. A closed valve is not an empty line.

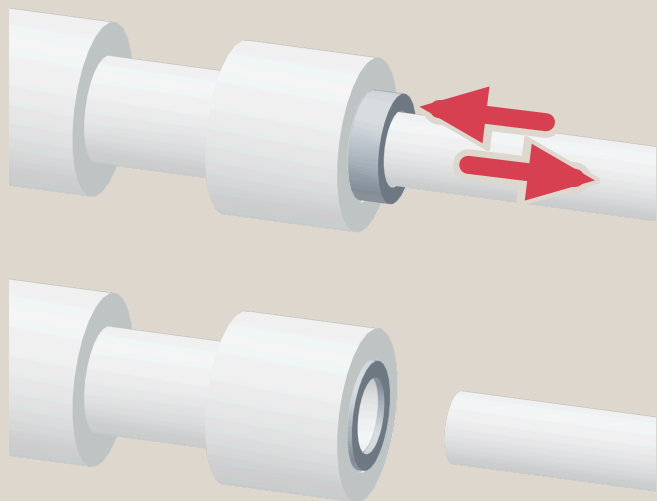

2

Plate, then nut


Under the counter, hold the steel plate flat above the washer and nut on the shank. Slide it in **sideways**, wide slot to the shank and narrow slot to the two black tubes, until it stops. Run the nut up by hand. Hand-tight is tight. No wrench.

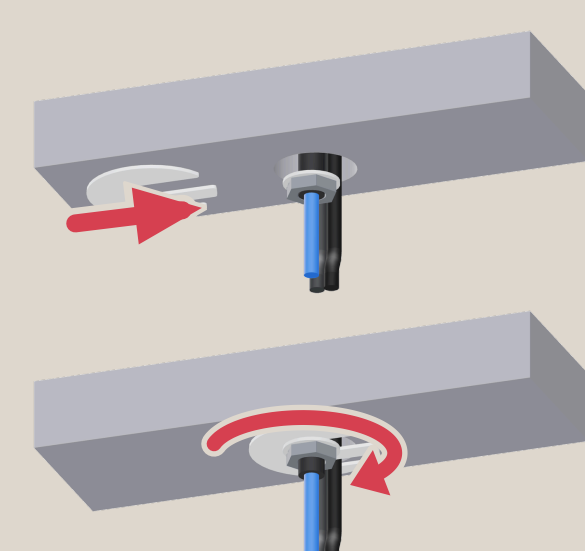

5

Tee in


Push the tee's short stub into the fitting you just emptied, then the line you pulled out into the tee's open end. **All the way home** each time: a little over half an inch, further than it feels like it should go. The long white run, filter and all, is already in the tee's third port.

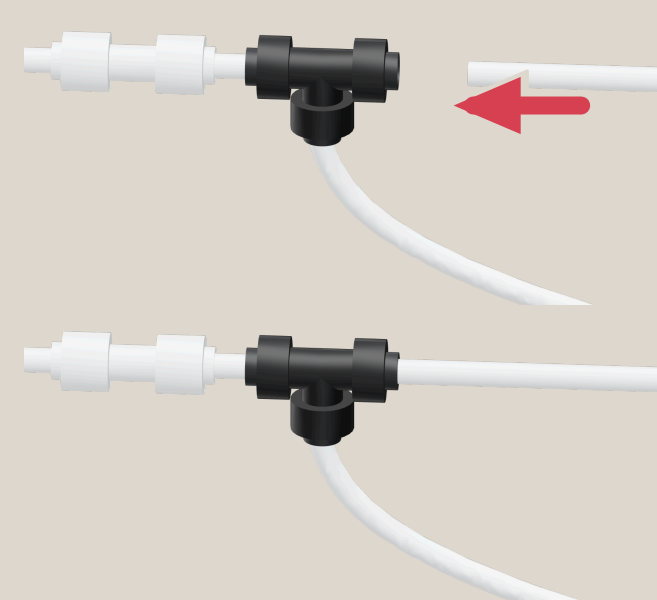

3

Close the cold water

Follow the 1/4-in line back to its shut-off and turn the handle a **quarter turn**. Run the kitchen's cold tap: if it goes dry, you closed the right one. Leave the tap open a moment to let the pressure off.

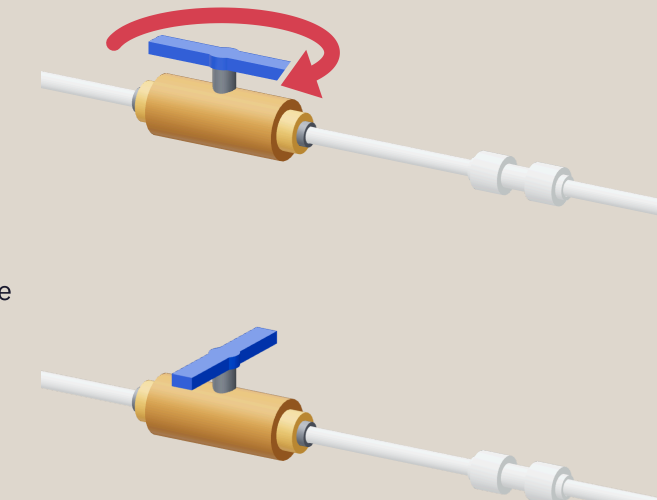

6

Six pushes at the back

Pull the two shipping caps out first. Each collar carries the word of its port; push every tube **home**, and the plug in until it clicks.

TAP	the white run, from the filter
CO2	the red tether, from the cylinder
SODA	the blue tube, from the faucet
FLAVOR	both black tubes, either port
PLUG	the faucet's cable, into the jack




THEN, THE FIRST GLASS — water, then gas, then power, then flavor; about an hour

7

Connect the cylinder


Valve closed. Washer in the big nut, start it on the valve by hand, nip it up with the wrench: **snug, then a little more**. Gray connector onto the bottom outlet, hand-tight, its two fittings left assembled.

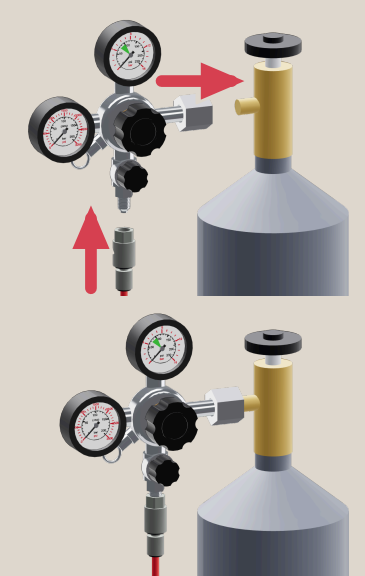

8

Water, gas, power


Open the shut-off from 3 slowly; watch every joint a minute. Cylinder valve, then small knob; big knob till the needle sits in the green. A hiss at nut, connector or red port is a leak. Plug in at the top-left socket. It chimes.

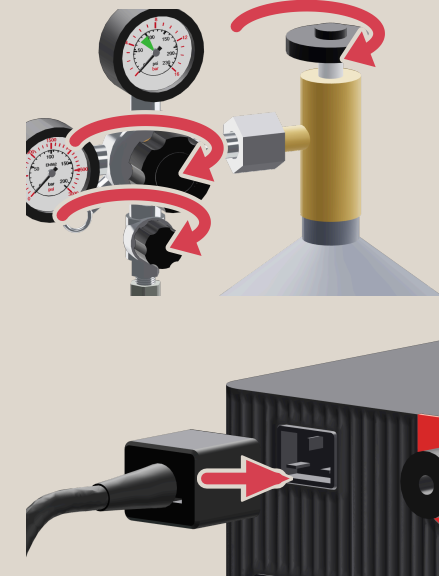

9

Fill each flavor

On the display choose **FILL**, pick a flavor, press Start. Upend a bottle of concentrate in the funnel and let it all go in; it drains itself and the appliance stops on its own. Then the other flavor.

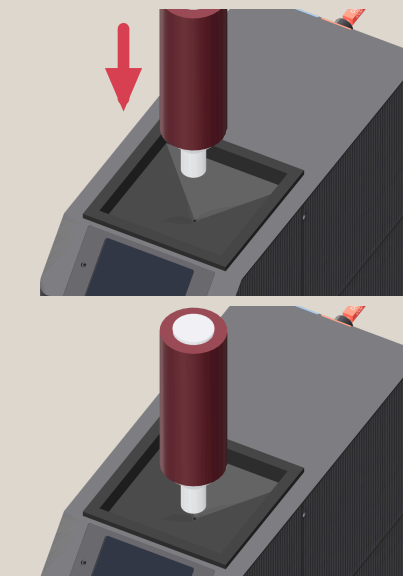

10

Chill, then pour

Give it about an hour to get cold. Then pick a flavor on the faucet's screen, put a glass under the spout, and press the lever. Every glass after the first is quick.

