

Quick Start

Six things to do, in this order. Every one is a push or a nut run up by hand — **nothing is cut, and nothing is threaded** on the path drawn here. Prop this sheet against the cabinet door. The bound guide in the kit carries everything around it.

BEFORE YOU START

The hole is cut. One 1-3/8 in hole through the countertop, the standard single-hole faucet opening. Cutting it is not part of today — guide, page 6.

Your kitchen has a 1/4-in line. A soft plastic cold-water tube on a push fitting under the sink, the kind a fridge runs on. A braided hose on a shut-off instead? Use the white tee and the guide's pages 10–11 in place of 3, 4 and 5.


The cylinder is here. A 5 lb CO2 cylinder standing beside the appliance, the two-gauge regulator from the kit on top, and its valve closed until the end.

1

Lower the faucet

Feed the three tubes and the cable down through the hole and lower the faucet after them. Then push it **back**, away from you, until it stops. That is the seat — nothing is measured and nothing is aimed at.

The tubes are long on purpose. Leave them long.

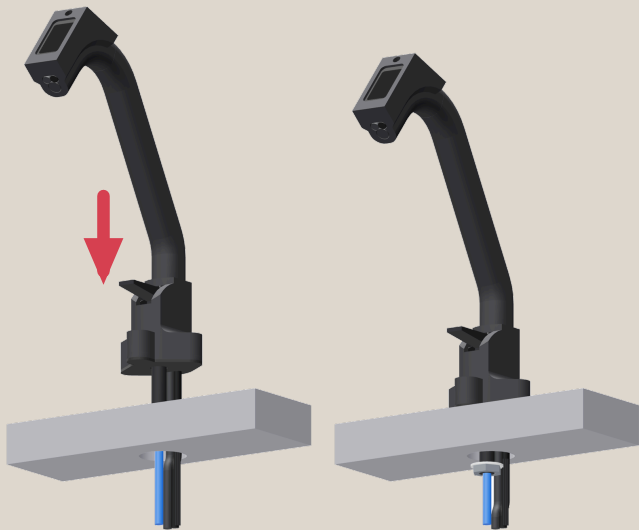


2

Plate, then nut

Under the counter, hold the steel plate flat above the washer and nut already on the shank. Slide it in **sideways** — wide slot to the shank, narrow slot to the two black tubes — until it stops. Then run the nut up by hand.


Hand-tight is tight. No wrench.

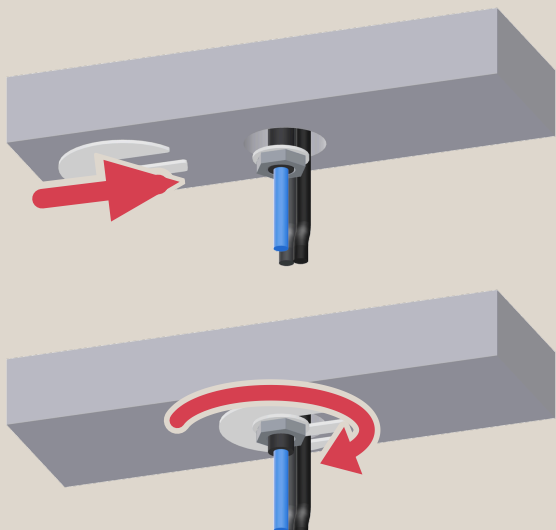

3

Close the cold water


Follow the 1/4-in line back to its shut-off and turn the handle a **quarter turn**. Run the kitchen's cold tap: if it goes dry, you closed the right one. Leave the tap open a moment to let the pressure off.

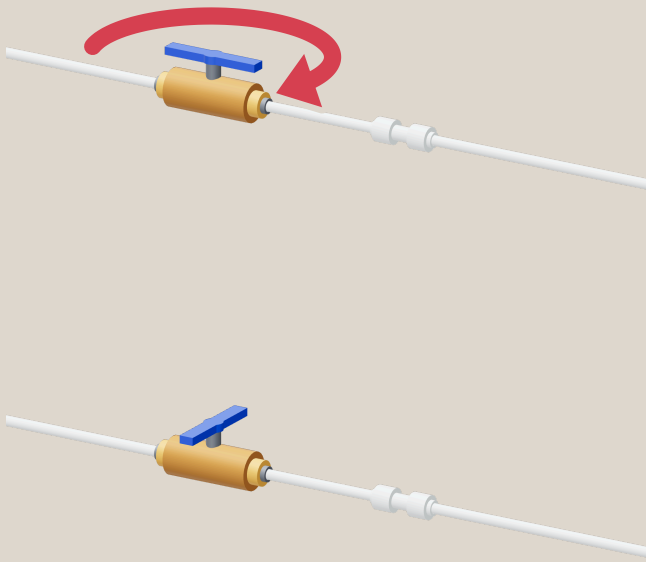

4

Release the line

Press the fitting's collar **in** with the collet press from the kit — or a thumbnail — and pull the tube **out**. Keep a cup under it. A closed valve is not an empty line.

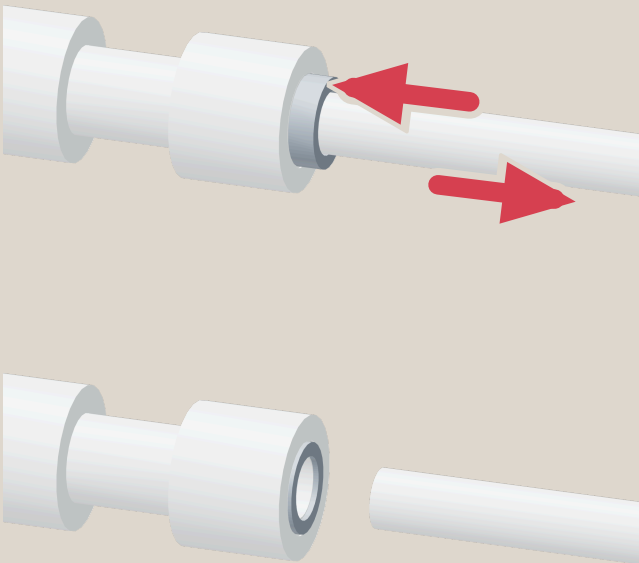


5

Tee in

Push the tee's short stub into the fitting you just emptied. Then push the line you pulled out into the tee's open end. **All the way home** each time: a little over half an inch, further than it feels like it should go.

The long white run, filter and all, is already in the tee's third port.

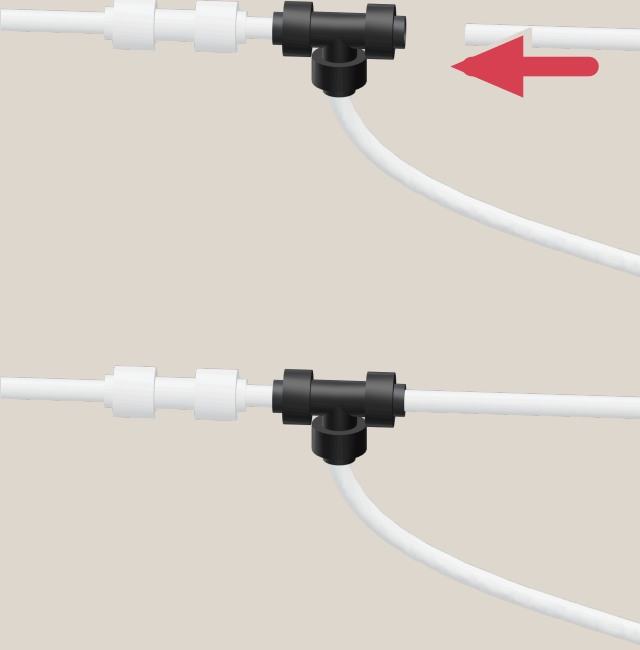

6

Six pushes at the back

Pull the two shipping caps out first; they do not go back. Each tube wears a collar with the same word as its port. Push every one home, and the plug in until it clicks.

- TAP** the white run, out of the filter
- CO2** the red tether from the cylinder
- SODA** the blue tube from the faucet
- FLAVOR** both black tubes, either in either
- PLUG** the faucet's cable, into the jack



THEN

Water: open the shut-off slowly and watch every joint you made for a full minute. **Gas:** open the cylinder valve. **Power:** plug the cord into the plain socket at the left of the top row; it chimes. Choose **FILL**, upend a bottle of concentrate in the funnel, and give it about an hour to get cold.

IF A PUSH FITTING WEEPS

The tube is not all the way in. Close the valve, press the collet, pull the tube out, and push it back in past the wet mark.