

Have everything ready

Tick off each item as you unpack. Have your own supplies ready before opening a water connection.

IN THE BOX

- ☐ Soda machine
- ☐ Faucet assembly
- ☐ Under-counter plate
- ☐ Water line (TAP)
- ☐ Braided-hose tee
- ☐ CO2 regulator and tether
Set and fitted at the factory.
- ☐ Collet press
- ☐ Power cord
- ☐ Cold kit
Keep bagged for later.
- ☐ Quick start
- ☐ Install guide
This booklet.

YOU SUPPLY

- ☐ Filled CO2 cylinder
CGA-320 connection
- ☐ Flavor concentrate
SodaStream-compatible.
Enough for both flavors.
- ☐ Adjustable wrench
- ☐ Second wrench
For a braided hose only.
- ☐ Cup
- ☐ Towel


AT THE INSTALL LOCATION

- ☐ Counter opening
See page 4 for the opening
and cabinet space.
- ☐ Cold-water supply
- ☐ Grounded outlet
120 V

BEFORE YOU START

Make room

Prepare the opening and cabinet before lowering the faucet.

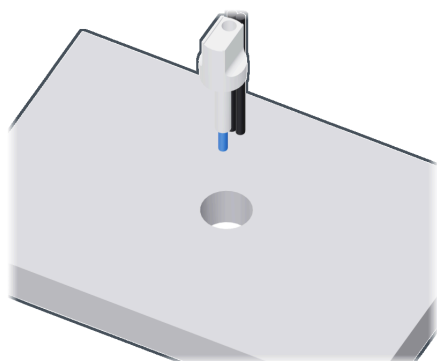


1-3/8 in hole

One opening through the counter.
Counter thickness: **3/4 to 1-1/2 in.**

Stone counter: use a spare 1-3/8 in sink or counter hole, or drill one with a 1-3/8 in diamond core bit kept wet.

Space around the machine

8-1/2 in wide, 18-3/8 in deep, 14-1/4 in tall.

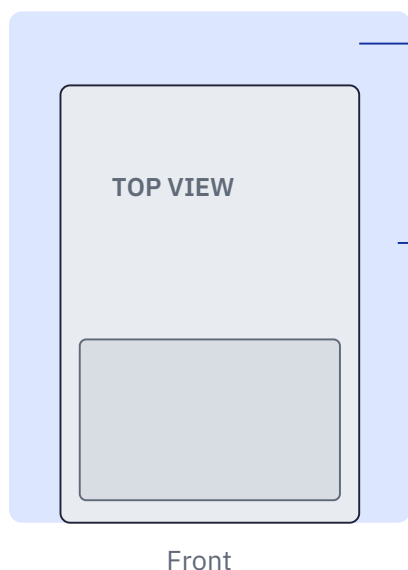

2-3/8 in behind

1-5/8 in each side


Above: room to invert a bottle into the funnel.

Cylinder: its own space beside the machine, about 5-1/4 in across and 18 in tall, plus the regulator.

Keep side air paths open.

Lower. Then push back.

The faucet, its tubes and cable arrive joined together. Keep the assembly intact.

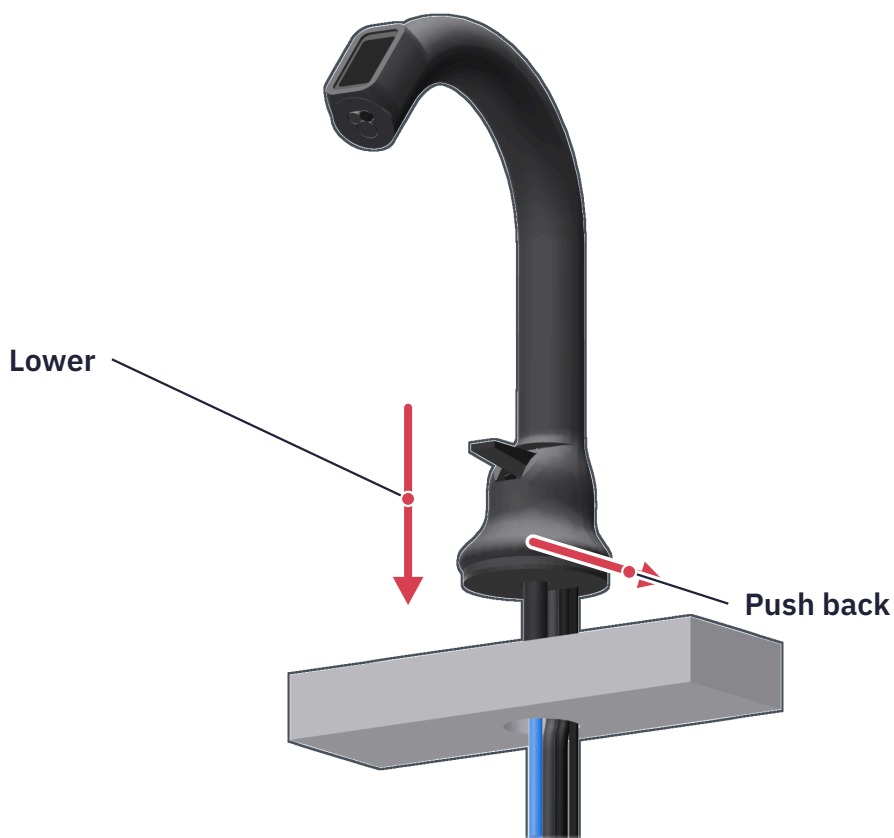

1 Feed the tails through

Pass all three attached tubes and the display cable through the prepared hole. Lower the faucet onto the counter.

Push the faucet away from you until the two black tubes beneath it meet the back edge of the hole. Hold that position for the plate.

Slide the plate. Tighten the nut.


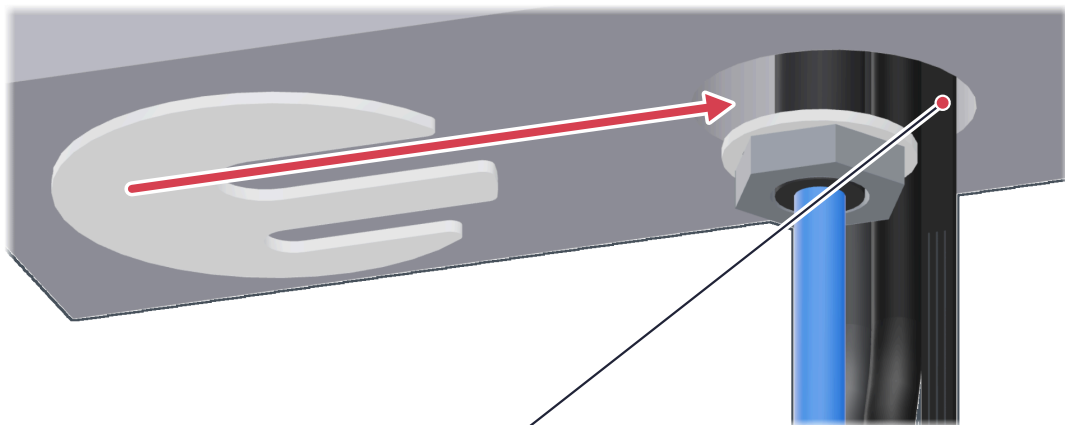


Plate above washer + nut

From below, hold the steel plate against the counter, **above the washer and nut already on the shank**. Slide the wide slot around the shank and the narrow slot around the black tubes and cable.

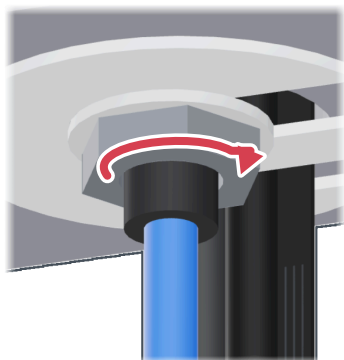


Hand-tighten the nut.

The plate stays flat against the underside of the counter and the faucet stays seated above.

Which water connection?


Look at the cold supply under your sink. Use the tee that matches that connection.

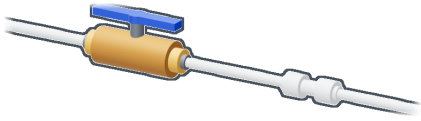

1/4 in plastic tube

A small plastic tube in a push fitting, like a filter or refrigerator line. Use the **black tee**.

Continue on page 8

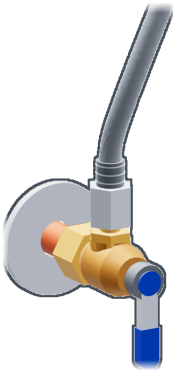

Braided hose


A braided supply hose threaded onto a **3/8 in shutoff**. Use the **white tee**.

Continue on pages 9-11


ONE TEE FOR YOUR KITCHEN

The long white filtered run arrives attached to the black tee. Page 11 shows how to move it to the white tee for the braided-hose path.


Connect the plastic tube

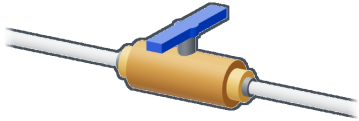

Close the cold-water shutoff. Run the tap or dispenser on that line until flow stops. Put a cup and towel beneath the fitting.

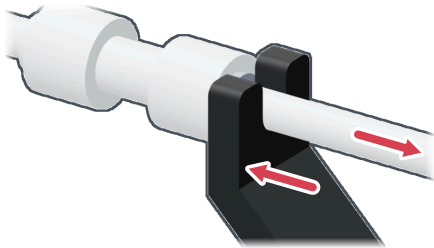

Hold the release ring in with the collet press. With your other hand, pull the original white tube out.

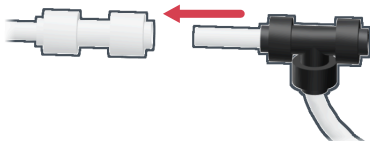

Push the short jumper on the supplied black tee into the fitting you just opened.




Reconnect the original tube to the tee's open end. Push both joints fully home; tug gently to check.

NEXT: REAR CONNECTIONS / PAGE 12

Keep the water shutoff closed. The white run already includes its filter; its free end goes to the machine.

The braided-hose path

These three pages show the white tee connection. After it is in place, continue at Step 3 on page 12.

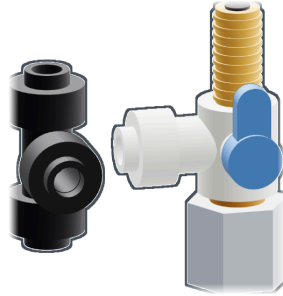

Black tee: plastic tube. White tee with lever: braided hose.

1 Find the cold-water shutoff

Trace the kitchen faucet's cold hose down to its valve. The supplied white tee fits a 3/8 in outlet.


2 Close it and relieve the pressure

Close the valve, then open the kitchen faucet on cold. Wait for the flow to stop. Set a cup and towel under the connection.


CHECK BEFORE LOOSENING

If water keeps flowing, leave the hose connected; the shutoff needs repair. This tee fits a 3/8 in outlet. Do not force it onto another size.

Lift the hose clear

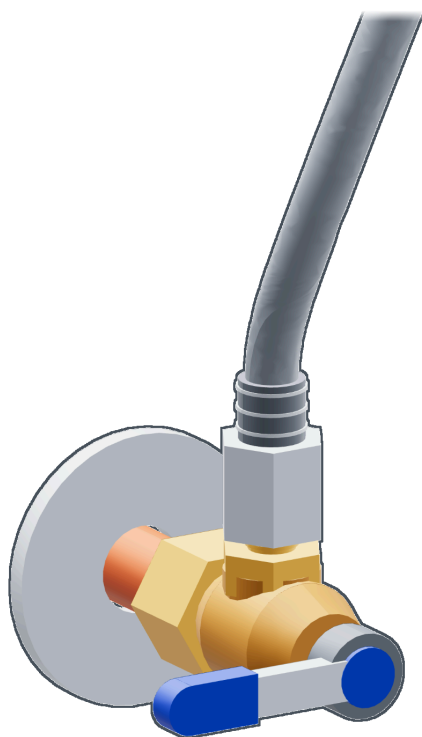

Valve closed

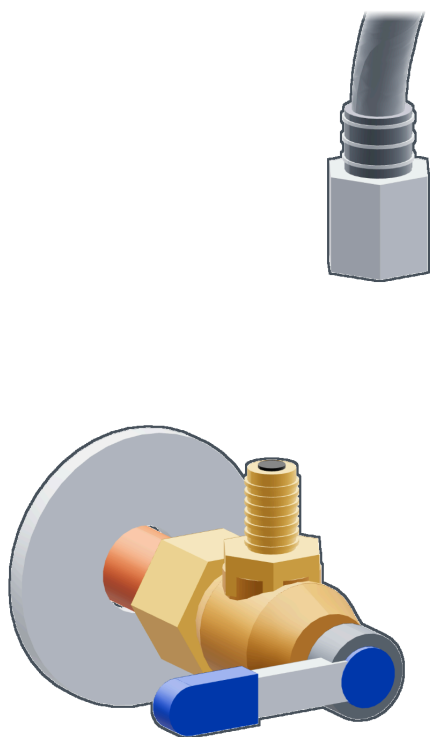


Hose nut lifted clear

3 Hold the shutoff steady

Use one wrench on the valve body while the other loosens the braided hose's nut. Keep the valve from twisting on its pipe.

Finish unscrewing the nut by hand, then lift the hose away. Catch the water left in the hose.

Fit the white tee

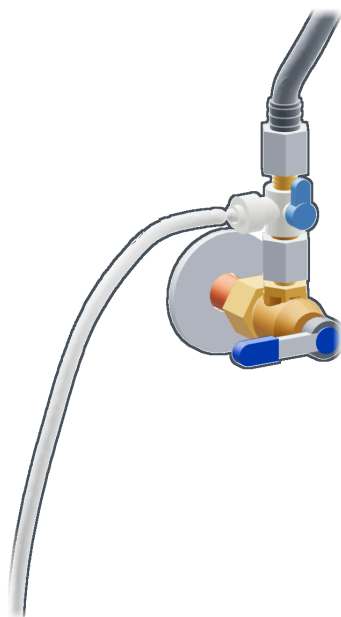

4 / Tee onto valve

Start the tee's lower nut by hand on the shutoff outlet.

5 / Hose onto tee

Reconnect the braided hose to the top. Hold the tee steady and nip both joints up with the wrench: snug, then a little more.

6 / Move the white filtered run

Use the collet press to release the long white run from the black tee's branch. Keep the filter and collar on the run. The black tee and its short jumper are not used on this path.

Push the white run fully into the white tee's side port, then tug gently. Leave the tee's small lever open so water can reach the machine later.

Keep the main shutoff closed. Go to page 12.

Match the rear connections

Pull off the CO2 and TAP shipping caps. They fit over the outside of the fittings. Leave the fittings mounted in the machine.

**CO2**

Red tube from the cylinder

SODA

Blue tube from the faucet

TAP

White run from the filter

FLAVOR

Two black tubes; either black port

Push home. Then tug.

Every tube needs to reach the fitting's internal stop, then stay put when you pull gently.



Push each tube straight in until it bottoms, **a little over 1/2 in.** A fitting can grip a tube before it reaches the seal, so push to its internal stop. **Tug gently** to check it holds.

Lay the filter flat



Keep its factory connections together. Route the white tube and faucet tails in loose curves, clear of things that slide in and out.

Keep the extra length coiled. A tight bend can pinch a tube closed.

Attach the regulator

Stand the filled 5 lb cylinder upright beside the machine. Keep its valve closed.



The regulator's large nut meets the cylinder outlet.

1 One washer, lying flat

Place one supplied nylon washer flat inside the large nut. Start the nut squarely on the cylinder outlet by hand. Keep the spare washer in your kit.

Nip it up with the adjustable wrench. Extra force can damage the washer. Keep the cylinder valve easy to reach.

Connect the red tether



Fitted at the factory

The tether comes **already pushed into** the regulator's outlet. Leave that end as it is.

The regulator comes **set at the factory**. There is nothing on it to adjust.

2 Check the other end


The red tube belongs in the machine's red CO2 port. Push it fully home and tug gently.

KEEP THE CYLINDER CLOSED

Finish all connections before opening water or gas. The next three pages take you through water, gas and power in that order.

First, open the water

1 / WATER

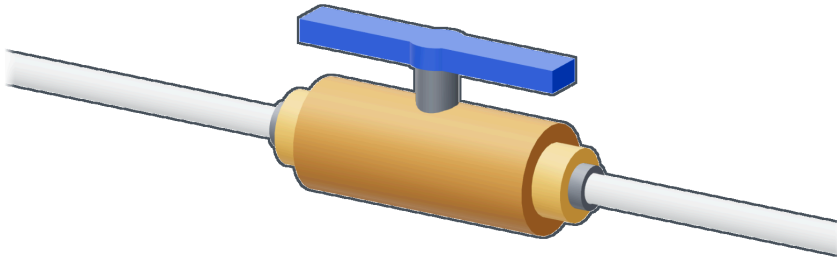

Plastic-tube shutoff shown open, handle in line with the tube.

1 Open the shutoff slowly

On the braided-hose path, also check that the white tee's small side-port lever is open.

2 Watch for a full minute


Inspect the tee, both filter ends and the machine's TAP connection. Keep the power cord unplugged while you check.

IF YOU SEE WATER


Close the water shutoff. Resolve the leak before opening the cylinder or connecting power. Page 23 has the first checks.

Then, open the gas

2 / GAS

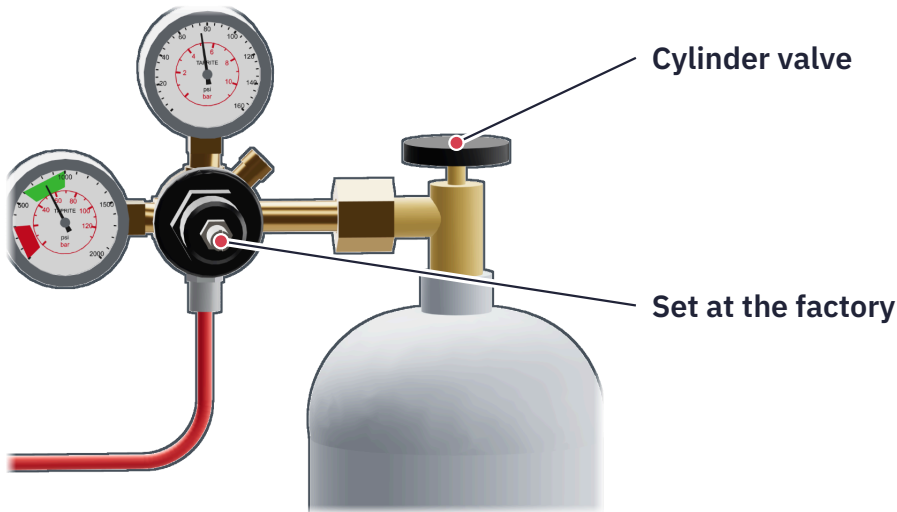

Open the **cylinder valve** slowly. That is all: the regulator is **set at the factory**, so leave its screw alone. The **upper gauge** settles near **75**.

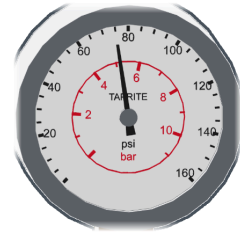


Listen at the large nut and both ends of the red tube. A continuing hiss means a leak. Soapy water at a joint can reveal it as growing bubbles.

CHECK BEFORE POWER

If gas continues to escape, close the cylinder valve. Page 23 has the connection checks. Retest before connecting power.

Finally, connect power

3 / POWER

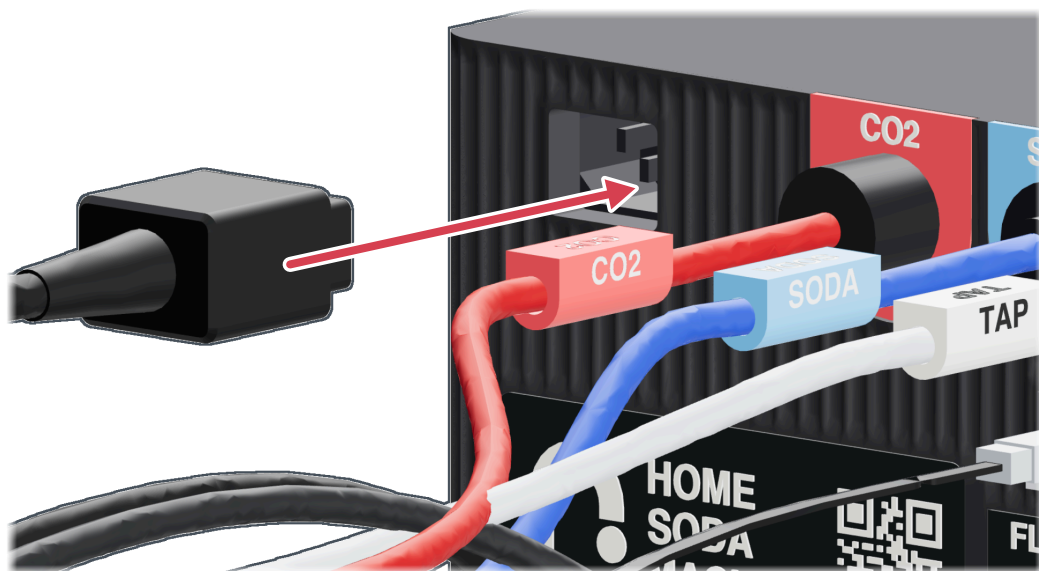

1 Connect the cord to the machine

Push the cord straight into the top-left socket on the back of the machine.

2 Plug into grounded 120 V


The machine chimes and its display starts. Follow the display if it reports an issue.

POWER REQUIREMENTS

120 V, 60 Hz; 5 A, 600 W. Use the supplied grounded cord. The socket's 250 V marking describes the connector; the machine uses 120 V.

Choose the flavor to fill

Use the machine display under the counter. The left rail chooses which reservoir you are filling.

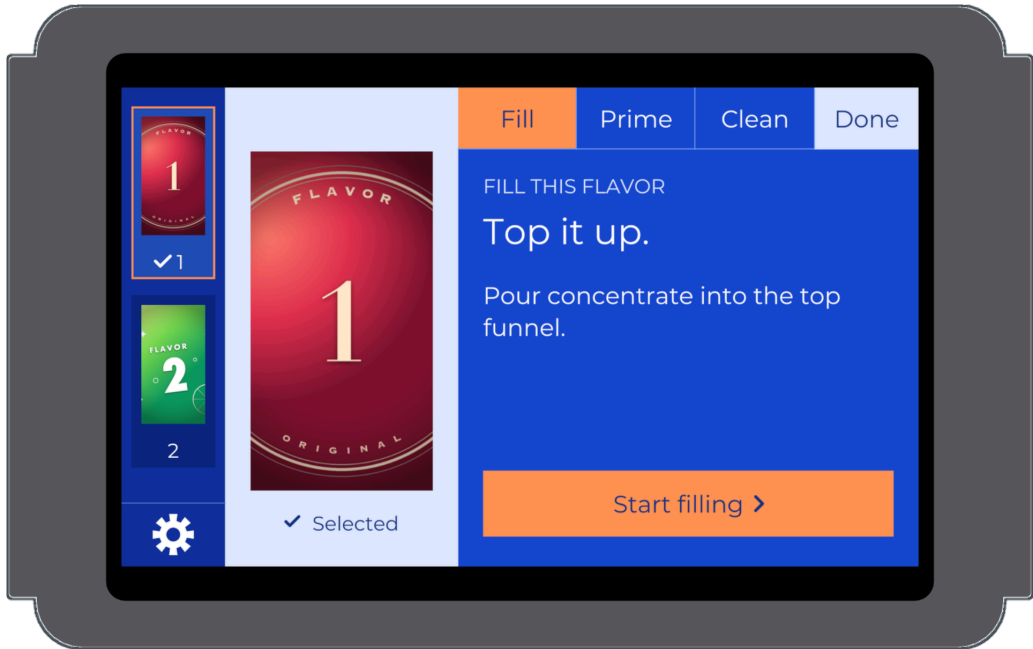

Flavor 1 is selected. Fill and Start filling are separate controls.

1 Choose a flavor

Tap its image on the left. The large portrait shows your selected flavor.

2 Open Fill

Tap Fill across the top. Leave the Start filling button alone until the concentrate is in place on the next page.

Bottle first. Then start.



3 / Add concentrate

Wipe water and debris off the funnel cover, then lift it off by its front edge. Invert one whole **14.8 fl oz (440 mL)** bottle into the top funnel.

4 / Start filling

Tap **Start filling**. Let the machine draw the concentrate into the selected reservoir.

5 Wait for Filled

When the display says Filled, that bottle is in the reservoir. Remove the empty bottle and press the cover down until it rests evenly on the brim.

6 Repeat for the second flavor

Select the other image on the left, open Fill, lift off the cover, put its bottle in the funnel, then tap Start filling.

Chill. Choose. Pour.

FIRST CHILL: ABOUT 1 HOUR



1 Choose at the faucet

Tap the faucet display to select a flavor. If the screen is dim, the first tap wakes it.

2 Fill your glass with ice

Put it below the faucet and press the lever down to pour over the ice. Release the lever to stop.

Keep it ready

Top up a flavor

Use the same Fill sequence on pages 19-20. If the display says **Full**, the reservoir is full and some concentrate remains in the funnel. Stop adding concentrate, remove the bottle and press the cover back down.

Rinse the funnel

Rinse it weekly and after a flavor change. Wash the removable silicone funnel and both faces of its cover by hand.

Wipe water and debris off the cover, then lift it off by its front edge. When the funnel is empty, lift it straight out. Its plug slides off the bare drain tube, which stays in the machine. To refit, align the plug in its socket and press down until the brim seats, then press the cover down until it rests evenly on the brim.

Filter and cylinder

Replace the water filter once a year. Release pressure in the white water line as described on page 23 before opening its connections. The regulator's left gauge reads the cylinder: refill it when the needle reaches the red band. Keep the spare nylon cylinder washer for that refill; the regulator stays as set.

Keep the collet press. The bagged cold kit is for shortening and insulating the faucet run after installation is complete.
