

Quick Start

Six things to do, in this order. Every one is a push or a nut run up by hand — **nothing is cut, and nothing is threaded** on the path drawn here. Prop this sheet against the cabinet door. The bound guide in the kit carries everything around it.

BEFORE YOU START

The hole is cut. One 1-3/8 in hole through the countertop, the standard single-hole faucet opening. Cutting it is not part of today — guide, page 6.

Your kitchen has a 1/4-in line. A soft plastic cold-water tube on a push fitting under the sink, the kind a fridge runs on. A braided hose on a shut-off instead? Use the white tee and the guide's pages 10–11 in place of 3, 4 and 5.


The cylinder is here. A 5 lb CO2 cylinder standing beside the appliance, the two-gauge regulator from the kit on top, and its valve closed until the end.

1

Lower the faucet

Feed the three tubes and the cable down through the hole and lower the faucet after them. Then push it **back**, away from you, until it stops. That is the seat — nothing is measured and nothing is aimed at.

The tubes are long on purpose. Leave them long.

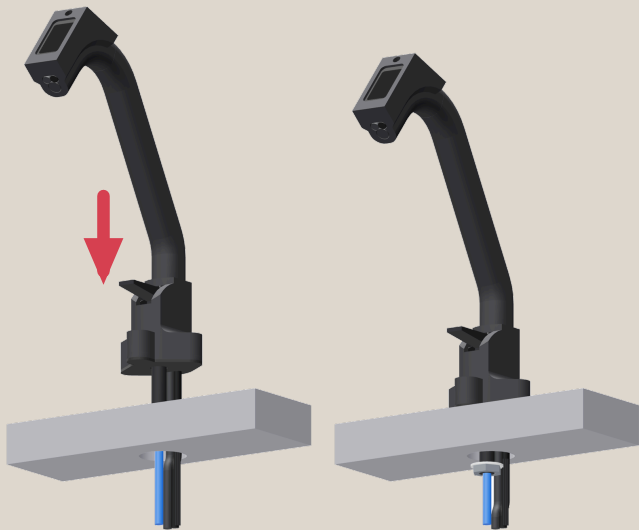


2

Plate, then nut

Under the counter, hold the steel plate flat above the washer and nut already on the shank. Slide it in **sideways** — wide slot to the shank, narrow slot to the two black tubes — until it stops. Then run the nut up by hand.


Hand-tight is tight. No wrench.

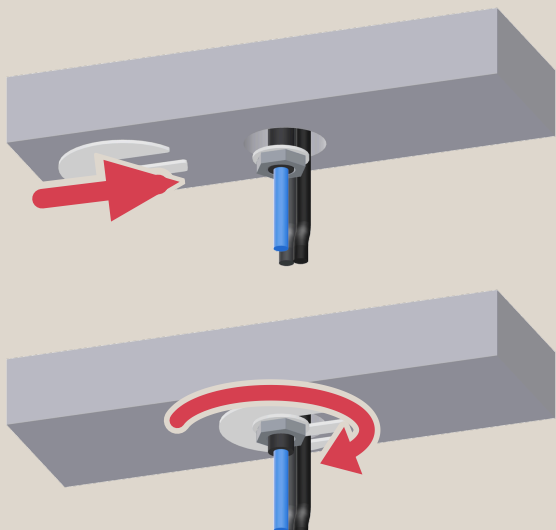

3

Close the cold water


Follow the 1/4-in line back to its shut-off and turn the handle a **quarter turn**. Run the kitchen's cold tap: if it goes dry, you closed the right one. Leave the tap open a moment to let the pressure off.

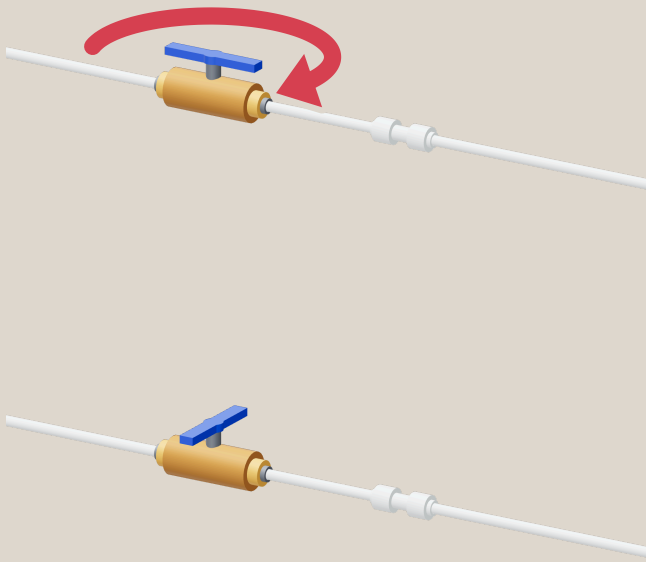

4

Release the line

Press the fitting's collar **in** with the collet press from the kit — or a thumbnail — and pull the tube **out**. Keep a cup under it. A closed valve is not an empty line.

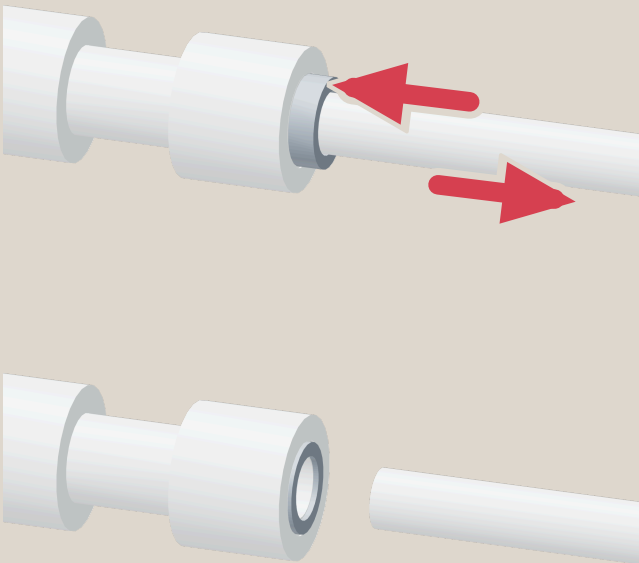


5

Tee in

Push the tee's short stub into the fitting you just emptied. Then push the line you pulled out into the tee's open end. **All the way home** each time: a little over half an inch, further than it feels like it should go.

The long white run, filter and all, is already in the tee's third port.

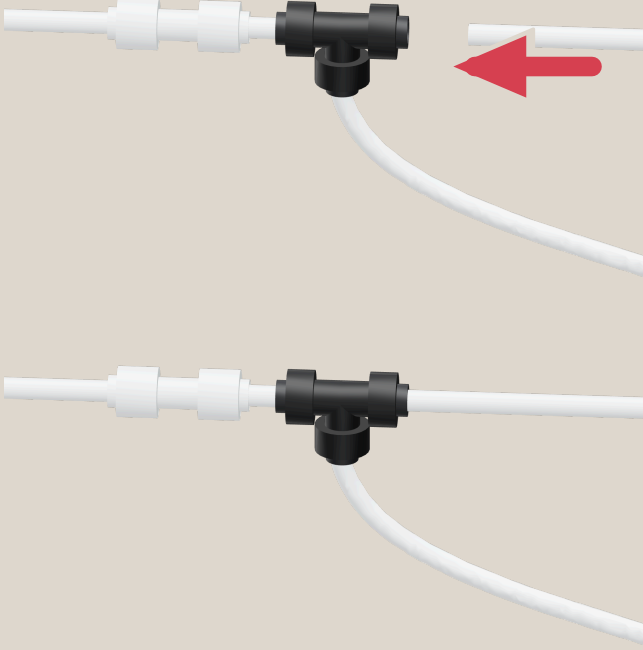

6

Six pushes at the back

Pull the two shipping caps out first; they do not go back. Each collar carries the word of its port. Push every tube **home**, and the plug in until it clicks.

- | | |
|--------|-----------------------------------|
| TAP | the white run, from the filter |
| CO2 | the red tether, from the cylinder |
| SODA | the blue tube, from the faucet |
| FLAVOR | both black tubes, either port |
| PLUG | the faucet's cable, into the jack |



THEN

Water: open the shut-off slowly and watch every joint you made for a full minute. **Gas:** open the cylinder valve. **Power:** plug the cord into the plain socket at the left of the top row; it chimes. Choose **FILL**, upend a bottle of concentrate in the funnel, and give it about an hour to get cold.

IF A PUSH FITTING WEEPS

The tube is not all the way in. Close the valve, press the collet, pull the tube out, and push it back in past the wet mark.

EVERYTHING ELSE

The install guide in the kit: which kitchen you have, the cylinder and its regulator, the filter, the cord, the first hour.

homesodamachine.com