


REP/BEP Attachment Kit

1. Position bracket to back edge of panel at least 2" from corner of panel. Make sure bracket is flush and attach with 5/8" screw provided.
2. Align panel to wall and mark location to install drywall anchor if needed.
3. Install drywall anchor in wall at marked position.
4. Mount panel to wall using 1-3/8" screw provided.


INSTALLATION

STEP 1

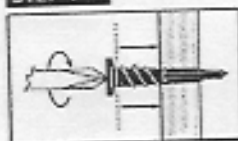

Screw anchor directly into drywall until flush with wall.

STEP 2

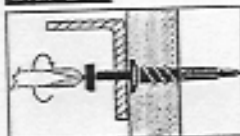

Insert 5/8" screw through desired object, and screw assembly into anchor.