





Drainage Instructions for the MedQuest USA Universal Drainage Kit

In addition to these instructions please refer to our instructional video on our website www.medquestusa.com. More detailed instructions are also provided with each drainage kit. For additional questions about your drainage please contact your healthcare provider.

1


Preparing to Drain

Check to make sure you have:
High vacuum drainage bottle,
Safety Adapter,
Sterile Cap and
Procedure Kit.

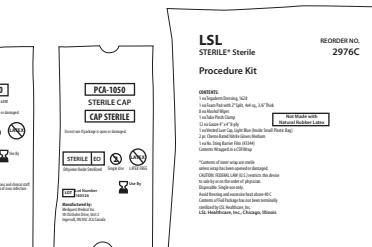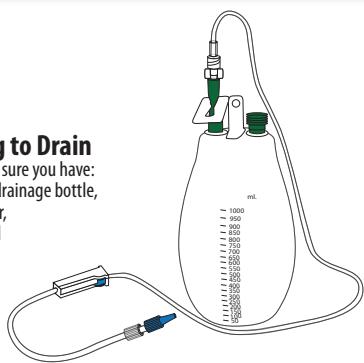


2

Thoroughly wash hands with soap and water.

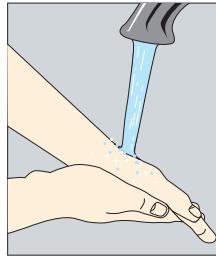



3

Remove the old catheter dressing.
Remove the Procedure Kit from the packaging and carefully unfold the wrapping on top of your workspace.
Open the rest of the items from their packages and drop them onto the sterile wrapping.

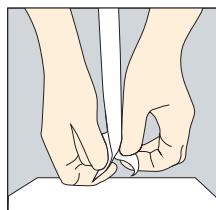


4

Identify your catheter using the drawings to the right.
If you have a Threaded Luer Lock catheter you will not be using the Safety Adapter. Please set it aside.

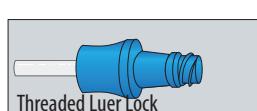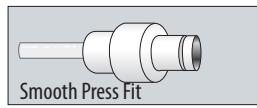


5

Put the gloves on by picking them up by the wrist. Tear open the alcohol pads and the 3M Cavilon Barrier film antibacterial dressing, do not remove them from their packaging. Set them on the wrapping for later use.

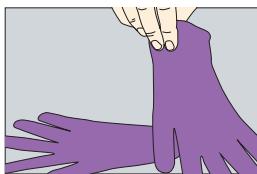


6

Adjust the roller clamp on the drain line tubing that is connected to the bottle so that it is completely closed.

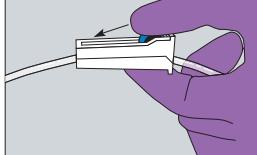


7

Remove the blue cap from the male luer connector on the drain line tubing that is connected to the drainage bottle. **DO NOT DISCARD CAP.**
Once drainage has been completed replace this blue cap on the drain line to prevent leakage.

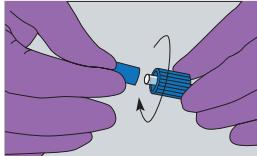


8 To Connect Smooth Press Fit Catheter IF YOU DO NOT HAVE A Smooth Press Fit CATHETER SKIP THIS STEP AND CONTINUE TO STEP 9.


Attach the male luer connector on the drain line tubing that is attached to the drainage bottle to the Safety Adapter by pushing the ends together and turning the blue locking collar clockwise.

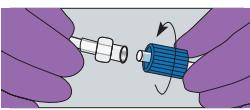


Remove the cap from the Safety Adapter.

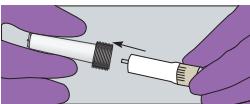


Remove the cap from the implanted catheter if present and vigorously clean the valve surface with one of the alcohol pads.

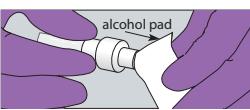

Attach the Safety Adapter to the Smooth Press Fit Catheter.

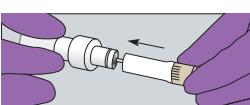


Press the Stylet Tip of the Safety Adapter into the Smooth Press Fit Catheter Valve.

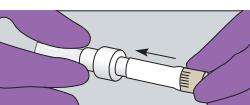


9 To Connect Threaded Luer Lock Catheter IF YOU DO NOT HAVE A LUER LOCK CATHETER SKIP THIS STEP AND CONTINUE TO STEP 10.

Remove the cap from the implanted catheter if present and vigorously clean the valve surface with one of the alcohol pads.

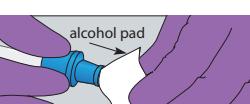


Align the luer connection on the drain line set with the center of the catheter valve. Push and turn clockwise to tighten.

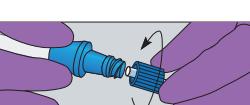

14


For patients with a Threaded Luer Lock Catheter:

Disconnect the bottle tubing set from the catheter valve by turning counterclockwise and pulling straight back. If a second bottle is required, please open another kit and repeat the process.

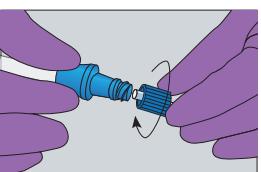

15

Discard old gloves and put on a new pair. Clean catheter tip with a fresh alcohol pad. For the Smooth Press Fit Catheter, firmly press on the new Sterile Cap. For Threaded Luer Lock Catheter screw on the blue replacement cap found in the Sterile Procedure Kit.

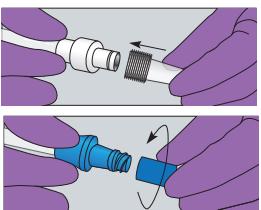

16


Final Steps

Prepare the 3M Tegaderm Dressing by removing the center portion of the non-adhesive side of the paper backing. Then peel away the large single piece that has the 3M Tegaderm logo on it to expose the adhesive side. Carefully place the dressing back on the workstation with the adhesive side up.




17

Clean around the catheter exit site with an alcohol pad. Optional: When dry, apply 3M Cavilon Barrier Film. It can be found in the contents of the dressing kit.

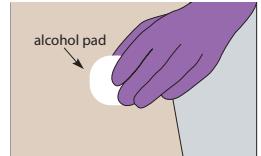

18

Carefully place the split foam catheter pad around the catheter at the exit site.

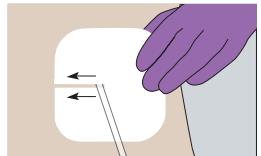


19

Gently wind the catheter in a circle on top of the foam pad, taking care not to kink the catheter.




20

Place three or four gauze pads on top of the catheter and hold them down.

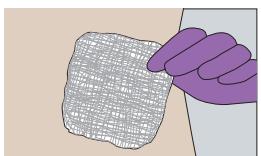


21

Center the 3M Tegaderm dressing over the gauze pads with the adhesive side down and press down over the catheter evenly. Remove the remaining paper around the edges and smooth out the dressing on your skin.

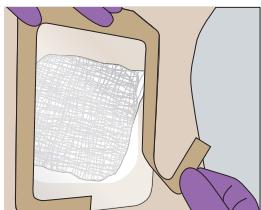

22


If emptying bottle contents: Remove the green bellow by cutting at the third section from the top. Make this cut large (3/4 way through bellow) to allow the bellows to be pulled open wide for convenient emptying.

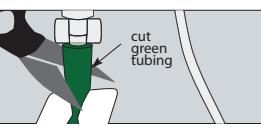

Once the bellows are opened, cut the green tube and discard. Empty the bottle in toilet or discard as required.

12

When the flow stops or the bottle is filled, completely close the tubing with the roller clamp.

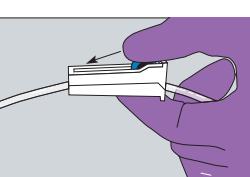

Do not drain more than 1,000 ml from your chest or 2,000 ml from your abdomen at one time.

13

For patients with a Smooth Press Fit Catheter:

Remove the Safety Adapter from the implanted catheter by pulling straight back and if necessary gently twisting side to side. Remove the Safety Adapter from the drain line by turning the blue locking collar counterclockwise and pulling straight back. If an additional bottle is required to complete the drainage please open another kit and repeat the process. **DO NOT CONNECT TO A SAFETY ADAPTER THAT HAS ALREADY BEEN USED.**

