


Material List for Fig. 3

Intermediate or Pin Angle Pole  
(Single Member Crossarm)

| Item No. | Quantity | Description                                                                | ESI Std., Dwg. No.<br>or BS Ref.   | M 20<br>Bolts |
|----------|----------|----------------------------------------------------------------------------|------------------------------------|---------------|
| 1        | 1        | Wood Pole                                                                  | 432001                             | 2 or 3 *      |
| 3        | 1        | Kicking Block                                                              | 439103 Type 2                      | 1             |
| 6        | 1        | Crossarm Member                                                            | 439519                             | —             |
| 10       | 2        | Crossarm Strut                                                             | 439526                             | 2             |
| 11       | 1        | Insulator Bracket                                                          | 439518                             | 2             |
| 15       | 3        | Square Flat Washer                                                         | 439604                             | —             |
| 16       | 1        | Square Curved Washer                                                       | 439605                             | —             |
| 18       | 3        | 11 kV Pin Insulator<br>33 kV Pin Insulator<br>33 kV Line Post<br>Insulator | 439301<br>439302<br>439303         | —<br>—<br>—   |
| 19       | 3        | 11 kV Pin (50 mm<br>shank)<br>33 kV Pin (50 mm<br>shank)                   | BS 3288 Ref. 29<br>BS 3288 Ref. 31 | —<br>—        |
| 24       | 1        | Danger Plate                                                               | 439701                             | —             |

NOTES:

1. All bolts 60 mm long with the exception of pole bolts.
2. Pin Angle — (i) \*Anti-split bolt with two square curved washers to be fitted.  
(ii) Additional round washers and locknuts required for bonding stay strand to pole top bolts.

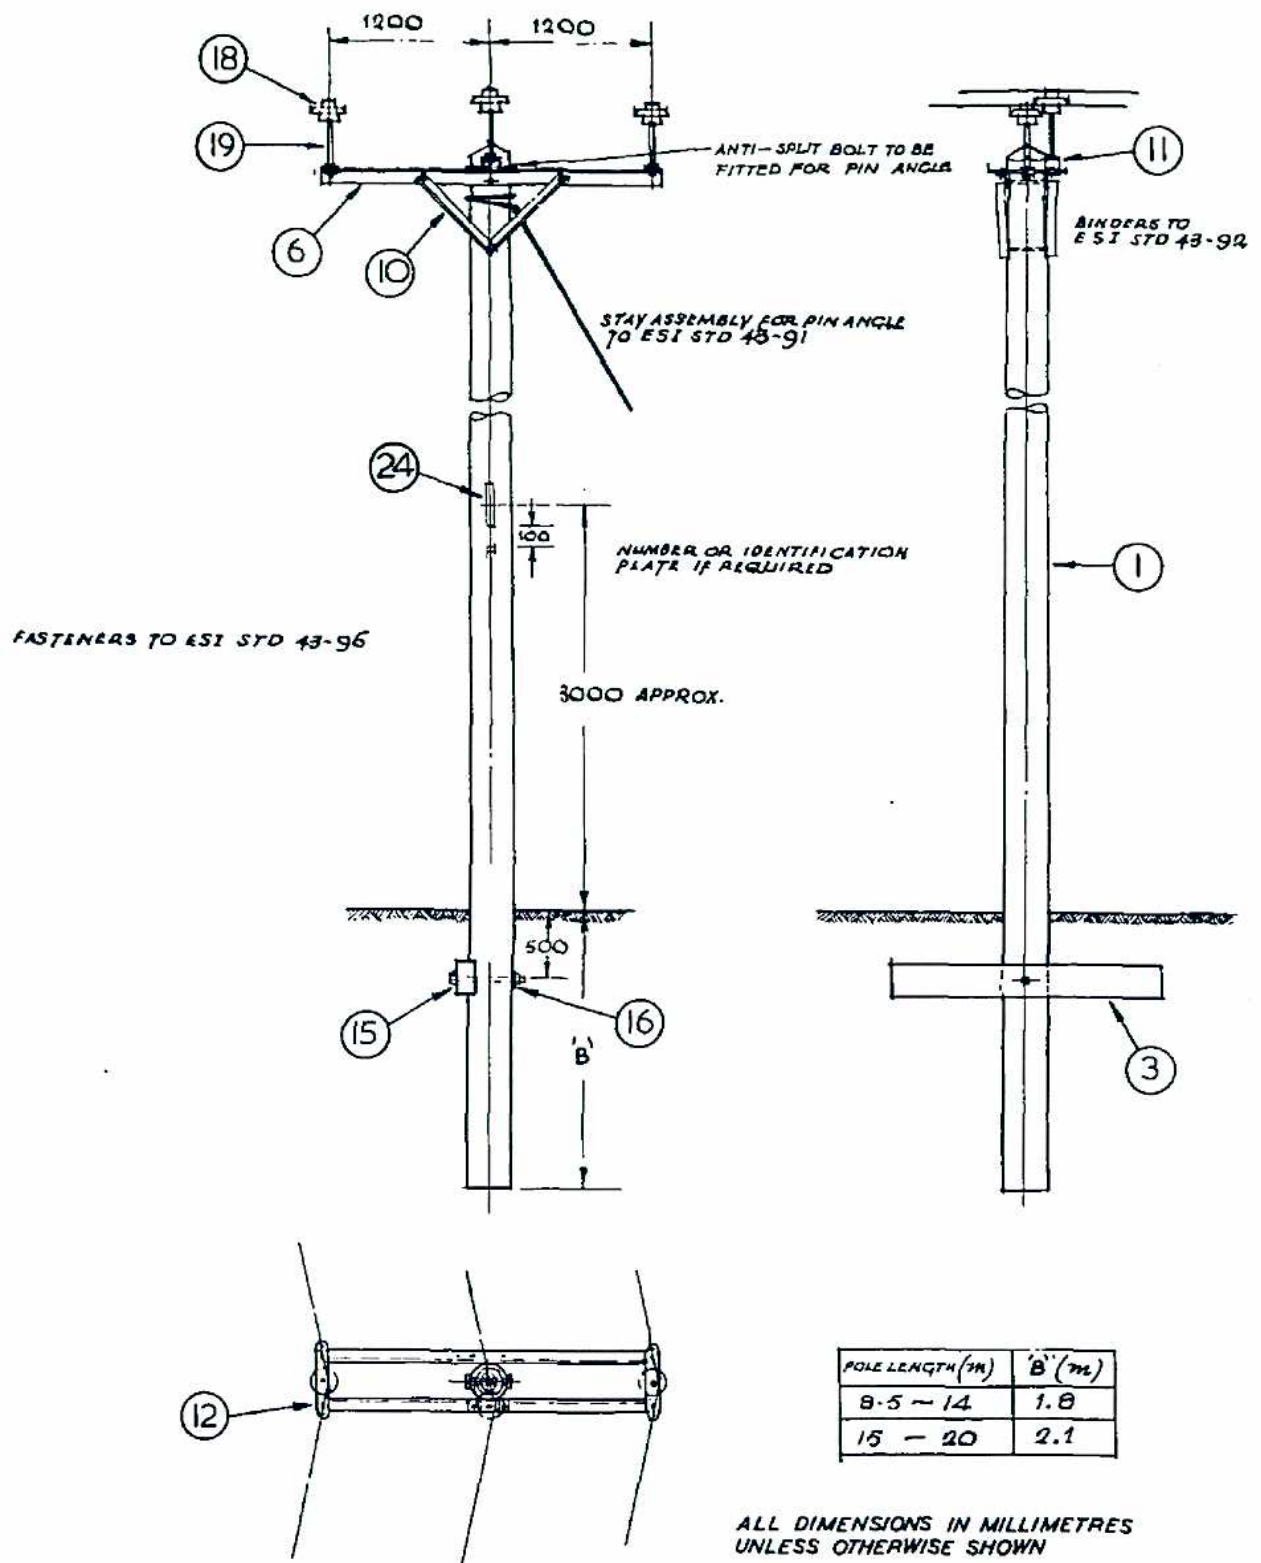

89/317

Fig. 4 General assembly – intermediate or pin angle pole  
(Double member crossarm)  
(ESI Drawing 432004)