

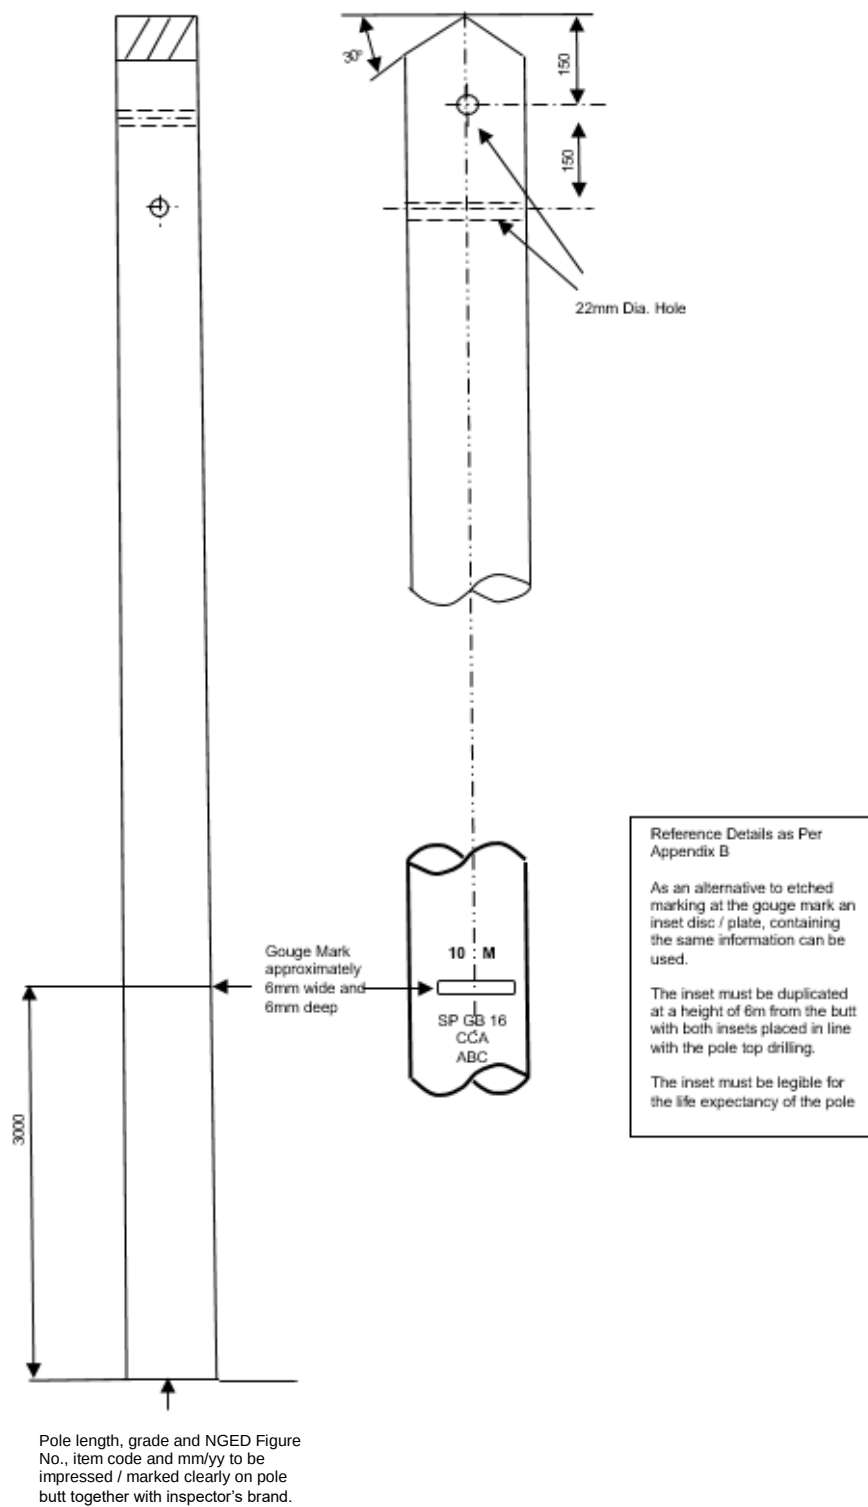


Fig 19 - LV Pole (Creosote Treated) (Based on ENATS 431201)
Can be used on Openwire but will need to be drilled as required on site