

	DOCUMENT CODE: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	REVISION: 02
	PROCESS OWNER: Operations HSSE	APPROVAL DATE: Jul-2022

Instruction Scaffolding Procedures

REVISION	DATE	DESCRIPTION
02	Jul/2022	GCR506– Medium Change – Update of the instruction to match current GTS requirements (i.e: Removing the reference and permission to use mobile scaffolds with wheels offshore, Adjusting the height of the handrails, etc.)
01	Feb/2017	BPIR-1366-amendments to 1,8,9 and 11.4 + Forms - added dual language.

TABLE OF CONTENTS

1.	PURPOSE	2
2.	SCOPE	2
3.	BASIC REQUIREMENTS	2
4.	REFERENCES	2
5.	SYSTEM ADMINISTRATION	3
6.	SAFETY MANAGEMENT	3
7.	AUDITS	3
8.	GENERAL GUIDELINES FOR BRAZIL FOLLOWING NR 18, NR 34 AND ABNT 6964*	3
9.	PROCEDURE	6
10.	TRAINING	9
11.	EQUIPMENT PROCUREMENT	9
12.	SUPPORTING DOCUMENTS	10
13.	APPENDICES	10

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

1. PURPOSE

This instruction is based on “Offshore Access Scaffolding Guidance” published by the UK Offshore Contractors’ Association (NR-18, NR-34 e ABNT 6964 – For Brazil Operations Only). The OCA guidance covers the five main types of tubular steel scaffolding typically used offshore.

It refers to (as good guidance) the UK National Association of Scaffolding Contractors (NASC) guidance in the use and practical application of Fall Arrest Equipment whilst erecting, altering and dismantling scaffolding.

2. SCOPE

This instruction covers worker and local management involvement in the requisition, erection, inspection, certification, modification, maintenance and dismantling of conventional tubular scaffolding for all Company offshore operations. Where System Scaffolding (e.g. Kwikform, Ring Lock, Cuplock, etc) is used, the manufacturer’s safe handling and engineering data sheets concerning safe working loads is fully considered during risk analysis and the PTW submission.

This Instruction is applicable exclusively to a) the Company at Large b) All Locations involved in fleet operations, c) The Operate phase and d) All Operations.

3. BASIC REQUIREMENTS

All scaffolding equipment used under this instruction conforms to appropriate Standards.

The person in charge of the scaffolding team is the Scaffolding Contractor’s Supervisor.

Scaffolding Operators are competent with valid training certificates.

Scaffolding Operators are sufficiently medically and physically fit to perform their normal duties.

Scaffold planning, erection, modification and dismantling activities follow the PTW process. Precautions to protect scaffold boards potentially exposed to hot work are identified on the PTW.

All scaffolds have been inspected and ‘green-tagged’ prior to release for general use.

Note: The green tag system is a method of identifying scaffolds that have been constructed and inspected in an approved manner and passed as fit for use. A scaffold is NOT to be used unless it has a green tag attached to the access point.

Scaffold Request Register and associated records are maintained for at least one year in line with the PTW rules.

4. REFERENCES

- BS EN 12811: Temporary works equipment - Scaffolds
- British Standard 1139: Metal Scaffolding.
- British Standard 2482: Specification for Scaffold Boards.
- OCA (UK): Offshore Access Scaffolding Guidance.

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

- CITB (UK): Scaffolding Training Notes.
 - NASC (UK): The Use of Fall Arrest Equipment.
 - Scaffolding Awareness Training Matrix
- For Brazil Operations refer to NR-18, NR-34 e ABNT 6964

5. SYSTEM ADMINISTRATION

The administration of this instruction centres on the Scaffolding Request Register (SRR). See Attachment B.

The register provides the means to track individual scaffolds from the originating request through the approval, erection, certification, periodic inspection and maintenance stages to final dismantling and clearing.

An SRR is generated for each scaffolding structure at the point of origination. The recommended method for administering Scaffolding Request Register forms and the associated documentation is as follows:

- **Jobs Pending File** for structures awaiting erection.
- **Jobs Standing File** for green tagged completed structures in use or undergoing modification.
- **Jobs Completed File** for dismantled scaffolding structures.

Records are transferred from file to file as the work progresses through its logical stages.

6. SAFETY MANAGEMENT

Checklists covering **Risk Assessment** and **Scaffolding Inspection** are an integral part of this instruction. See appendix B.

The checklists are provided to prompt the users in the assessment of the site conditions and the inspection of the scaffolding structures erected.

They are not exhaustive in the topics incorporated and are not considered to be a substitute for the application of common sense to the tasks being performed.

7. AUDITS

It is recommended that from time-to-time administrative audits be performed to check the completeness and accuracy of the file records, spot-checking records against individual structures on site to ensure that their dimensions and purpose are accurately reflected in the files and that the inspection process is functioning properly.

8. GENERAL GUIDELINES FOR BRAZIL FOLLOWING NR 18, NR 34 AND ABNT 6964*

The dimensioning of scaffolds, its support and fixation structure are executed by a legally licensed professional.

The scaffolds is dimensioned and constructed in such a manner that they could support,

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

safely, the workloads that they are subjected to.

Maintain on the premises the calculation report of the scaffold design.

Fix scaffolds to firm structures, stayed or anchored in points that show sufficient resistance to wind action and to loads that are supported.

Fixation could be optional when the tower of the scaffold does not surpass, in height, four times the smallest dimension of the base plate.

Brace and anchor the scaffold structure with cantilevers to eliminate oscillation.

Rest the standards (uprights) firmly on shoes over a solid base, capable of resisting the necessary stress and transmitted loads. NOTE – mobile scaffolds fitted with wheels are not to be used on Company sites and operations

The use of mobile / rolling scaffold with wheels on FPSO's which are subject to sea conditions and rolling are not considered a safe nor best practice. This has a potential for scaffold to role or tip if wheels are not locked.

Signal and protect the areas around the scaffolds against impact from vehicles or mobile equipment.

Of the Constitutive Elements

Utilize only pieces of good quality, in good condition and clean for building scaffolds.

Inspect and evaluate the pieces periodically, recording the results in a Verification List under the supervision of a Legally Licensed Professional.

Use galvanized steel tubes, with a wall width of at least 3.05 mm.

Utilize only tubes with a length inferior to 4.5 m (four and a half meters) as standards in towers and scaffolds, except on the base assembly.

Fix, lock and adjust the bracing pieces on standards by means of screws, couplers or joint pins.

The work floor have complete matting, anti-skid, be leveled and fixed in a safe and resistant manner, remaining unobstructed.

In case of utilization of wooden boards, they are dry, with a minimum width of 38 mm, of good quality, without knots, cracks and other defects, being prohibited the use of paint that covers imperfections.

Rest and fix the boards over the transoms with couplers or annealed wire, with a minimum diameter of 2.77 mm.

Boards are joined by juxtaposition, resting over transoms, one at each end, with an overhang of 0.15 m (15 centimeters) minimum and 0.20 m (20 centimeters) maximum.

It is permitted to join boards by superposition, if:

- I. included on the scaffolding design;
- II. juxtaposition technical unviability is justified by an Occupational safety and Health professional or, if there is not such professional, the technical leader responsible for the compliance to this standard;
- III. resting on a transom and with at least 0.20 m (20 centimeters) on each side, that is, a superposition of at least 0.40 m (forty centimeters). In those cases, the adequate signaling of the area is mandatory (indicating the existence of the shoulder and the

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

painting of an alert stripe on the floor), as well as the careful fixation of the edges, in a manner that does not allow that they are raised from the floor.

Protect the scaffold's platform in its entire perimeter, except the work face, with:

- I. rigid, fixed guard-rails, formed by two metallic tubes, placed horizontally at a distance from the board of 0.50 m (fifty centimeters) and 1 m (one meter);
- II. toe-boards, next to the board, with a minimum height of 0.20 m (twenty centimeters).

When there is the possibility of fall in the direction of the internal face, adequate protection with guard-rails and toe-boards are planned.

Protect the openings on the floor with fixed guard-rails and toe-boards.

Provide scaffolds with floors situated above the height of 1 m (one meter) with stairs or ramps. Paint the access stairs yellow to facilitate its visualization.

Requirements for Working in Scaffolds

The removal or blockage of safety devices on the scaffold is strictly prohibited.

The use of stairs and other means to reach higher places from the work floor on a scaffold is strictly prohibited

Moving a scaffold with workers and/or tools in it is strictly prohibited.

If necessary, install a material hoisting equipment, the point of application is chosen in conformity with the project, in a manner that does not compromise the stability and safety of the scaffold.

Assembling and Disassembling Scaffolds

Issue Permit to work (Permissão de Trabalho – PT) for the assembly, disassembly and maintenance of scaffolding.

The assembly, disassembly and maintenance is executed by trained workers, under supervision and responsibility of the immediate leader.

The use of full body safety harnesses with twin-leg lanyards by the scaffolders is mandatory..

The scaffolders have appropriate tools at his disposal, stored and tied to the belt.

Isolate the area during the assembly, disassembly or maintenance services, allowing access only to the team involved with the activities.

Signal scaffolding in the assembly, disassembly or maintenance processes with a red sign, indicating the prohibition of use, and green after the clearance.

Clearance for Using Scaffolds

Utilize the scaffolding only after being approved by the Occupational safety and Health professional or, if there is not such a professional, the person responsible for compliance with this standard, as well as the person in charge of the service.

Record the approval on the "Scaffolding Clearance Form" ("Ficha de Liberação de Andaime") that will be filled out, signed and affixed to the scaffolding.

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

*For Brazil Operations only.

9. PROCEDURE

	Step	Action	Responsibility	Controlling Document
1.0	Scaffold Requisition	Scaffolding requirements are always the subject of a completed Section 1 of the Scaffold Request Register giving as much detail as is necessary to adequately describe and record the location and purpose of the scaffold to the Scaffolding Supervisor. <i>The SRR is filed in the Jobs Pending File.</i>	Originator	SRR, Section 1
2.0	Conceptual Development	The site is visited to establish the scope of work, which is entered in Section 2 of the Scaffold Request Register.	Scaffolding Supervisor	SRR, Section 2
2.1	Operational Queries	If the scope of work falls outside the limits given in Attachment A (Safe Construction Guidelines) and cannot be re-configured within the given limits, then an MOC is raised via the Unit Management.	Scaffolding Supervisor	MOC and associated response
2.2	Risk Assessment	During the site visit, a full risk assessment is performed based on, but not limited to, the topics covered on the controlling document. The results of the assessment is recorded and attached to the Scaffold Request Register.	Scaffolding Supervisor	Risk Assessment Checklist
3.0	Permit to Work	A request for permission to proceed with the scaffolding work is presented at the PTW meeting.	Scaffolding Supervisor/ Originator	SRR / RA / (MOC)
3.1		A presentation describing the proposed job, its location and purpose, the risks associated with the work, an assessment of their effect and the precautions proposed for minimizing the perceived risks to a level considered to be as low as is reasonably practicable is considered.	PTW Meeting	SRR / RA / (MOC)
3.2		The application for the PTW is approved, deferred or rejected as appropriate.	Area Authority, (Dept. Heads, OIM)	PTW + SRR / RA / (MOC)
4.0	Scafftag	Subject to the issue of the PTW, the job is assigned the next sequential Scafftag number.	Scaffolding Supervisor	SRR
5.0	Scaffolding Erection	The information used in the SRR and the RA to obtain the PTW forms the basis of the Tool-Box-Talk with the scaffolding operatives prior to the work commencing.	Scaffolding Supervisor	PTW + SRR / RA / (MOC)



Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG

Revision: 02

Process Owner: Operations HSSE

Approval Date: Jul-2022

Instruction Scaffolding Procedures

5.1	Fall Arrest	The most effective method of securing the operative fall arrest equipment AND HOW TO ACHIEVE 100% TIE OFF is addressed during the Tool-Box-Talk	Scaffolding Supervisor	PTW + RA
5.2	General Safety Issues	The operatives are reminded that they have a part to play in ensuring their own safety as well as that of their co-workers. The need to reduce the risk of accident to as low as reasonably practicable (as well as the requirement for 100% tie-off) is emphasized.	Scaffolding Supervisor	PTW + RA
5.3	Understanding of Safety Issues	The Tool-Box-Talk is not complete until each member of the scaffolding team verbally reviews all hazards associated with the scaffold erection / modification or dismantling. All scaffolding team members then sign the toolbox talk form to acknowledge their full understanding and willingness to comply at all times with the conditions of the PTW AND THE 100% TIE-OFF REQUIREMENT.	Scaffolding Supervisor	PTW + RA
6.0	Scaffolding Certification	The completed scaffolding structure is inspected to ensure that it fully conforms to established standards and is fit for the purpose intended prior to being green-tagged for use.	Scaffold Supervisor / Inspector	SRR Section 2 + Scaffolding Inspection Checklist / (MOC)
6.1	Scafftag	When satisfied the scaffold has been erected in accordance with the requirements, a Green Scafftag insert is completed and inserted into the Scafftag holder attached to the scaffold.	Scaffold Supervisor / Inspector	Green Scafftag Insert
6.2	Scaffolding Certification	A record of the inspection is made by completing Section 3 of the Scaffold Request Register, the Completion Certificate. <i>The SRR is transferred to the Jobs Standing File.</i>	Scaffolding Supervisor	SRR Section 3
7.0	Scaffolding Modification	All proposed modifications and their purpose is described to the Scaffolding Supervisor/Lead, preferably on site.	Originator	
7.1	Scope Identification	The scope of work associated with a proposed modification is clearly defined.	Scaffolding Supervisor	SRR Section 4
7.2	Risk Assessment	A Task Risk Assessment is performed prior to any scaffolding erection activities.	Scaffolding Supervisor	SRR Section 4, Risk Assessment Checklist
7.3	PTW Considerations	Provided that a valid PTW is in place, the work can proceed subject to the Tool-Box- Talk process being properly completed, as in Step 5 above.	Scaffolding Supervisor	
7.4		If the PTW has been closed, then no modification work is performed until the PTW requirements are completed as in Step 3 above.	Scaffolding Supervisor	SRR / RA / (MOC)



Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG

Revision: 02

Process Owner: Operations HSSE

Approval Date: Jul-2022

Instruction Scaffolding Procedures

7.5		Upon completion of the modification, the scaffold is re-inspected and provided that it is fit for the purpose intended, the scaffold is returned to full use and an entry recording the modification is made in the Scaffold Request Register.	Scaffolding Supervisor	SRR Section 4, Risk Assessment Checklist
7.6		Where the modification is of a minor nature and unlikely to affect other activities in the immediate vicinity, it is not necessary for the existing Green Scaffold tag to be withdrawn whilst the work is executed. However, where the modification is likely to have a temporary effect on the structural integrity of the scaffold, consideration is given to withdrawing the Green Scaffold status until the work is complete and the scaffold has been re-certified as fit for the purpose intended.	Scaffolding Supervisor/ Scaffold Inspector	
8.0	Periodic Inspection	All scaffolds are inspected and recorded at intervals not exceeding seven days. Only qualified Scaffolding Supervisors / Inspectors are authorized to inspect and certify scaffolds.	Scaffolding Supervisor / Inspector	SRR Section 5
8.1		Additional inspections are performed following any event having an adverse effect upon the fitness for purpose of scaffolding structures.	Scaffolding Supervisor	SRR Section 5
9.0	Dismantling	The request to dismantle and clear the scaffolding is only made when it has been established that all work has been satisfactorily completed.	Originator	
9.1	Site Survey / Risk Assessment	Since the conditions under which the scaffold was erected may have significantly altered, the site is re-surveyed and a full risk assessment is performed. An entry is made in Section 6 of the Scaffold Request Register logging the instruction originator and date.	Scaffolding Supervisor	Risk Assessment Checklist SRR Section 6
9.2	Permit Considerations	Provided that a valid PTW is in place and appropriate precautions are taken in line with the risk assessment, then the work can proceed subject to the Tool-Box-Talk process being properly completed, as in Step 5 above.	Scaffolding Supervisor	
9.3		If the PTW has been closed, then no modification work is performed until the PTW requirements are completed as in Step 3 above.	Scaffolding Supervisor/ Scaffold Inspector	SRR / RA
9.4		Upon completion of dismantling and clearing, Step 6 of the Scaffold Request Register is completed. <i>The SRR form and its associated documentation are transferred to the Jobs Completed File.</i>	Scaffolding Supervisor	SRR Section 6

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

10. TRAINING

Commitment

Training necessary to ensure that this instruction could be effectively implemented, operated and improved through objective review is provided in order that selected crew members could construct simple scaffolds under supervision. All such training is recorded.

Supervision

Superintendents and Supervisors with responsibility for the administration of this instruction, supervising the work and performing scaffolding inspections have received training to at the least the minimum accepted standard for the region or equivalent by a recognized Scaffolding Contractor.

Trades personnel

All personnel directly involved with the use, erection, modification, maintenance and dismantling of scaffolding structures have received training in the practical application of this instruction.

11. EQUIPMENT PROCUREMENT

Specification Requirements

The procurement process for all scaffolding equipment requires the Requester to clearly specify to Procurement the appropriate Standard for the equipment being procured.

Scaffold Board / Metal Plank Specification

In the case of scaffold boards, the Requester specifies that the boards are Machine Stress Graded and bear the letter(s) M or MG embossed on the board bands or nail plates fixed to the end of the boards.

Metal plank are galvanized coated and have wind latches or means of tying down to ledgers.

Board Identification

Particular attention is paid to ensuring that only boards bearing the letter(s) M or MG on the board bands or nail plates fixed to the end of the boards are accepted from the supplier. The purchaser may wish to consider instructing the shipping company or forwarding agent to check this aspect of good receipt prior to loading.

Fire Retardant Scaffold Boards

If the Requester specifies fire-retarded scaffold boards, the only acceptable timber treatment is the Non-Com Exterior™ kiln drying and vacuum resin replacement system. Alternatively, consideration may be given to sheet metal scaffold boards or other proprietary fire-retarded substitute products.

Scaffold Boards in Transit

The procurement process for new scaffold boards specifies minimal storage in transit containers whilst en route to the unit to prevent the timber from drying out, unless other arrangements are made to protect the shipment.

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

12. SUPPORTING DOCUMENTS

	EP-HSE-PMS-SAF-SAF.GRP.FRM.0180.ENG	Scaffold Request Form
	EP-HSE-PMS-SAF-SAF.GRP.FRM.0480.ENG	Scaffold Tag

13. APPENDICES

- A - Safe Construction Guidelines
- B - Scaffolding Request Register
- C - Scaffold Board Inspection & Maintenance Guidelines
- D - Scaffold Board Storage Guidelines
- E - General Guidelines

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

APPENDIX A - SAFE CONSTRUCTION GUIDELINES – GENERAL PURPOSE OFFSHORE SCAFFOLDING

General Purpose Independent Tied Scaffolding

Maximum uniformly distributed load per working lift	2.00	kN/sq mtr	40	lbs/ft ²
Maximum overall height to top deck level - tied structure	20000	mm	66'-0"	
Maximum bay width	2100	mm	7'-0"	
Maximum bay breadth	1200	mm	4'-0"	
Maximum lift height	2500	mm	8'-3"	
Maximum number of lifts	10	no.	10	no.
Maximum number of boarded lifts using 38mm boards	10	no.	10	no.
Maximum number of working lifts in use at any one time	2	no.	2	no.

General Purpose Static Tower Scaffolding

Maximum uniformly distributed load per working lift	2.00	kN/sq mtr	40	lbs/ft ²
Maximum overall height to top deck level - tied structure	20000	mm	66'-0"	
Maximum bay width	1820	mm	6'-0"	
Maximum bay breadth	1820	mm	6'-0"	
Maximum lift height	2500	mm	8'-3"	
Maximum number of lifts	10	no.	10	no.
Maximum number of boarded lifts using 38mm boards	10	no.	10	no.
Maximum number of working lifts in use at any one time	2	no.	2	no.

General Purpose Birdcage Scaffolding

Maximum uniformly distributed load per working lift	0.75	kN/sq mtr	15	lbs/ft ²
Maximum overall height to top deck level - tied structure	20000	mm	66'-0"	
Maximum bay width	1820	mm	6'-0"	
Maximum bay breadth	1820	mm	6'-0"	
Maximum lift height	2500	mm	8'-3"	
Maximum number of lifts	10	no.	10	no.
Maximum number of boarded lifts using 38mm boards	10	no.	10	no.
Maximum number of working lifts in use at any one time	2	no.	2	no.

General Purpose Cantilevered Platform

Maximum uniformly distributed load per working lift	0.75	kN/sq mtr	15	lbs/ft ²
Maximum bay width	2100	mm	7'-0"	
Maximum bay breadth	1200	mm	4'-0"	
Maximum lift height	2500	mm	8'-3"	
Maximum number of cantilevered platform extensions	1	no.	1	no.
Maximum number of boarded lifts using 38mm boards	1	no.	1	no.
Maximum number of working lifts in use at any one time	1	no.	1	no.

General Purpose Slung Scaffolding

Maximum uniformly distributed load per working lift	0.75	kN/sq mtr	15	lbs/ft ²
Maximum bay width	1820	mm	6'-0"	
Maximum bay breadth	1820	mm	6'-0"	
Maximum lift height	2500	mm	8'-3"	
Maximum number of lifts	1	no.	1	no.
Maximum number of boarded lifts using 38mm boards	1	no.	1	no.
Maximum number of working lifts in use at any one time	1	no.	1	no.

Note: Refer to OCA 'Offshore Access Scaffolding Guidance' booklet for further information.

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

APPENDIX B - SCAFFOLDING REQUEST REGISTER

This form is the primary record of all activities associated with the management of scaffolding structures in use on the installation. It provides the means by which local management could obtain accurate information regarding the status of erected scaffolding structures in terms of their original purpose and all inspections performed.

It is recommended that the forms be retained in three separate files, i.e., **Jobs Pending, Jobs Standing, Jobs Completed**. The files are kept in a safe place under the direction of the Cargo Supervisor. Ideally the administration of the system is such that at any time the Jobs Standing file provides an accurate record of each tagged scaffolding structure, regardless of the color of the tag.

The Jobs Standing file, maintained through the direction of the Cargo Supervisor, is the basis of system audits.

SCAFFOLD RISK ASSESSMENT CHECKLIST

The primary purpose of this checklist is to provide the person performing the assessment with both practical guidance and a consistent basis for all risk assessments performed in relation to the erection, modification and dismantling of scaffolding structures.

This Checklist is used for all risk assessments performed in relation to the erection, modification and dismantling of any scaffolding structure.

SCAFFOLDING INSPECTION CHECKLIST

The primary purpose of this Checklist is to provide guidance for all inspections performed on completed, green-tagged scaffolding structures. This Checklist may be used for scaffolding inspection guidance at the discretion of the superintendent, supervisor or designee performing the inspection.

If the superintendent or supervisor determines that corrective action is required as a result of a scaffolding inspection, the completion of a Scaffolding Inspection Checklist becomes mandatory.

The superintendent or supervisor gives active consideration to the precautionary red-tagging of a defective scaffolding structure if the defect observed is either sufficiently serious or could not be rectified quickly, or both.

The completed Scaffolding Inspection Checklist is retained with the appropriate Scaffold Request Register to support the weekly inspection entry made in Section 5 of the Scaffolding Request Register.



Instruction Scaffolding Procedures

APPENDIX C - SCAFFOLD BOARD INSPECTION & MAINTENANCE GUIDELINES

Timber is a natural product and care is taken in the use of scaffold boards.

- No overstressing is allowed to take place such as impact loading or placement for use over excessive spans.
- Boards that have been overstressed or show evidence of overstressing are rejected from further use.
- Scaffold boards are generally clean and free from surface debris before being put into service.
- Common faults include boards which are found to be warped or showing signs of splits, cracks, notches, cut-outs, burns, significant oil stains, protruding nails, or damaged bands.
- Boards with such defects are quarantined for repair and re-inspection before being considered for re-use, or if the defects could not be repaired, the board are scrapped.
- Damaged bands are replaced taking care to ensure that correctly identified board bands are used.
- Boards are painted or treated in any way that may conceal defects.

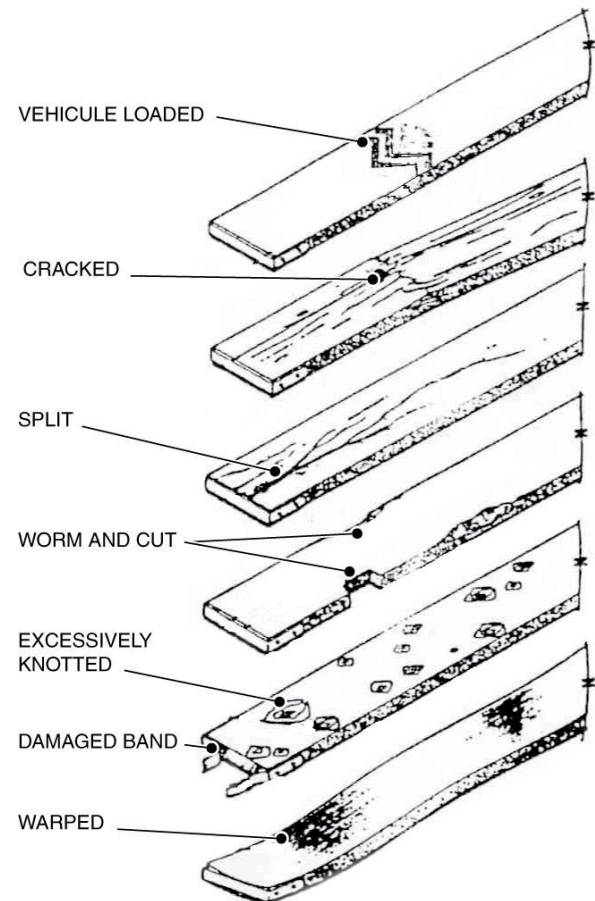


Figure 1 - Common Fault



Instruction Scaffolding Procedures

APPENDIX D - SCAFFOLD BOARD STORAGE GUIDELINES

Timber scaffold boards are manufactured from a natural product. Care in their storage lengthens their useful life.

Scaffold boards in storage for any length of time are protected from the direct effects of extreme weather conditions stacked off the deck or ground level on timbers clear of any surface water build-up and have free circulation of air around them.

The stacks are no more than 20 boards high or 2'-6". Additional boards may be stacked above provided that they are separated by short timber battens placed at right angles to the length of the board.

The battens allow air to circulate within the stack and reduce the risk of the boards toppling over.

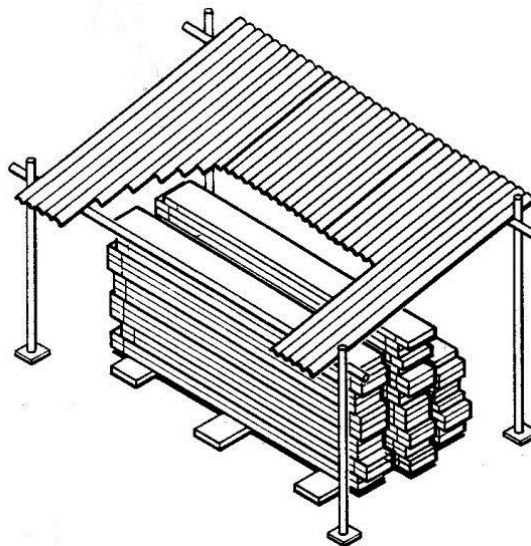


Figure 2 - Scaffold boards in storage (Roof cut away for clarity)

Under no circumstances the boards are stored in an enclosure where the temperature is likely to rise above ambient. Storing boards in containers in the tropics climate for extended periods of time has the effect of 'kiln drying' the timber.

This results in the boards becoming brittle and liable to snapping under stress. Accordingly, the procurement process for new boards specifies minimal storage in a transit container unless other arrangements are made to prevent drying.

	Document Code: EP-HSE-PMS-SAF-SAF-GPR.INS.0080.ENG	Revision: 02
	Process Owner: Operations HSSE	Approval Date: Jul-2022
Instruction Scaffolding Procedures		

APPENDIX E - GENERAL GUIDELINES AND REQUIREMENTS:

- Any scaffolding activities being performed over water or above and adjacent to the permanent guardrails are only undertaken with the stand-by boat being in close attendance.
- The footing or anchorage for scaffolds are sound, rigid, and capable of carrying the maximum intended load without settling or displacement.
- The primary standards and ledgers of all scaffolds are plumb and level at all times. Cannot use spirit levels on offshore installations subject to rolling
- Scaffold boards are supported by transoms at centres not exceeding 1200mm or 4'-0" along the length of the board. Under no circumstances a scaffold board extends beyond a board-bearing transom by more than 150mm or 6".
- Avoid notching of boards by applying simple planning and measuring techniques to the placing of standards to accommodate standard scaffold boards without notching.
- Where it is unavoidable, scaffold boards may be notched to accommodate an obstacle. However, a transom is placed within 6" or 150mm either side of the notch to support the board as if the notch were a board end.
- It is permissible to cover gaps up to 3" wide in working platforms with suitable plywood provided that it is secured and does not create a trip hazard.
- No scaffolding tubes, lumber, etc. protrude through ladders.
- Work on scaffolding is not allowed to continue during adverse weather conditions.
- Personnel do not carry anything in their hands while climbing scaffolding ladders.
- All equipment is raised either by hand using ropes and bags or by mechanical winch.
- No scaffolding equipment is thrown from scaffolds.
- Appropriate precautions is taken to protect scaffold boards, potentially exposed to hot work, using fireproof cloth, water or a similar means.
- Boards are protected from over-spray during painting operations.
- Scaffolding boards and poles are not used for any other purpose.
- Tools, equipment and materials are not allowed to accumulate on scaffolding.
- Slippery conditions on working platforms are cleaned up as soon as possible.
- Scaffolding do not obstruct emergency routes or restrict access to emergency equipment.