PRODUCTION, QUALITY AND DISPATCH

Log output and QC entry

What it is: The two short floor forms: **Log output** (how many were made and rejected on a run) and **Log QC** (the readings for a run). Same pages on a phone and a PC.
Who uses it: Operator, Plant Manager, QC and In-process QC, Owner and Admin. Planners can open the pages and view runs.
Where: Sidebar > Operations > Log output (/production/entry) and Log QC (/production/entry?mode=qc). Scanning a printed card's QR opens /production/entry/.

At a glance

- Find the card by **scanning its QR**, typing its number (26/10/315, or 26-10-315), or picking it from **Open cards**.
- **Log output** asks only for date, shift, machine, operator, times (optional), made and rejected. Good = Made – Rejected. There are no QC fields on it.
- **The operator list shows only the stage's own people.** Winding lists active employees of the WINDER department, Oven of OVEN, Process of PROCESS (set in Masters › Employees). Log QC asks for the operator who took the readings the same way.
- **Every "why" is a reason code.** Rejected pieces, cutting loss, over-production, carryover, taking batches before QC, voiding a run and changing saved readings each pick a code from Masters › Reason codes, with an optional note.
- **Log QC** asks for the readings: **at least 2 readings per required check** (moisture is optional). **Operators log QC too**; no separate inspector is needed.
- A reading **outside its band is saved and flagged, never held**. The run is accepted, the next stage can take it, and on Process its pcs are packed into boxes that show **QC flagged**.
- An operator's run goes **to the supervisor** (plant manager, Owner or Admin), who checks and submits it. A supervisor's own run posts straight away.

The flow

One run on the floor

1. **Scan card QR** — Operator
2. **Pick stage**
3. **Log output** — Operator — made, rejected
4. **Send to supervisor**
5. **Submit run** — Plant Manager
6. **Log QC** — Operator/QC — 2 readings per check
7. **Next stage can take it**

If it goes wrong after **Log QC**

1. **Reading out of band**
2. **Saved and flagged** — not held

If it goes wrong after **Log output**

1. **Log QC for this run now** — Operator

QC can be logged straight after the run (the saved screen offers **Log QC for run W#3 now**), later from the card, or from the QC desk. A run with its readings still due waits; the next stage takes only runs whose QC is recorded.

A Process run becomes boxes

1. **Log output on Process** — Operator
2. **Submit run** — Plant Manager
3. **Log QC** — Operator/QC — 2 readings per check
4. **Full boxes packed** — box code and QR
5. **Print box labels** — Operator

If it goes wrong after **Full boxes packed**

1. **Pcs left over**
2. **Next run fills next box**

On Process the last step of a run is packing. As soon as a run's readings are done, its good pcs fill boxes of the spec's qty per box. See "Job cards" for box codes and labels.

Old links

1. **Supervisor entry link** → 2. **Floor entry** — Log output

If it goes wrong after **Supervisor entry link**

1. **EOD entry link** → 2. **Floor entry** — Log output

If it goes wrong after **Supervisor entry link**

1. **Order tracker link** → 2. **Orders list**

Screen tour

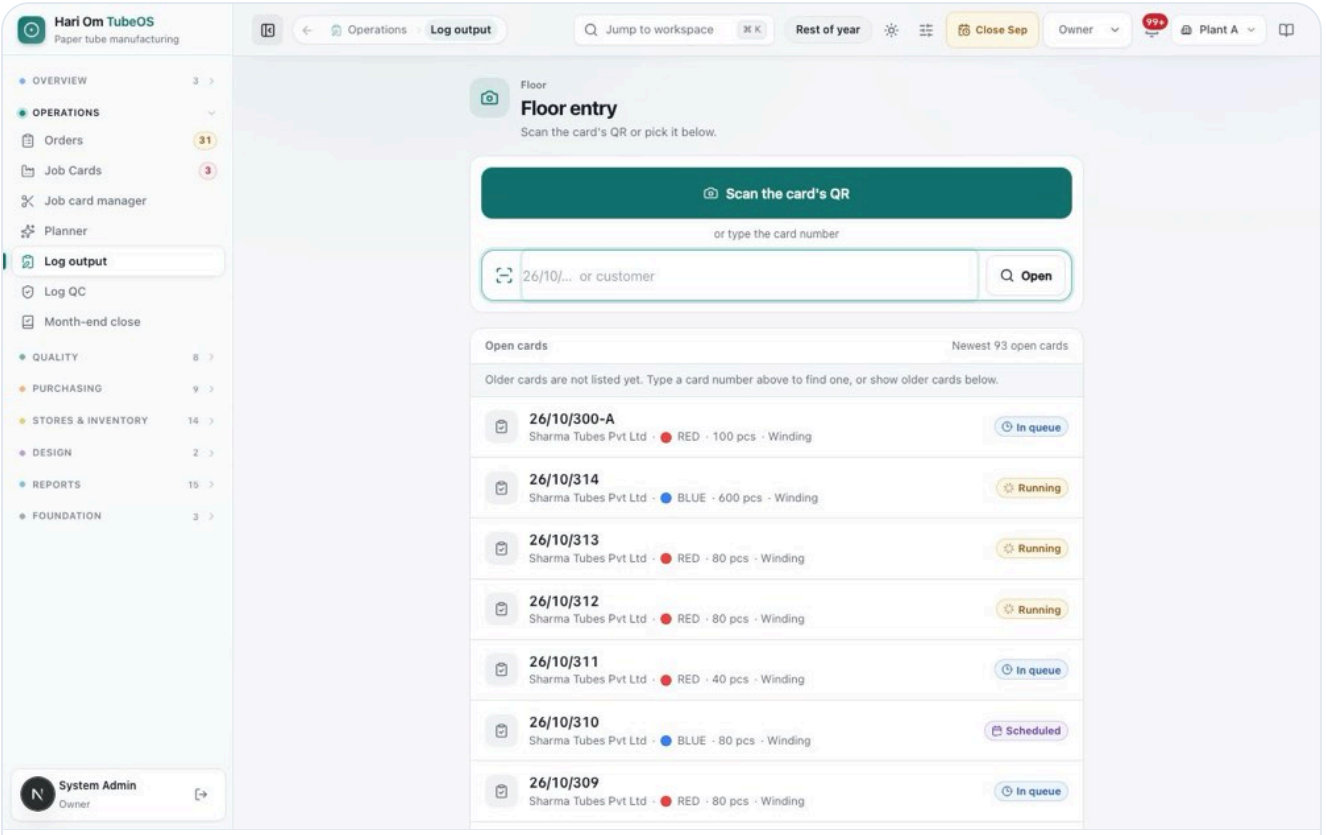


Figure: Floor entry, opened from the Log output link. A large green "Scan the card's QR" button, a box to type the card number or customer with an Open button, and the list of open cards.

What you see:

1. **Title**: "Floor entry" (from the **Log output** link) or "Log output" / "Log QC" when the page was opened for one of them. On Log QC a button **Log output instead** switches over (and **Log QC instead** the other way).
2. **Scan the card's QR**: opens the phone or laptop camera. Point it at the QR on the printed job card.
3. **Card number box** ("26/10/... or customer") and **Open**. Numbers typed with dashes, dots or spaces read as 26/10/315. Typing a customer or order opens the first open card that matches.
4. **Open cards**: newest open cards first, 100 at a time ("Newest 99 open cards"), each with number, flag count (amber), customer, colour, pcs, current stage and status (**Running**, **In queue**, **Scheduled**). **Show older cards** loads more.
5. **Error lines** in red when the scan or number is wrong: "That is a rack label..., not a job card", "That QR is on a material or tool label, not a job card", "Job card 26/10/315 is closed (completed). No more runs can be logged on it." (with **View the card**), or "No open job card 26/10/999".

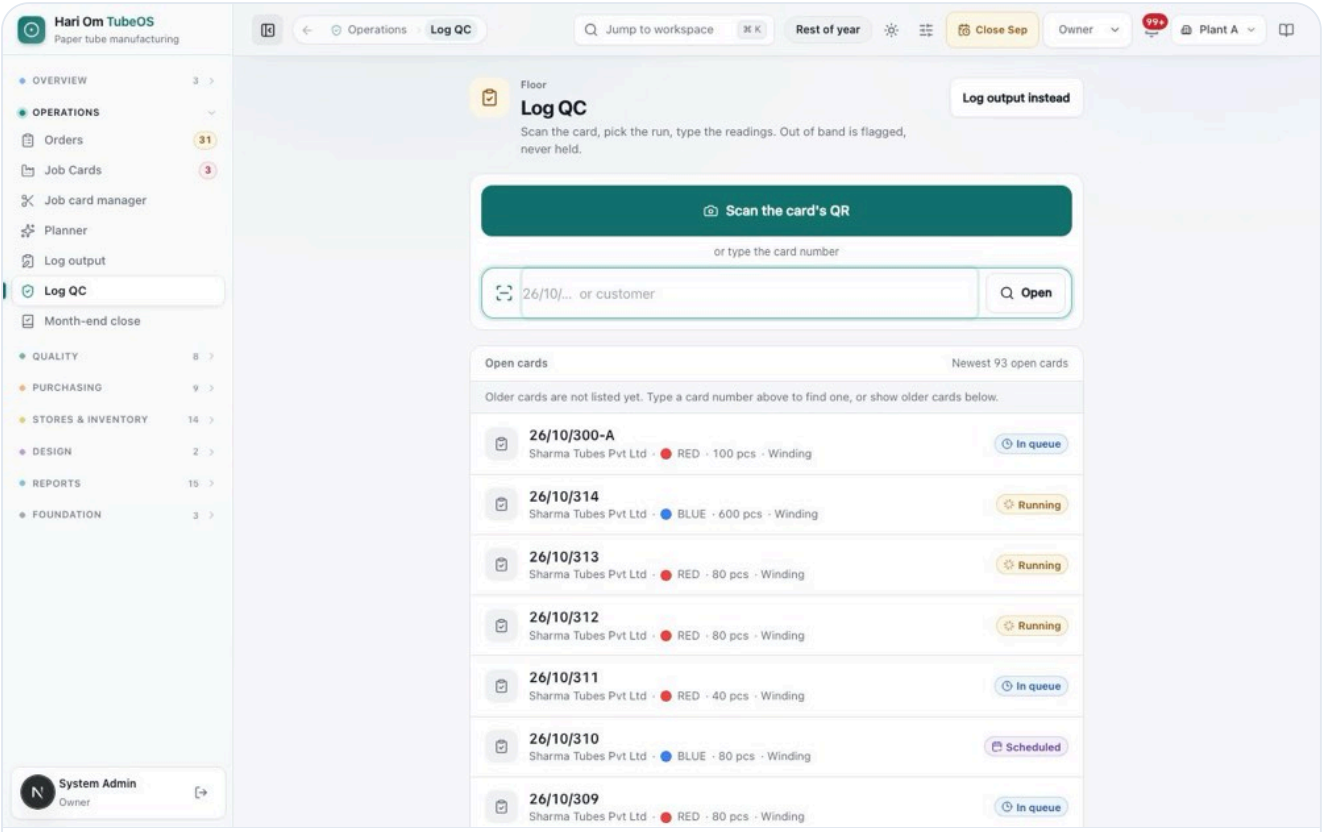


Figure: Log QC. The same picker; the subtitle reads "Scan the card, pick the run, type the readings. Out of band is flagged, never held."

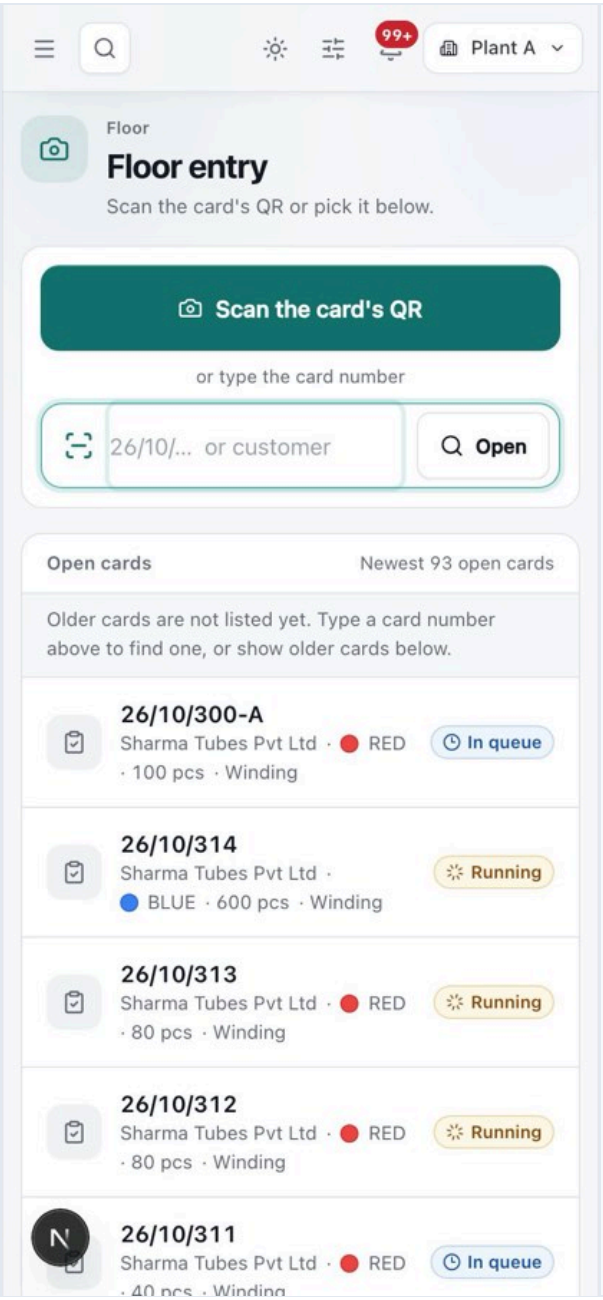


Figure: Floor entry on a phone. The scan button and number box fill the width; open cards are large rows for fingers.

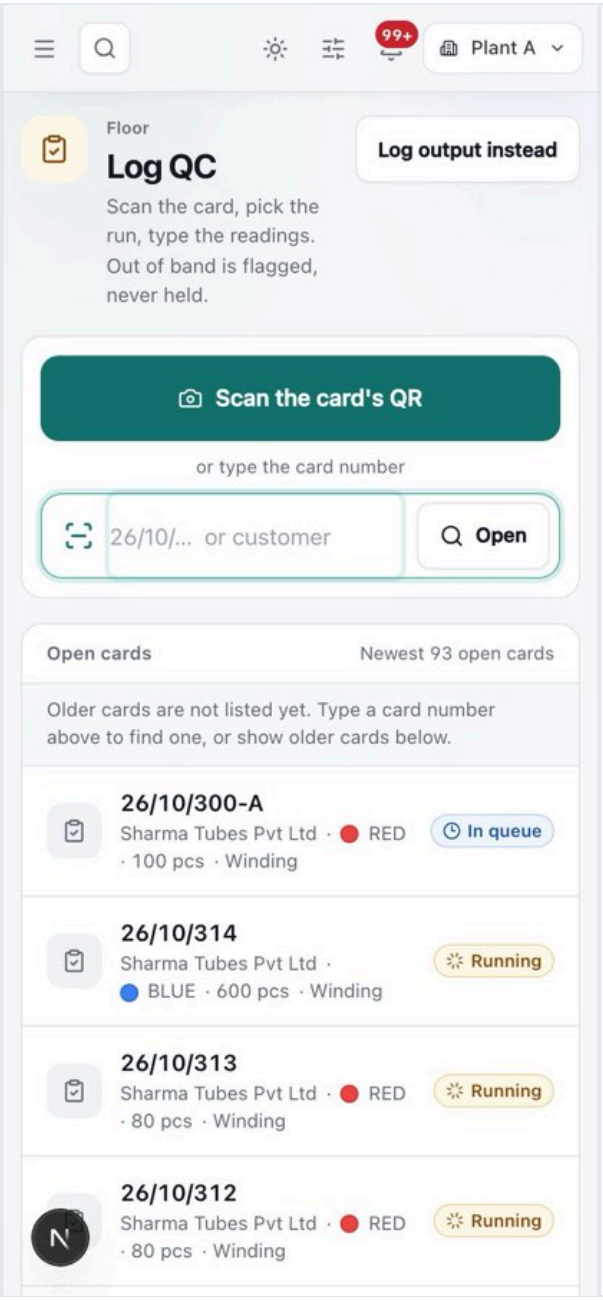


Figure: Log QC on a phone. Same layout as on the PC.

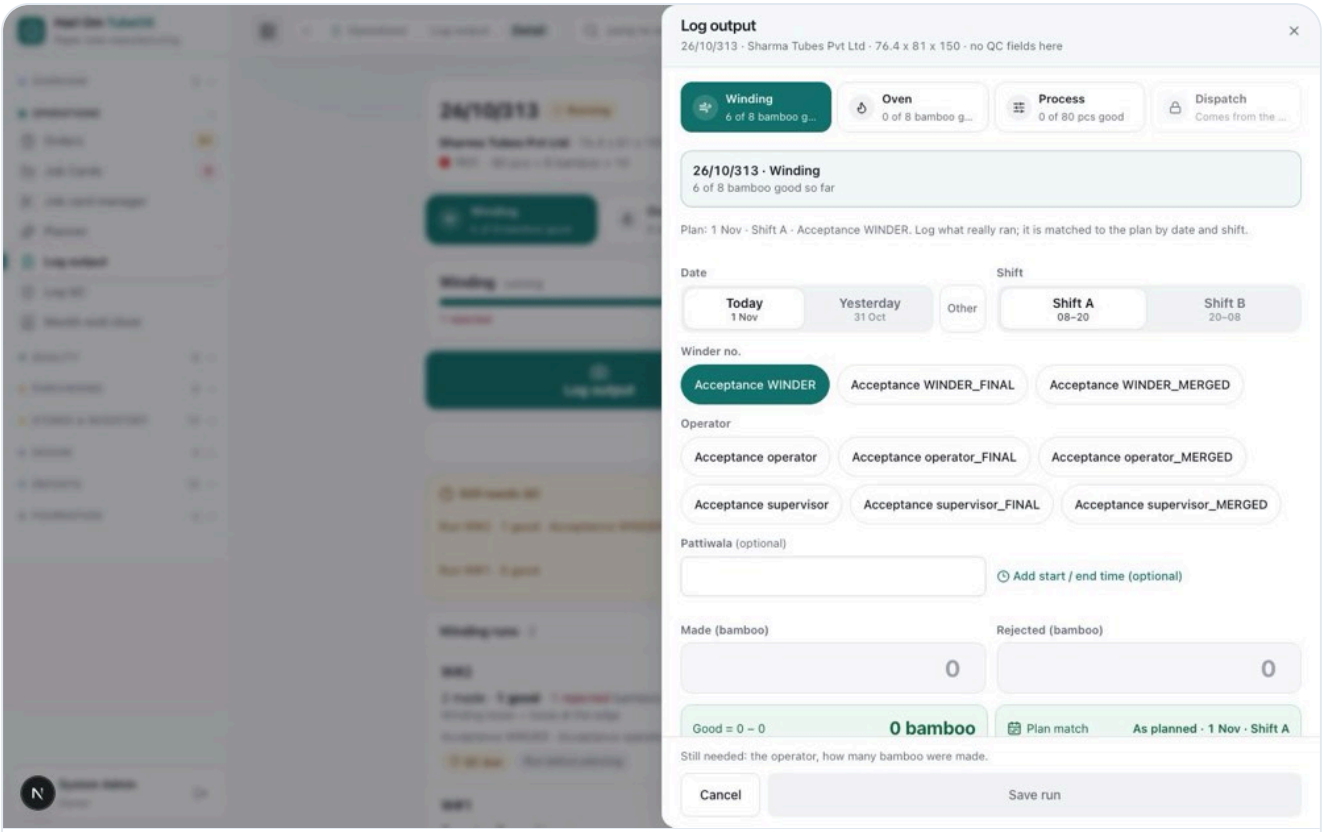


Figure: The Log output form on Winding. Under Who and when, the Operator drop-down (Choose operator) lists only active employees of the Winder department with their codes; the machine list shows only winders. Below are Made, Rejected, the green Good box and the Why rejected? reason picker.

What you see:

1. **Operator**: names with the employee code, for example "Suresh Patel · EMP-014". People of other departments are not offered, and the server refuses them if sent.
2. **Machine**: only the active machines of this stage.
3. **Why rejected?**: the reason picker appears as soon as Rejected is above 0.

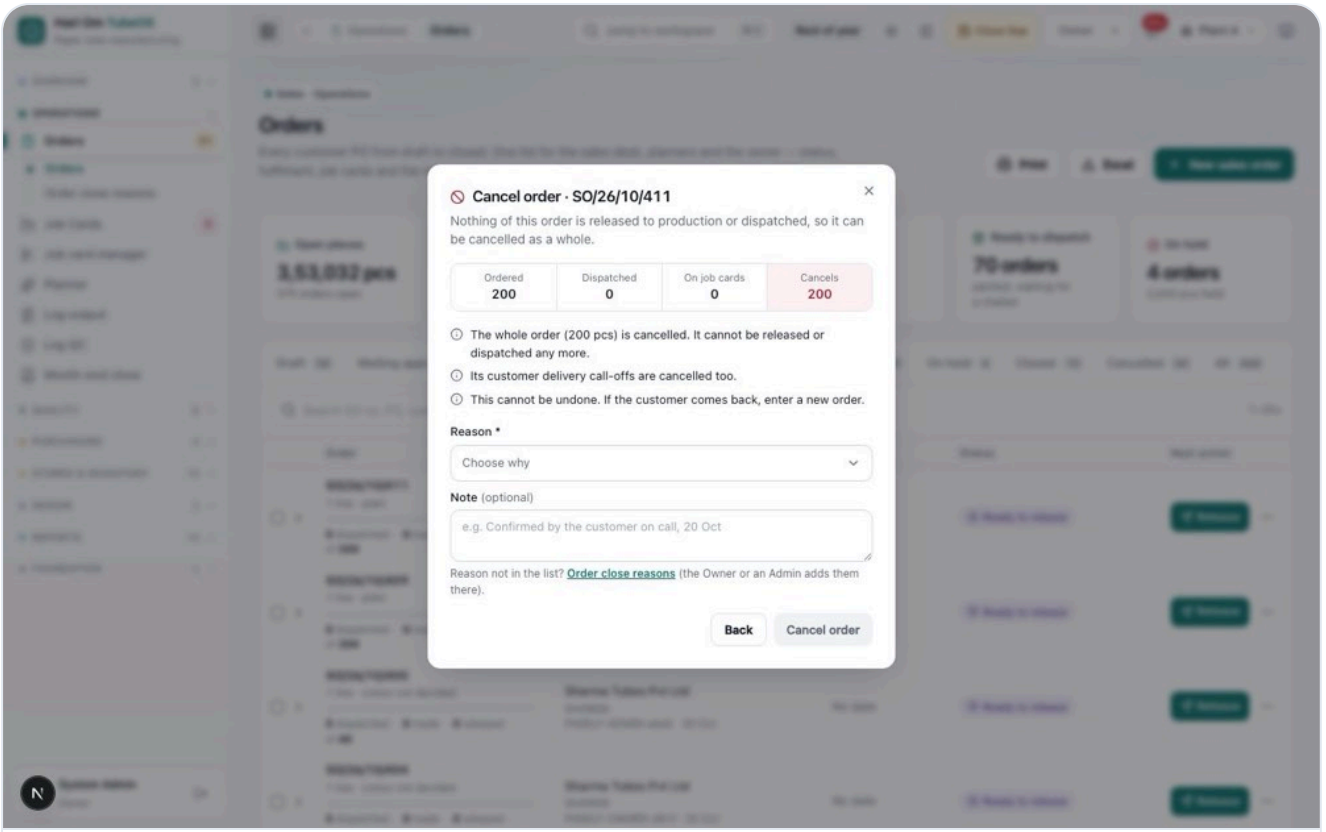


Figure: The reason picker used everywhere in the app. A button reads "Choose why"; opened, it shows a Search reasons box and the list of codes, each with its label on the first line and the code under it (for example Winding loose · WL). Under it is a Note box marked (optional), or marked * when the code is an OTHER code.

What you see:

1. **Choose why**: click (or press the down arrow) to open the list. Type in **Search reasons** to narrow it.
2. **Each row**: the label and the code. A tick marks the chosen one.
3. **Note**: optional, except for OTHER codes, which need at least 5 characters ("Write a short note (at least 5 characters) for Other.").
4. If the list is empty: "No reasons are set up for this list. Add them in Masters › Reason codes."

After a card is opened (described in words; no screenshot of the forms):

- **On a phone** (/production/entry/): the card's number, customer and size; its stages as tabs; two big buttons **Log output** and **Log QC**; the stage's recent runs (newest first); and what still needs QC. A card of another plant switches your active plant if you are allowed. A closed card is read-only; a completed card still takes QC readings.
- **On a PC**: the job card page opens with the form in a side panel ("Log output · 26/10/315 · Sharma Tubes Pvt Ltd · no QC fields here", or "Log QC · at least 2 readings per check · out of band is flagged, not held").

Log output form sections:

1. **Stage tabs** (Winding, Oven, Process; closed stages show "Closed · 90 bamboo").
2. **Who and when**: **Date** (**Today**, **Yesterday**, or **Other date**), **Shift** (**Shift A** 08–20, **Shift B** 20–08), the machine (**Winder no.**, **Oven no.**, **Line no.**; only active machines of this stage's department), **Operator** (**Choose operator**; only active employees whose department in Masters › Employees is this stage, operators first; the last one is remembered), and **Start time** / **End time** ("Times are optional"; the cycle time is shown). If nobody is set up, an amber line says "No active employee in the Winding department — set the department in Masters › Employees."
3. **How many**: on Process first **Bamboo taken from Oven** with "N ready from Oven · 1 bamboo = 10 pcs". Then **Made** and **Rejected** in the stage unit (bamboo for Winding and Oven, pcs for Process). A green box shows **Good = Made – Rejected**. A **Plan match** box shows where the run lands against the plan.
4. **Process balance** (Process only): "9 bamboo × 10 pcs = 90 pcs · all pieces accounted for", or an amber count-gap line ("4 pcs short — it still saves and the run is flagged for the owner"). **Cutting loss (pcs, if any)** with a button to count the gap as cutting loss; a cutting loss needs a reason.
5. **Why rejected?**: a reason picker for the list **Floor rejection** when anything is rejected: WL Winding loose, PG Pasting / glue, ID I.D. out, OD O.D. out, LN Length out, WT Weight out, CS C.S. low, DM Damage / dent, MS Moisture, NT Notch, RJ-OTHER Other (write a note). When only a cutting loss is typed, the same picker asks "Why were 4 pcs lost in cutting?"; with both it asks "Why rejected or lost in cutting?". **Save** stays off until a code is picked.
6. **Why is this outside the plan?** (amber box, only when needed): shows when output goes above the planned quantity +10%, when pieces are held over (carryover), or when batches are taken before their QC. Pick a code from the list **Override**: OV-CUST-EXTRA Customer accepts extra, OV-SETUP-LOSS Extra for setup or cutting loss, OV-PLAN-CHANGE Plan changed on the floor, OV-URGENT Urgent order run early, OV-MACHINE-SWAP Run on another machine, OV-OTHER.
7. **Save run** (supervisor roles: "Saving posts the run straight away") or **Send to supervisor** (operator: "Your run goes to the supervisor, who checks and submits it").

Log QC form sections:

1. **Stage tabs**. A stage without checks is greyed: "No QC checks on this stage"; Final QC says "Process QC is the final QC".
2. **Run**: the run waiting for QC is picked first. Runs still **with supervisor** can take QC too. **QC without a run** is for a check between runs, at the start of a shift, or on held pieces.
3. **Readings table**: one column per check with its allowed band, one row per sample (S1, S2…). Cells turn green in band and red out of band. **Add another sample** adds a row. A check named Remark or Notes is written in words ("Note — write in words") and is never judged.
4. **Operator who took the readings**: the same department list as on Log output.
5. **Instrument ID** where a check needs a calibrated instrument.

6. **Why are recorded readings changed?** (only when you change readings already saved; list **Entry correction / void / reopen**, for example EC-WRONG-QTY) and **Remark** (optional — what you saw, in plain words). "Adding new readings needs no reason; changing recorded ones does."
7. The save line: "All readings in band." or "Saves with 2 flagged readings — not held." and the button **Save QC** (or **Save QC · flagged**).

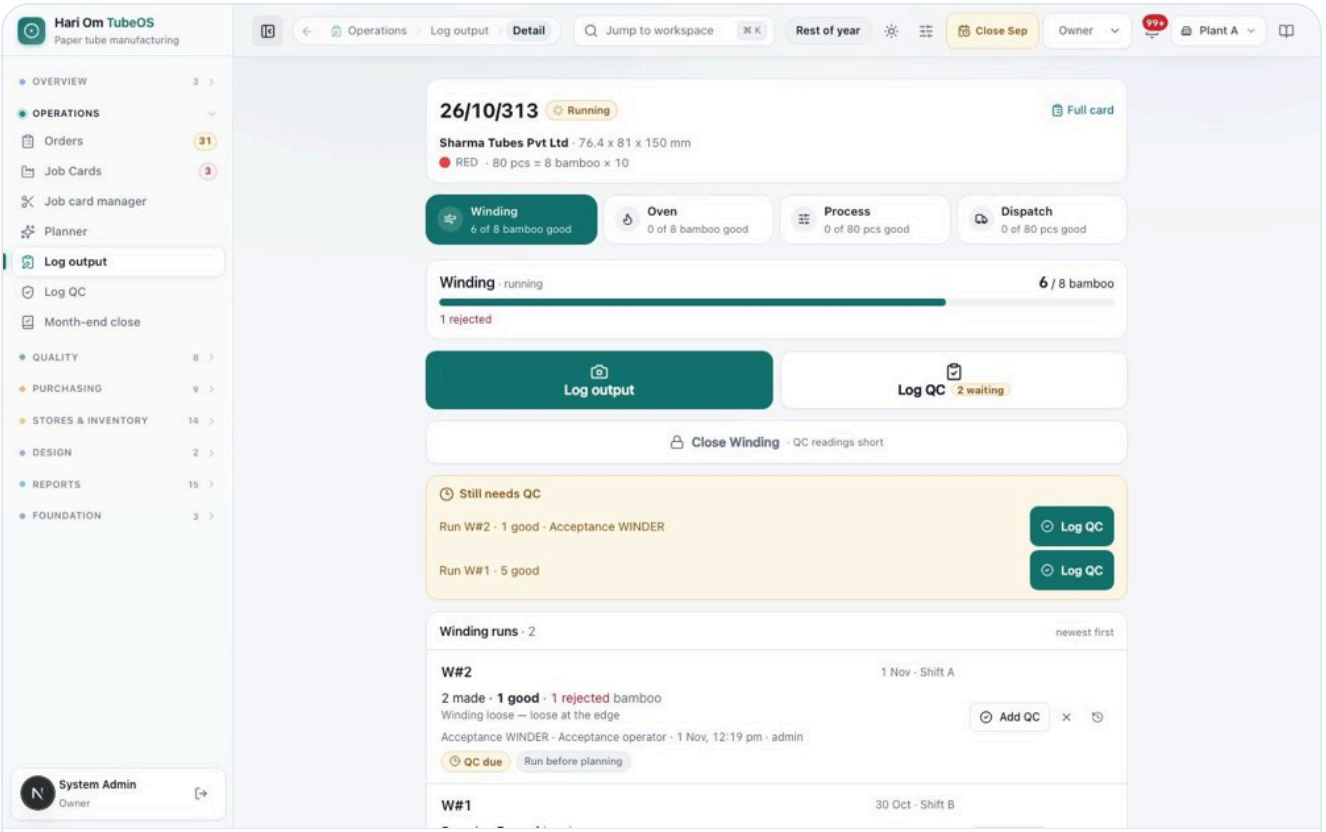


Figure: Floor entry after opening card 26/10/313. The four stage tabs (Winding, Oven, Process, Dispatch) show how many are good. Big buttons **Log output** and **Log QC** sit under the progress bar. A yellow **Still needs QC** box lists runs waiting for readings.

1. **Stage tabs**: pick the stage you are working on. Each shows good pieces against the target.
2. **Progress bar**: how much of the stage is done.
3. **Log output / Log QC**: the two actions you use on the floor. A small badge shows how many QC checks are waiting.
4. **Close Winding**: stays locked with a reason (here "QC readings short") until the checks are done.
5. **Still needs QC**: runs that have output but not enough QC readings yet.
6. **Winding runs**: every run, newest first, with **Add QC**, cancel and history buttons.

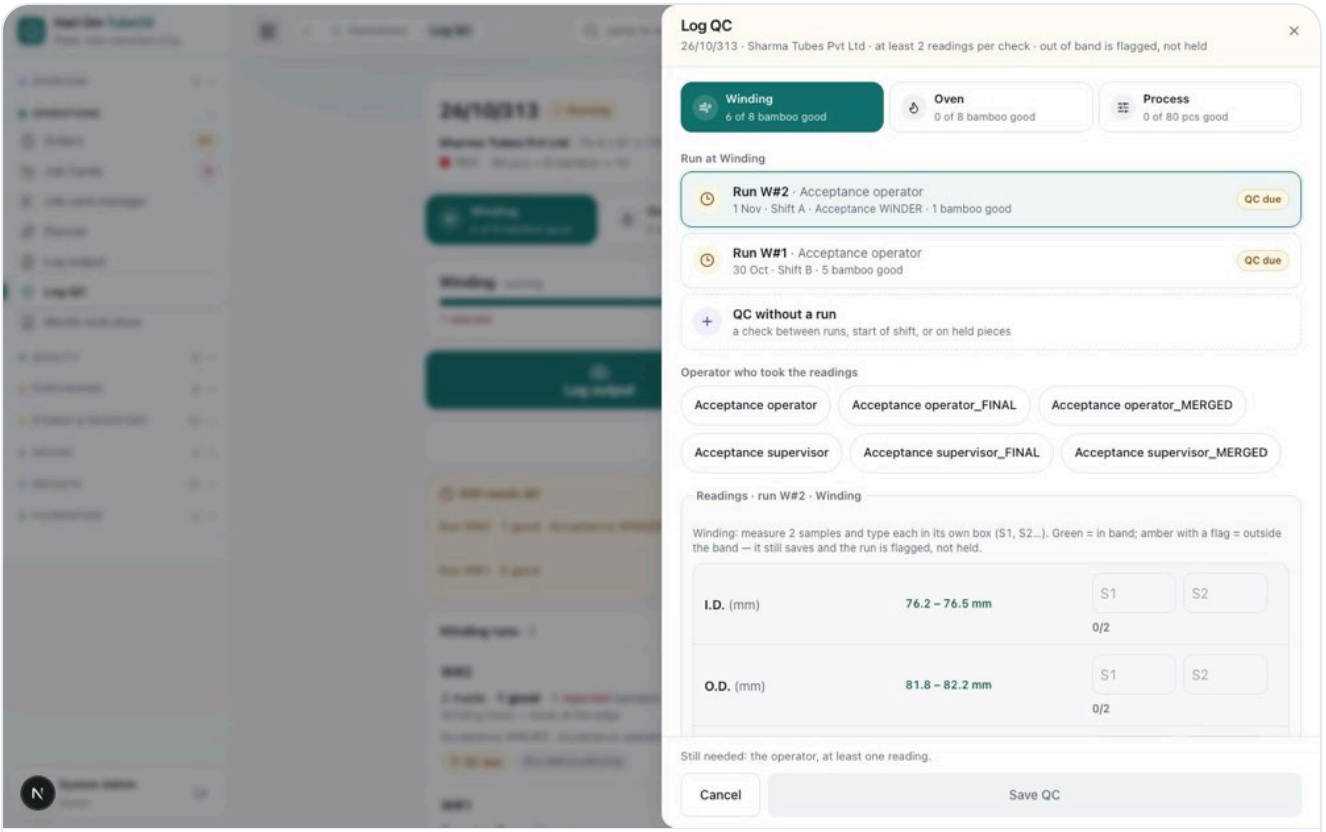


Figure: The **Log QC** panel. At least two readings per check (S1, S2). Each check shows its allowed band, for example I.D. 76.2 to 76.5 mm. Out-of-band readings are flagged, not held.

1. **Stage tabs**: choose Winding, Oven or Process.
2. **Run list**: pick the run to check, or **QC without a run** for a check between runs, at start of shift or on held pieces.
3. **Readings**: type each measurement in its own box. Green means in band; amber with a flag means outside the band. It still saves.
4. **Save QC**: stays grey until at least one reading is typed. The footer says what is still needed.

Step by step

How to log a run on a phone

Roles: Operator, Plant Manager, Owner, Admin.

1. Scan the QR on the printed job card with the phone camera (or open **Log output** and tap **Scan the card's QR**). Log in if asked; you come back to the card.
2. Tap the stage tab, then **Log output**.
3. Check **Date** and **Shift**. They default to the shift running now (see the night-shift rule below).
4. Tap the machine and pick the **Operator**. Only people of this stage's department are listed. Times are optional.

5. Type **Made** and **Rejected**. If you rejected anything, tap **Choose why** under **Why rejected?** and pick the code (for example WL Winding loose).
6. On Process, type **Bamboo taken from Oven**. If the pieces do not match bamboo × pcs per bamboo, type any **Cutting loss** and pick its reason code, or leave the gap: it saves and is flagged.
7. If an amber box **Why is this outside the plan?** appears (above target +10%, carryover, or taking batches before QC), pick an **Override** code. Only a plant manager, Owner or Admin may take batches before their QC.
8. Tap **Send to supervisor** (operator) or **Save run** (supervisor). The saved screen shows "Run W#3 sent to the supervisor" or "Run W#3 saved", with Made, Rejected, Good and the plan match.
9. Tap **Log QC for run W#3 now**, **Log another run**, or **Done**.

How to log a run on a PC

1. Open the job card (Job Cards list, click the row). Or use the row menu **Log output**.
2. Click **Log output** in the action bar. The form opens in a side panel.
3. Fill it as above and save.
4. A plant manager can also type a whole paper card at once: **Output log** tab > **Whole printed card** (running totals of every stage; only what is new is posted).

How to log QC readings

Roles: Operator, QC, In-process QC, Plant Manager, Owner, Admin.

1. Open the card and click **Log QC** (or scan with **Log QC** open). The button shows "N waiting" when runs need readings.
2. Pick the stage tab and the **Run** (the waiting run is already picked). Pick the **Operator who took the readings**.
3. Type at least 2 readings for every required check, one per sample row. Use **Add another sample** for more.
4. If a cell turns red, check the value. If it is right, keep it: "It still saves — the run is flagged, not held, and the next stage can take it."
5. Type the **Instrument ID** if asked. Add a **Remark** if you saw something.
6. Click **Save QC**. The saved screen shows "QC saved · run W#3 · all in band" or "flagged", lists the flags under **Flagged, not held**, and says which runs still wait for QC.
7. On Process, saving the readings also packs the run's good pcs into boxes. New boxes appear on the card's **Dispatch** tab, ready for their labels.

How a supervisor submits operators' runs

Roles: Plant Manager, Owner, Admin.

1. Open the card, **Output log** tab. Runs marked **With supervisor** are drafts; they do not count yet.
2. Check each one; edit it if needed (an operator can edit only their own drafts).
3. Use the tick action ("Checked — post this run"). The run now counts.
4. A stage cannot close while any run is still with the supervisor.

How to correct a mistake

- **A draft run**: edit it (operator: own drafts only; supervisor: any).
- **A submitted run**: void it with a reason code ("Why is it voided?", list **Entry correction / void / reopen**: EC-WRONG-QTY, EC-WRONG-OPERATOR, EC-WRONG-MACHINE, EC-DUPLICATE, EC-WRONG-CARD, EC-OTHER), then log it again. Output already used by the next stage cannot be voided, and a Process run whose pcs are already in a box cannot be voided. Every save of a run is kept under **Revision history**.
- **QC readings**: open Log QC on the same run, change the value and pick **Why are recorded readings changed?**. Adding more readings needs no reason.
- **Wrong operator on a saved run**: void it with EC-WRONG-OPERATOR and log it again with the right person.

Rules the system enforces

- **Floor entry roles**: Operator, Plant Manager, QC, In-process QC, Planner, Owner and Admin can open the floor pages. Logging runs: Operator, Plant Manager, Owner, Admin ("Your role can view runs but not log them" for others). QC and In-process QC may add QC readings only. (Blocks.)
- **Required on a run**: date, shift (Shift A or Shift B only), operator, made > 0; a **Floor rejection** code if rejected > 0; a code for any cutting loss; Process bamboo taken. Old runs saved with OT read as RJ-OTHER. (Blocks.)
- **Operator of the stage's department.** Every run and every QC entry, on phone and PC, needs an active employee whose department is the stage (Winding → WINDER, Oven → OVEN, Process → PROCESS). Anyone else is refused: "Ravi is not in the Winding department (Oven in Masters › Employees). Choose an operator of the Winding department." (Blocks.)
- **Reasons are codes, never free text.** Every reason on these forms picks an active code of the right list and plant; OTHER codes need a note of at least 5 characters. Free text alone is refused. (Blocks.)
- **Rejected cannot be more than made.** (Blocks.)
- **Above 110% of target** needs an **Override** code ("Output goes above the planned quantity +10%"). Carryover and taking batches before QC need one too; one code covers all of them on a run. (Blocks until chosen.)

- **Card times never block.** Start and end are optional; an end before the start is saved and flagged. (Flag only.)
- **Planning never blocks.** A run on a stage with no planner slot is saved and flagged "Run before planning". The floor never picks a slot; the server places the run in the slot of its date and shift. (Flag only.)
- **Count gap** on Process (pieces ≠ bamboo × pcs per bamboo) is a warning and a flag, never a block. If the spec has no pcs per bamboo, Process cannot be saved: "This card's spec has no pieces per bamboo… Ask the planner to correct the spec." (Flag; blocks only without pcs per bamboo.)
- **QC gate between stages.** The next stage can take only QC-cleared output (output whose readings are done, in band or not): "Only 60 bamboo of Winding output is QC-cleared; 30 more is waiting for Winding QC. Record that batch's QC first, or a supervisor can override with a reason." Only a plant manager, Owner or Admin may override, with an **Override** code that stays on the run. (Blocks, supervisor override.)
- **Boxes from QC-cleared Process pcs.** Process good pcs go into boxes only after their run's readings are done. (Automatic.)
- **2 readings per required check** for a run to be QC done, and for a stage to close (including a short close). Moisture is optional; a missing optional reading is flagged for the owner. (Blocks the close and the next stage.)
- **Out-of-band reading** saves, flags the run and appears on the card, the boxes holding that run's pcs, the dispatch register, the order and Quality › In-process QC. No hold is made and dispatch is never blocked by it. (Flag only.)
- **Future dates refused**: " is in the future. Use the date the shift started." (Blocks.)
- **Closed month**: runs dated in a closed month are refused (" is closed. Ask the owner to re-open it."). QC-only checks are not affected. (Blocks.)
- **Cancelled cards** take nothing. **Completed cards** take QC readings only. (Blocks.)
- **Drafts on the device.** Every floor form keeps what you typed on the phone or PC until it is saved; reopening shows a "Draft restored" bar with a discard option. (Automatic.)

Canonical shift and the night-floor date. There are two shifts: **Shift A** 08:00–20:00 and **Shift B** 20:00–08:00 (India time). Shift names written as "A", "Shift A" or "shift-a" are all read as Shift A. The date of a run is **the day the shift started**: a run at 01:30 on 31 Oct belongs to Shift B of **30 Oct**, and the form picks 30 Oct by itself. When you change the shift on the form, the date follows (at 10:00, choosing Shift B gives last night's date). Times before 08:00 on Shift B are stored on the next calendar day.

Old pages that now redirect. "Supervisor entry" (/production/supervisor-entry) and "EOD entry" (/production/eod-entry) open Floor entry; a link that named a card opens that card. Old printed QR codes still work. The old Order tracker (/planning/tracker) opens the Orders list with the matching filter.

Sample

Night shift, card 26/10/315 (Sharma Tubes Pvt Ltd, 76.4 x 81 x 150, BLUE, 10 pcs per bamboo).

Field	Value typed	Result
Time on the clock	01:30, 31 Oct	Date 30 Oct, Shift B (automatic)
Stage / machine	Process / Line 1	Plan match: As planned · 30 Oct · Shift B
Bamboo taken from Oven	9	9 × 10 = 90 pcs possible
Operator	Suresh Patel (Process department)	Accepted; a winder operator would not be listed
Made / Rejected	86 / 2, reason OD O.D. out	Good = 84 pcs
Cutting loss	4, reason picked with note "end trimming"	all pieces accounted for (86 + 4)
Saved by	Operator	"Run P#2 sent to the supervisor"

QC on run P#2: I.D. 76.5 and 76.9 mm against band 76.2–76.5. The second reading is red; the operator saves. Result: "QC saved · run P#2 · flagged", "I.D. 76.9 mm (band 76.2–76.5) · S2". The run is accepted; the flag shows on the card and in In-process QC. The spec packs 48 pcs per box and 20 pcs from run P#1 were waiting, so 20 + 84 = 104 pcs fill boxes B2610315-002 (20 from P#1 + 28 from P#2) and B2610315-003 (48 from P#2); 8 pcs wait for the next run. Both boxes show **QC flagged** because they hold pcs of P#2, and both can still ship.

Common questions

? The scan opened "That QR is on a material or tool label". What now?

You scanned a reel, lot or tool label. Scan the QR on the printed job card.

? It is 2 a.m. Why does the form say yesterday's date?

The run belongs to Shift B, which started yesterday at 20:00. That is correct.

Do I have to fill start and end time?

No. They are optional and never stop a save.

My reading is outside the band. Will the card stop?

No. It is saved and flagged, also on the boxes of that run. Only a hold placed on purpose on the Quality pages stops a card.

My name is not in the Operator list.

Your department in Masters › Employees is not this stage, or you are inactive. Ask the Owner or Admin to set your department (for example PROCESS).

Save stays grey after I typed Rejected.

Pick a code under **Why rejected?**. With RJ-OTHER, also write a note of at least 5 characters.

Why did Log QC on Process make new boxes?

Pcs go into boxes once their readings are done. Print the labels from the card's Dispatch tab.

Why can't the next stage take my batch?

Its QC is not done yet. Add at least 2 readings for every required check on that run, or ask the supervisor to override with a reason.

I saved a run but it does not count.

It is with the supervisor. A plant manager, Owner or Admin must submit it.

I typed the wrong quantity on a submitted run.

Ask the supervisor to void it with a reason, then log it again. If the next stage already used that output, it cannot be voided.

Where is the old Supervisor entry page?

It now opens Floor entry. Use Log output.

Related chapters

- Job cards
- Planner
- Quality
- Job card manager
- Masters (Employees, Reason codes)