

Automatic condensate drain valves

WDV series

WDV valves discharge condensate from compressed air systems. Choose an electronic timer, micro-controller or no-air-loss design to suit the flow, pressure and connection. The no-air-loss model in this table is WDV F16.



Types	System capacity	Working pressure	Condensate temperature
Electronic timer · micro-controller · no air loss · float	Up to 1000 CFM	Up to 16 kgf/cm² (40 and 70 optional)	Up to 90 °C

Inside this catalogue

Models & rating conditions	2	How it works & construction	3
Selection & applications	4		



Specifications online

Layout edition 2026-10 · Product-range information. Confirm the selected model and duty with Win Equipments before ordering.

Models & rating conditions

Rating conditions

Timer range	1 to 120 min (model dependent)	Protection	IP55 or IP65
Supply	230 V AC; 24 V, 48 V, 110 V AC or DC to order	Pressure range	3 to 70 bar g across the range

Capacity & operating data

Model	Type	Capacity CFM	Max. operating pressure kgf/cm ²	Valve interval min	Discharge time s
WDV M12	Electronic timer	Up to 50	16	1–120	8
WDV H12	Electronic timer	51–500	16	1–136	4
WDV L40	Electronic timer	Up to 50	40	1–120	8
WDV H40	Electronic timer	51–500	40	1–136	4
WDV B16	Electronic timer	500–1000	16	1–120	4
WDV E16	Micro-controller	Up to 500	16	0.5–45	0.5–10
WDV ZA16	Electronic timer	Up to 1000	16	1–120	8
WDV F16	No air loss	Up to 1000	16	NA	NA

Construction, dimensions & connections

Model	Pilot operated BSP	Built-in strainer	End connection BSP	Material	Supply	Weight kg
WDV M12	NA	Yes	½"	Cast aluminium	230 V AC*	0.9
WDV H12	⅛"	NA	½"	Cast aluminium	230 V AC*	1.25
WDV L40	NA	NA	½"	Stainless steel	230 V AC*	0.9
WDV H40	⅛"	NA	½"	Stainless steel	230 V AC*	1.25
WDV B16	⅛"	NA	1"	Cast aluminium	230 V AC*	2.45
WDV E16	NA	Yes	½"	Brass	230 V AC*	0.5
WDV ZA16	⅛"	NA	½"	Cast aluminium	230 V AC	3.0
WDV F16	NA	NA	½"	Cast aluminium	Not required	1.0

- Input temperature up to 90 °C. Protection IP55 or IP65.
- * 230 V AC standard; 24 V, 48 V, 110 V AC or DC as per customer.
- Standard 7 to 16 kgf/cm²; 40 and 70 kgf/cm² optional.

How it works & construction

How it works

Condensate carried with the air to end-use points is harmful if the system is not drained regularly. An automatic drain removes it without losing excessive compressed air and without shutting down the system.

1 Collect

Condensate collects at the low point of a receiver, filter, dryer or pipeline drop leg.


2 Strain

A strainer-cum-manual shut-off valve protects the drain and allows isolation for service.

3 Discharge

The valve opens on its timer interval, controller signal or float level and discharges the condensate at high velocity without clogging.

Typical compressed air installation

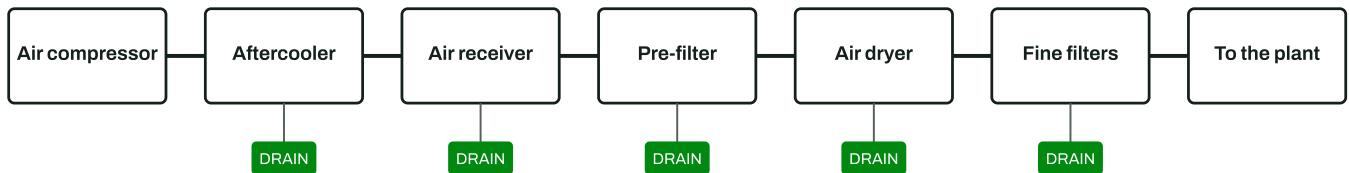

Typical arrangement only. Confirm filtration sequence and condensate handling for your application.

Construction & features

Electronic timer

- Adjustable interval and discharge time
- Cast aluminium or stainless steel body
- High-pressure 40 kgf/cm² versions

Micro-controller

- 0.5–45 min interval, 0.5–10 s discharge
- Brass body, built-in strainer

No air loss

- Discharges condensate only
- No power required in float type

Selection & applications

Applications: Air receivers · Compressed air filters · Refrigerated air dryers · Compressed air lines · Moisture separators

Which drain valve suits my system?

Use WDV M12 or L40 up to 50 CFM, H12 or H40 from 51 to 500 CFM, and B16, ZA16 or F16 up to 1000 CFM. Choose the 40-series for pressures up to 40 kgf/cm².

Can I get a low-voltage version?

Yes. Standard supply is 230 V AC; 24 V, 48 V and 110 V AC or DC versions are available to order.

Why use an automatic drain instead of a manual drain cock?

A manual drain depends on someone remembering to open it. Left undrained, condensate carries over into the air line. An automatic drain empties the point on a timer, controller signal or float level, and the no-air-loss type discharges condensate without venting compressed air.

What is a no-air-loss drain?

The WDV F16 discharges only condensate, so no compressed air is wasted, and it needs no electrical supply.

Where is an automatic drain valve fitted on an air compressor system?

At the low points where condensate collects: the air receiver, the aftercooler's moisture separator, filters, the dryer and pipeline drop legs. A strainer with a manual shut-off valve ahead of the drain lets you isolate it for service.

Confirm your selection

Send the model, required capacity, operating temperatures, pressure and site conditions. For a model-specific datasheet or GA drawing, include your installation requirement.

Win Equipments

SF No. 4/195 B, Kallangadu, Nadu Arasur, Arasur Post,
Coimbatore 641 407, Tamil Nadu, India
+91 95972 28969 · +91 95972 28975
info@winequipments.com
winequipments.com

Catalogue values are for product selection. Confirm duty, materials, connections and final dimensions with Win Equipments before ordering. Layout edition 2026-10.