

<https://geekworm.com/products/x1001>


<https://wiki.geekworm.com/X1001>

<https://www.youtube.com/watch?v=0R95XK9MxeQ>




Insert FFC, fix spacer.

1

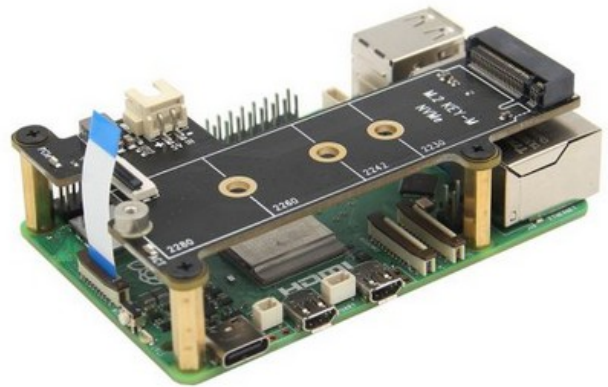

Place X1001 shield & fix it.

2

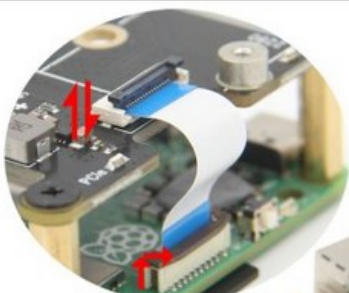

Lift the cover **upwards** and insert the FFC, then press downwards firmly.

3

4



Insert and fix M2 NVMe SSD
(SSD & Pi 5 are both NOT included)