

WidowX AI Controller Box

M12-JST Cable Rework


Guide



Remove Lid from Box

4qty RW-BM0BH36 - M3x6mm Button Head

Use a 2mm Driver to remove Lid from Controller Box. Set aside bolts for later use.

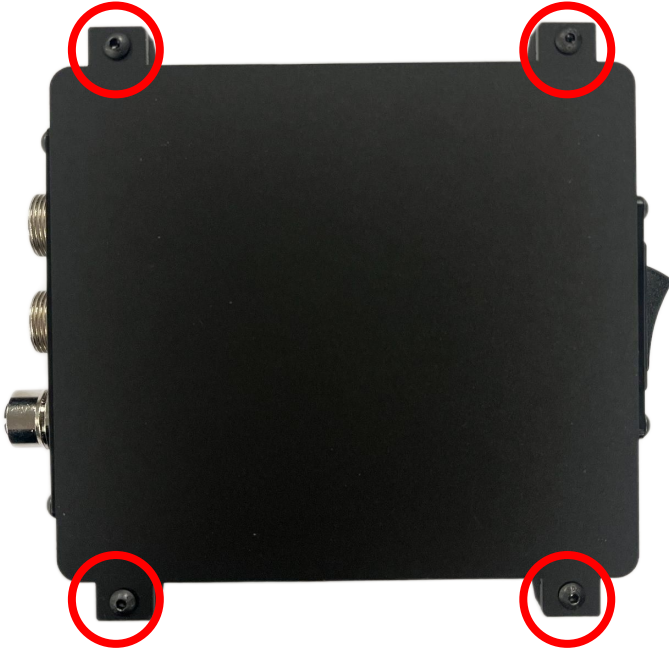


M3x6b

Remove Rear Panel from Box

4qty RW-BMOBHM38 - M3x8mm Button Head

Use a 2mm Driver to remove the Rear Panel.
Set aside bolts for later use.

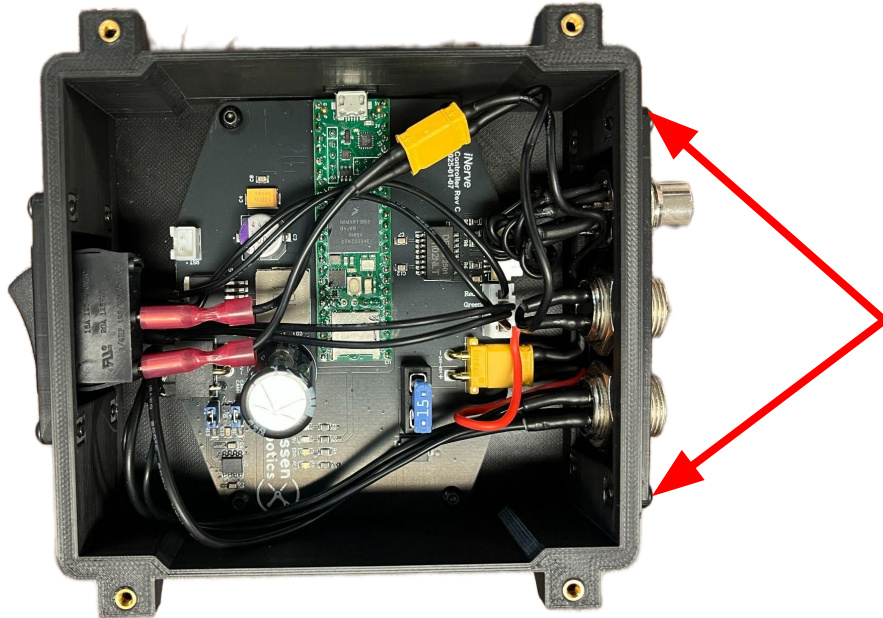

M3x8b

MIND ORIENTATION

- *M12 X-Code 8-Pin Panel Mount on Right*
- *GX16 2-Pin Panel Mount in Center*
- *GX16 4-Pin Panel Mount on Left*




Disconnect M12-JST Cable from PCB


MIND ORIENTATION

- M12 X-Code 8-Pin Panel Mount on Right

Push down on the lock to remove the JST Connector from the PCB.

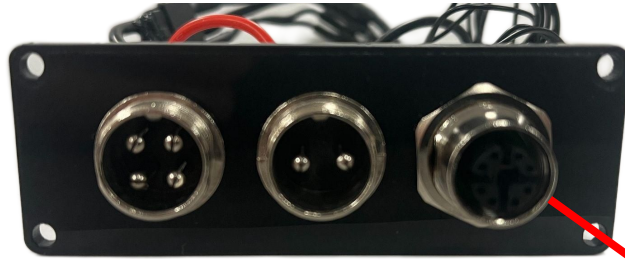

Push down lock

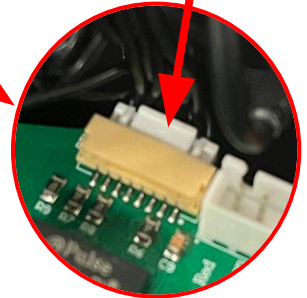


Remove M12-JST Panel Mount Cable

1qty 220107006_03 - M12 Female Panel Mount - JST 8Pin Locking (Twisted Pairs)

MIND ORIENTATION

- **Key MUST BE ON TOP (See Red Arrows)**
- GX16 4-Pin Panel Mount on Left
- GX16 2-Pin Panel Mount in Center
- M12 X-Code 8-Pin Panel Mount on Right

Remove the front Jam Nut from the M12-JST Cable. Once the nut is removed, you can remove the old M12-JST Cable from the Rear Panel.

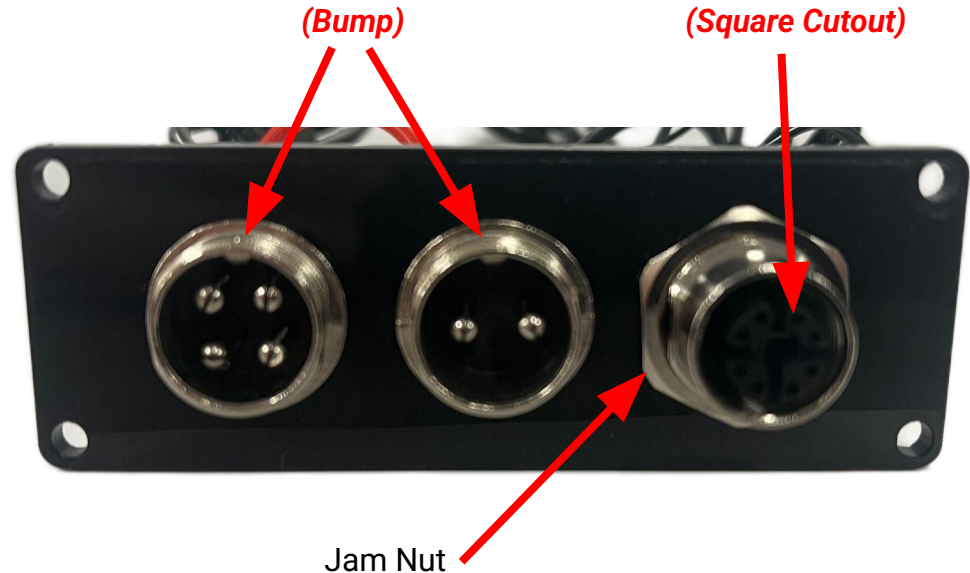

Prepare Replacement M12-JST Cable

Set aside the old M12-JST Cable.

The New M12-JST Cable has a modified pinout to help improve ethernet communication.

1qty 220107006_03 - M12 Female Panel Mount - JST 8Pin Locking (Twisted Pairs)

Connect New M12-JST Panel Mount Cable


1qty 220107006_03 - M12 Female Panel Mount - JST 8Pin Locking (Twisted Pairs)

MIND ORIENTATION

- **Key *MUST BE ON TOP* (See Red Arrows)**
- GX16 4-Pin Panel Mount on Left
- GX16 2-Pin Panel Mount in Center
- M12 X-Code 8-Pin Panel Mount on Right

The M12 has two flat sides for orientation.
The Square Cutout must be on the top.

Insert the New M12-JST Cable into the Rear Panel.
Mount the M12-JST Cable using the front jam nut.

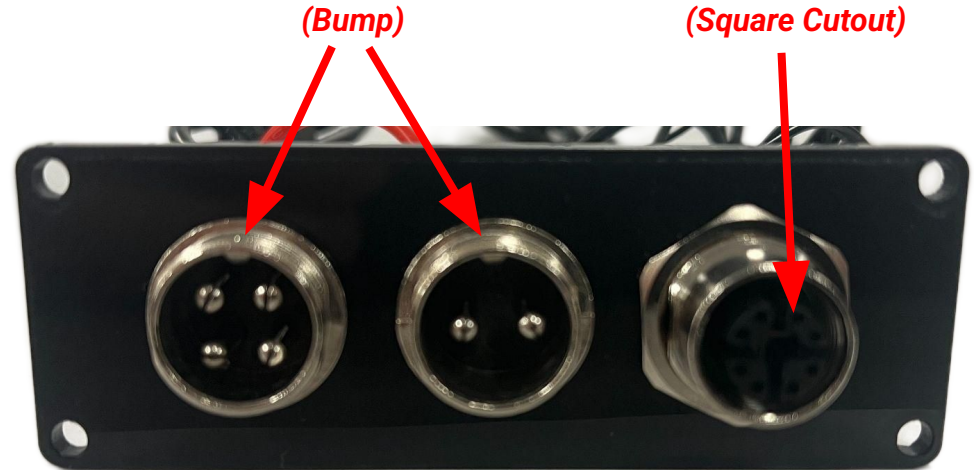

Connect New M12-JST Cable to PCB


MIND ORIENTATION

- GX16 4-Pin Panel Mount on Left
- GX16 2-Pin Panel Mount in Center
- M12 X-Code 8-Pin Panel Mount on Right


Push the JST Connector into its port on the PCB.



****DO NOT MOUNT PANEL YET***

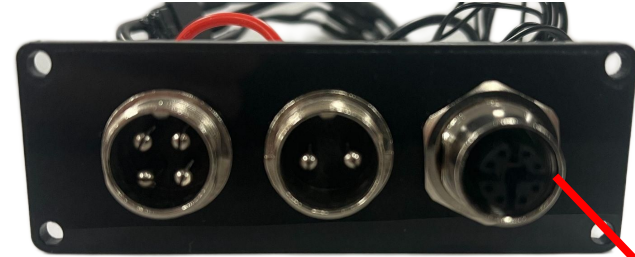


JST Connector

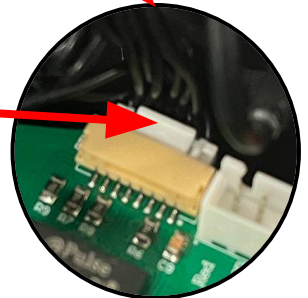

Install Rear Panel to Box


4qty RW-BMOBHM38 - M3x8mm Button Head

Use a 2mm Driver to mount the Rear Panel in this Orientation

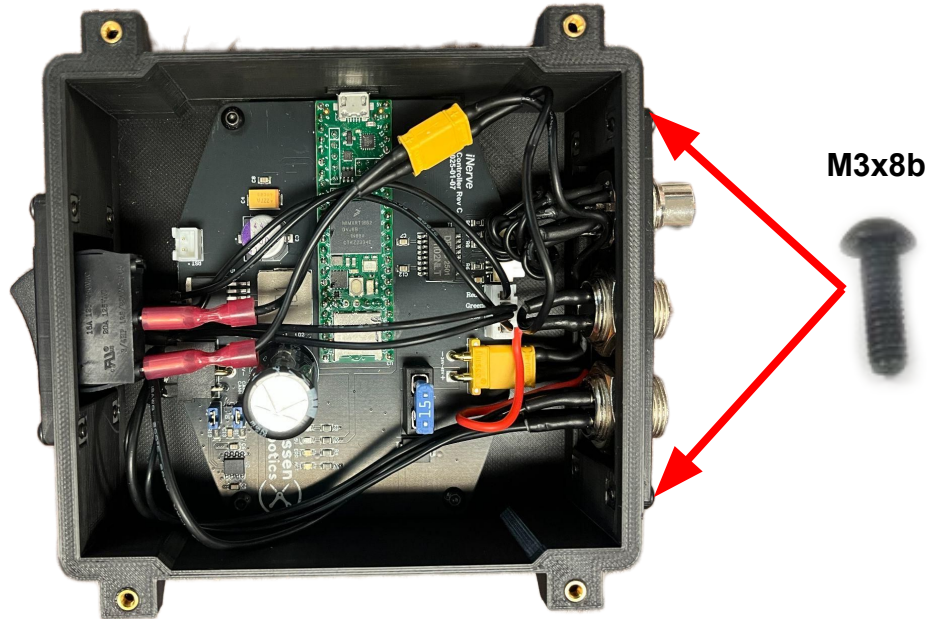

MIND ORIENTATION

- **Key MUST BE ON TOP (See Red Arrows)**
- M12 X-Code 8-Pin Panel Mount on Right
- GX16 2-Pin Panel Mount in Center
- GX16 4-Pin Panel Mount on Left

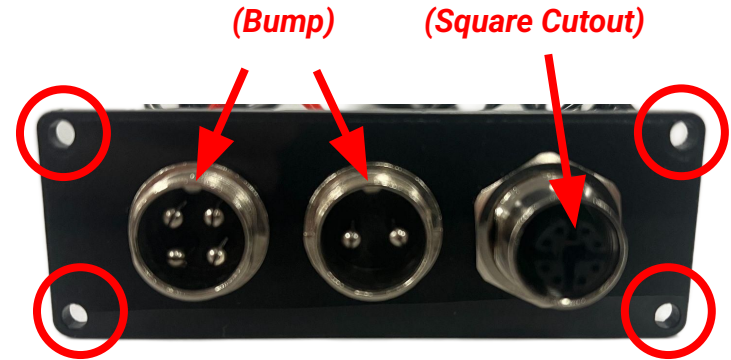


Install Lid to Box

1qty 104107002_02 - Controller Lid ACR1-8

4qty RW-BMOBHM36 - M3x6mm Button Head

Use a 2mm Driver to attach Lid to Controller Box.

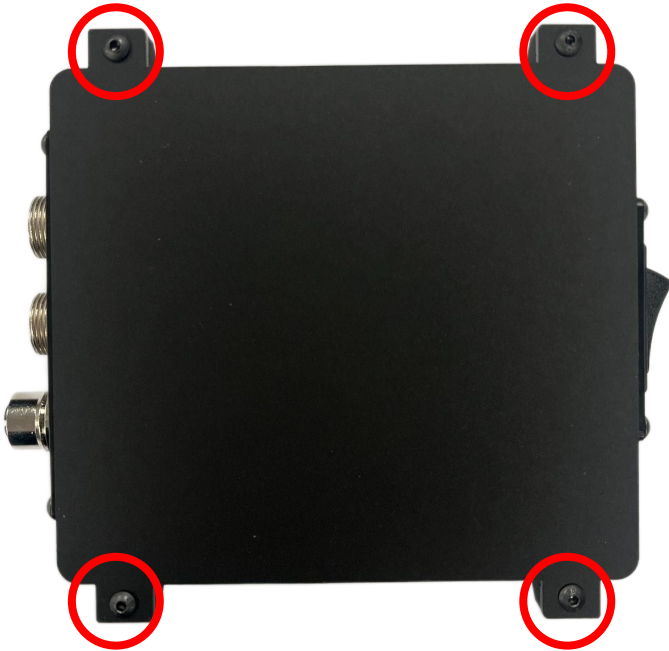

M3x6b

Build Complete!

