DOC. N.° 1SQC900024M0201

ReliaGear® neXT

IP20 Main Lug Barrier
Installation Instructions

WARNING

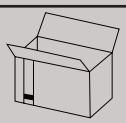
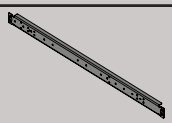

Danger of electrical shock or injury. Turn OFF power ahead of the panel board or switchboard before working inside the equipment or removing any component. Equipment is to be installed and maintained by properly trained and qualified personnel only.














a. Panelboard accessories may not be field installed in the wiring space of the enclosure panelboard unless the conductors, splices, taps and equipment at any cross section of the wiring space does not exceed 75 percent of the cross-sectional area of that space.

b. Accessories shall not block enclosure ventilation openings.


c. Accessories shall not block the breaker arc vents.

HMR Rail Kit		
		Qty
A		1X
B		4X

Item:	Wire quantity per phase:	Lug Type:
F	1	• Mechanical, #2-600MCM • Mechanical, 3/0-750MCM
G	2	• Mechanical, #2-600MCM • Mechanical, 3/0-750MCM
H	3	• Mechanical, #2-600MCM • Mechanical, 3/0-750MCM
J	4	• Mechanical, #2-600MCM • Mechanical, 3/0-750MCM

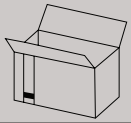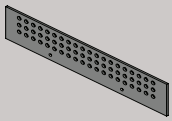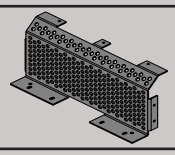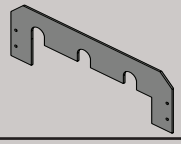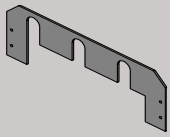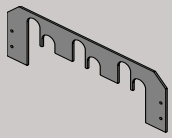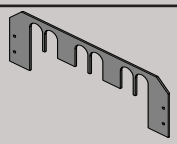
IP20 Barrier Kit		
		Qty
C		1X
D		1X
E		2X
F		1X
G		1X
H		1X
J		1X
K		2X
L		1X
M		26X

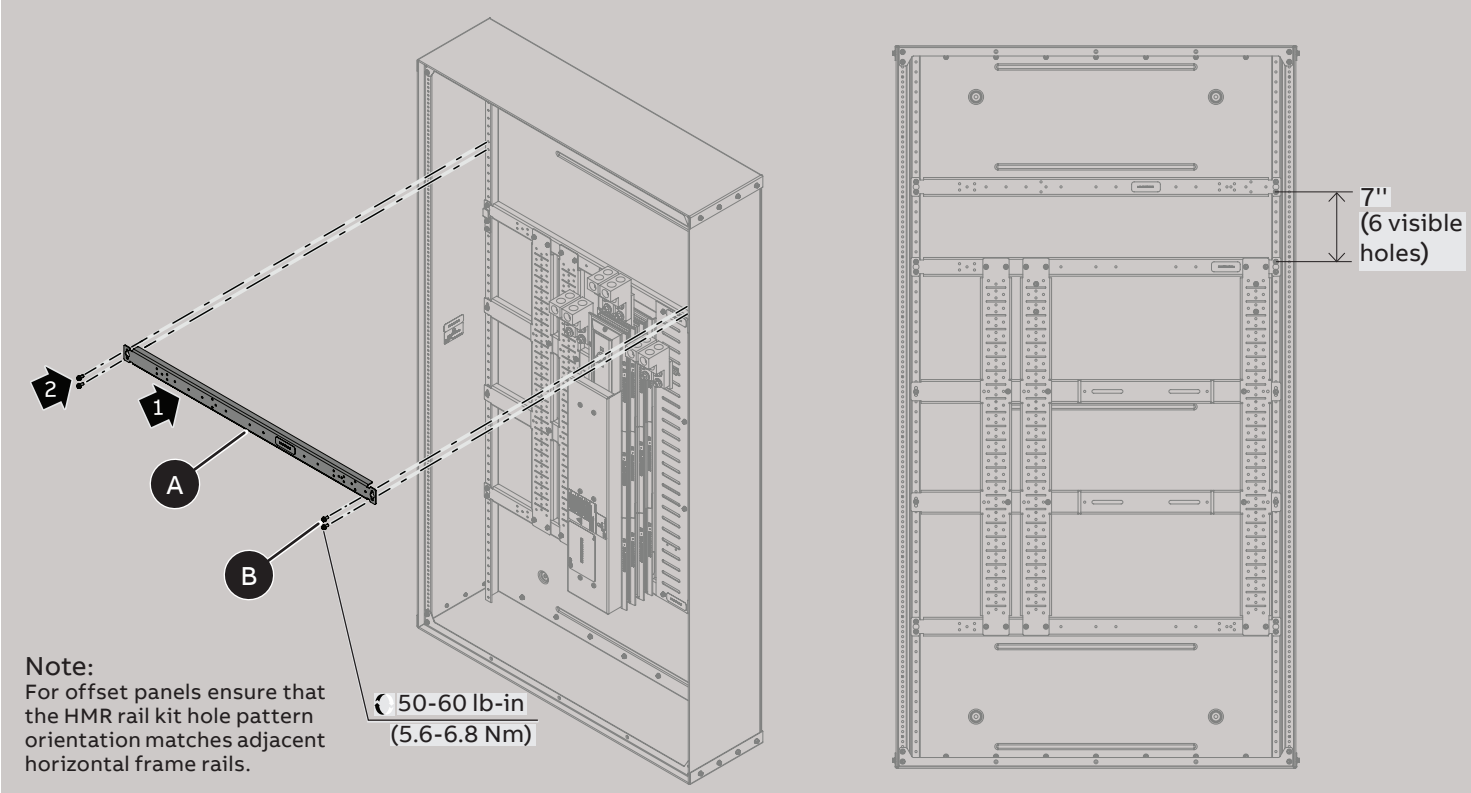1 Mounting Rail Installation



Note:
For offset panels ensure that the HMR rail kit hole pattern orientation matches adjacent horizontal frame rails.

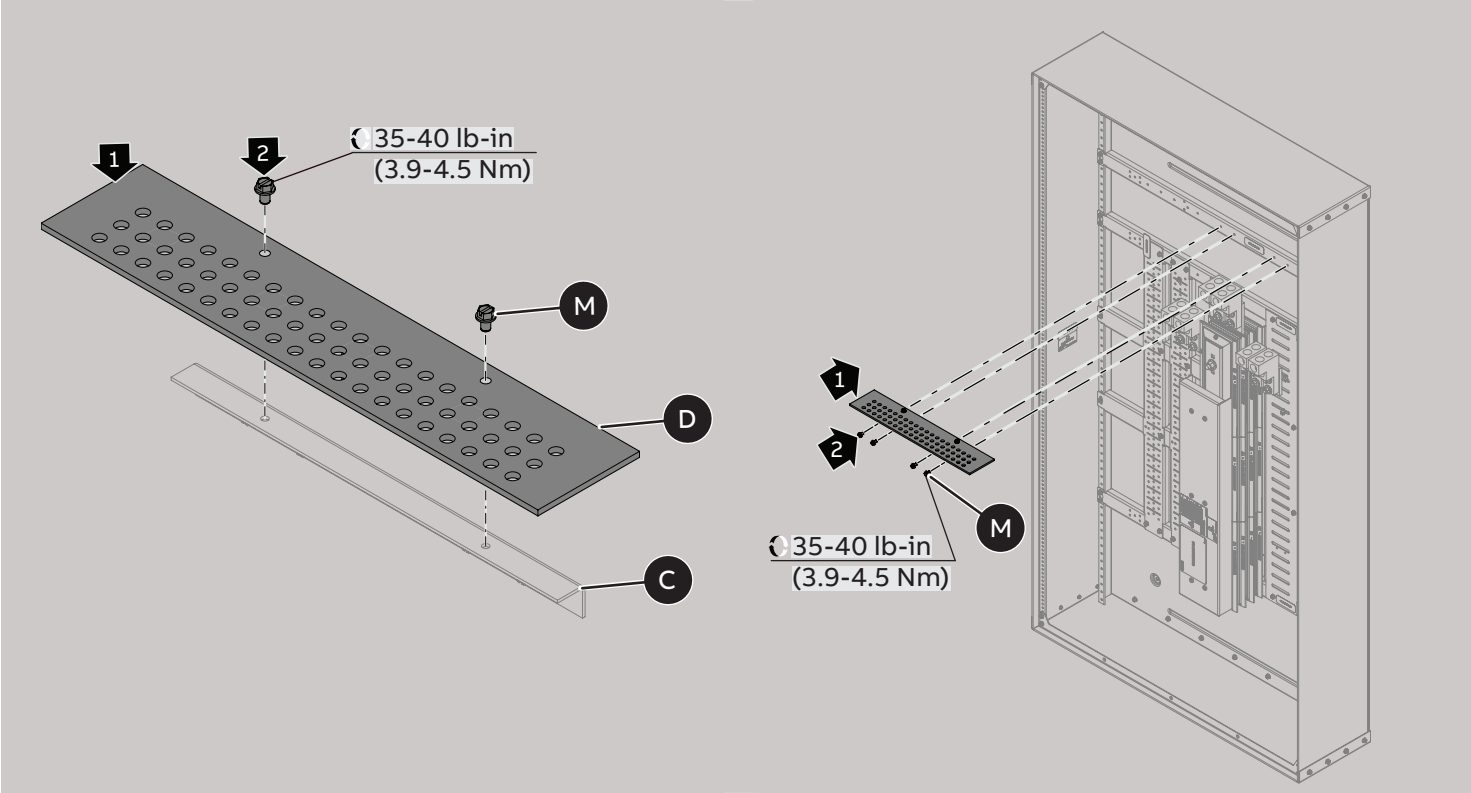2 Top Barrier And Bracket Installation




3 Main Lug Wiring Guide


● Indicates wire installed at lug terminal.

○ Indicates empty lug terminal.

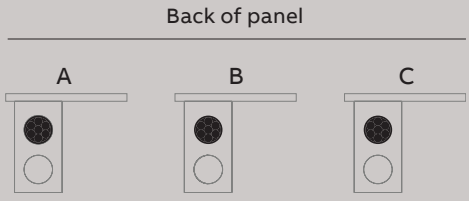
Note: To ensure proper fit with the IP20 main lug barrier, the main lugs* should be wired according to the top-view diagrams below:



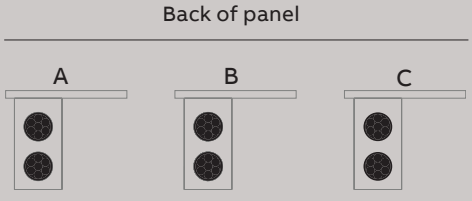
(1) wire per phase**



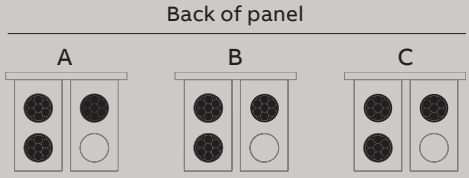(2) wires per phase**



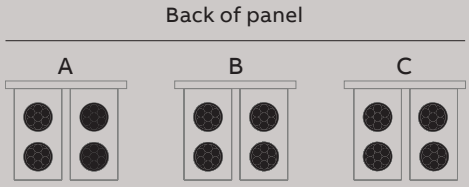(3) wires per phase




(4) wires per phase

**Diagrams depict lugs at the top of the panel (top-fed). For lugs at the bottom of the panel (bottom-fed), the lug barrier may need to be flipped during installation (see step 6).*


***(1) and (2) wire configurations will have a single lug mounted to the lug pad.*

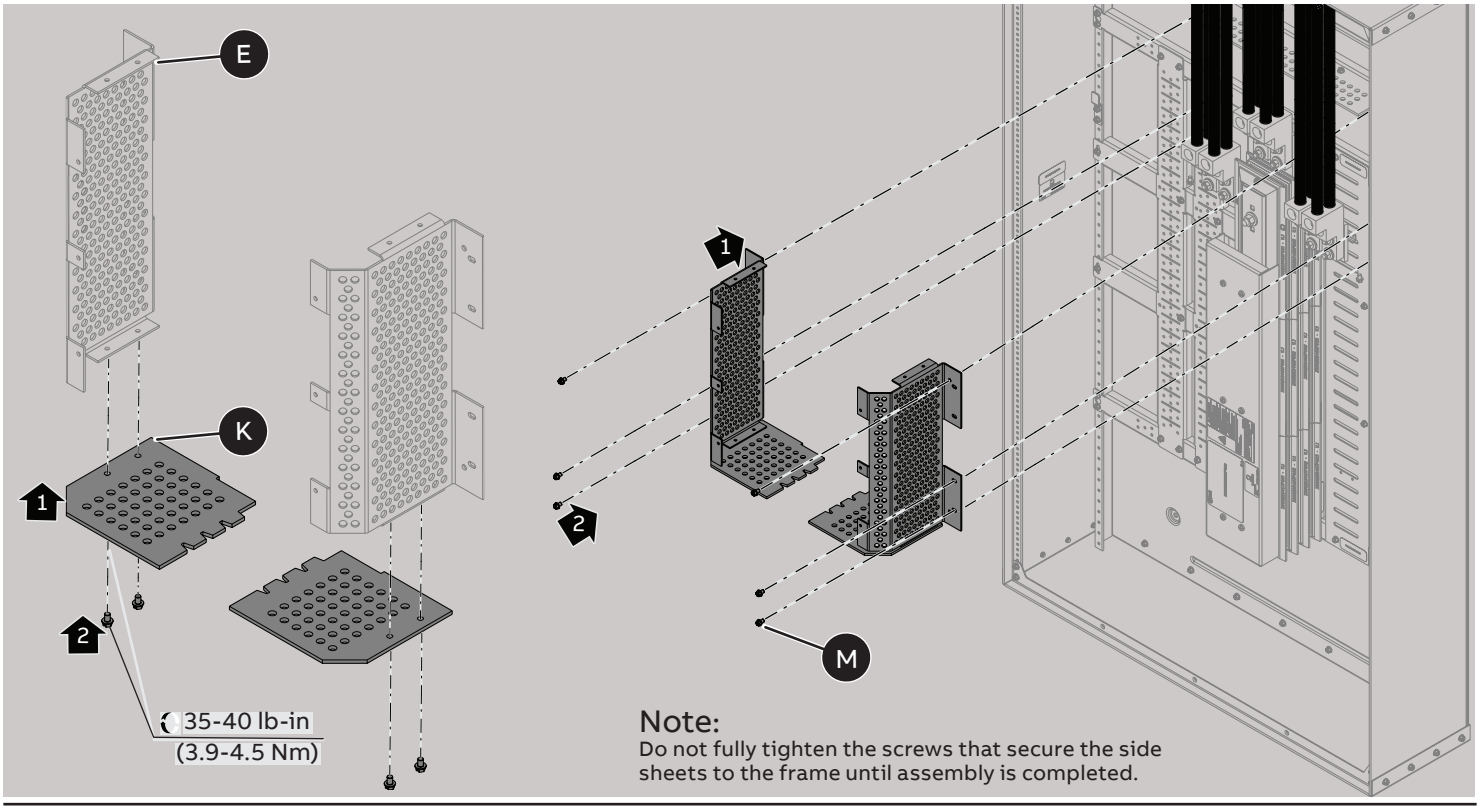4 Side Sheets And Bottom Barrier Installation



Note:
Do not fully tighten the screws that secure the side sheets to the frame until assembly is completed.

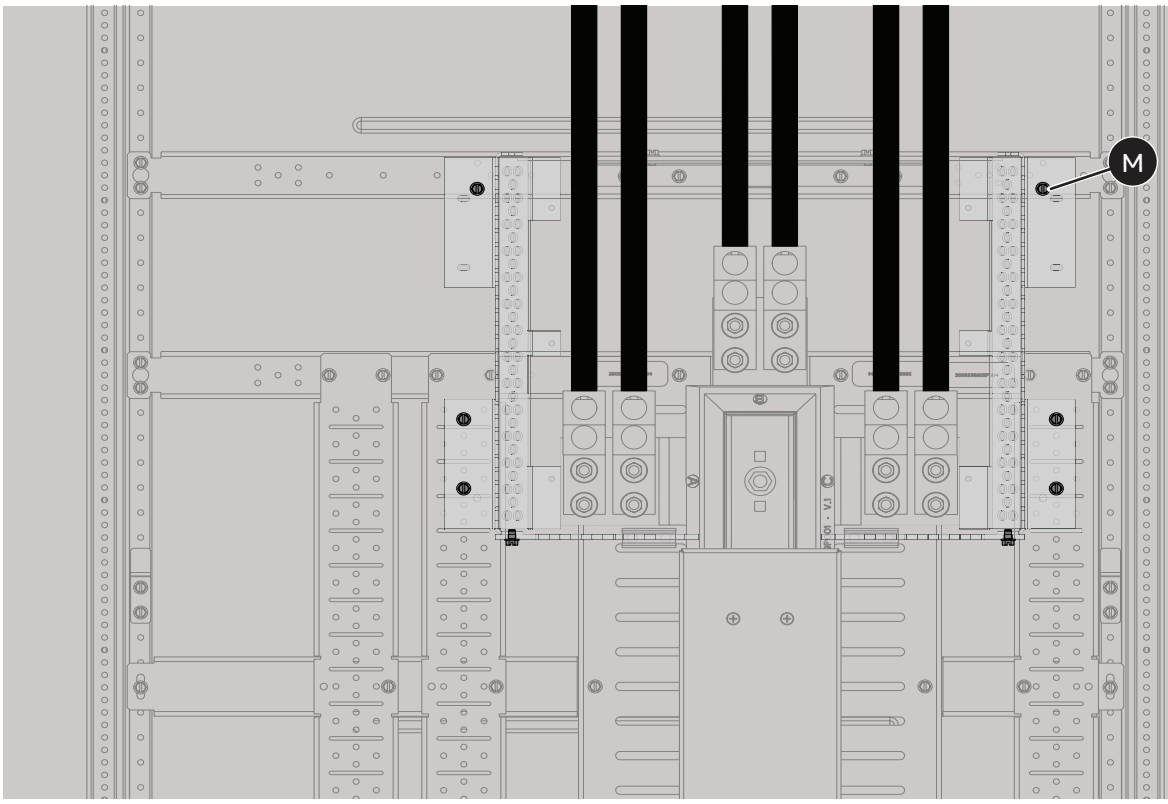
5 Side Sheet And Bottom Barrier Fully Installed



Note:
This is a reference view intended to highlight the side sheet mounting hole locations on the frame.

6 Lug Barrier Installation

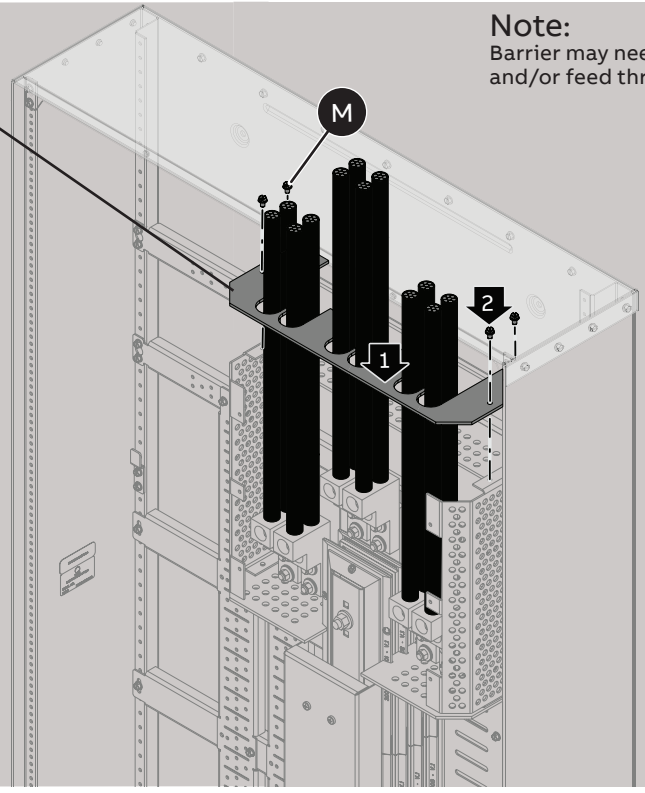F,G,H or J
Use type of barrier needed for lug/wire combination as described in BOM. Store or discard the other barriers that are not used.




Note:
Barrier may need to be flipped for bottom-feed and/or feed through applications.

Note:
Do not fully tighten all screws until assembly is completed.

7

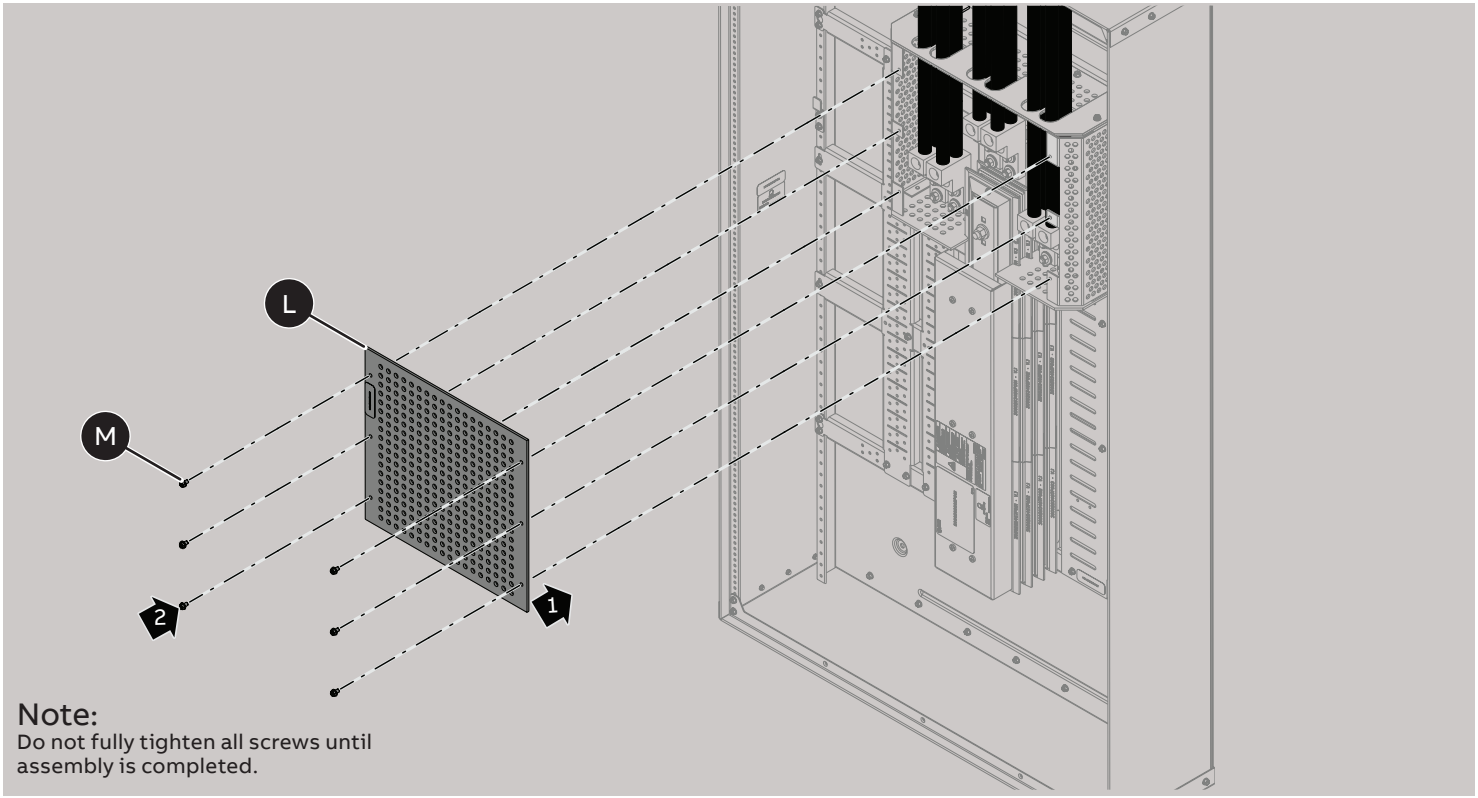
Front Barrier Installation



Note:
Do not fully tighten all screws until assembly is completed.

8

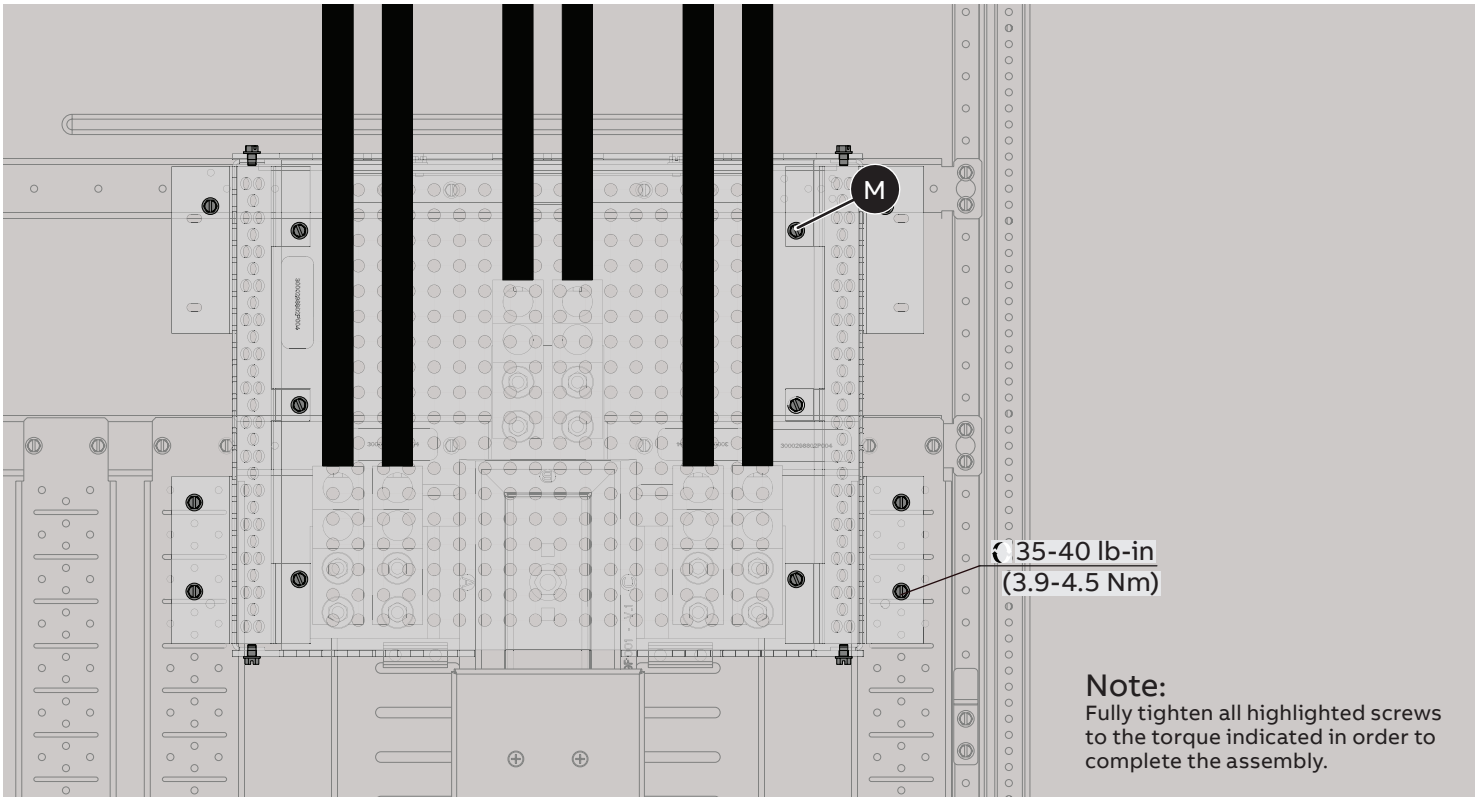
Front Barrier Fully Installed



Note:
Fully tighten all highlighted screws to the torque indicated in order to complete the assembly.

9

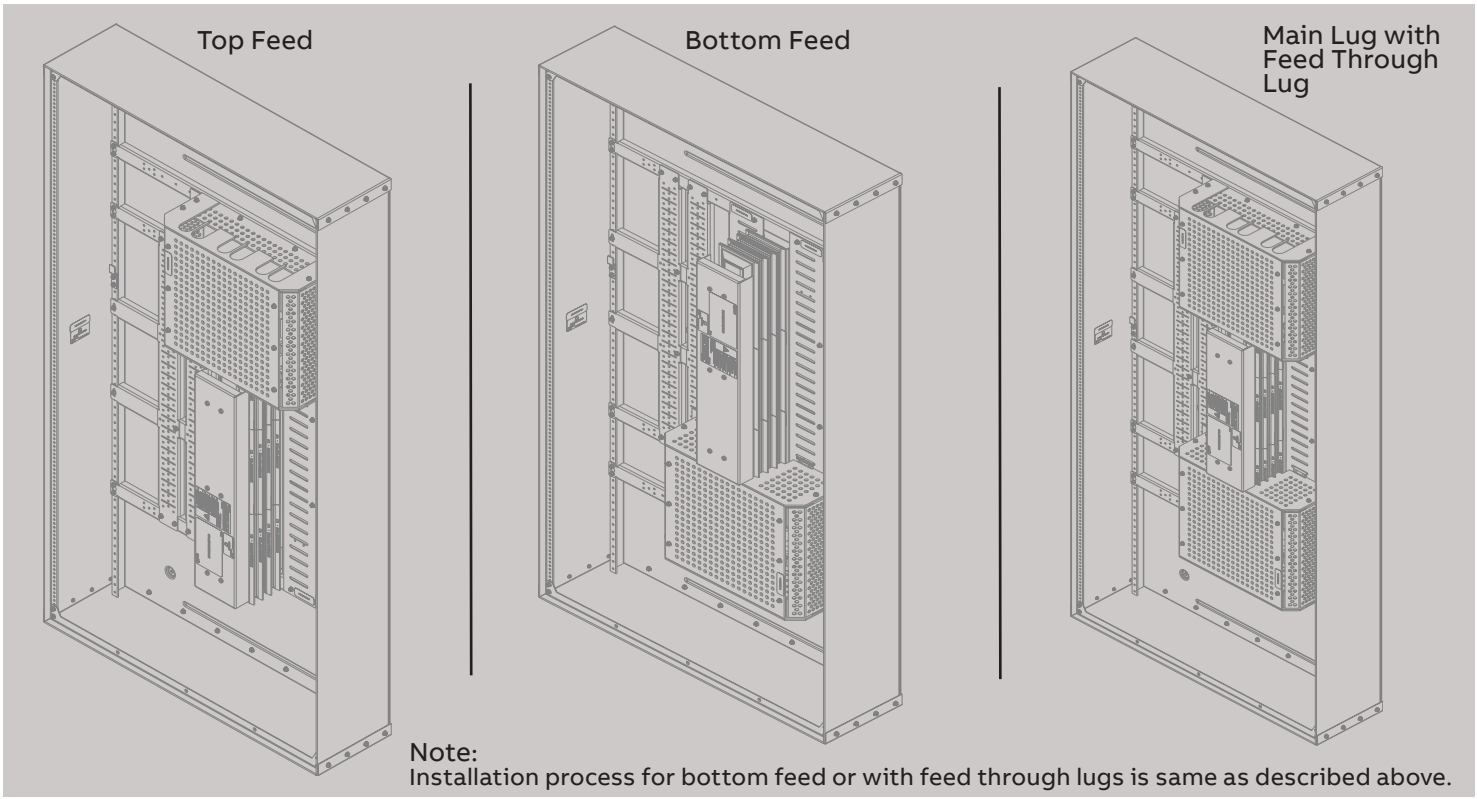Full IP20 Main Lug Barrier



Note:
Installation process for bottom feed or with feed through lugs is same as described above.

Disclaimer : These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency that may be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to the ABB Company.

ABB Inc.
305 Gregson Drive
Cary, NC 27511

abb.com

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG. Copyright© 2025 ABB
All rights reserved

DOC. N.° 1SQC900024M0201